


FIRECRACKER Playfield Chart

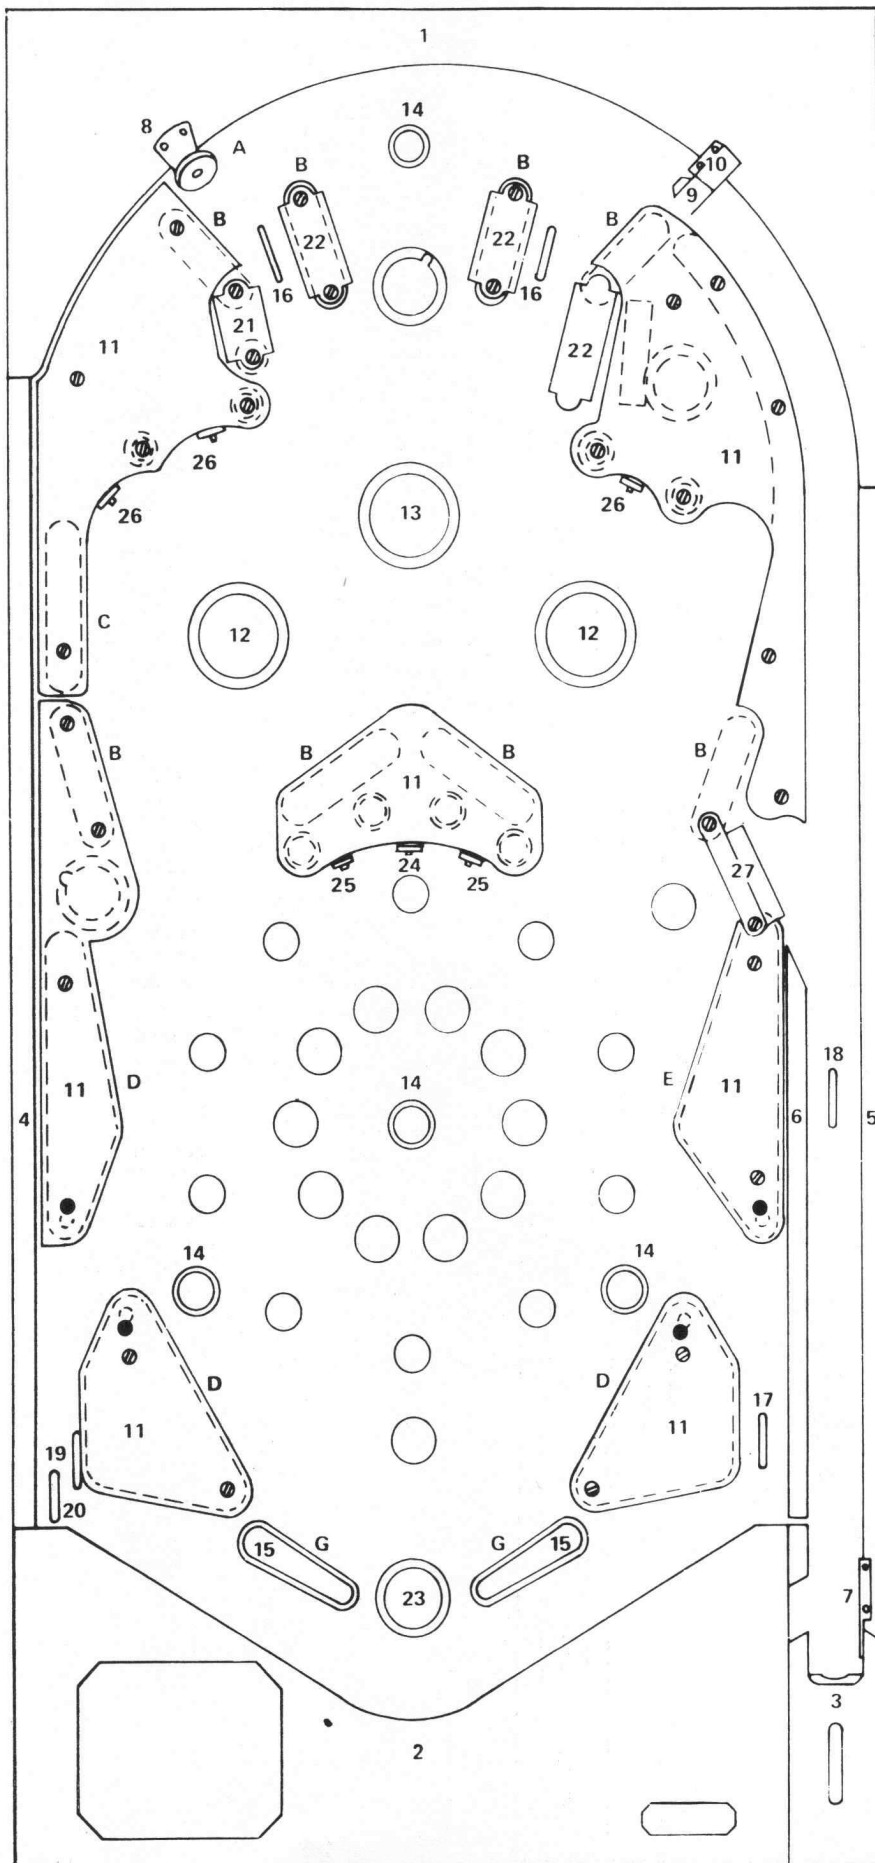

RUBBER RINGS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

- A R-115-4, Rebound
- B R-521-2, 1½ in. (8)
- C R-521-3, 2 in.
- D R-521-5, 3 in. (3)
- E R-521-6, 3½ in.
- F R-243, 5/16 in. (11)
- G R-406-3, Flipper (2)

PARTS

- 1 Top Arch P-5839-51
- 2 Bottom Arch P-5871-38
- 3 Shooter Gauge P-6359-10
- 4 Side Rail, Left CA-1208-2
- 5 Side Rail, Right CA-1208-1
- 6 Inner Rail CA-1208-5
- 7 Protective Angle P-7639
- 8 Ball Rebound Assy AS-493-3
As detailed, item 6, page 185
- 9 Ball Gate Assy A-1475-1
- 10 Ball Gate Cover P-2996-5
- 11 Light Shields A-2890-68
- 12 Bumper Cap, Red C-719-12
- 13 Bumper Cap, Blue C-719-16
- 14 Rollover Button C-387-5

PARTS RELATED TO ITEM 14:

- Bushing S-1559-1
- Push-on Fastener M-298-9
- Switch,
 - Break ASW-A2-4
 - Make ASW-A1-4
- Switch Stop Bracket,
 - Break Switch P-126-570
 - Make Switch P-126-562
- Washer P-801-125
- 15 Flipper, White C-611-5
- 16 Rollover Wire M-1336-10
- 17 Rollover Wire M-1336-2
- 18 Rollover Wire M-1336-9
- 19 Rollover Wire M-1336-13

BRACKETS FOR ABOVE:

SEE PAGE 275

SWITCHES FOR ABOVE:

SEE PAGE 36, ETC..

- 20 Ball Guide Wire M-121-24
- 21 Ball Guide, Red C-694-1
- 22 Ball Guide, Red C-696-1
- 23 Bumper C-810

DETAIL OF ASSY., PAGE 254

- 24 Target Assy, Red AS-982-831
 - Bracket P-126-471
 - Plate P-126-155
 - Switch Screw MS-540-11-110
 - Switch Plate P-137-5
 - Target Switch Assy A-3359-13
- 25 Target Assy., Red AS-982-723
As detailed, item 12, page 188
- 26 Target Assy., Red AS-982-699
As detailed, item 17, page 185
- 27 Ball Gate & Wire AS-2250-25
 - Bracket P-5867-2
 - Wire M-1272-6

- CONSERVATIVE POSITION
- LIBERAL POSITION