


BOOMERANG, FLICKER Playfield Chart

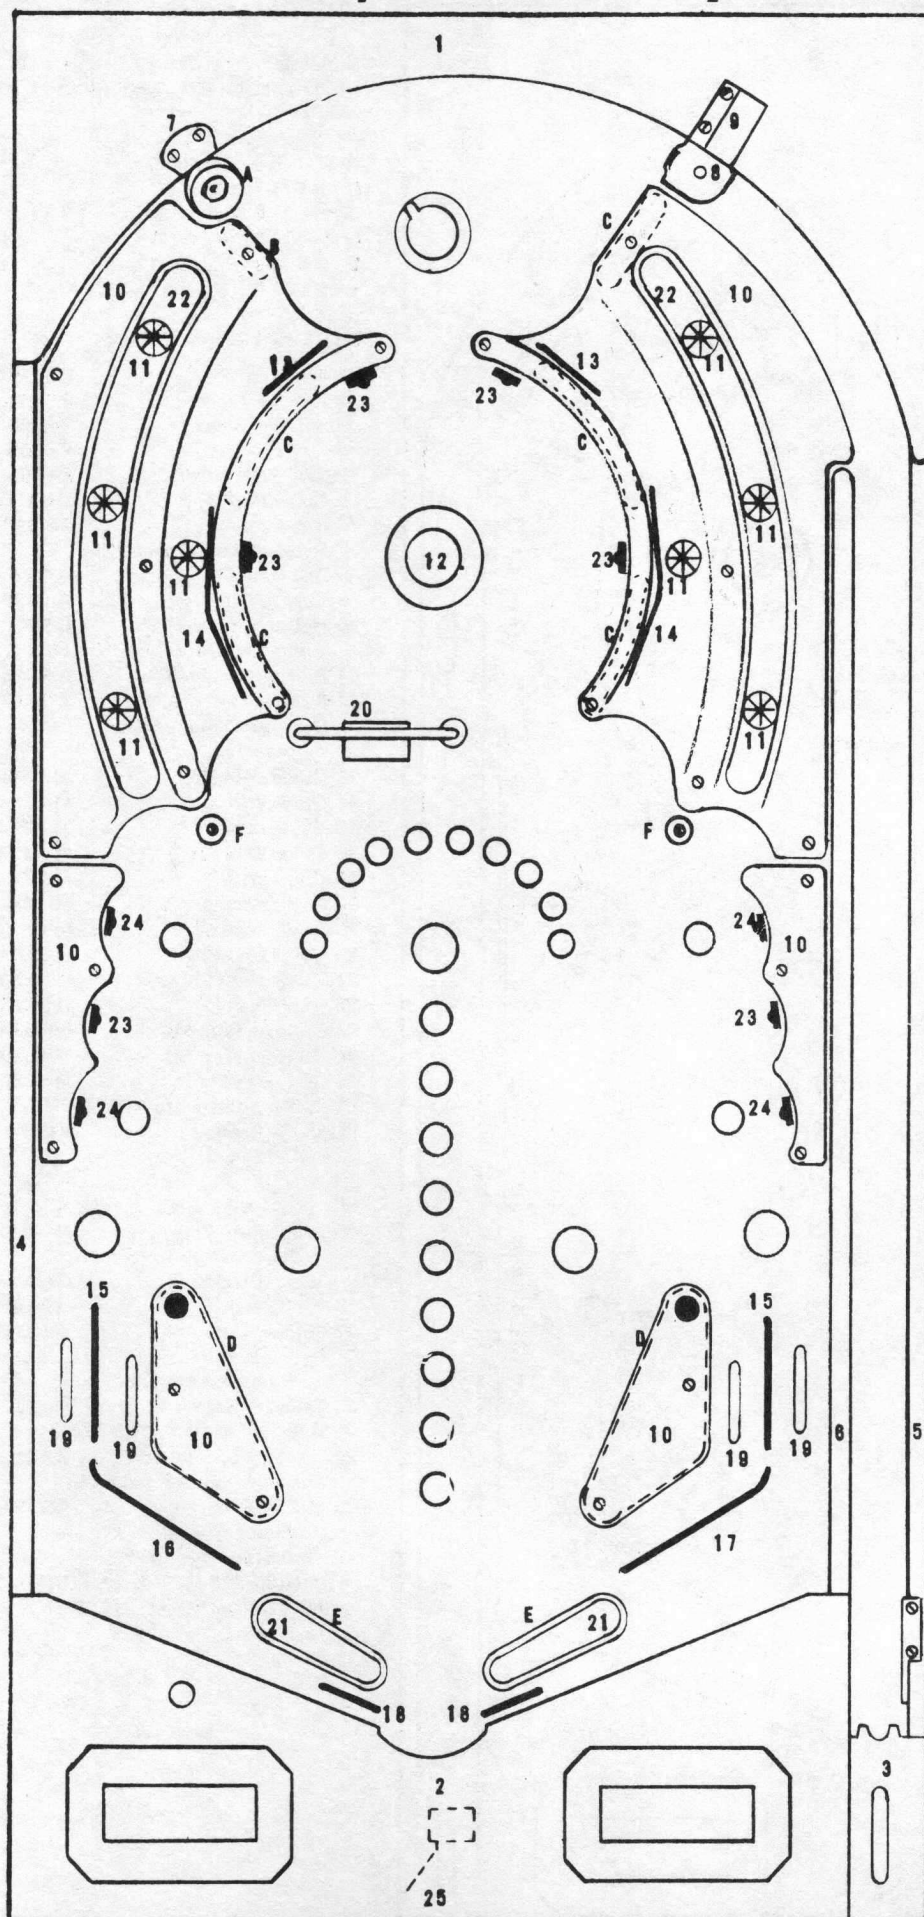

RUBBER PARTS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

- A R-115-4 (Rebound)
- B R-521-1, 1 in.
- C R-521-2, 1½ in. (5)
- D R-521-5, 3 in. (2)
- E R-406-3 (Flipper) (2)
- F R-243, 5/16 in. (15)

OTHER PARTS

- 1 Top Arch P-5839-88
 - 2 Bottom Arch P-5871-47
 - 3 Shooter Gauge P-6359-13
 - 4 Side Rail CA-1208-24
 - 5 Side Rail CA-1208-22
 - 6 Inner Rail CA-1208-14
 - 7 Rebound Assy. AS-493-3
Detailed, item 8, page 125
 - 8 Ball Gate A-1475-1
 - 9 Ball Gate Cover P-2996-5
 - 10 Light Shield (sets),
 BOOMERANG,
 Clear A-2890-105
 Printed A-2890-104
 FLICKER
 Clear A-2890-101
 Printed A-2890-102
 - 11 Rollover Button (8) C-900
 Parts used with item 11
 Lamp (No. 44) E-125-22
 Lamp Socket E-120-8
 Switch ASW-A1-122
 - 12 Bumper Cap
 BOOMERANG (Red) . A-3713-7
 FLICKER (Blue) A-3713-11
 Thumper Bumper detail: page 167
 - 13 Guide Wire (2) M-121-24
 - 14 Guide Wire (2) M-121-54
 - 15 Guide Wire (2) M-121-18
 - 16 Guide Wire M-121-43
 - 17 Guide Wire M-121-44
 - 18 Guide Wire (2) M-121-53
 - 19 Rollover Wire (4) M-1336
 - 20 Spinner Gate Assy. AS-2250-32
 Detailed, item 25, page 138
 Switch used with item 20 . ASW-A1-118
 Spinner Unit: page 109
 - 21 Flipper & Pin Assy. AS-2214-19
 Flipper Units, detailed: page 175
 - 22 Target Assy., red AS-982-699
 Detailed, item 28, page 128
 - 23 Target Assy., yellow AS-982-740
 Detailed, item 19, page 141
 - 24 Target Assy., white AS-982-806
 Bracket P-126-471
 Plate P-126-155
 Switch Plate P-137-5
 Switch Screw . . . MSSR-00540-1111
 Target Switch Assy. . . A-3359-12
 - 25 Ball Return Wire M-1336-1
 Switch used with item 25 . ASW-A1-113
- INDICATES MOVABLE POST FOR SCORING ADJUSTMENT