

JET SPIN MOTOR SWITCHES

MOTOR 1A "S" Position	Inside Sw. Second Sw. Third Sw. Fourth Sw.	-Resets Tens and Hundreds Score units. -Adds Player unit. -Scoring and adds bonus. -Score isolation switch.
MOTOR 1B	Inside Sw. Second Sw.	-Bonus score control switch. -"U" Relay lockin.
MOTOR 1C "S" Position	Inside Sw. Second Sw. Third Sw. Fourth Sw. Fifth Sw. Sixth Sw.	-Motor runout. -Opens circuit to replay button and coin chute switches. -Opens circuit to ball return, trough, hole and center roto target switch. -Opens circuit to "G" relay. -Opens circuit to playboard contacts. -Opens circuit to playboard contacts.
MOTOR 1D	Inside Sw. Second Sw.	-Coin chute credit totalizer. -"DY" Relay reset.
MOTOR 2B	Inside Sw. Second Sw. Third Sw.	-"K", "O", "P", "S", "W" and "BB" relay lockin. -"C", "D", "E", "F", "AA" and "CC" relay lockin. -Resets vari-target.
MOTOR 2C "L" Position	Inside Sw. Second Sw. Third Sw. Fourth Sw.	-Coin chute credit totalizer. -Bonus score control switch. -Adds player unit control switch. -Subtracts replay unit.
MOTOR 3B	Inside Sw. Second Sw.	-"G" relay lockin. -Bonus score control switch.
MOTOR 3C "S" Position	Inside Sw. Second Sw.	-Subtracts coin unit control switch. -Adds coin unit.
MOTOR 3D	Inside Sw.	-Opens circuit to playboard lights.
MOTOR 3E	Inside Sw.	-Roto unit anti-cycle switch.
MOTOR 4A "S" Position	Inside Sw.	-Resets thousands and ten thousands score units.
MOTOR 4B	Inside Sw. Second Sw.	-Coin chute credit totalizer. -"FF" relay lockin.
MOTOR 4C "S" Position	Inside Sw. Second Sw. Third Sw. Fourth Sw.	-Coin chute credit totalizer. -"EE" relay lockin. -Bonus score control switch. -Actuates ball return, hole kicker, resets "AX" and "BX" relays.