



Williams

1964 PARTS CATALOG



Williams ELECTRONIC MANUFACTURING CORP.

4242 W. Fillmore St.
Phone NEvada 2-4900

Chicago 24, Ill. U.S.A.
Cable Address: Wilcoin

Dear Operator:

**Your "WILLIAMS" game is a sound investment that will
make money if, you keep your "WILLIAMS" game,**

"Factory Fresh"

**Just keep it as clean and bright as the day you took it out
of the crate and it will make MORE money !**

GAMES PRODUCED — ORDER OF PRODUCTION

NAME	PRODUCTION DATE	NAME	PRODUCTION DATE
ROCKET	11/59	HIGHWAYS	3/61
FIESTA	12/59	BATTING CHAMP (NOVELTY)	4/61
21	2/60	HOLLYWOOD	5/61
NAGS	3/60	TEN SPOT	6/61
OFFICIAL BASEBALL	4/60	DOUBLE BARREL	8/61
SERENADE	5/60	SKILL BALL	9/61
DARTS	6/60	RESERVE	10/61
VIKING	7/60	ROAD RACER	10/61
JUNGLE	8/60	KISMET	11/61
MUSIC MAN	9/60	SPACE SHIP	12/61
SPACE GLIDER	9/60	METRO	1/62
BLACK JACK	11/60	JOLLY JOKERS	2/62
MAGIC CLOCK	12/60	3 COINS	4/62
BOBO	1/61	EXTRA INNING (BASEBALL)	4/62
CARAVELLE	2/61	1962 WORLD SERIES (BASEBALL)	4/62
DeLUXE BATTING CHAMP	2/61	COQUETTE	5/62

ALL GAMES FOLLOWING COQUETTE ARE ON 24V

Following Games - 24V

TRADEWINDS	6/62	JUMPIN JACKS	4/63
FRIENDSHIP 7	7/62	SWINGTIME	5/63
VALIANT	8/62	SKILL POOL	6/63
KING PIN	9/62	EL TORO	8/63
VAGABOND	10/62	BIG DADDY	9/63
MARDI GRAS	11/62	MERRY WIDOW	10/63
4 ROSES	12/62	BEAT THE CLOCK	12/63
TOM TOM	1/63	GRAND SLAM (BASEBALL)	2/64
BIG DEAL	2/63	10th INNING (BASEBALL)	2/64
MAJOR LEAGUE (BASEBALL)	3/63	OH BOY	2/64
BIG INNING (BASEBALL)	3/63	SOCCER	3/64

TO OUR BEST FRIENDS — OUR CUSTOMERS

In this new 1964 edition of the Williams Parts Catalog you will find new listings on certain parts printed in red. The red indications signify that these parts are used on games built for 24 volt operation.

To make it easy for you, here in the forward, you will find a list of games. All games built prior to Tradewinds (6/62) used a 50 volt system. Beginning with Tradewinds and all subsequent games a 24 volt system is used.

It will help a lot if you will always remember to order your parts by number and description. Specify the quantity and give the name of the game and the unit. A coil chart is packed in every game — always keep it handy and order coils by number and unit.

While the utmost care was used in preparing this catalog we always welcome your suggestions to improve future editions.

THANKS!

Williams Electronic Manufacturing Corp.

ALPHABETICAL INDEX OF GAMES

Description	Page
BASEBALL GAMES	66 to 88
BOWLING (Ten Pin & Ten Strike)	92 to 93
FIVE BALL PIN GAMES	1 to 59
GUN TYPE	89 to 91
HORSE RACE GAMES	94
POOL GAMES	65
ROADRACER	60 to 64

WHEN ORDERING PARTS

1. Refer to the catalog and order all parts by number and description, specifying quantity and name of game for which parts are being ordered.
2. Figure prices as quoted in the catalog. All prices are subject to change without notice.
3. Returned merchandise will not be accepted unless previously authorized.
4. All prices net F.O.B. our factory.

TABLE OF CONTENTS

Page No.	Page No.
100 STEP UNIT	1
50 STEP UNIT (Resetting)	2
50 STEP UNIT (Non-Resetting)	3
REPLAY UNIT	4
DRIVE ARM & PAWL ASSEMBLIES (50 Step)	5
ARM & PAWL ASSEMBLIES (100 Step)	6
GEAR & SHAFT ASSEMBLIES (50 Step & 100 Step)	7
SNOWSHOE WIPER ASSEMBLIES (50 Step & 100 Step) (New)	8
SNOWSHOE WIPER ASSEMBLIES (50 Step & 100 Step) (Old Type)	9
10 STEP UNIT (With Contact Disc) (Old Type)	10
10 STEP UNIT (Without Contact Disc) (Old Type)	11
10 STEP UNIT PARTS (Old Type)	12
10 STEP UNIT PARTS & SWITCHES (Old Type)	13
10 STEP UNIT (New) (With Printed Circuit)	14
10 STEP UNIT (New) (Without Printed Circuit)	15
10 STEP UNIT PARTS (New Unit)	16
RELAY BANK ASSEMBLY	17
"JET" BUMPER ASSEMBLY	18
SWINGING TARGET ASSEMBLY (New)	19
SWINGING TARGET SLAVE UNIT	20
SWINGING TARGET ASSEMBLY (Old Type)	21
DROP TARGET ASSEMBLY	22
DROP TARGET PARTS	23
DISAPPEARING JET BUMPER	24
DISAPPEARING JET BUMPER	25
"E" RELAY ASSEMBLY & NEW LATCH TYPE RELAY (Large)	26
INTERLOCK RELAY ASSEMBLIES (Small)	27
"J" & "M" TYPE RELAY ASSEMBLIES	28
"L" & "Z" TYPE RELAY ASSEMBLIES	29
BALL SHOOTER & BALL RELEASE ASSEMBLIES	30
BALL LIFT ASSEMBLY & PARTS	31
BALL LIFT ASSEMBLIES	32
FLIPPER ASSEMBLY & PARTS	33
FLIPPER PARTS	34
BALL EJECT ASSEMBLIES	35
CHIME BOX ASSEMBLY & KICKER ASSEMBLY	36
KNOCKER ASSEMBLY & SHOOTER COIL ASSEMBLY	37
BELL & BELL ASSEMBLIES	38
SOLENOID PLUNGERS & MOTOR CAMS	39
COIL REPLACEMENT SLEEVES	40
MOTOR CAM SWITCHES (New Style Unit)	41
MOTOR CAM SWITCHES (Old Type Motor Unit)	42
MISCELLANEOUS PIN GAME SWITCHES	43
SWITCH ASSEMBLIES	44
CAM FOLLOWERS & SWITCH BLADES	45
SWITCH BLADES (With & Without Contacts)	46
SWITCH ASSEMBLY PARTS	47
WIRE FORMS	48
COIN SWITCH ASSEMBLY (New) & WIRE FORMS	49
SLUG REJECTOR MOUNTING & PARTS	50
BALL GATE & MERCURY TILT SWITCH	51
TILT BOB, BALL GATE & FLIPPER BUTTON	52
COIN ENTRY PLATES, ROLL TILT ASSEMBLY - MISC.	53
PLAYFIELD BOTTOM ARCHES	54
FRONT MOULDING ASSEMBLIES	55
PLAYFIELD LOCKING ASSEMBLIES	56
INSERT HINGE - MISCELLANEOUS PARTS	57
KICKER & COIL ASSEMBLY - MISCELLANEOUS NEW PARTS ..	58
THERMOMETER ADVANCE UNIT PARTS	59
ROAD RACER - STEERING WHEEL ASSEMBLY	60
ROAD RACER - STEERING MECHANISM	61
ROAD RACER - TIMER MOTOR - CAR ASSEMBLY	62
ROAD RACER - DRUM MOTOR & PARTS	63
ROAD RACER - MISCELLANEOUS PARTS	64
POOL TABLE - MISCELLANEOUS PARTS	65
PITCHER UNIT ASSEMBLY (Official Baseball)	66
BALL TRACK ASSEMBLY	67
PITCHER UNIT ASSEMBLY	68
PITCHER UNIT ASSEMBLY	69
PITCHER UNIT ASSEMBLY (New)	70
BATTER UNIT ASSEMBLY	71
BATTER UNIT ASSEMBLY (Old)	72
BATTER UNIT ASSEMBLY (1964 Baseball)	73
BAT HANDLE LEVER ASSEMBLY	74
BAT HANDLE LEVER ASSEMBLY (1957 Baseball)	75
MAN RUNNING UNIT ASSEMBLY	76
BALL PLAYER ASSEMBLIES	77
BASEBALL TARGET ASSEMBLIES	78
TARGET UNIT - 1963 BASEBALL	79
TARGET UNIT - 1964 BASEBALL	80
"BULLS EYE" HOME RUN TARGET	81
MOTOR UNIT ASSEMBLY (New Type)	82
BASEBALL MISCELLANEOUS PARTS	83
BASEBALL MISCELLANEOUS PARTS	84
BASEBALL FRONT MOULDING & PARTS	85
BASEBALL FRONT MOULDING	86
BASEBALL HOME RUN PLASTICS	87
BASEBALL PLASTICS & INSTRUCTION PLATES	88
RIFLE ASSEMBLY & PARTS	89
GUN GAME PARTS	90
GUN GAME PARTS	91
BOWLER MANNIKIN & PARTS	92
BOWLER - MISCELLANEOUS PARTS	93
HORSE GAME - PARTS	94
PARTS LIST	95
PARTS LIST	96
PARTS LIST	97
PRICE LISTING - (Arranged by Group of Related Parts) 98 - 106	
PRICE LISTING - (Arranged in Numerical Order) 107 - 119	

LUBRICATION GUIDE.

	FINE OIL 3 IN 1	LUBRIPLATE (WHITE)	GUNSLICK (BLACK)	PARAFFIN OR SOAP
STEP AND REPLAY UNITS.				
Do not lubricate solenoid plungers!				
Drive, reset and lock arms pivot		X		
Ratchet shaft	X			
Ratchet teeth (metal)			X	
Ratchet pawl pivots		X		
Torsion springs	X			
Contact disc segments and rivets		X		
RELAY BANK ASSEMBLIES.				
Do not lubricate solenoid plunger!				
Crank arm pivots		X		
Rear leg hinge pivots		X		
Reset arm lift edge		X		
JET BUMPERS & DISAPPEARING JET.				
Do not lubricate solenoid plungers!				
Bumper switch cup		X		
Rods		X		
Cam lock arm pivot		X		
Bumper cam link pivots		X		
Rollers	X			
BALL EJECT & KICKER ASSEMBLIES.				
Do not lubricate solenoid plunger!				
Ejector or kicker pivots		X		
Link		X		
FLIPPER ASSEMBLIES.				
Do not lubricate solenoid plunger!				
Armature link		X		
BALL RELEASE ASSEMBLY.				
Do not lubricate solenoid plunger!				
Fibre Link		X		
Ball release lever pivot		X		

FINE OIL 3 IN 1	LUBRIPLATE (WHITE)	GUNSLICK (BLACK)	PARAFFIN OR SOAP
X			
X			
X			
	X		
	X		
X			
X			
X	X		
X			
			X

ALPHABETICAL INDEX

Description	Page
— A —	
ARCH, BOTTOM PLAYFIELD	54
ARCH HOLE LINER	54
ARMATURE ASSEMBLIES, "J" RELAY & "M" RELAY	28
ARMATURE ASSEMBLIES, "E" RELAY	26
ARMATURE ASSEMBLIES, "Z" RELAY & "L" RELAY	29
ASSEMBLIES (Price Listing)	99

— B —	
BALLS (Price Listing)	102
BALL EJECT ASSEMBLIES	35
BALL FLAP	83-84
BALL GATE	51-52
BALL KICKER ASSEMBLY	36-99
BALL LIFT ASSEMBLY	32
BALL LIFT GUIDE	31
BALL PUSHER ASSEMBLY	31-32
BALL RAMP	82-83
BALL RELEASE ASSEMBLY	30
BALL SHOOTER ASSEMBLY	30
BALL STOP BRACKET	57
BANK, RELAY BANK ASSEMBLY	17
BASEBALL PLAYERS	66-77
BASEBALL PARTS	66 Thru 88
BASE, SWITCH ASSEMBLY	44
BAT COILS	71-73
BAT, PLASTIC	71-72-73
BAT HANDLE LEVER ASSEMBLY	74-76
BATTER UNIT ASSEMBLY	71-72-73 99
BELL ASSEMBLY, LARGE	38
BELL ASSEMBLY, SMALL	38
BLADES, SWITCH	46
BOWLER MANNIKIN	92-101
BOWLING PIN, (TEN PIN - TEN STRIKE)	93-101
"BULLS EYE" TARGET UNIT	81
BUMPER ASSEMBLY, "JET"	18-91
BUMPER SWITCH ASSEMBLY	44
BUMPER SWITCH BLADE	45

— C —	
CABINETS - BASEBALL	99
CABINETS MISCELLANEOUS (Baseball Cabinet Hardware)	99
CABINETS, FIVE BALL (Shelf Type) (Price Listing)	98
CABINETS, FIVE BALL (Single Player) (Price Listing)	98
CABINETS, FIVE BALL (Multi Player) (Price Listing)	98
CABINETS, MISCELLANEOUS HARDWARE (Price Listing)	98
CABINET DOORS (Price Listing)	99
CAM FOLLOWERS	45
CAM, MOTOR CAM ASSEMBLIES	39
CAM & RATCHET HUB - 10 STEP UNIT	12-16
CARBON PLUMB BOB ASSEMBLY	52
CHIME BOX ASSEMBLY	36
CHROME FLIPPER ASSEMBLY	33
CIGARETTE HOLDER	53
COILS (Price Listing)	103
COIL REPLACEMENT SLEEVES	40
COMMUTATOR BRUSH ASSEMBLY (Roadrocer)	62-99-100
COIN CHUTES (Price Listing)	102
COIN ENTRY PLATE	53
COIN GUIDE ASSEMBLY	57
COIN REJECTOR MOUNTING	50
COIN RETURN CUP	50
COIN SLIDE ASSEMBLY	57
COIN SWITCH	49-50
COIN SWITCH WIRE	49-50

Description	Page
CONTACT DISC ASSEMBLY (Guns)	89
CONTACT DISC ASSEMBLY (Disappearing Jet Bumper)	24
CONTACT DISC ASSEMBLY (10 Step Unit)	12
CONTACT FINGER ASSEMBLY (10 Step Unit)	12-16

— D —	
DISAPPEARING JET BUMPER ASSEMBLY	24-25-26
DOORS, CABINETS (Price Listing)	99
DRIVE ARM & PAWL ASSEMBLIES (50 Step & 100 Step)	5-6
DRIVE CRANK ASSEMBLY (10 Step Unit)	13
DROP TARGET ASSEMBLY	22
DROP TARGET PARTS	23

— E —	
"E" RELAY, ASSEMBLY & PARTS	26
EJECT, BALL EJECT ASSEMBLY	35

— F —	
FASTENERS (Price Listing)	104
FINGER, CONTACT FINGER ASSEMBLY (10 Step Unit)	12-16
FISHPAPER BLADES	47
FLIPPER BUTTON ASSEMBLY	52
FLIPPER & COIL ASSEMBLY	33-99
FLIPPER PLUNGER ASSEMBLY	33
FRONT MOULDING	55-82-85-86
FUSES (Price Listing)	102
FLIPPER PARTS	34

— G —	
GATE, BALL	51-52
GEARS & SHAFTS (Step Units)	7
GLASS, PLAYFIELD (Price Listing)	98
GLASS, SCREENED LITEBOX (Price Listing)	98
GROUND WIRE (10 Step Unit)	12
GUN GAME PARTS	89-90-91

— H —	
HARDWARE, MISCELLANEOUS (Price Listing)	105
HINGE, INSERT	57
HOLE COVER ASSEMBLY	51
HORSE GAME PARTS	94-101
HOME RUN PLASTICS - BASEBALL	87-88

— I —	
INSERT HINGE	57
INSULATOR BLADES, SWITCHES	47
INTERLOCK RELAY ASSEMBLY	27
INSTRUCTION PLATES	88

— J —	
"J" RELAY ASSEMBLY	28
"JET" BUMPER ASSEMBLY	18-99
"JET" BUMPER DISAPPEARING	24-25-99
"JET" BUMPER SWITCH ASSEMBLY	44

— K —	
KEY HOOK	53
KICKER ASSEMBLY	36-58
KNOCKER ASSEMBLY	37

ALPHABETICAL INDEX

Description	Page	Description	Page
— L —			
"L" TYPE RELAY ASSEMBLY	29	RELAY ASSEMBLY - LATCH	26-27
LATCH, RELAY ASSEMBLY	26-27	RELAY ASSEMBLY "L" TYPE	29
LEGS, METAL (Price Listing)	98	RELAY ASSEMBLY "M" TYPE	28
LEGS, TUBULAR (Price Listing)	98	RELAY ASSEMBLY "Z" TYPE	29
LIFT, BALL LIFT, ASSEMBLY	32	RELAY COILS (Price Listing)	103
LIFT, BALL LIFT GUIDE	31	RELEASE, BALL RELEASE ASSEMBLY	30
LIFTER, SWITCH BLADE LIFTER	47	REPLACEMENT, COIL SLEEVES	40
LIGHT BULBS (Price Listing)	105	REPLAY UNIT	4
LIGHT SOCKETS (Price Listing)	105	RESET ARM ASSEMBLY (100 Step Unit)	6
LOCK, BACK DOOR (Price Listing)	98	RESISTORS (Price Listing)	102
LOCK, FRONT DOOR (Price Listing)	98	RIFLE ASSEMBLY	89
LOCK ARM ASSEMBLY (100 Step Up)	6	ROADRACER PARTS	60-61-62-63-64-99-100
LOCK ASSEMBLY (Roadracer)	64	ROLLOVER SWITCH BLADES	45
LINKS, FLIPPER	34	ROLLOVER WIRE FORMS	48-49
LOCKING ASSEMBLY (Playfield)	56	ROLL TILT ASSEMBLY	33
— M —			
"M" RELAY ASSEMBLY & PARTS	28	RUBBER PARTS (Price Listing)	103
MAN RUNNING UNIT (Baseball)	76	RUBBER RINGS (Price Listing)	103
MERCURY TILT SWITCH	51	RUBBER BAT SLEEVE	72
METAL FLIPPER ASSEMBLY	33	RUN SWITCH ASSEMBLY	44
METER, ELECTRIC COUNTER	52	— S —	
MISCELLANEOUS CABINET HARDWARE (Price Listing)	98	SHAFTS-GEAR & SHAFT ASSEMBLIES	7
MISCELLANEOUS PIN GAME SWITCHES	43	SHOOTER-BALL SHOOTER ASSEMBLIES	30
MISCELLANEOUS HARDWARE (Price Listing)	105	SHOOTER COIL ASSEMBLY	37
MOTORS (Price Listing)	102	SHOEHOE WIPER ASSEMBLY	8-9
MOTOR - CAM ASSEMBLIES	39	SOLENOID PLUNGERS	39
MOTOR CAM SWITCHES	41-42	SPACERS-SWITCH	47
MOTOR - DISAPPEARING "JET" BUMPER	24	SPRINGS - WIPER ASSEMBLIES	8-9
MOTOR-DRUM UNIT (Roadracer)	63-100	STAND UP SWITCH ASSEMBLY	44
MOTOR-PITCHER UNIT	66-68-69	STEERING WHEEL PARTS (Roadracer)	60-61-62
MOTOR-SCORING UNIT	82	STEP UNITS - 10 STEP (Old Type)	10-11-99
MOTOR-SWINGING TARGET	19-21	STEP UNITS - 10 STEP (New Type)	14-15
MOTOR-TIMER UNIT (Roadracer)	62-100	STEP UNITS - 50 STEP	2-3-4-99
MOULDING-CABINET (Price Listing)	98	STEP UNITS - 100 STEP	1-99
MOULDING-BASEBALL	84-85-86	SUPPORT PIN	58
— P —			
PARTS LIST	95-96-97	SWITCH ASSEMBLIES	13-44-104
PAWL ASSEMBLIES	5-6-13-16	SWITCH BLADES	45-46
PLASTIC BAT (Baseball)	71-72-73	SWITCH PARTS	47
PLASTIC FLIPPER ASSEMBLY	33	SWINGING TARGET ASSEMBLY	19-20-21-99
PLASTIC PARTS (Price Listing)	101	— T —	
PLASTIC TARGET	19-20-21-101	TAPE THERMOMETER	59
PLAYFIELD LOCKING ASSEMBLY	56	TARGETS - BASEBALL	78
PITCHER UNITS (Baseball)	66-67-68-69-70-99	TARGETS - "JUNGLE"	39
PLUNGER ASSEMBLY, FLIPPER	33	TARGET - PLASTIC	19-20-21-101
PLUNGERS, SOLENOID	39	TARGET - SWINGING TARGET ASSEMBLY	19-21-21-99
POOL TABLE PARTS	65-100	TARGET SWITCH ASSEMBLY	44
POINTER ASSEMBLIES	58	TARGET SWITCH BLADES	45
PULLEYS-ROADRACER	51-53-78	TARGET UNIT - BASEBALL	79-80-81
PUSHER, BALL LIFT PUSHER ASSEMBLY	31-32	TEN PIN & TEN STRIKE PARTS	92-93-101
PRINTED CIRCUIT (10 Step Unit)	14	TILT ASSEMBLY - CARBON PLUMB BOB	52
— R —			
RATCHET, GEAR & SHAFT ASSEMBLIES	7	TILT - ROLL TILT ASSEMBLY	53
RATCHET, HUB & CAM (10 Step Unit)	12-16	TRANSFORMERS (Price Listing)	102
REBOUND RUBBER ASSEMBLY	52	TUBING - SWITCH	47
REEL (10 Step Unit)	12-16	— W —	
REJECTOR, MOUNTING ASSEMBLY	50	WHEEL - STEERING WHEEL PARTS (Roadracer)	60-61-62-99-100
RELAY ASSEMBLY "E" TYPE	26	WIPER ASSEMBLIES	8-9-59
RELAY ASSEMBLY "J" TYPE	28	WIPER BLADES	8-9
— Z —			
		WIPER SPRINGS	8-9
		WIRE FORMS	48
		— Z —	
		"Z" RELAY ASSEMBLY & PARTS	29


[illegible]

Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.

50 STEP UNIT — RESETTNG


C-5694

Coil No's Printed in Black - 50V
 Coil No's Printed in Red - 24V
 Use Coil Chart Supplied With Each
 Machine, When Ordering Coils.

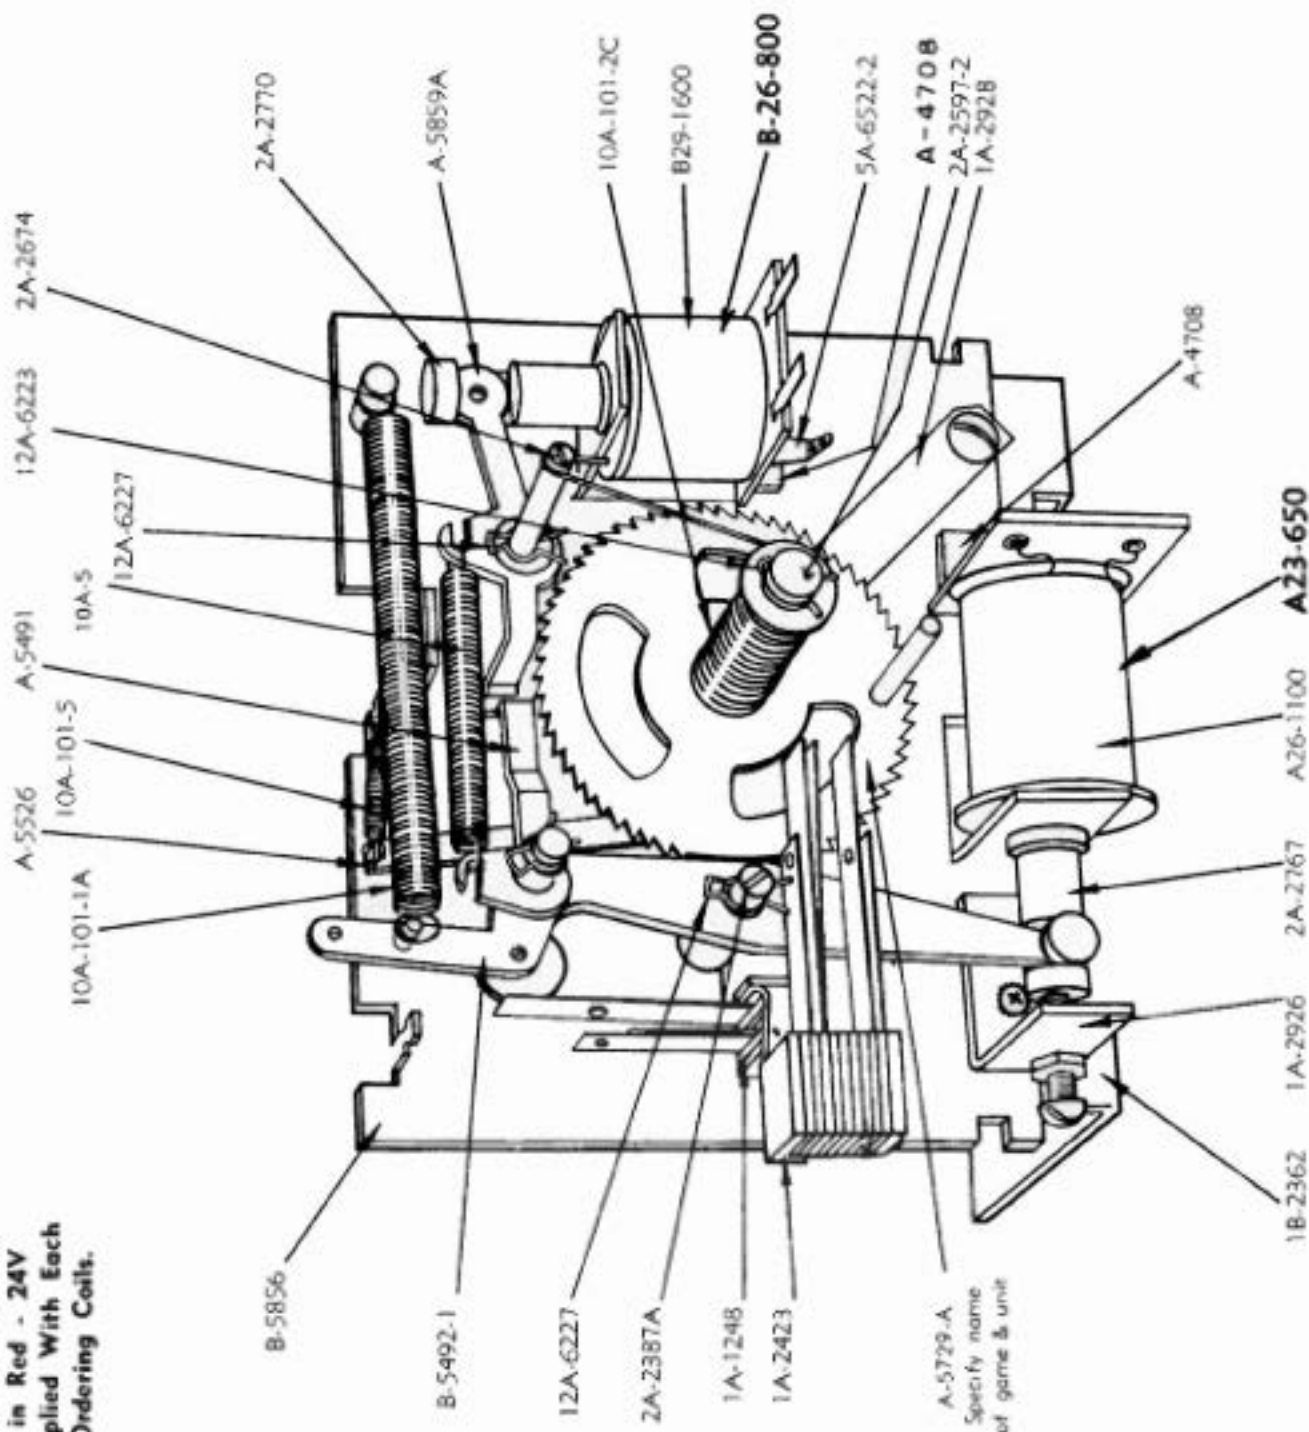


50 STEP UNIT (NO RESET) C-5745

Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils




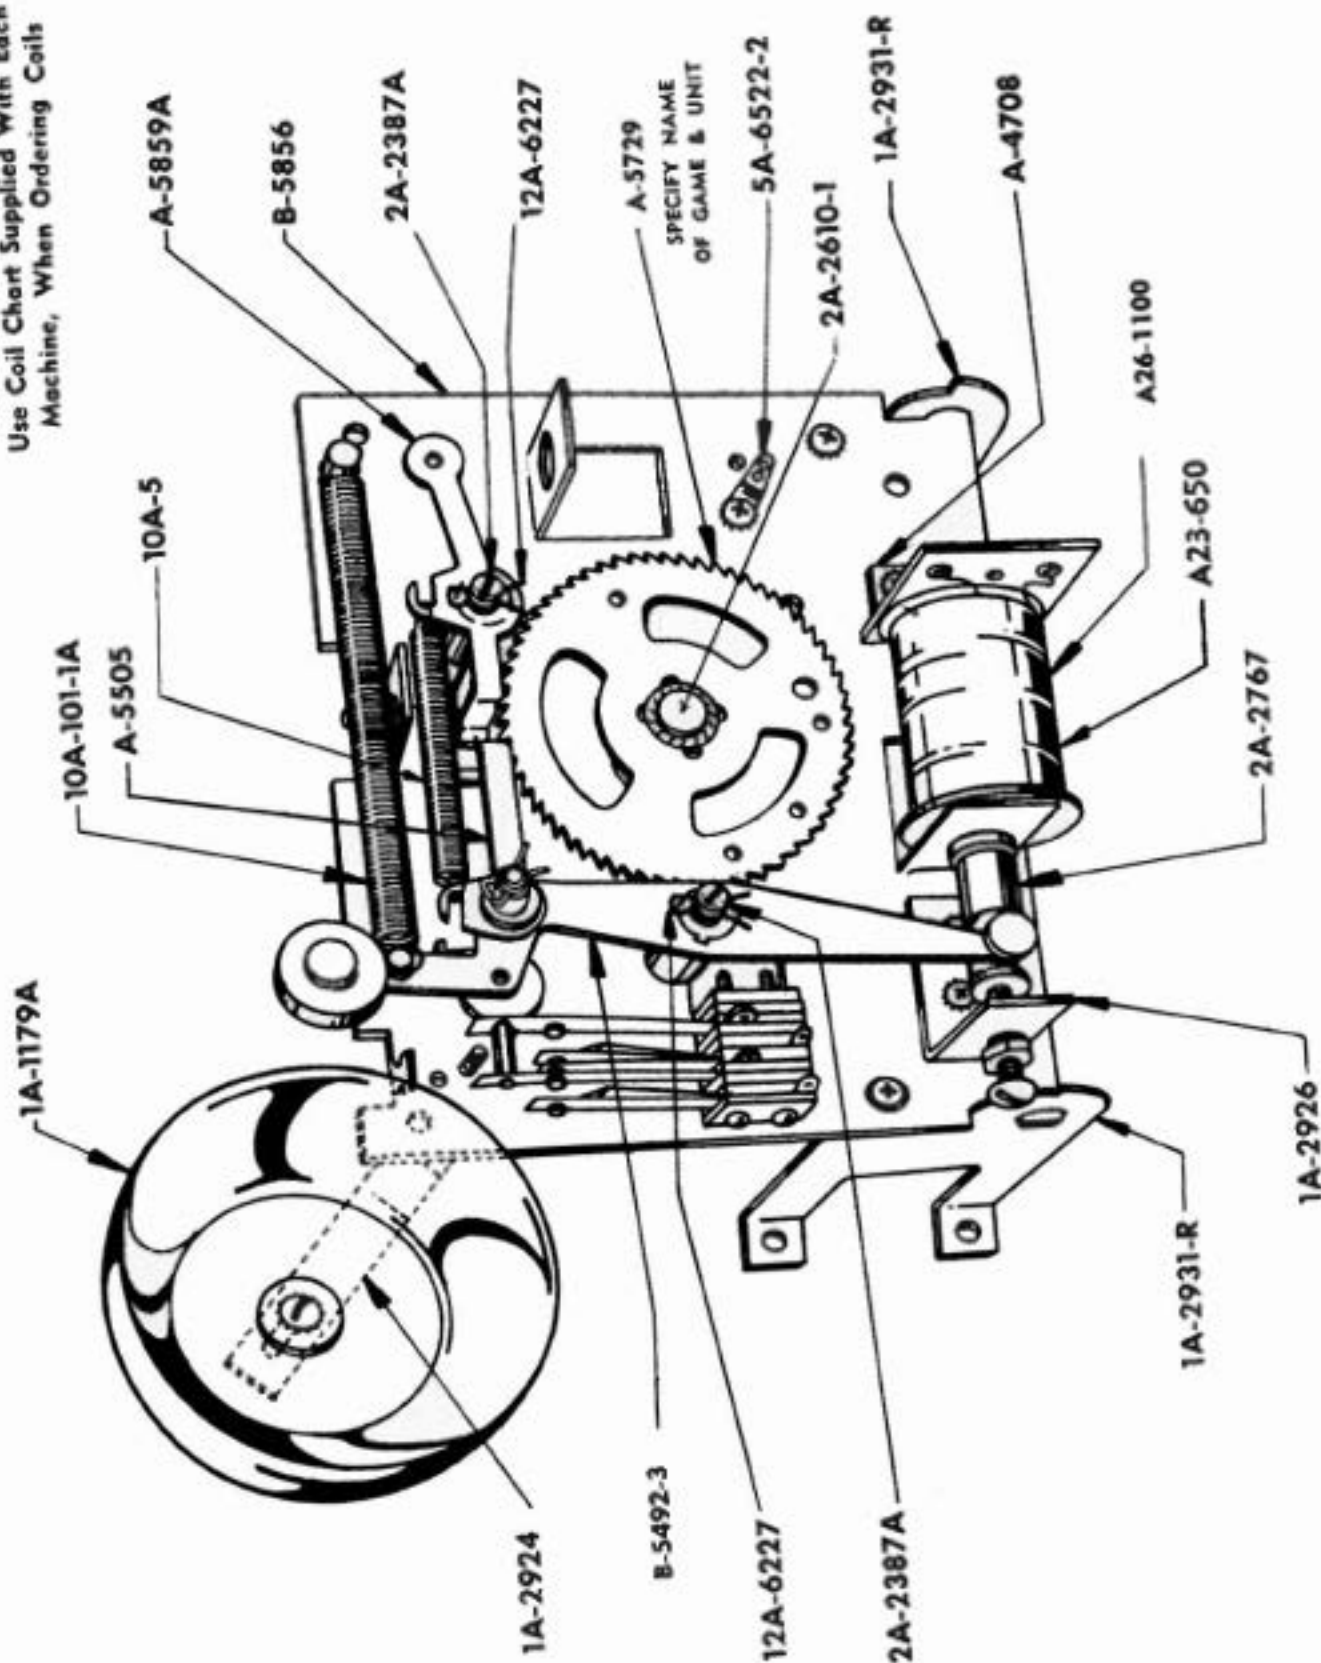


No. C-5866 REPLAY UNIT ASSEMBLY

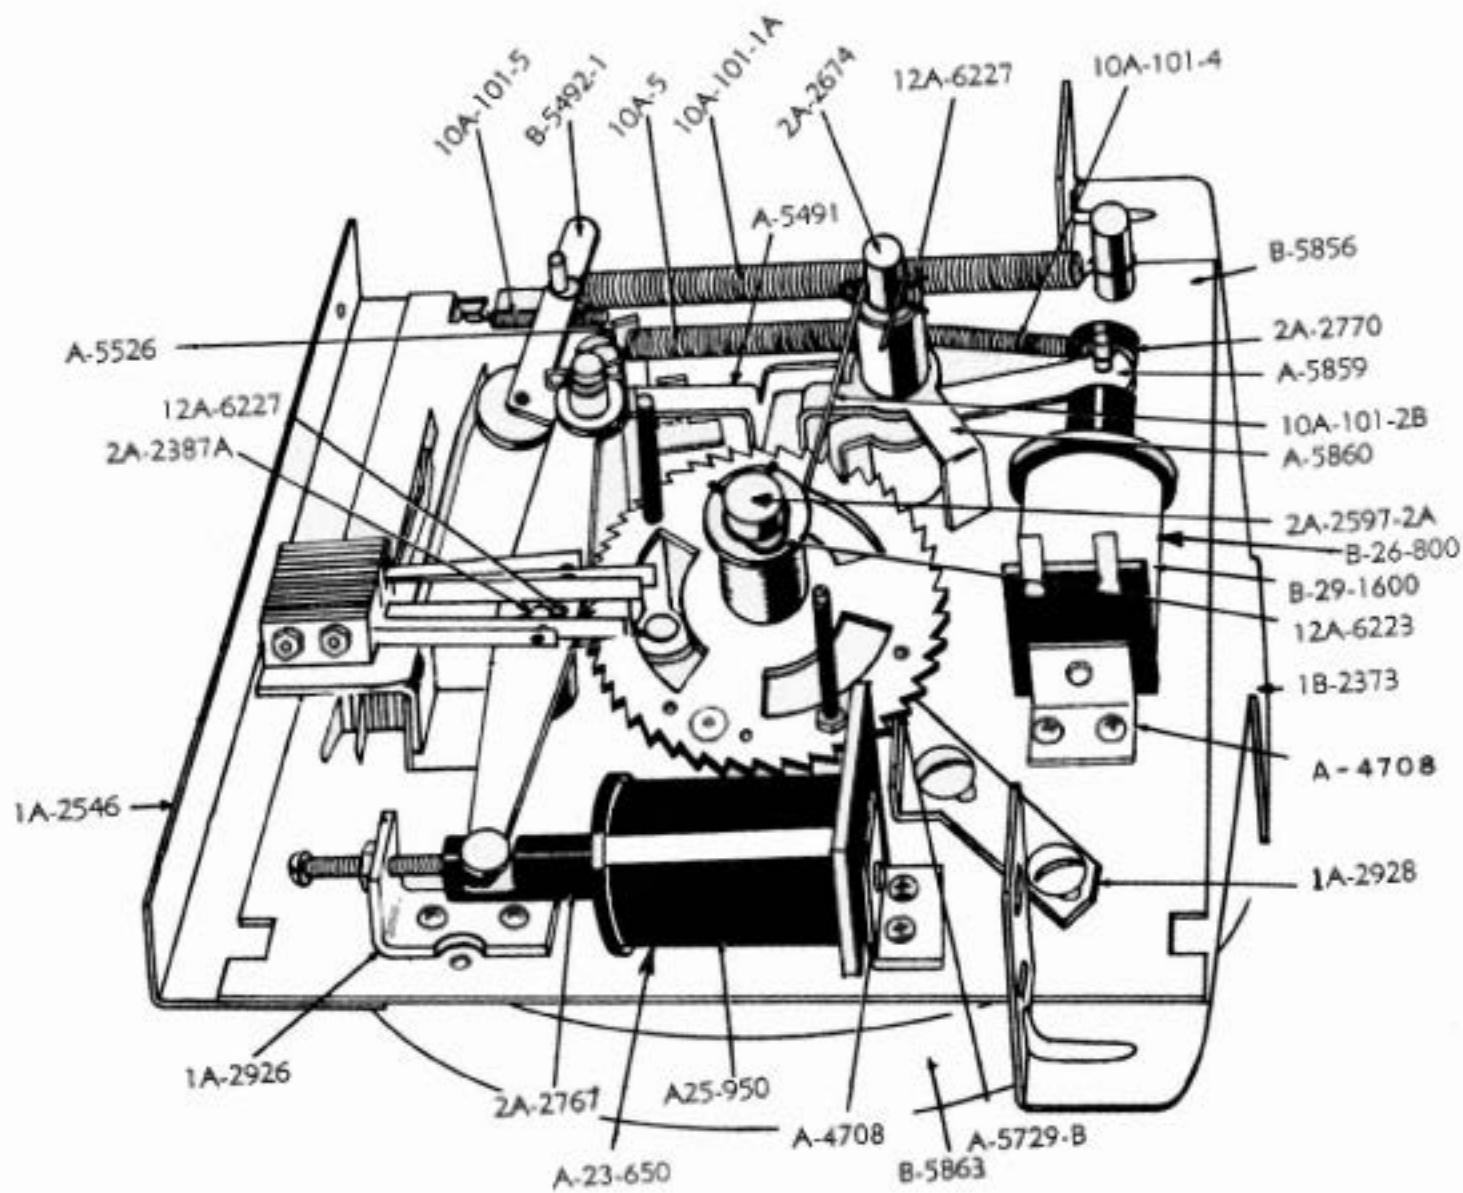


Coil No's Printed in Black - 50V
 Coil No's Printed in Red - 24V
 Use Coil Chart Supplied With Each
 Machine, When Ordering Coils.

DRIVE ARM & PAWL ASSEMBLIES (50 STEP UNITS)

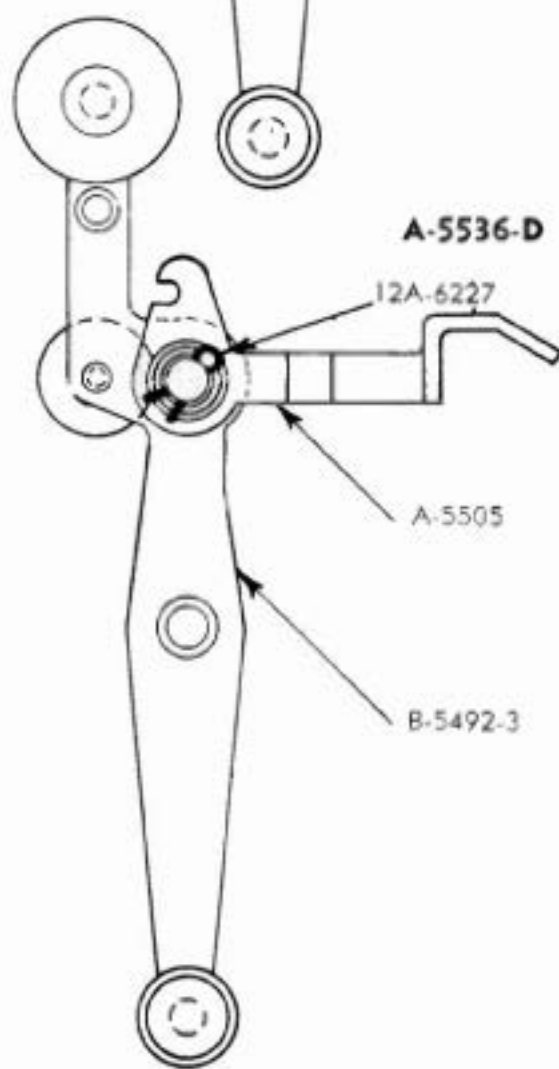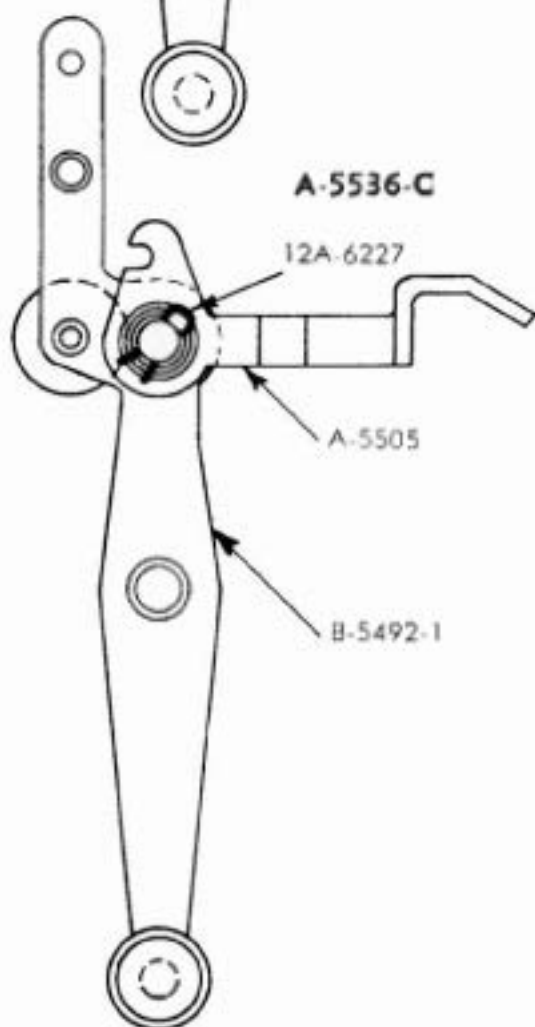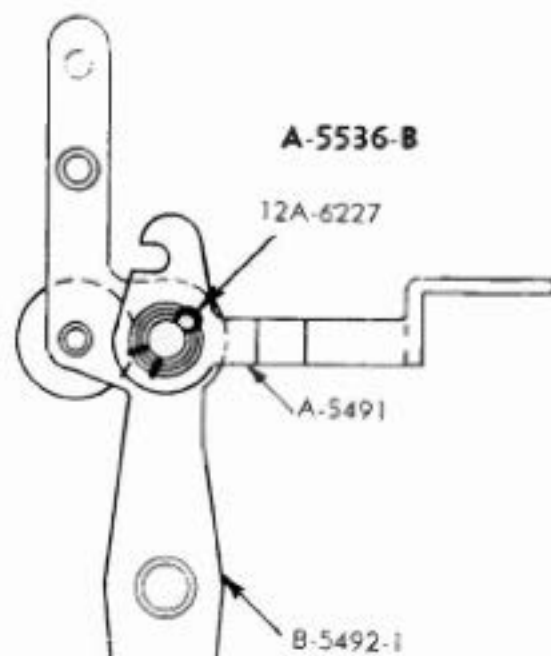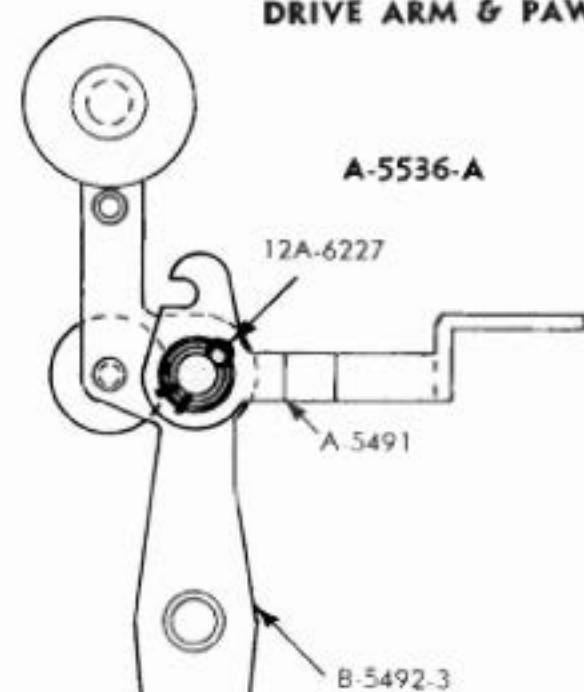

ARM & PAWL ASSEMBLIES
100 STEP UNIT


A-5535 DRIVE ARM & PAWL ASSEMBLY

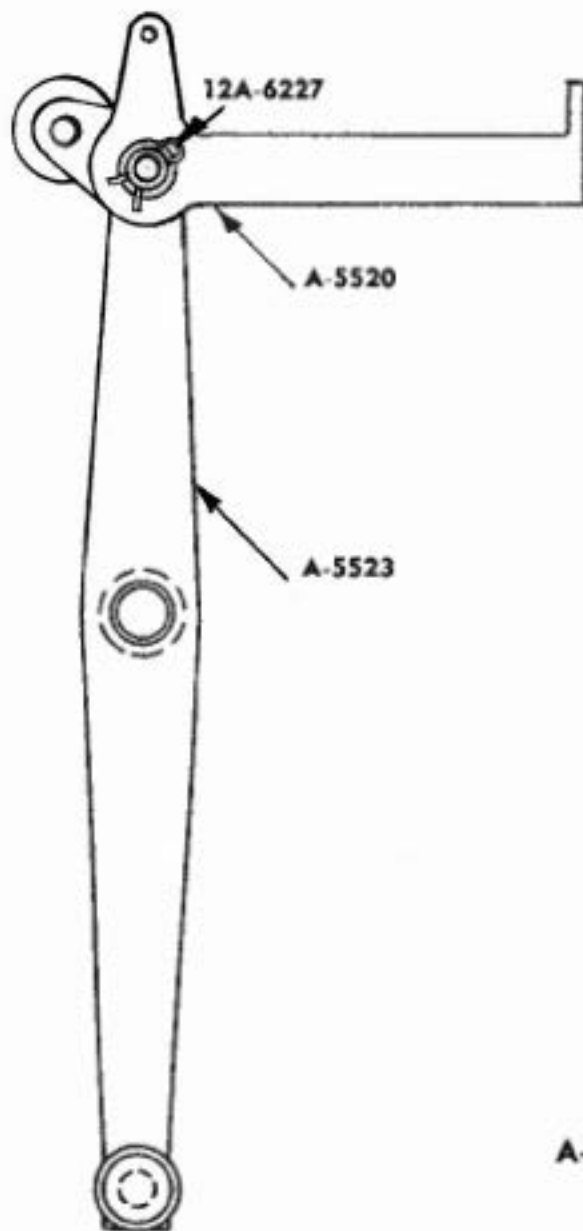

A-5524 LOCK ARM ASSEMBLY




A-5525 RESET ARM ASSEMBLY

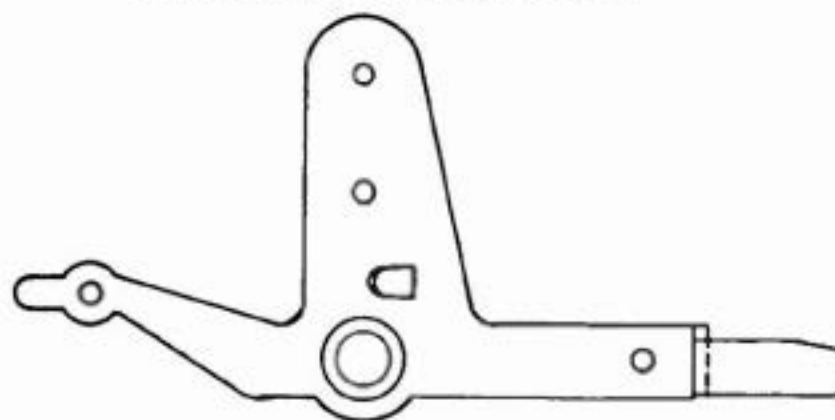


50-TOOTH RATCHET GEAR ASSEMBLY


(Specify name of unit and game)

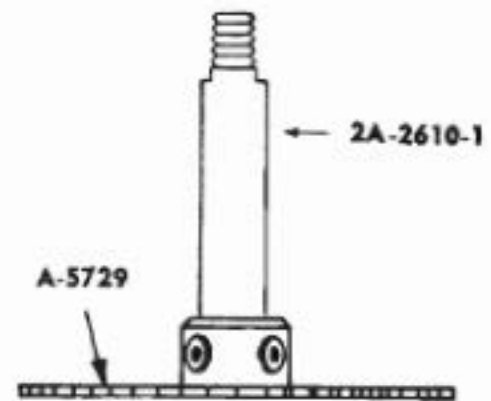


A-5946
NON-RESETTING
50 STEP UNIT

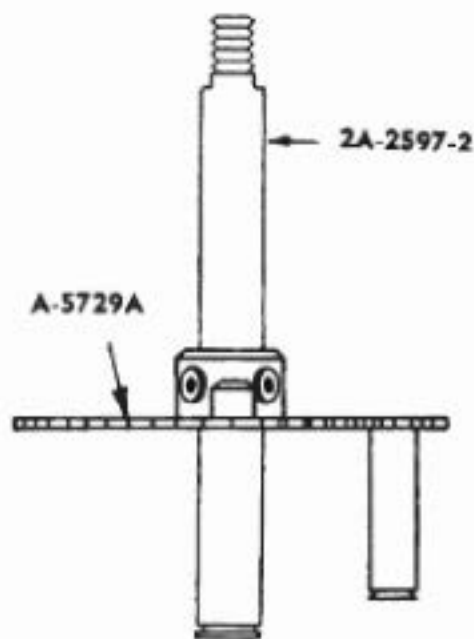

A-5947
RESETTING
50 STEP UNIT

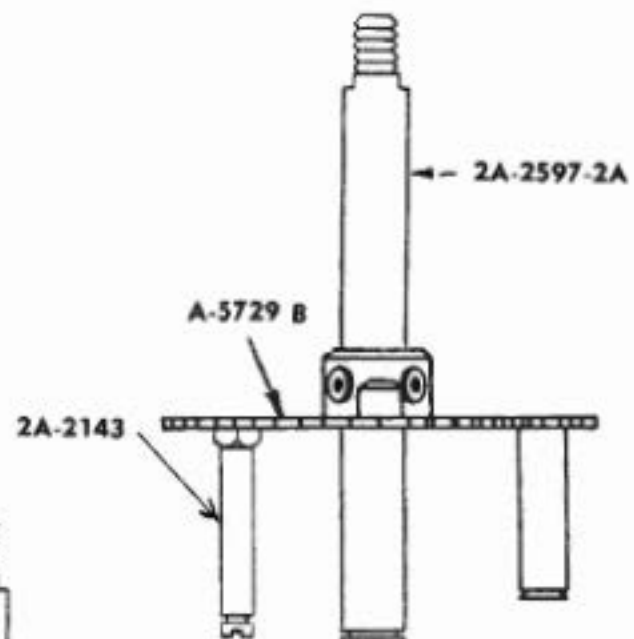


A-5948
REPLAY UNIT

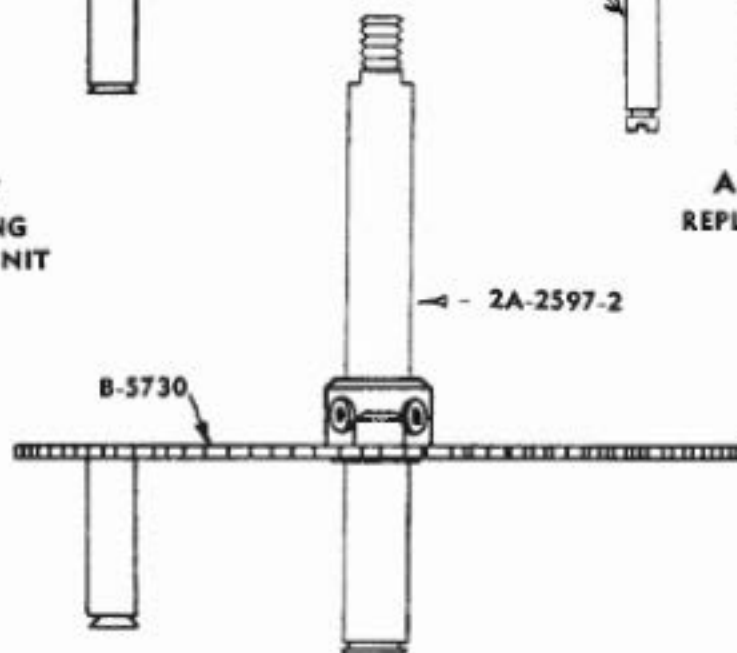


A-5949
100 STEP UNIT

(NEW)
B-6202 SNOWSHOE WIPER ASSEMBLY
 WHEN ORDERING SPECIFY GAME & UNIT

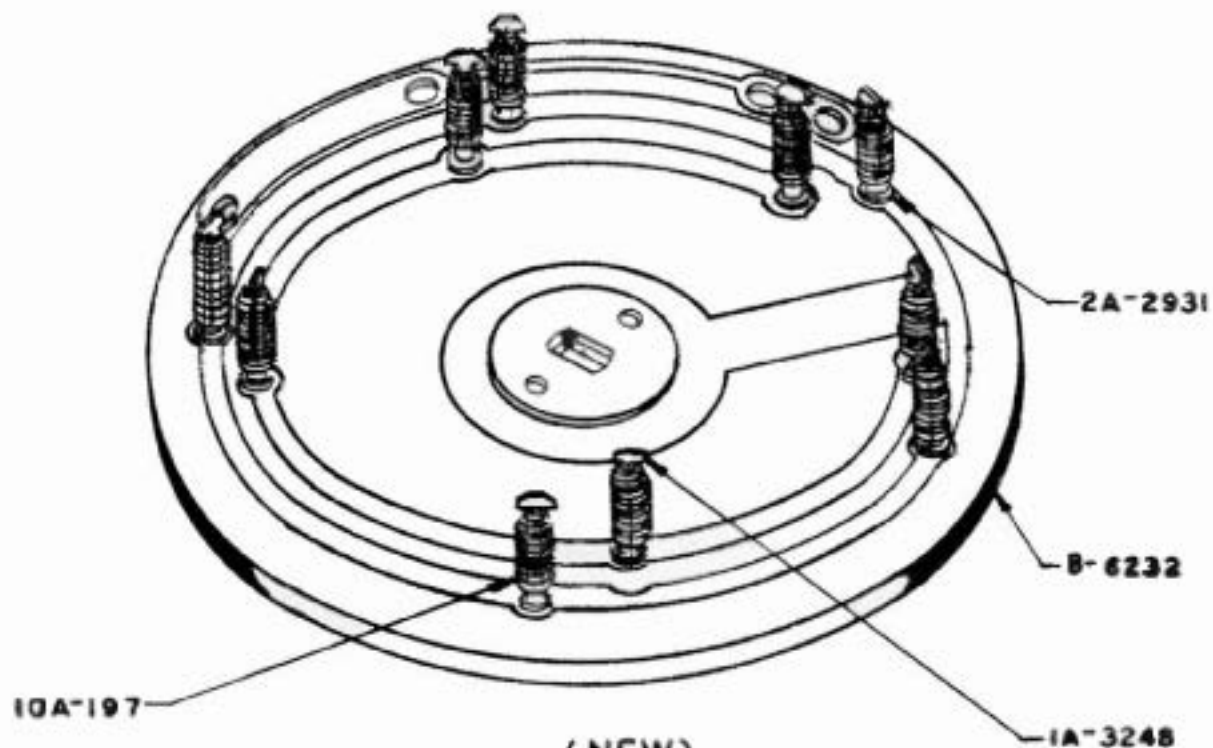


(NEW)
B-6200 SNOWSHOE WIPER ASSEMBLY
 WHEN ORDERING SPECIFY GAME & UNIT

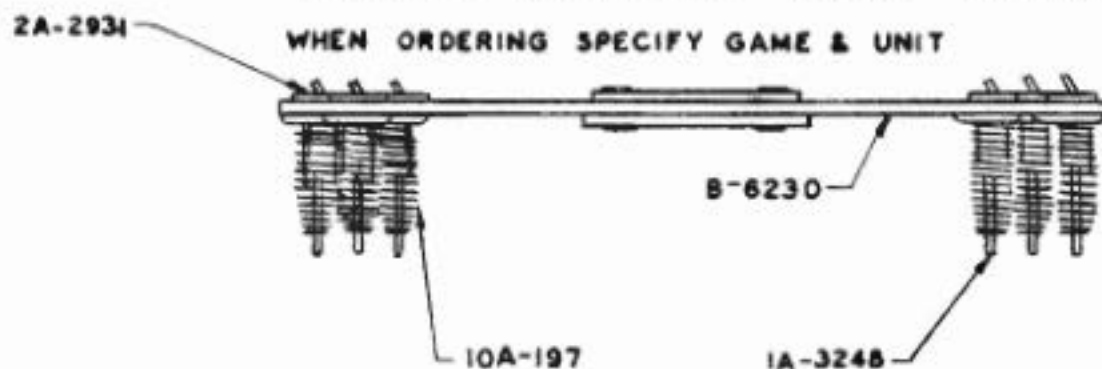


(NEW)
B-6240 SNOWSHOE WIPER ASSEMBLY-100 STEP UNIT




B-5902 SNOWSHOE WIPER ASSEMBLY
WHEN ORDERING SPECIFY NAME
OF GAME & UNIT

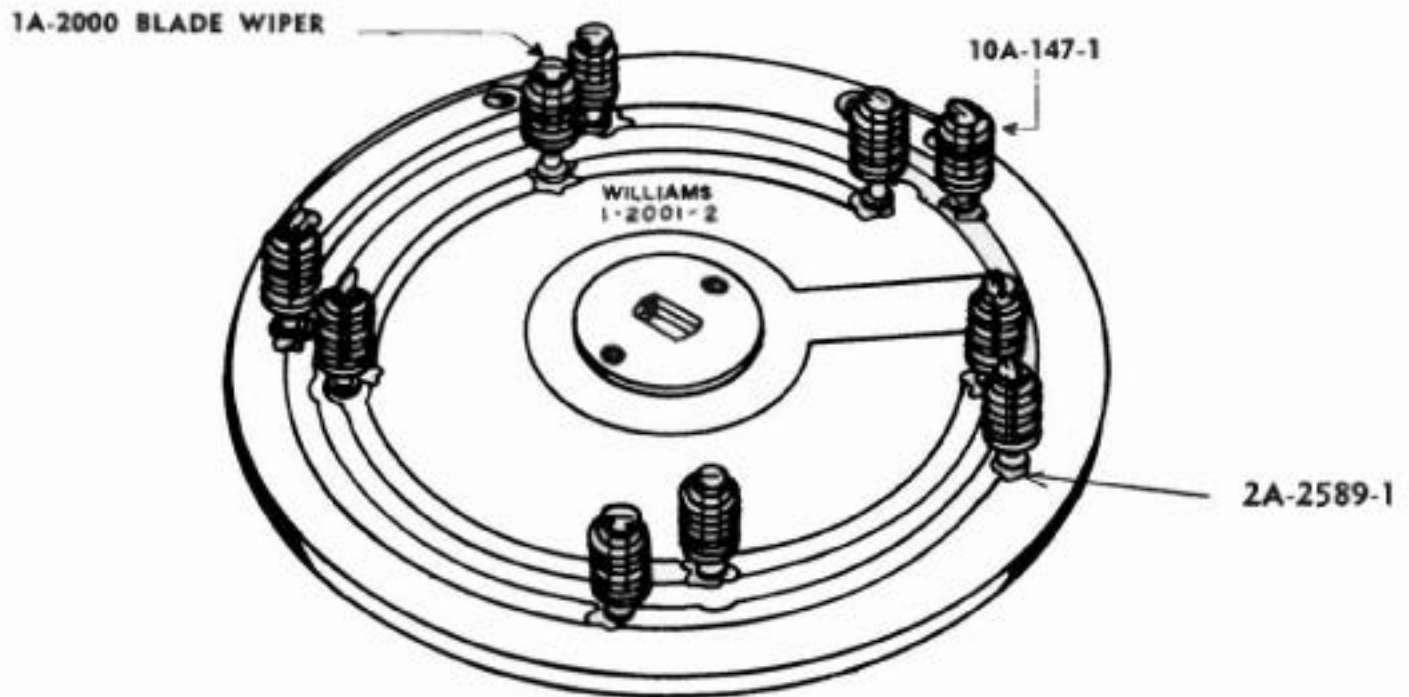


(OLD TYPE)
B-5733 10,000 UNIT SNOWSHOE WIPER ASSEMBLY
 (Specify name of unit and game)

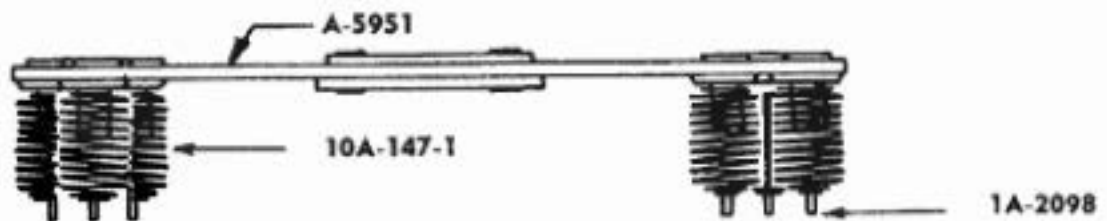

(OLD TYPE)
B-5732 100,000 UNIT SNOWSHOE WIPER ASSEMBLY
 (Specify Name of Unit and Game)

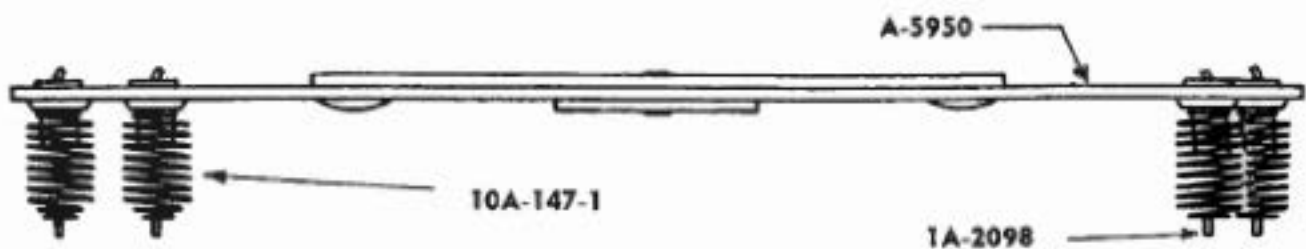


C-5726 10 STEP UNIT WITH CONTACT DISC. & FINGER ASS'Y.

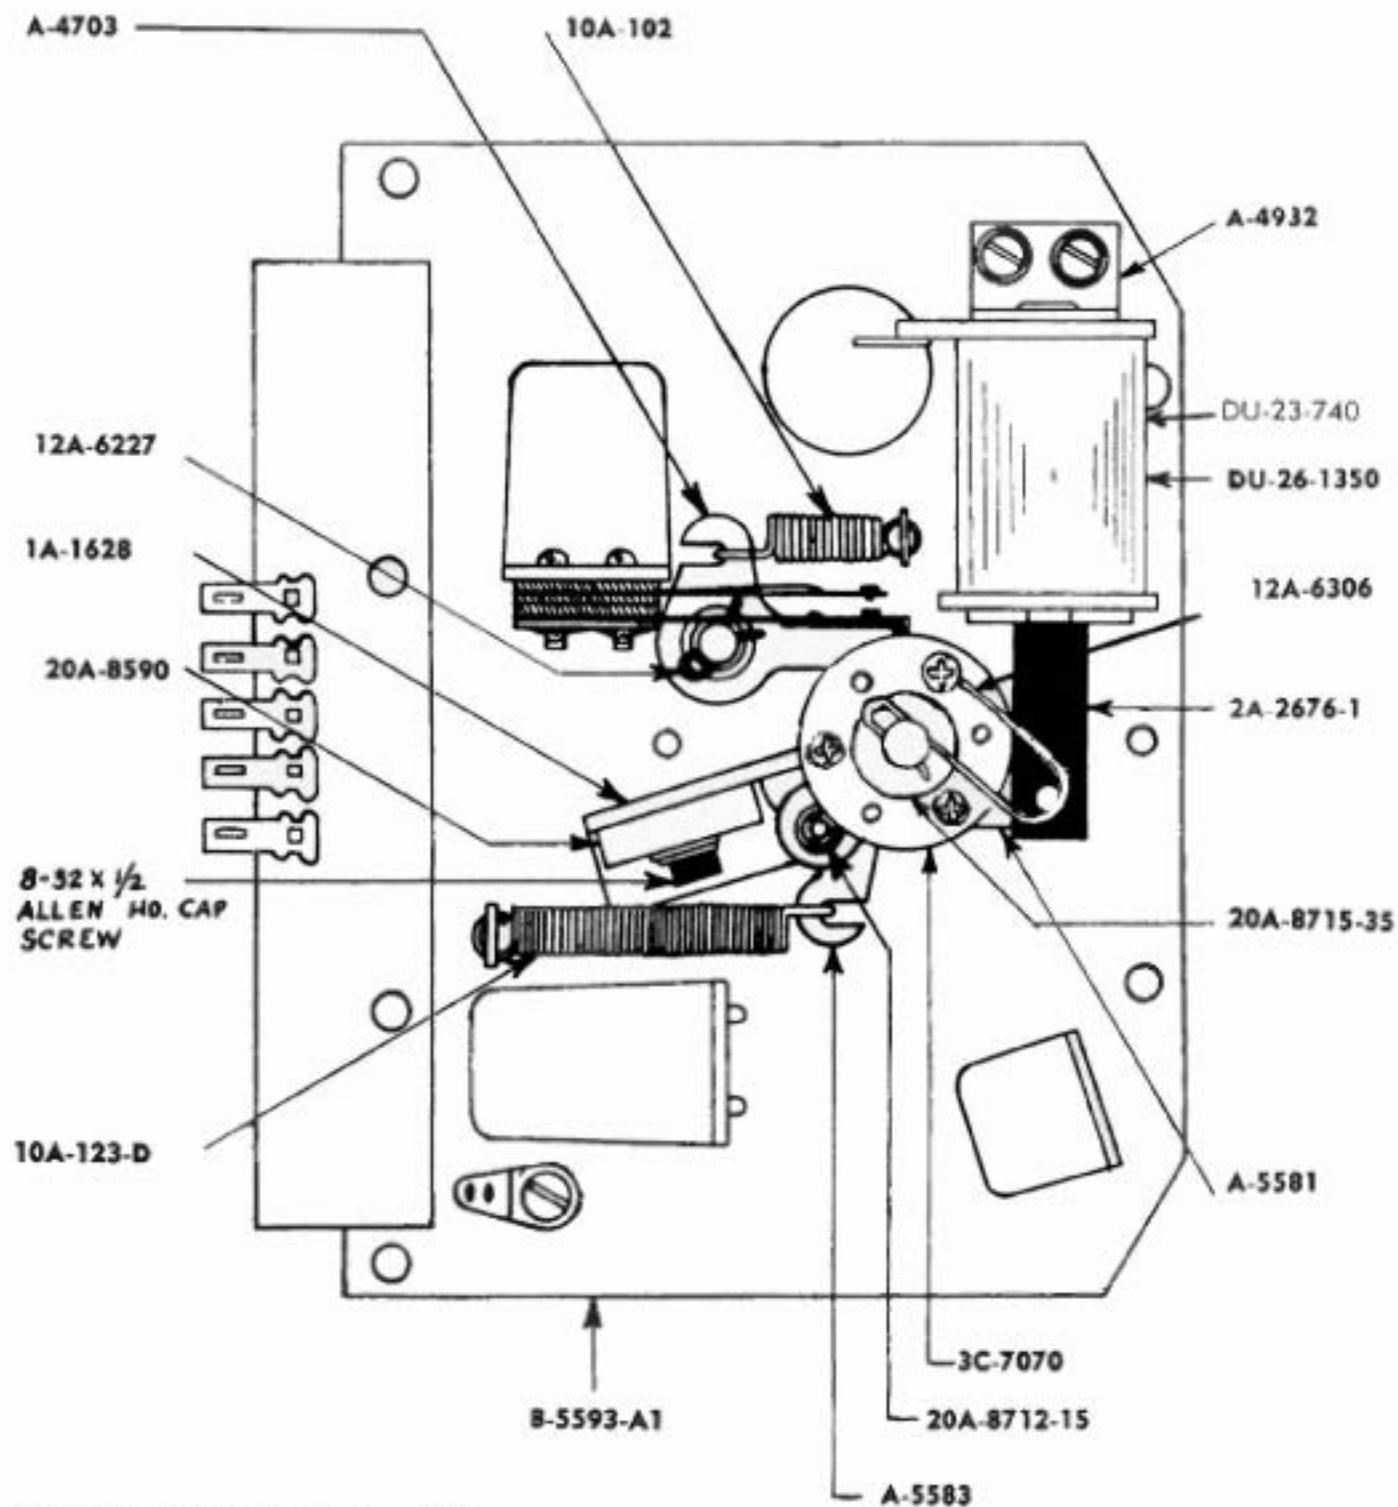

Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.

C-5726-A 10 STEP UNIT WITHOUT CONTACT DISC. & FINGER ASS'Y.

Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.

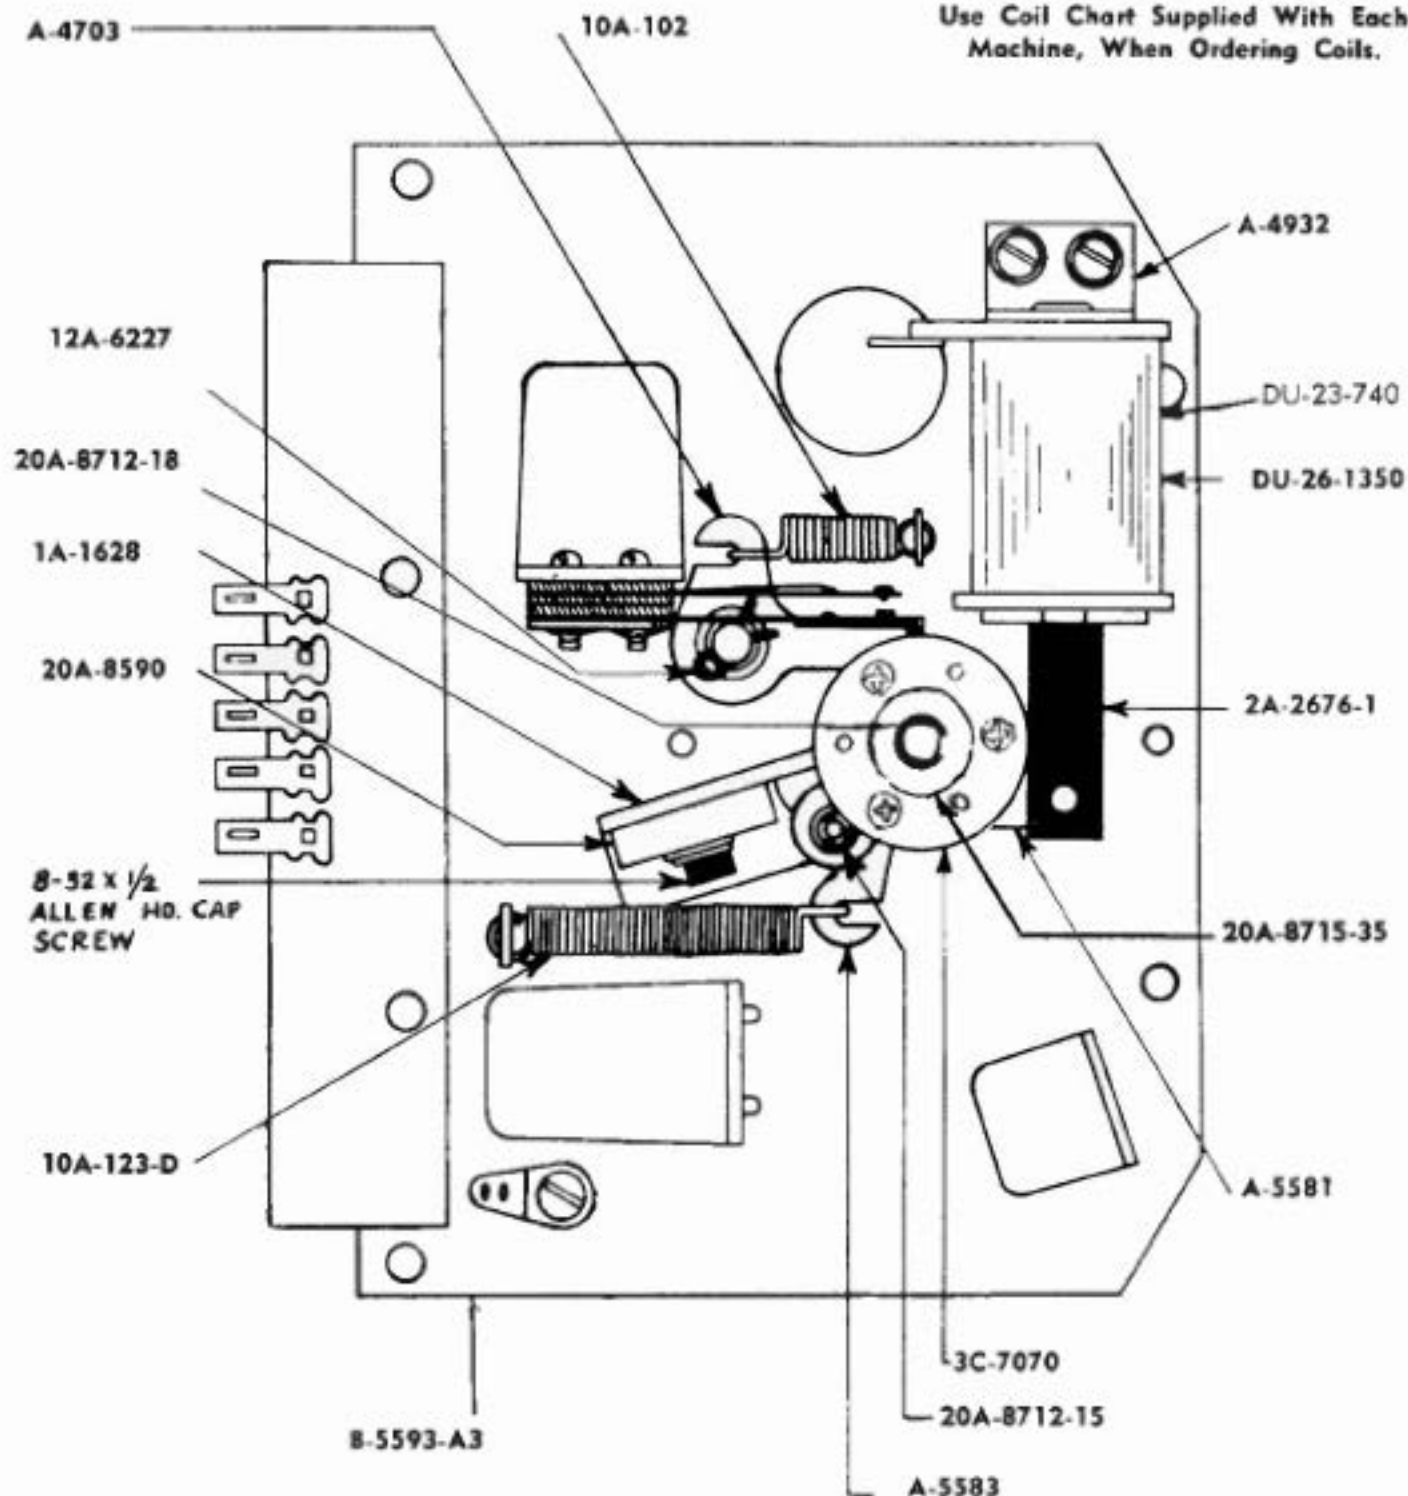


ADJUST STOP 1A-1628 STOP SO THAT
INDEX PAWL RESTS EXACTLY IN
BASE OF GEAR TOOTH.

ADJUST DRIVE PAWL STOP 20A-8590
AGAINST DRIVE PAWL ASSY. A-5583

(OLD TYPE)
10 STEP UNIT PARTS



SCREENED REEL
20C-7595

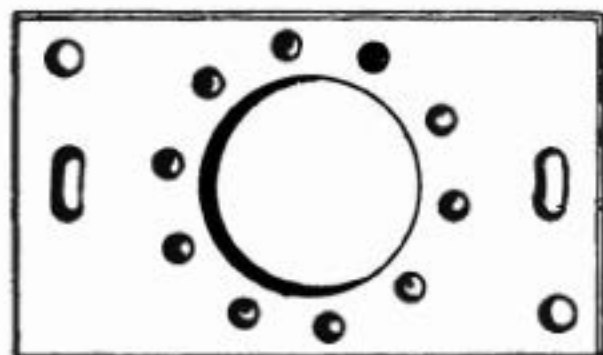


A-5003-1 CONTACT DISC. ASSEMBLY
SPECIFY UNIT POSITION & GAME NAME



A-4722 CONTACT FINGER ASSEMBLY
AS SHOWN
A-4722-A CONTACT FINGER ASSEMBLY
1 ARM CUTOFF
A-4722-B CONTACT FINGER ASSEMBLY
THIS ARM CUTOFF



GROUND WIRE
12A-6306

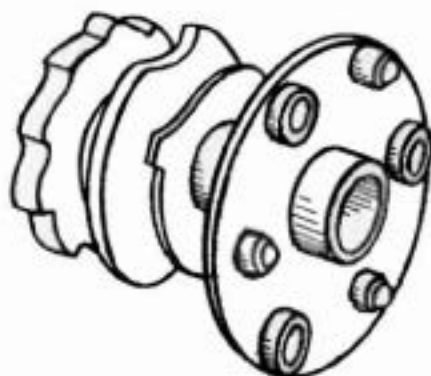

CAM & RATCHET HUB

3C-7070 - (NYLON) CAM & RATCHET HUB
B-4709 - (METAL) CAM & RATCHET HUB
* B-4709R - (METAL) CAM & RATCHET HUB
* USED ON MAJOR LEAGUE & BIG INNING

10 STEP UNIT PARTS



A-5583 DRIVE PAWL ASSY.




A-4703 INDEX PAWL ASSY.



A-5581 DRIVE CRANK ASSEY.

Use Part No. 3A-6085
Nylon Crank, on Old
Units with Paper Reel

10 STEP UNIT SWITCHES

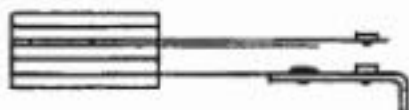


SW. 1U 9 POSITION
MAKE SWITCH



SW. 1U-2 INDEX SWITCH
MAKE SWITCH



SW. 1U-1 INDEX SWITCH
MAKE SWITCH

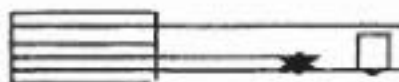


SW. 20U-1 END OF STROKE
BREAK SWITCH

(NEW) 10 STEP UNIT

C-6296

WITH PRINTED CIRCUIT & CONTACT RING.

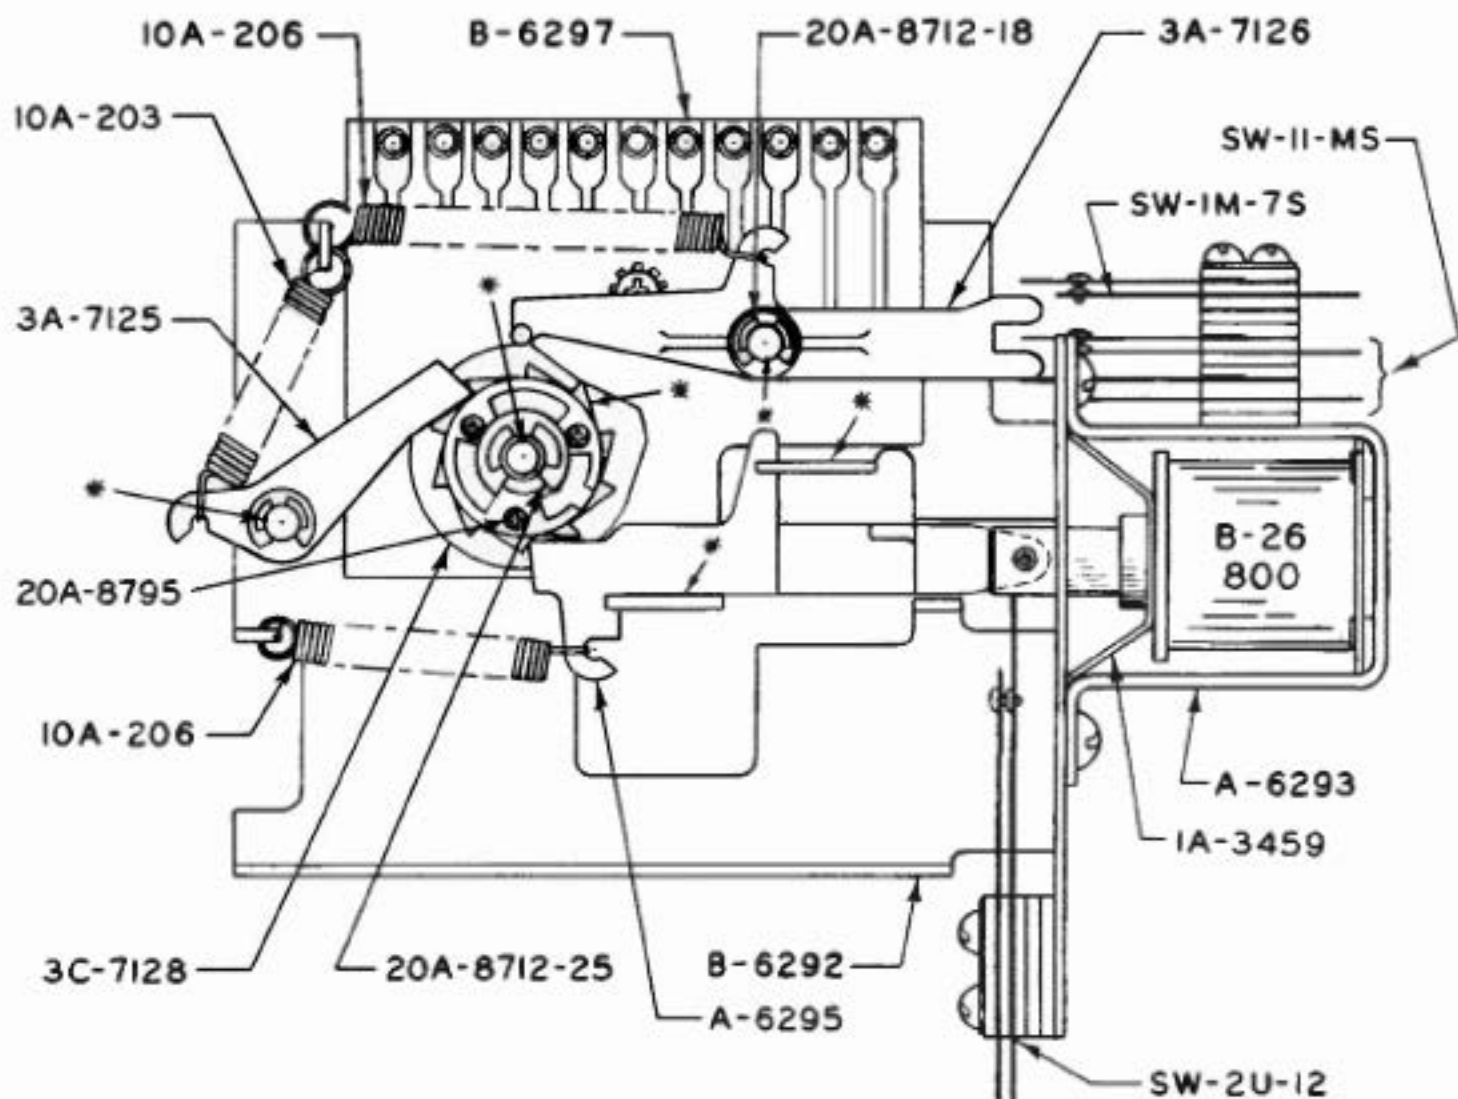


LUBRICATION: DO NOT PUT LUBRICANT ON DRIVE ARMATURE

PROPER LUBRICATION WILL INSURE A LONGER LASTING & BETTER OPERATING UNIT.

POINTS TO BE LUBRICATED ARE THE THREE POSTS ON WHICH THE NYLON PARTS ROTATE, EACH TOOTH OF THE RATCHET, ALSO THE (2) DRIVE PAWL GUIDE SLOTS, INDICATED BY *.

"SERVICE SUGGESTION"

IF UNIT BECOMES SLUGGISH - DISASSEMBLE, CLEAN ALL PARTS AND REASSEMBLE, LUBRICATING ALL PARTS MARKED WITH *.

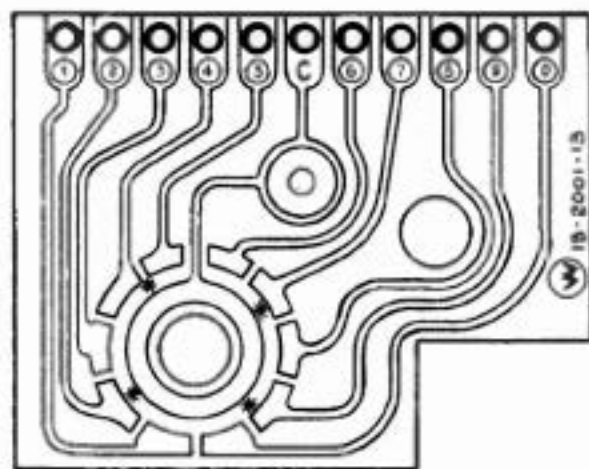


B-6297

PRINTED CIRCUIT ASSEMBLY

* LUBRICATE

(NEW) 10 STEP UNIT
C-6296 A
 WITHOUT PRINTED CIRCUIT & CONTACT RING.

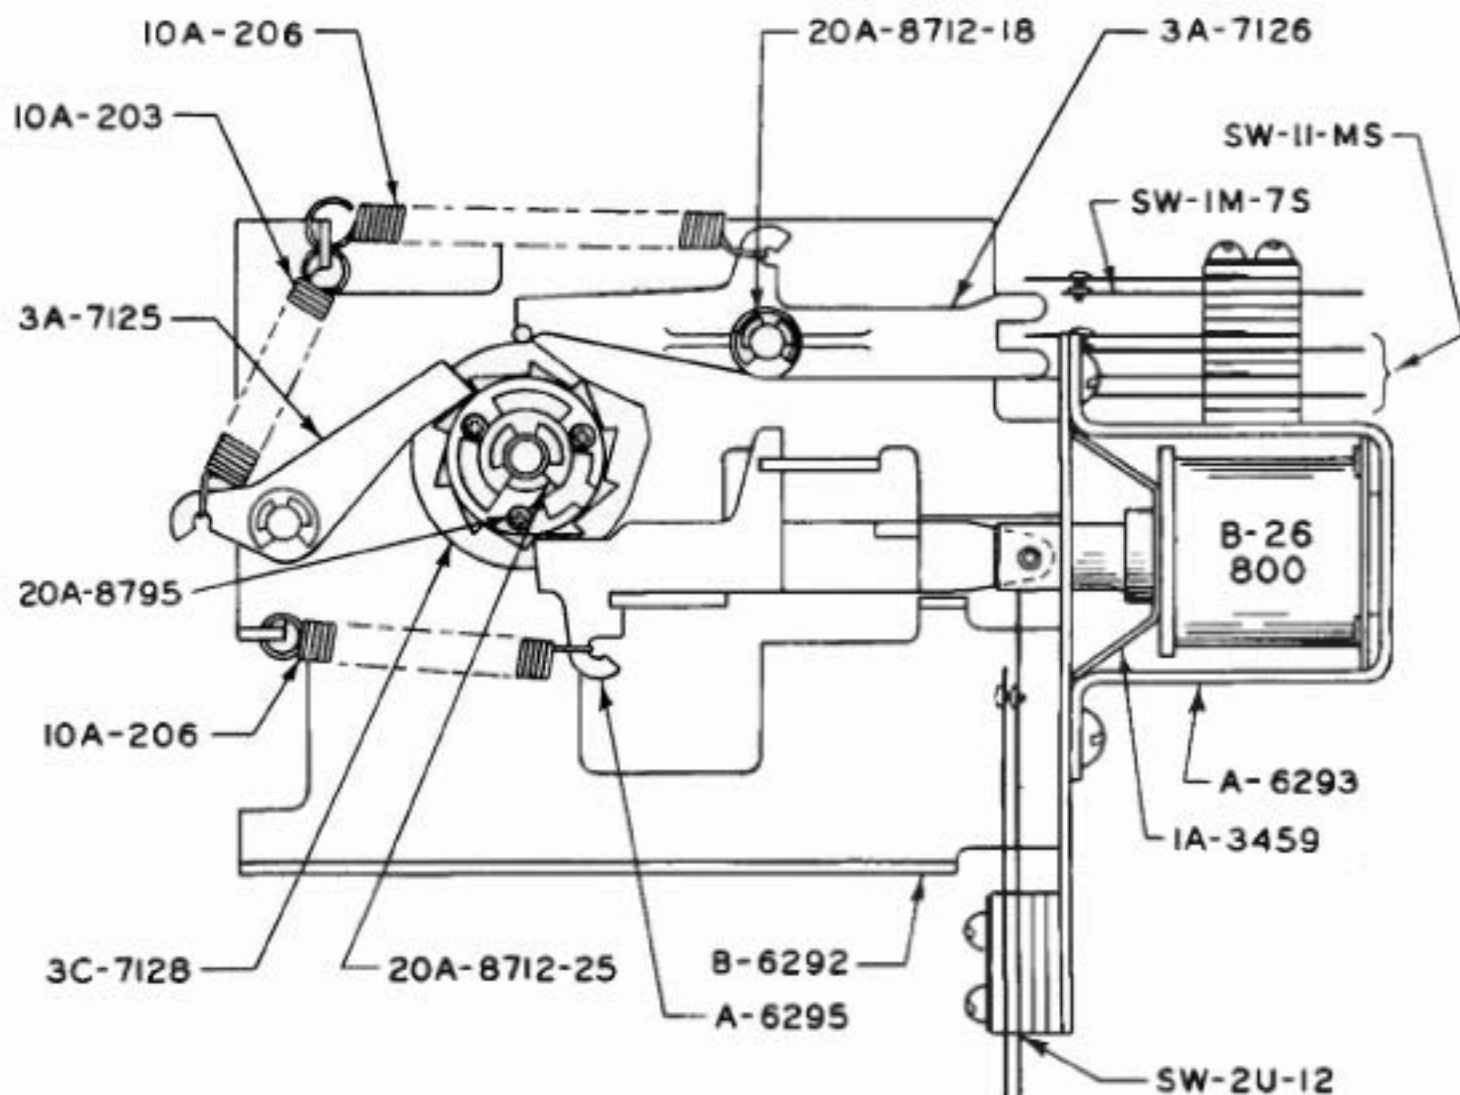


SWITCH ADJUSTMENT :


AT "O" OR INDEX POSITION ALL 3 SWITCHES ARE OPEN AS SHOWN.

AT 1ST TO 8TH POSITION 2 TOP SWITCHES ARE CLOSED. BOTTOM SWITCH REMAINS OPEN.


AT 9TH POSITION ALL 3 SWITCHES ARE CLOSED, AS SHOWN.

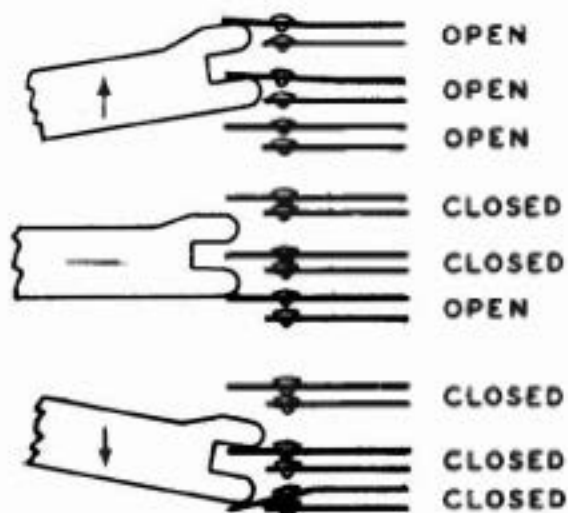

(NEW) 10 STEP UNIT PARTS

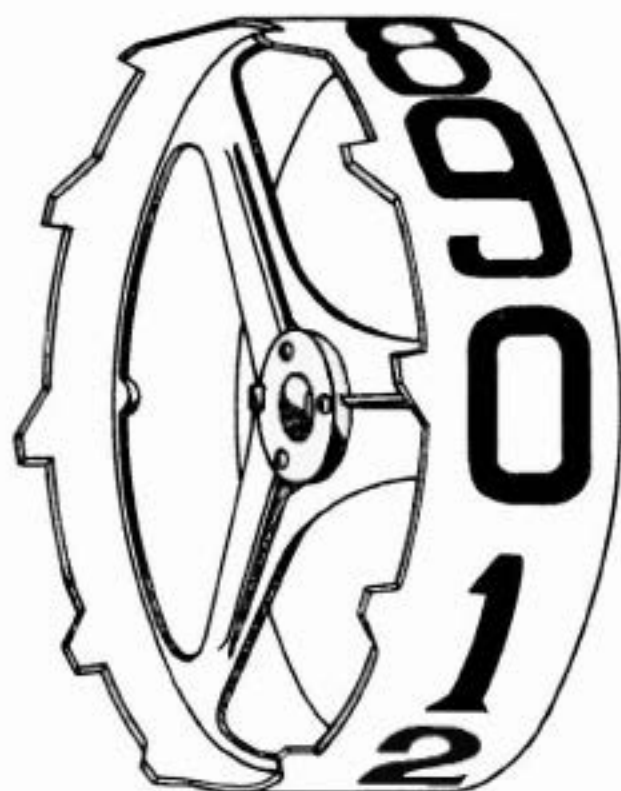

30C-7129
4" SCREENED DRUM

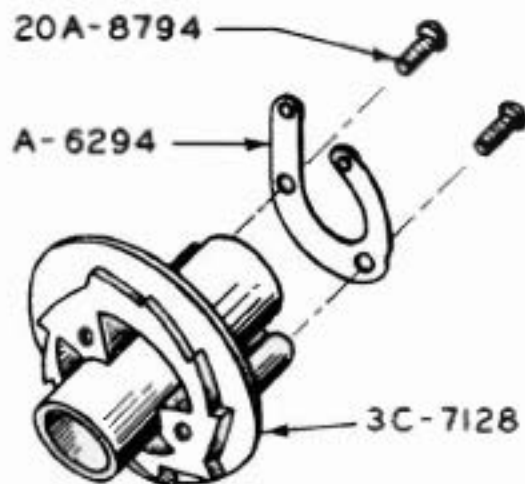

A-6305
RATCHET & CONTACT RING ASS'Y.




20A-8789
8-32 X 1/4 THUMB SCREW



3A-7126
SWITCH ACTUATOR




3A-7125
RATCHET STOP PAWL

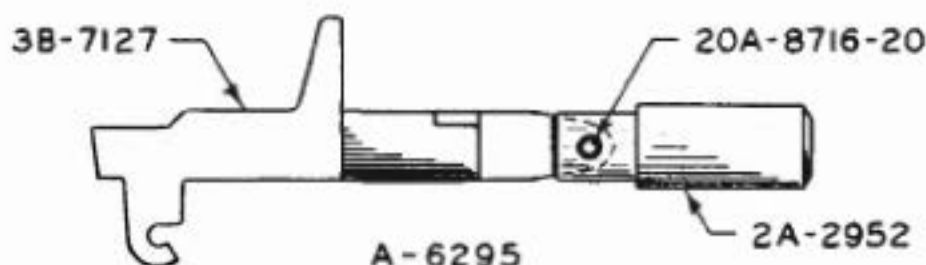


A-6295
DRIVE PAWL & ARMATURE

C-5507 RELAY BANK ASSEMBLY

Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.

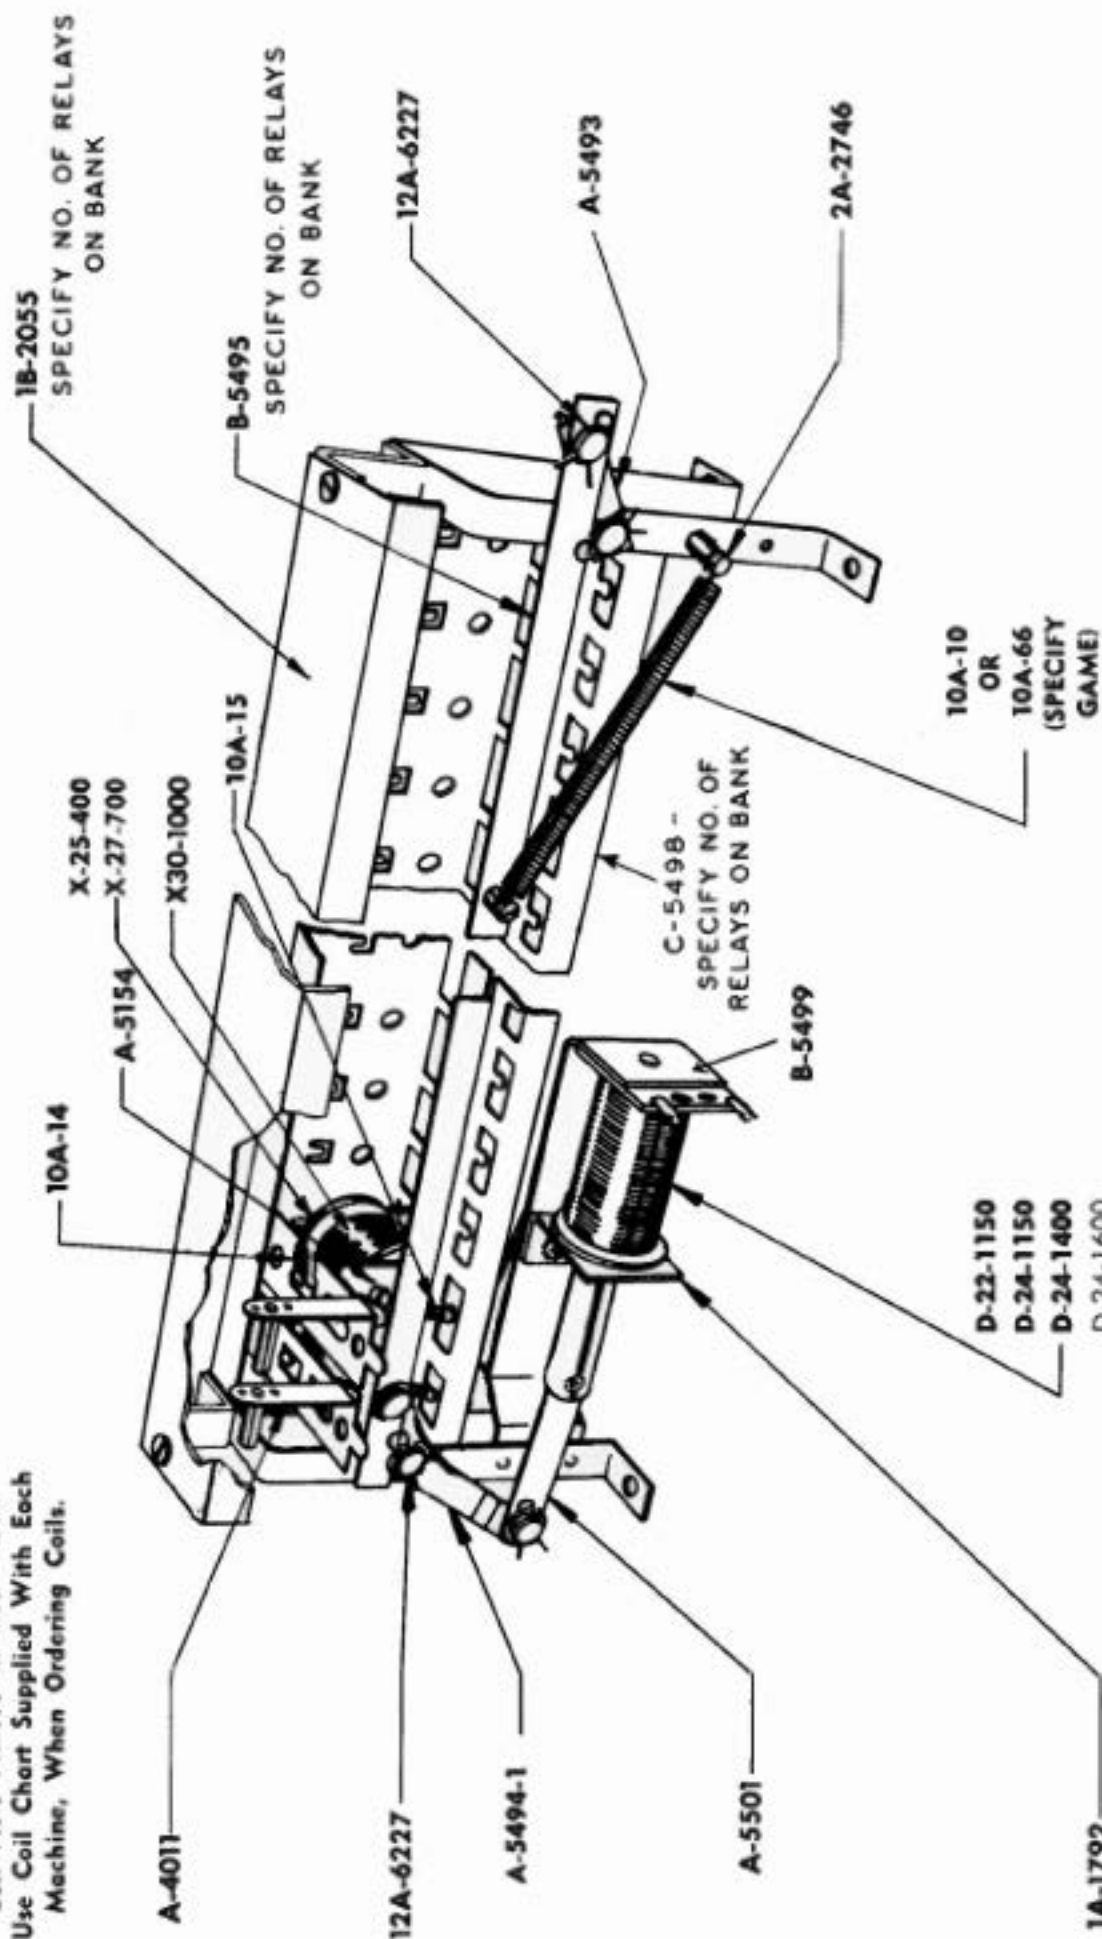


JET BUMPER ASSEMBLY B-5053

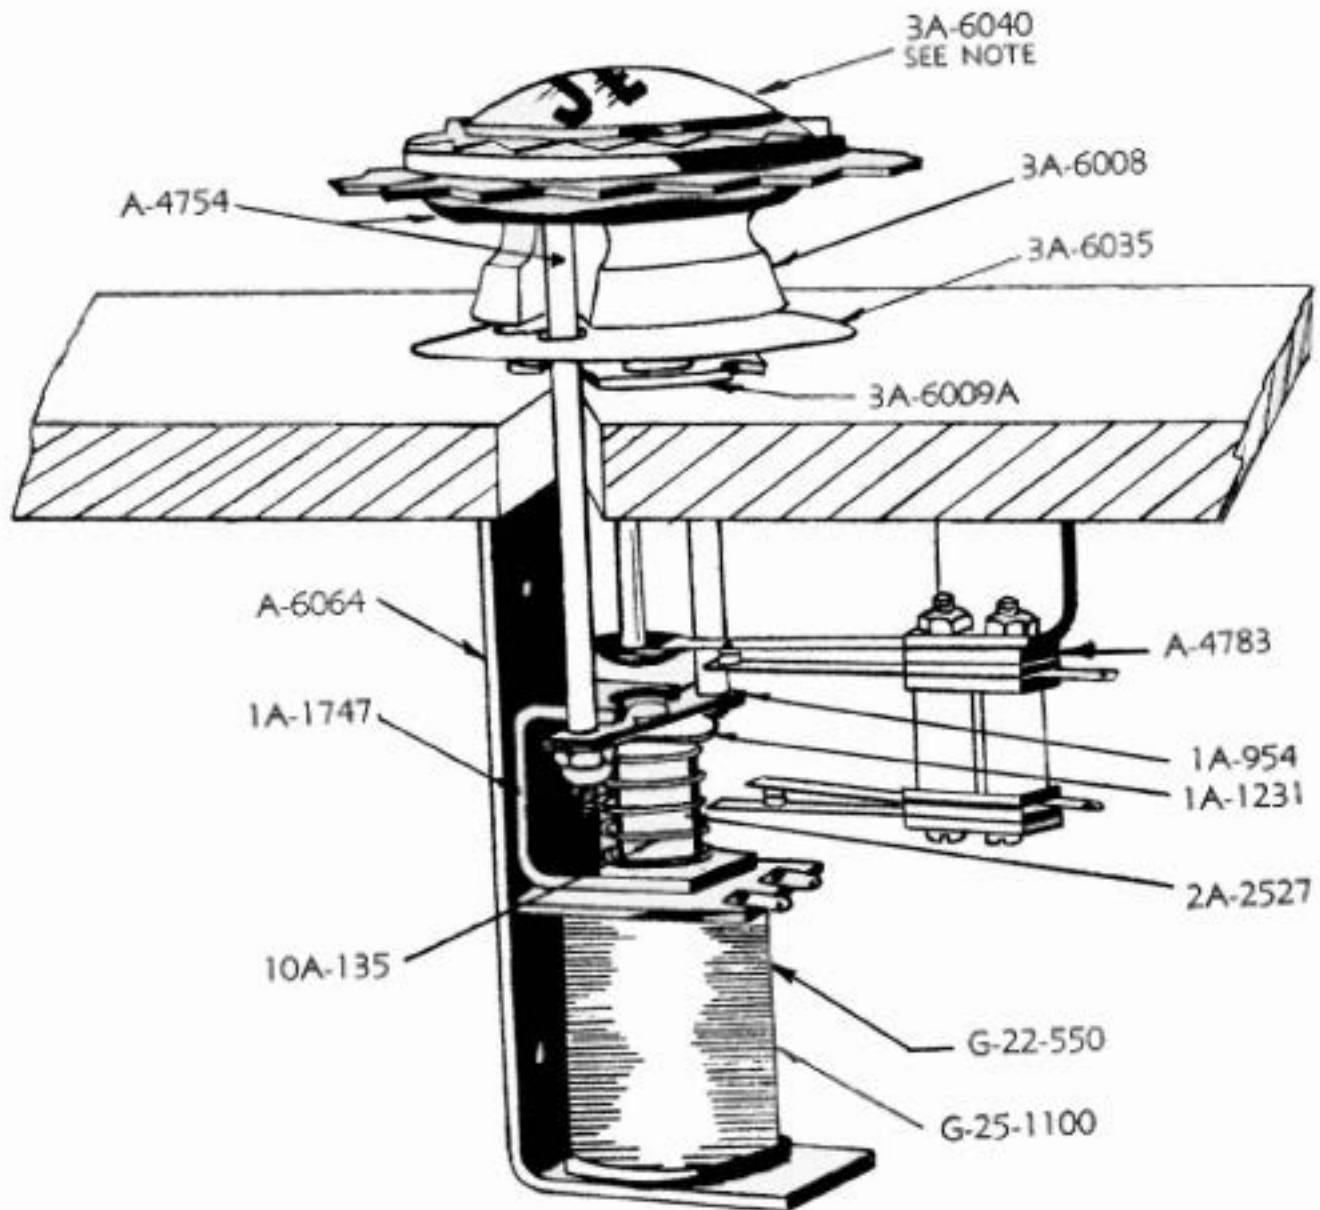


Coil No's Printed in Black - 50V
 Coil No's Printed in Red - 24V
 Use Coil Chart Supplied With Each
 Machine, When Ordering Coils.

Note — Specify STAMPING and COLOR on all Caps


**(NEW)
SWINGING TARGET ASSEMBLY
B-6045**

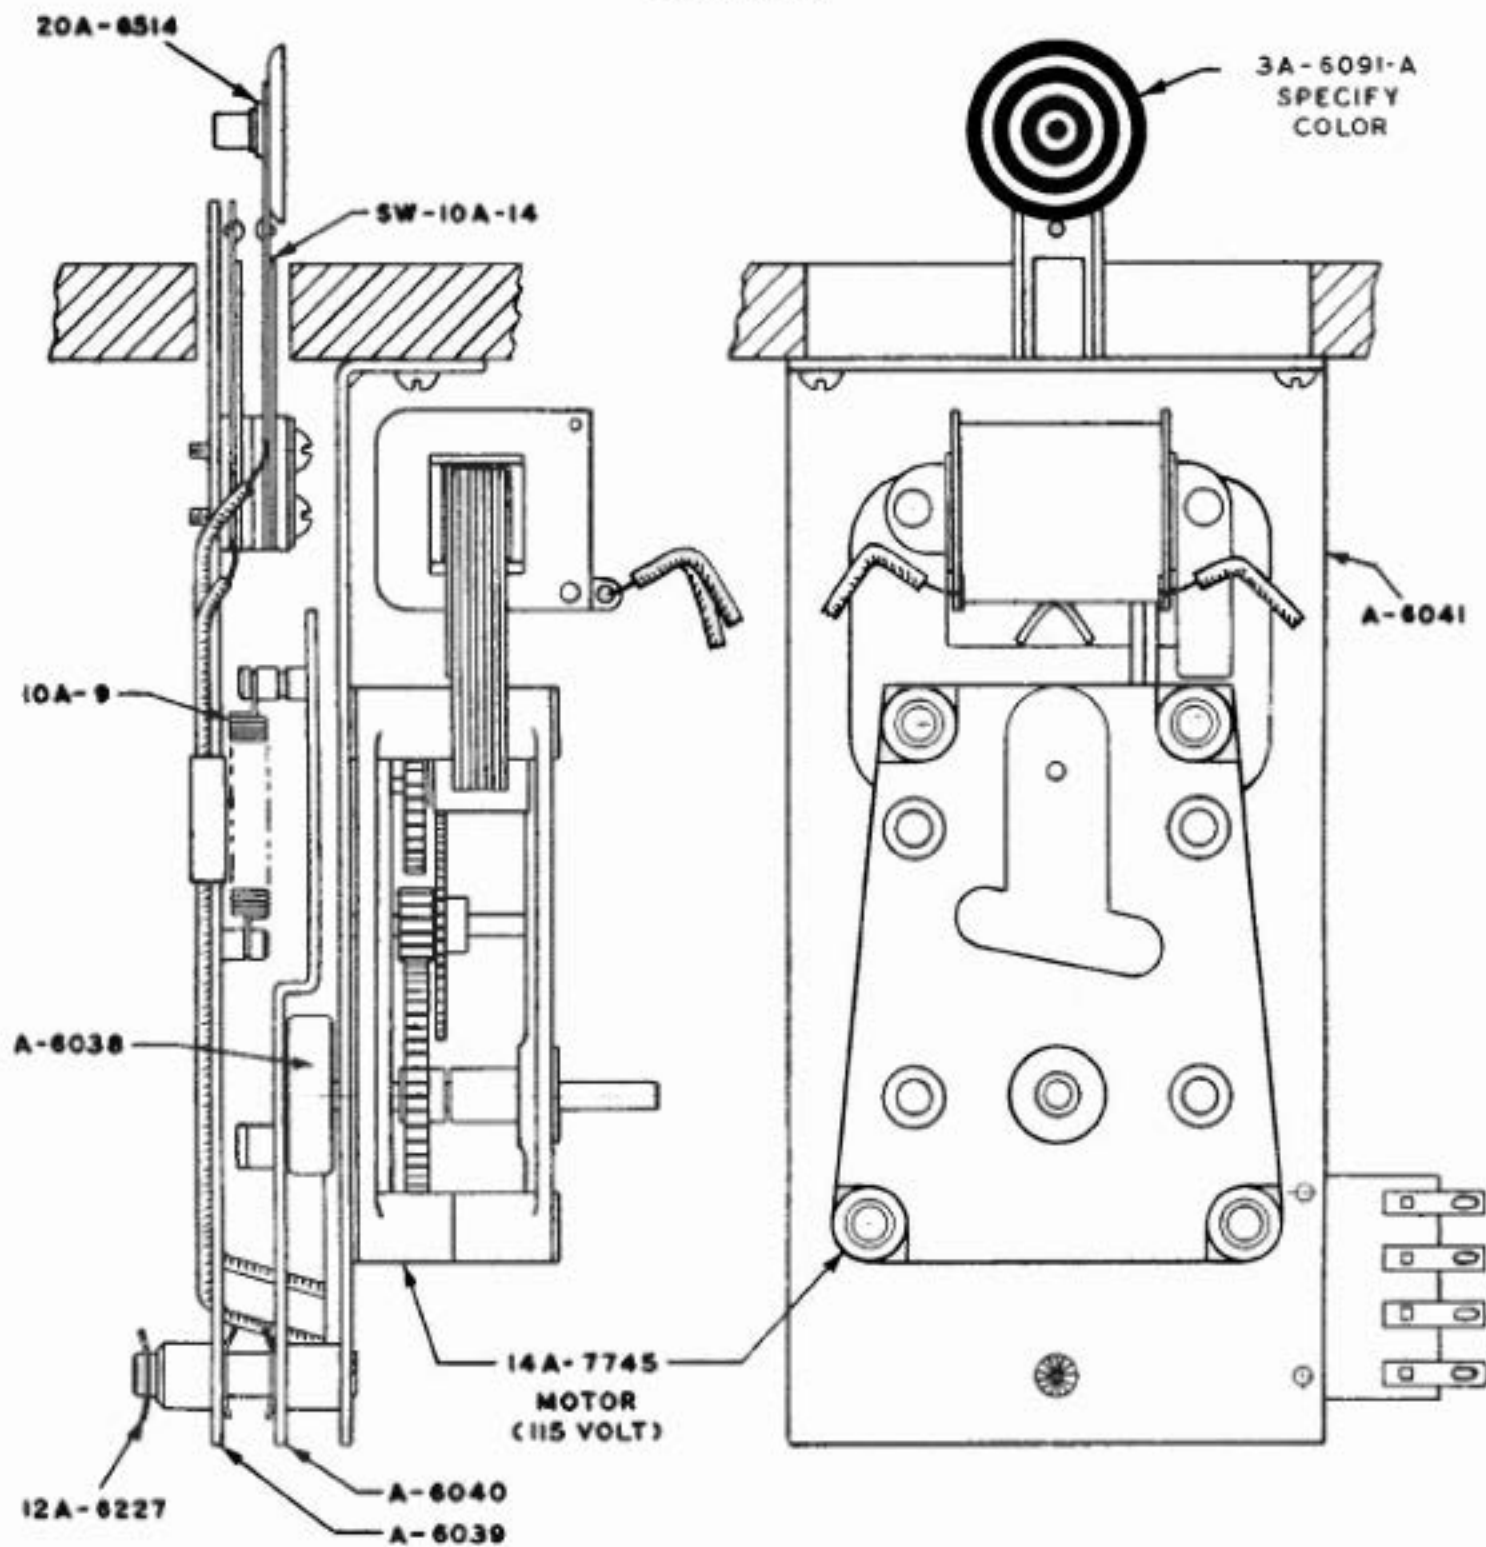


(NEW)
SWINGING TARGET (SLAVE UNIT)
B-6043

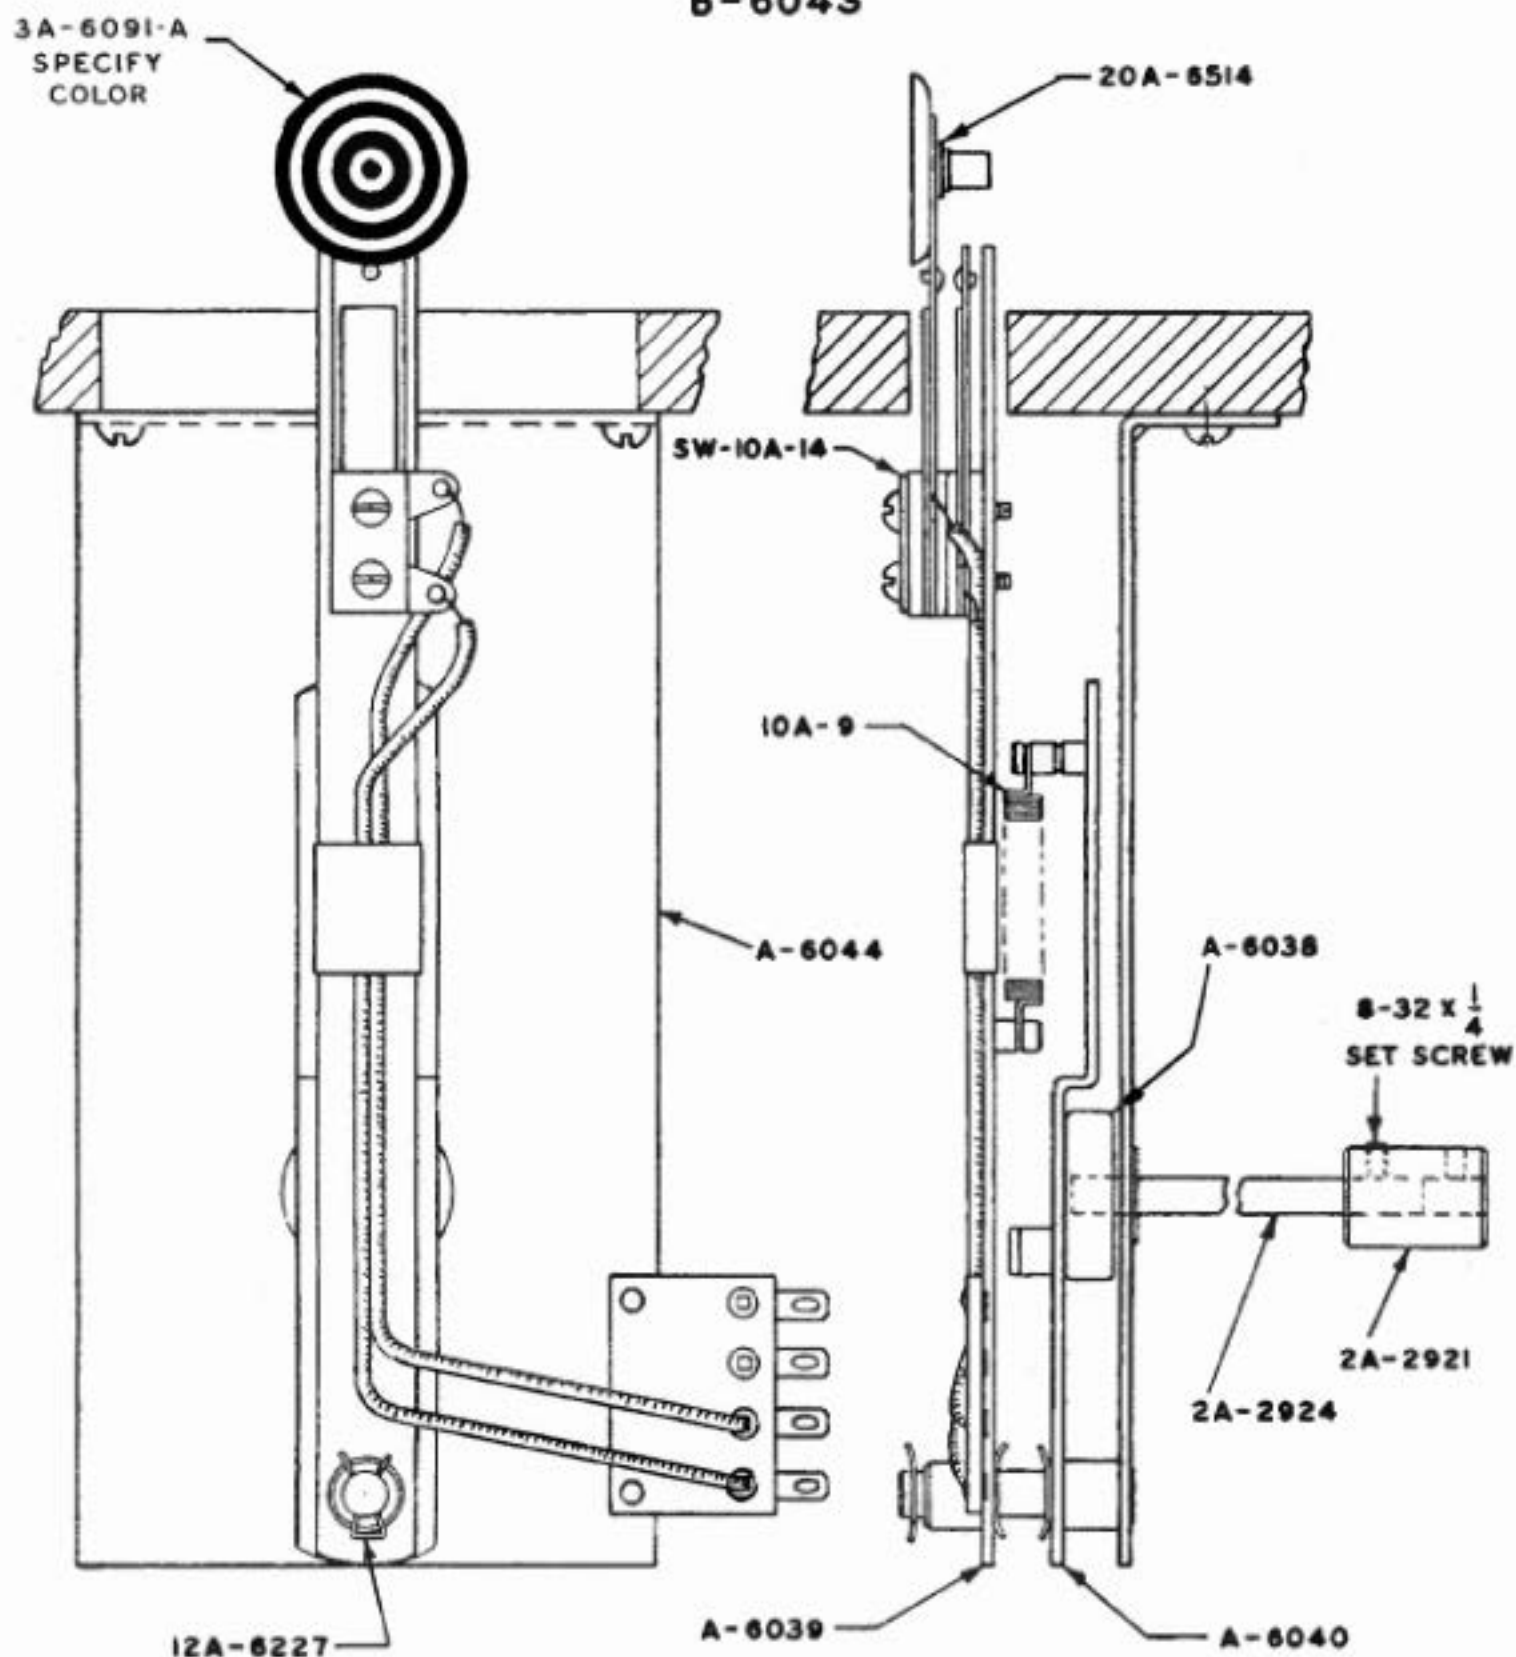

(OLD TYPE)
SWINGING TARGET ASSEMBLY
B-5839

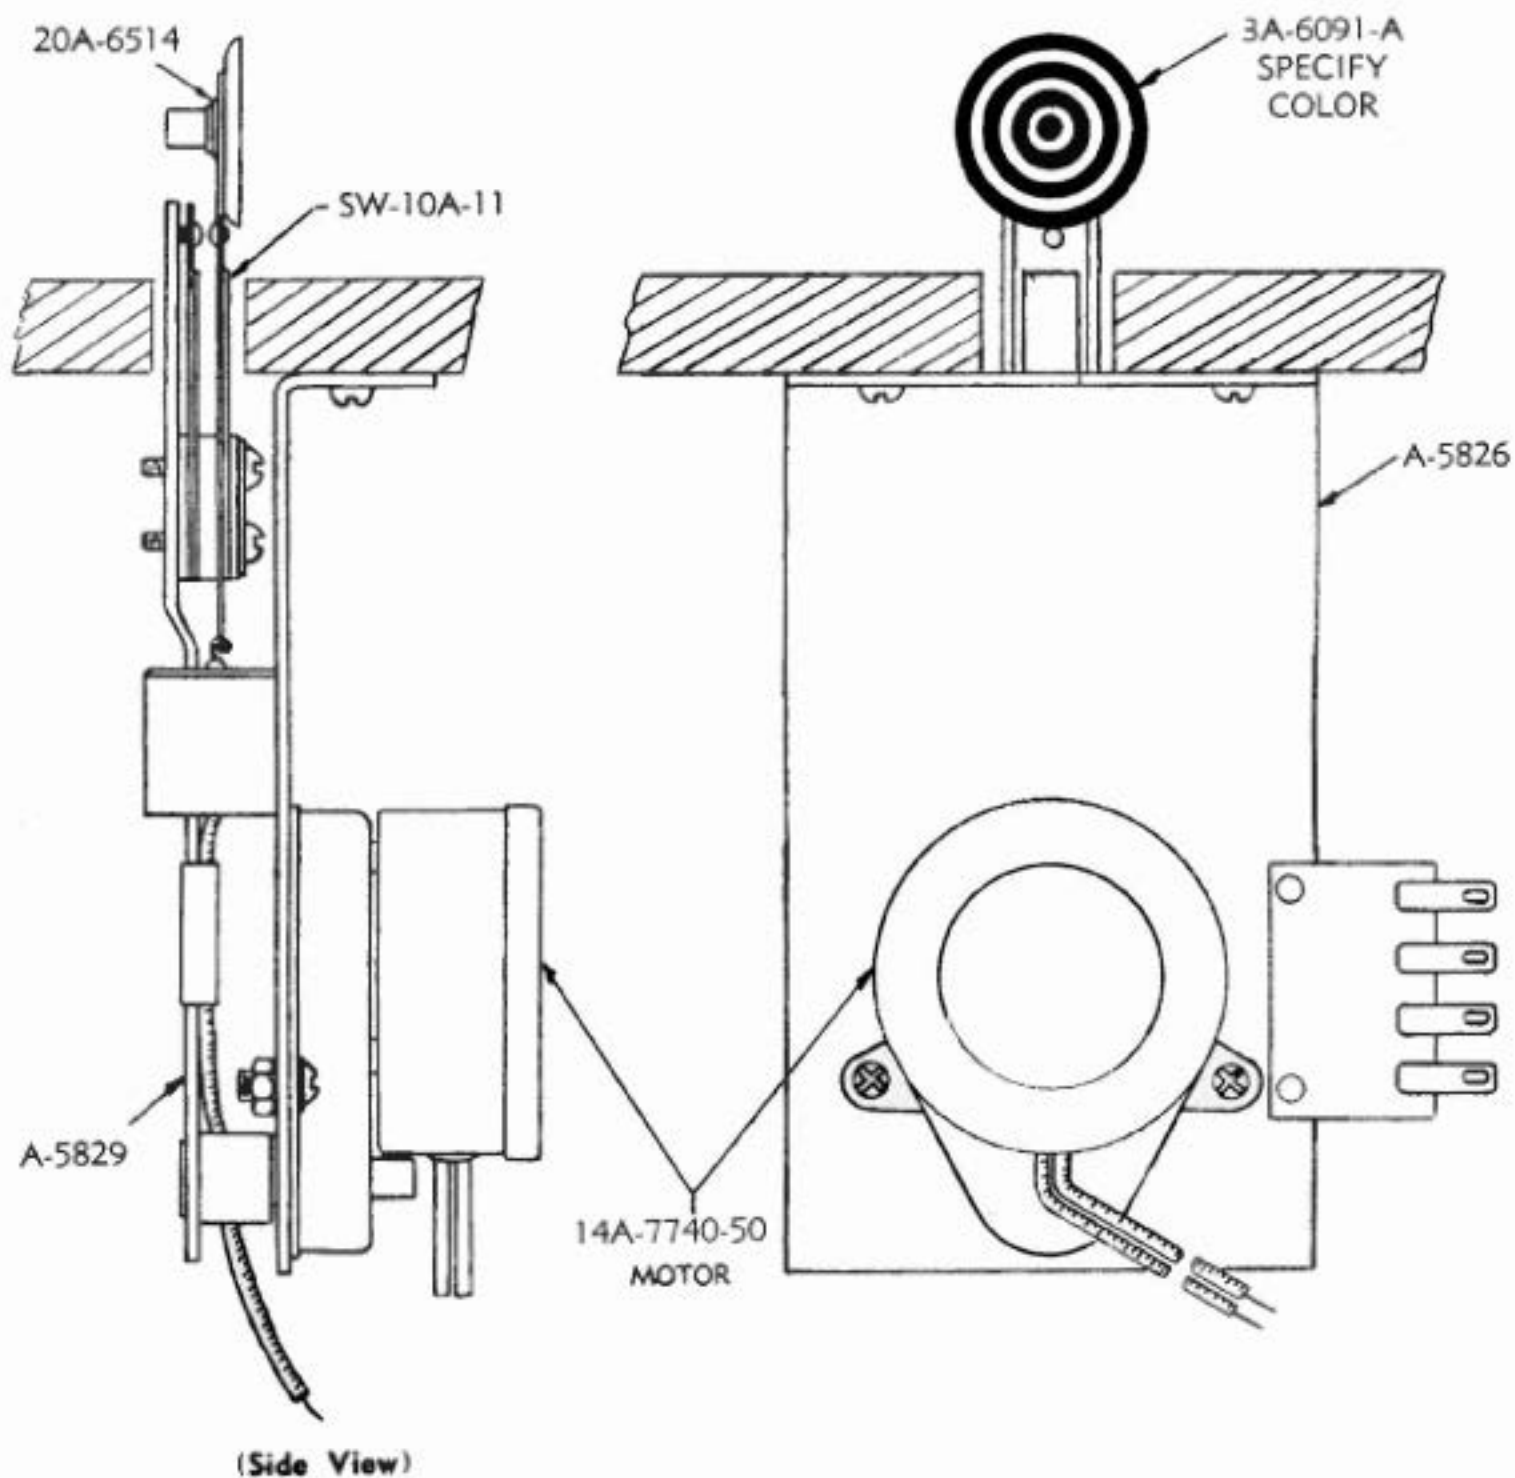

DROP TARGET ASSEMBLY B-6217

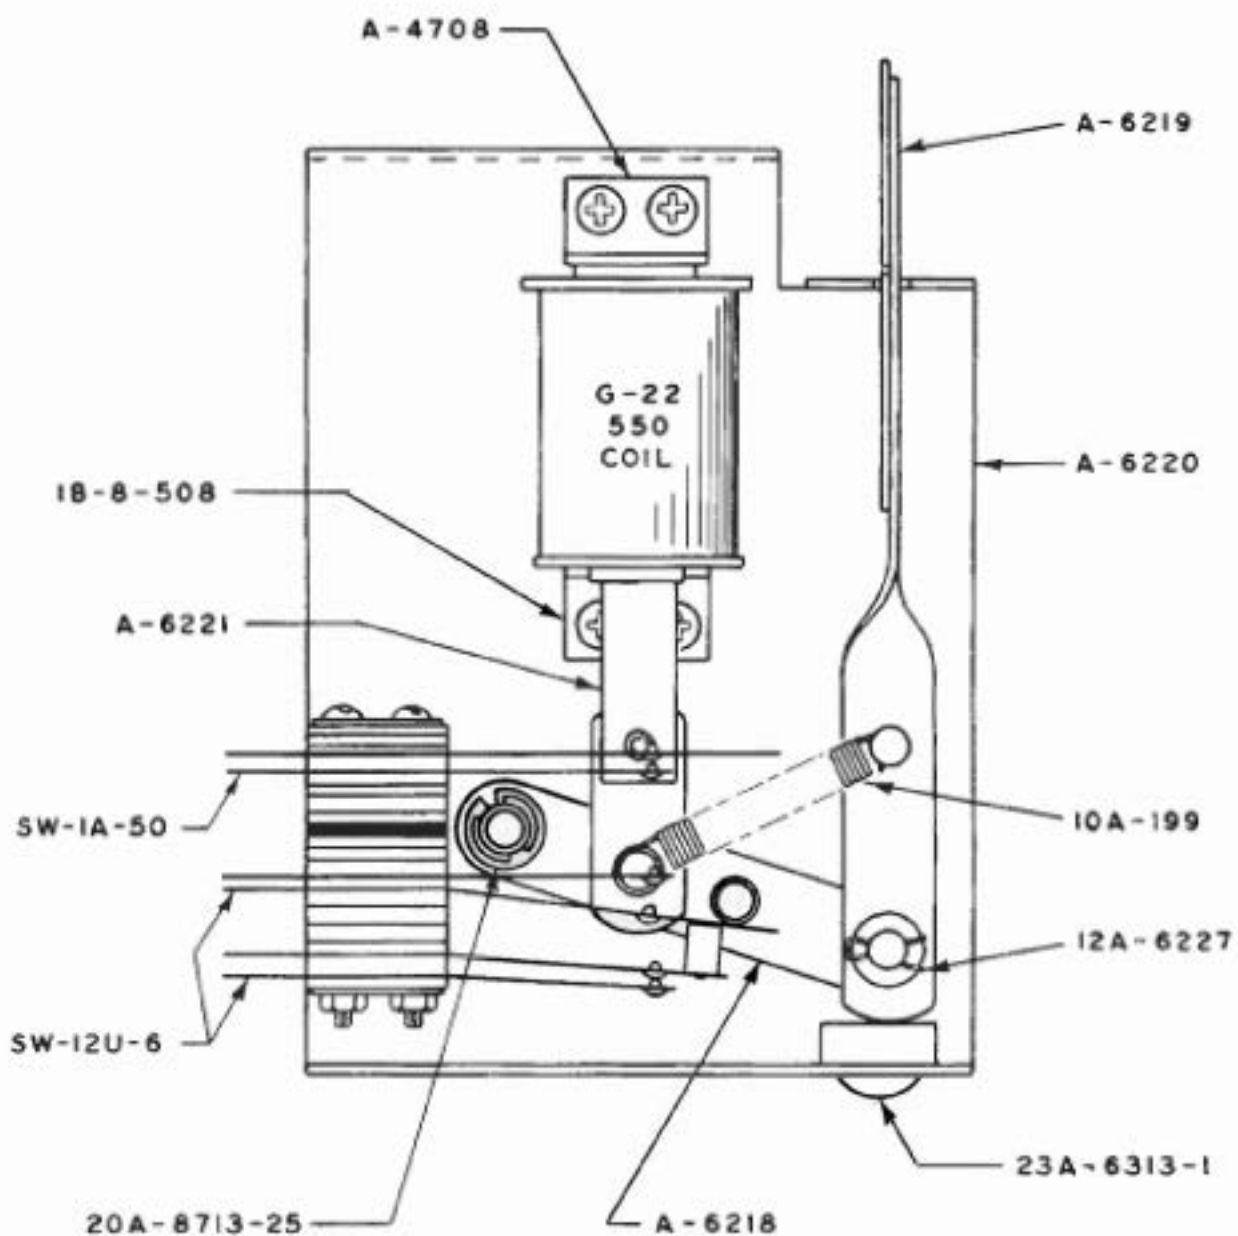

DROP TARGET PARTS

TARGET & ARM ASS'Y.



A-6219
TARGET & ARM ASS'Y.

TARGETS (ONLY)



30B-3256-1



30B-3256-2



30B-3256-3



30B-3256-4



30B-3256-5



30B-3256-6




30B-3256-7

TARGET ASS'Y NO.	GAME
A-6219-1	VAGABOND
A-6219-2	BIG DEAL
A-6219-3	{ PALOOKA JUMPIN JACKS
A-6219-4	SKILL POOL
A-6219-5	EL TORO
A-6219-6	BIG DADDY
A-6219-7 (RED)	{ PALOOKA MERRY WIDOW
A-6219-7 (YELLOW)	MERRY WIDOW

TARGET NO.	GAME
30B-3256-1	VAGABOND
30B-3256-2	BIG DEAL
30B-3256-3	{ PALOOKA JUMPIN JACKS
30B-3256-4	SKILL POOL
30B-3256-5	EL TORO
30B-3256-6	BIG DADDY
30B-3256-7 (RED)	{ PALOOKA MERRY WIDOW
30B-3256-7 (YELLOW)	MERRY WIDOW


E-5590 DISAPPEARING JET BUMPER VIEW I

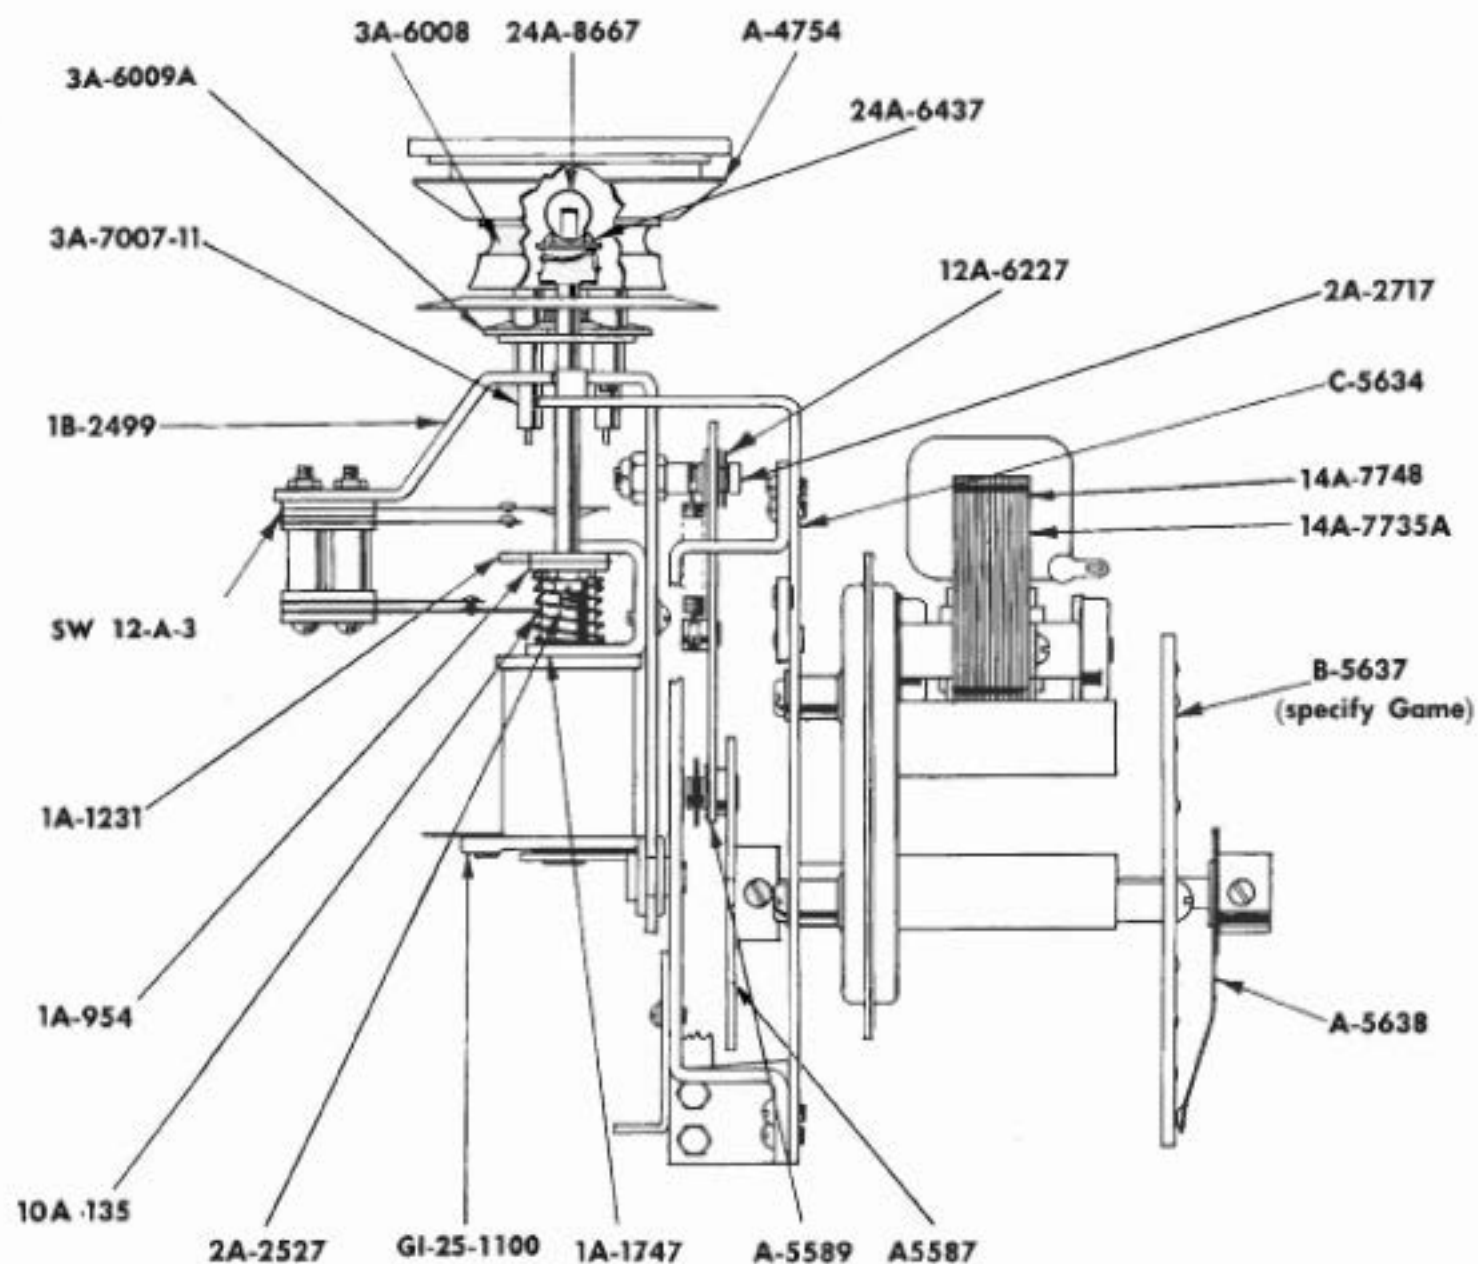

NOTE:


MOTOR NO. PRINTED IN BLACK - 50V
 MOTOR NO. PRINTED IN RED - 24V
 USE CHART SUPPLIED WITH EACH MACHINE
 WHEN ORDERING MOTOR.

E-5590 DISAPPEARING JET BUMPER VIEW II

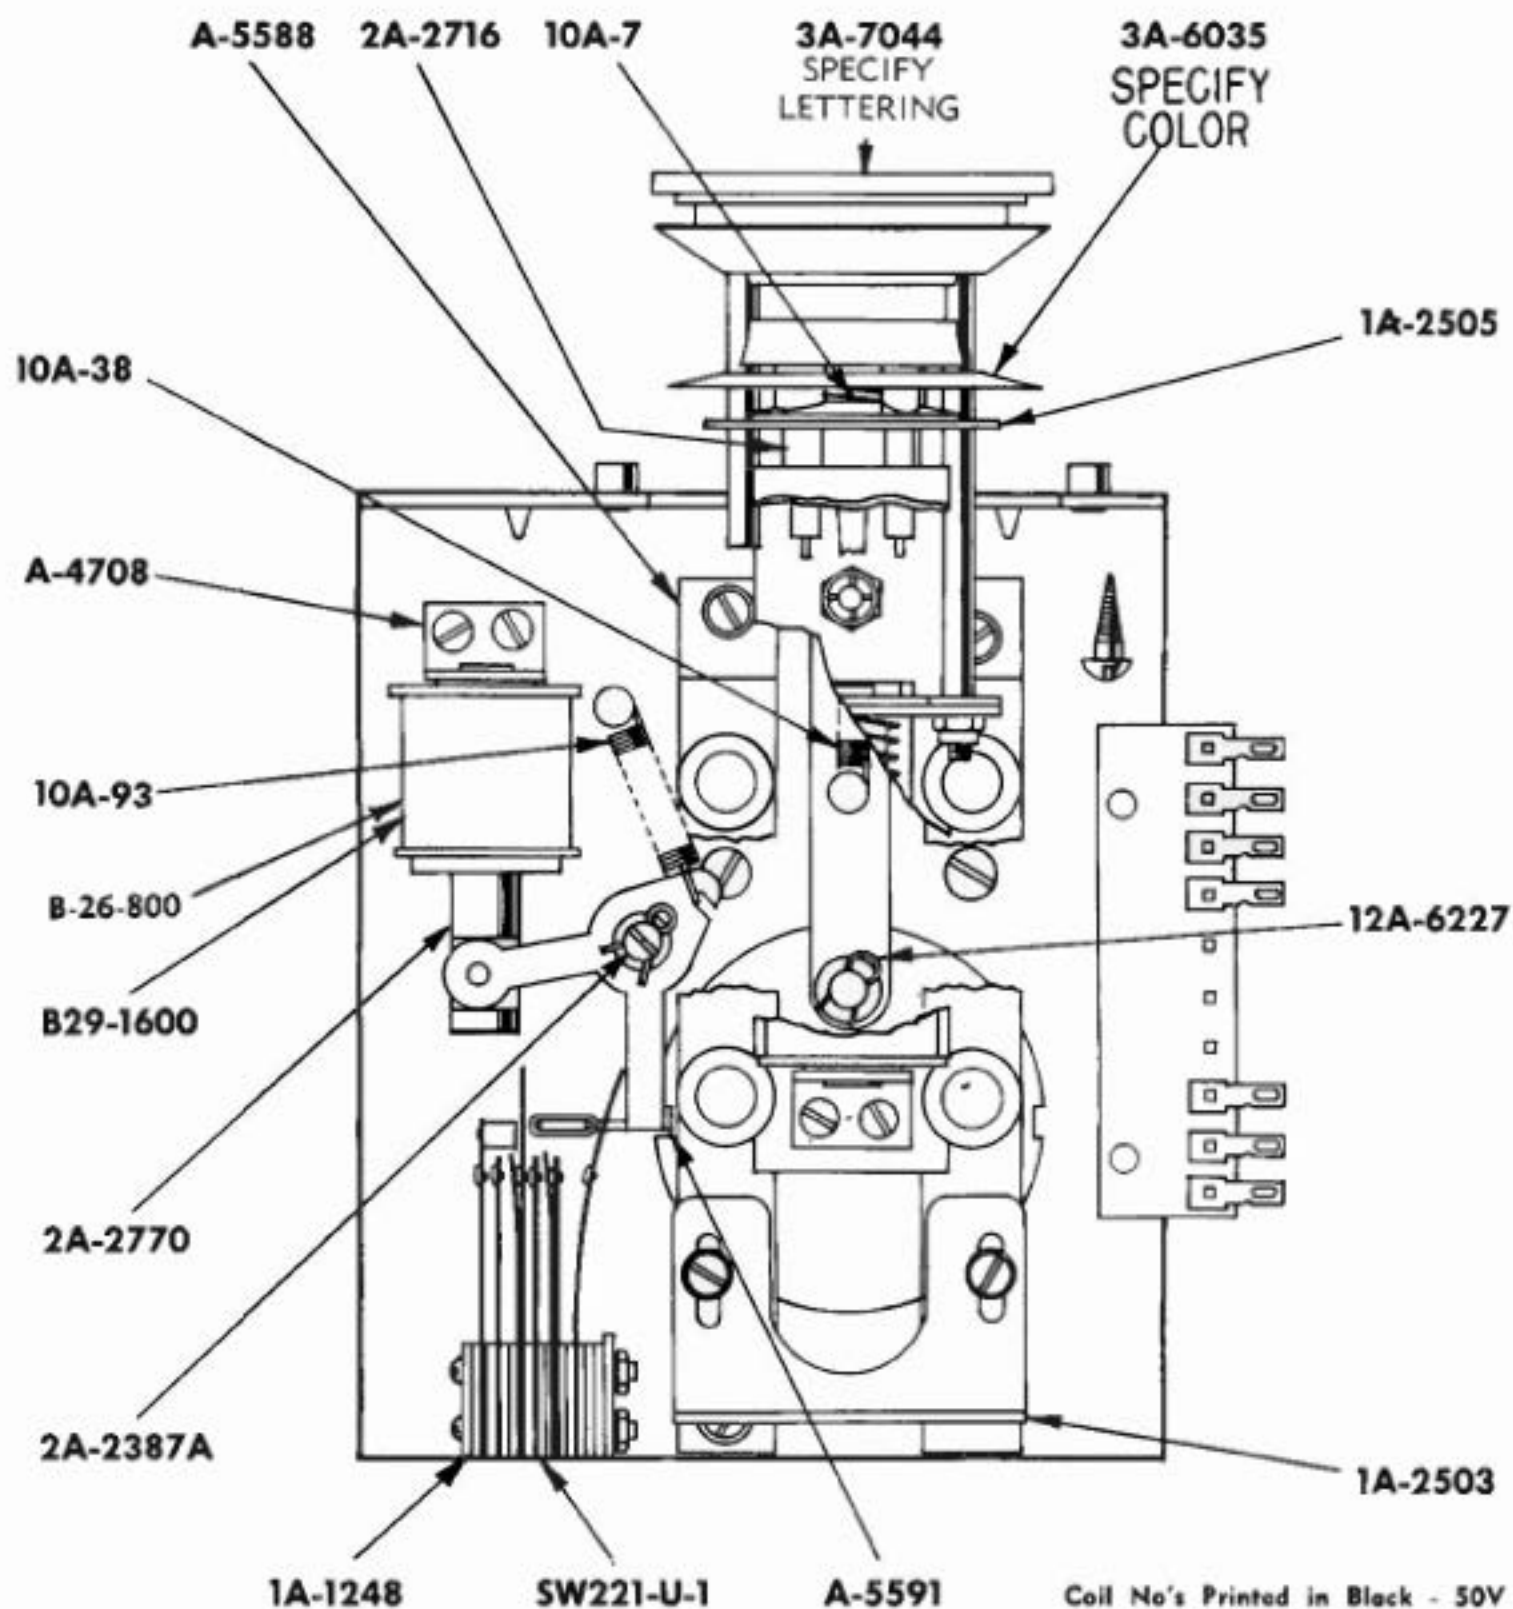


Coil No's Printed in Black - 50V
 Coil No's Printed in Red - 24V
 Use Coil Chart Supplied With Each
 Machine, When Ordering Coils.

"E" RELAY ASSEMBLY C-5735-III

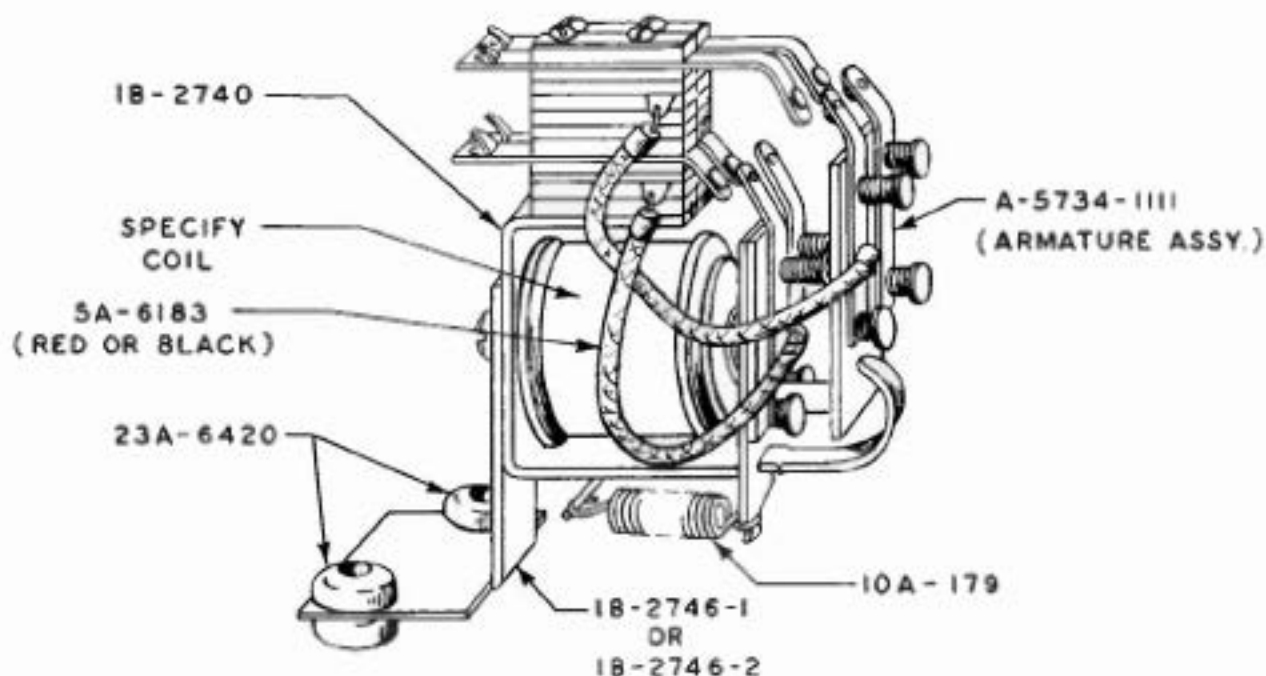


(NEW) LATCH TYPE-RELAY UNIT B-6342

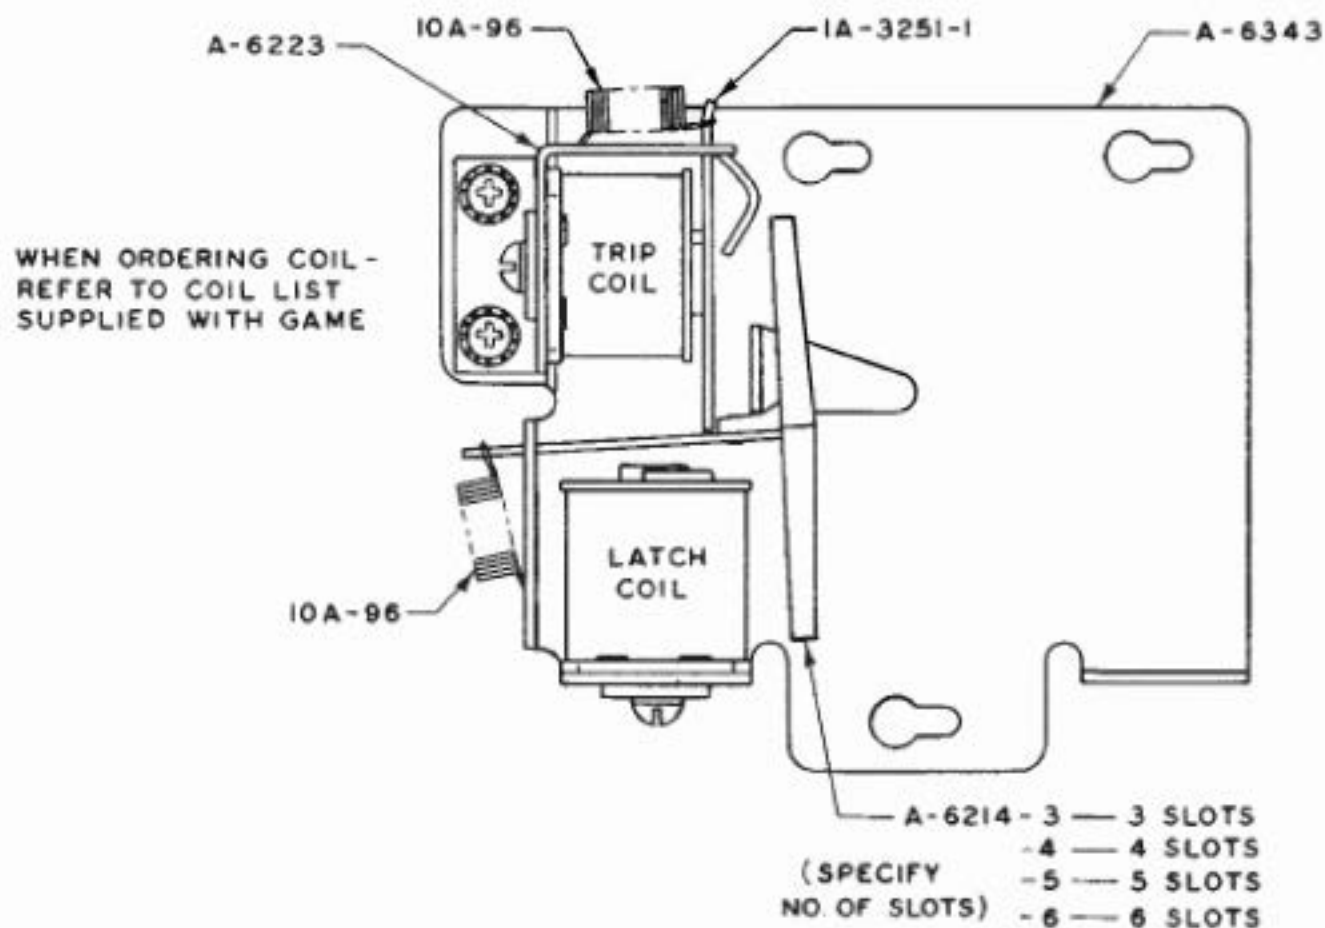

(NEW)
INTERLOCK RELAY ASSEMBLY
B-6225


WHEN ORDERING COIL
REFER TO COIL LIST
SUPPLIED WITH GAME

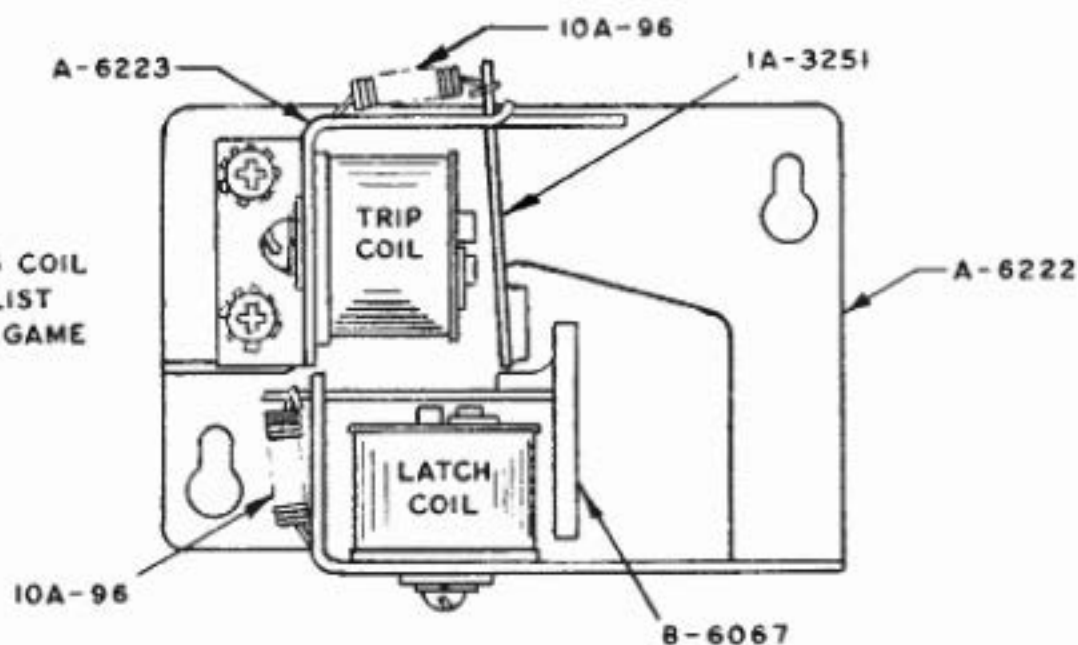


(OLD TYPE)
INTERLOCK RELAY ASSEMBLY
B-4938

REFER TO COIL LIST
IN GAME

REFER TO COIL LIST
IN GAME

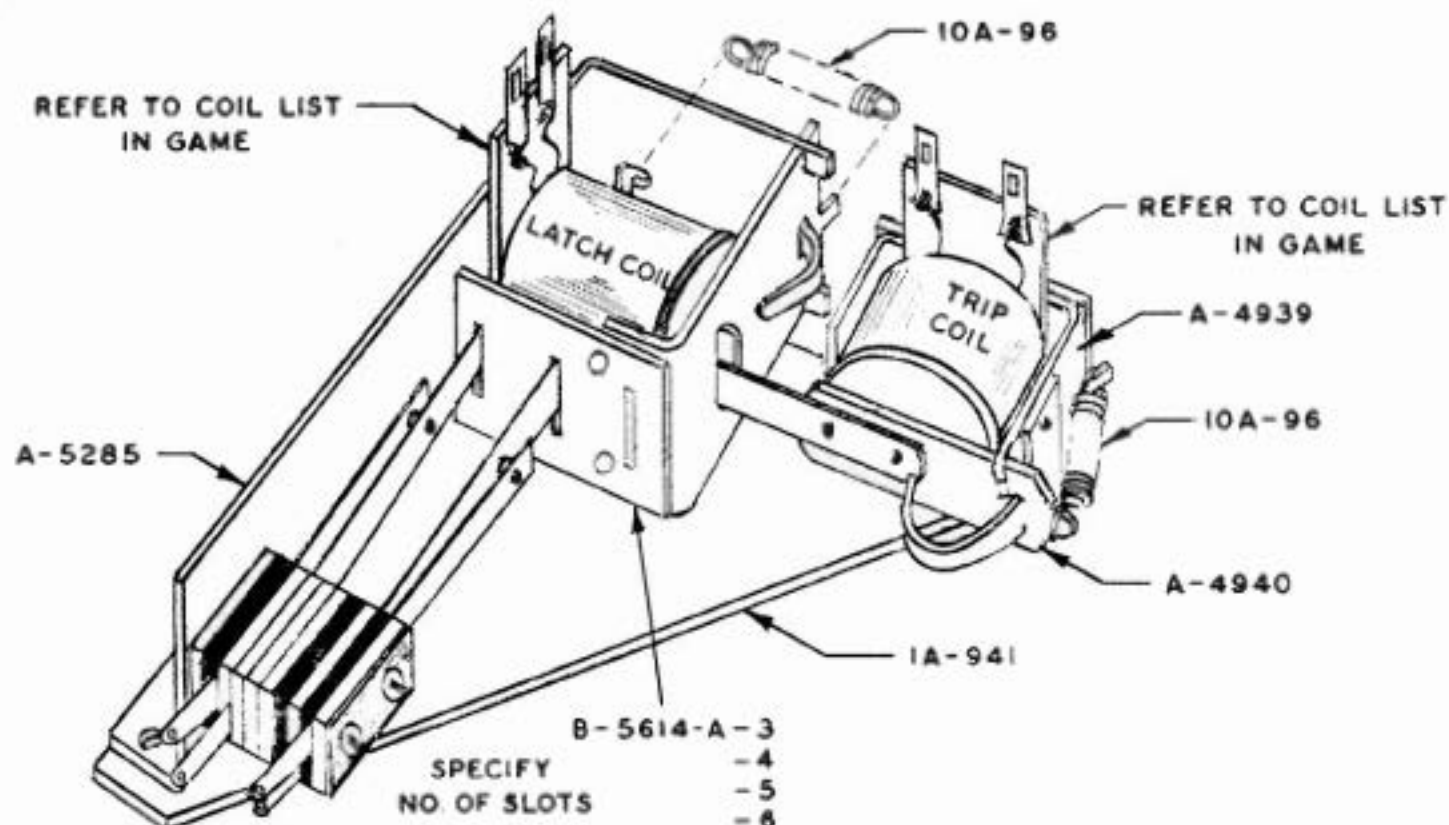


**(NEW)
"J" TYPE RELAY ASSEMBLY
B-6068**




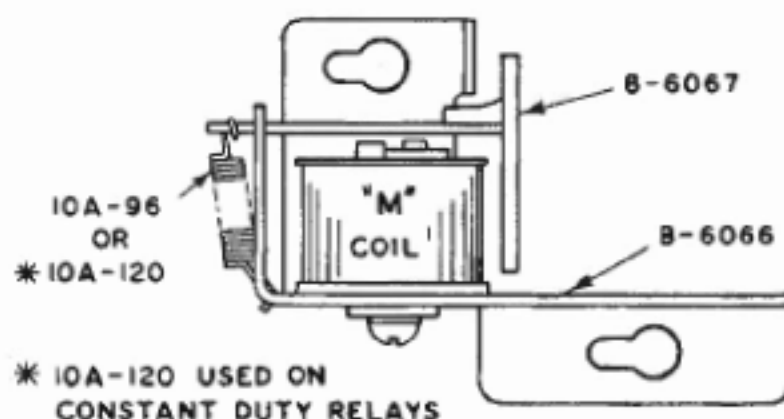


WHEN ORDERING COILS
REFER TO COIL LIST
SUPPLIED WITH GAME


**(OLD)
"M" TYPE RELAY ASSEMBLY
B-5250**

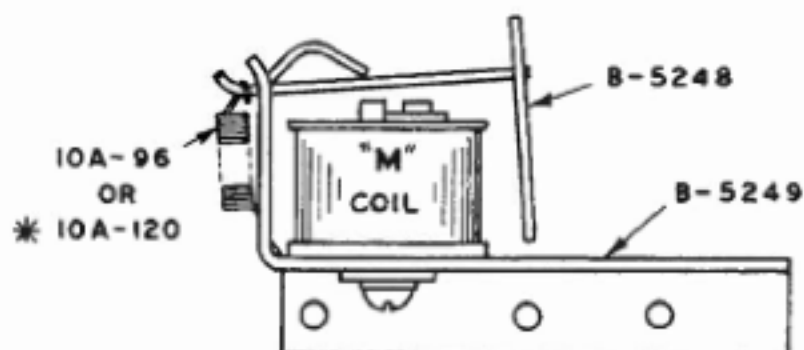

**SWITCHES FOR
"J" & "M" RELAYS**

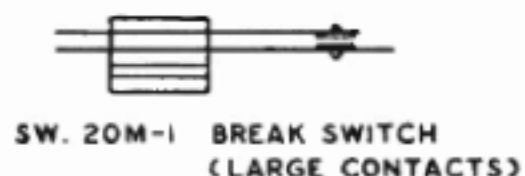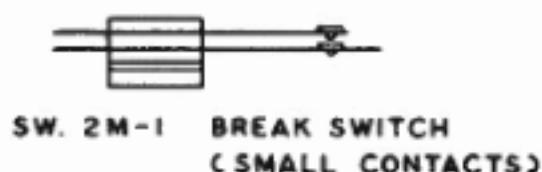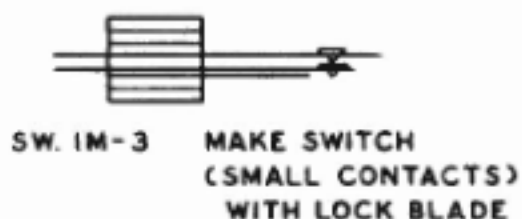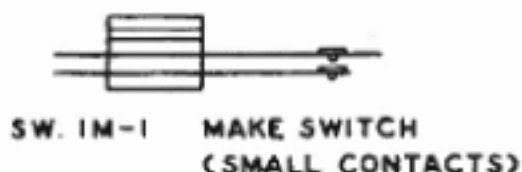


(NEW)
"L" TYPE RELAY ASSEMBLY
A-6216

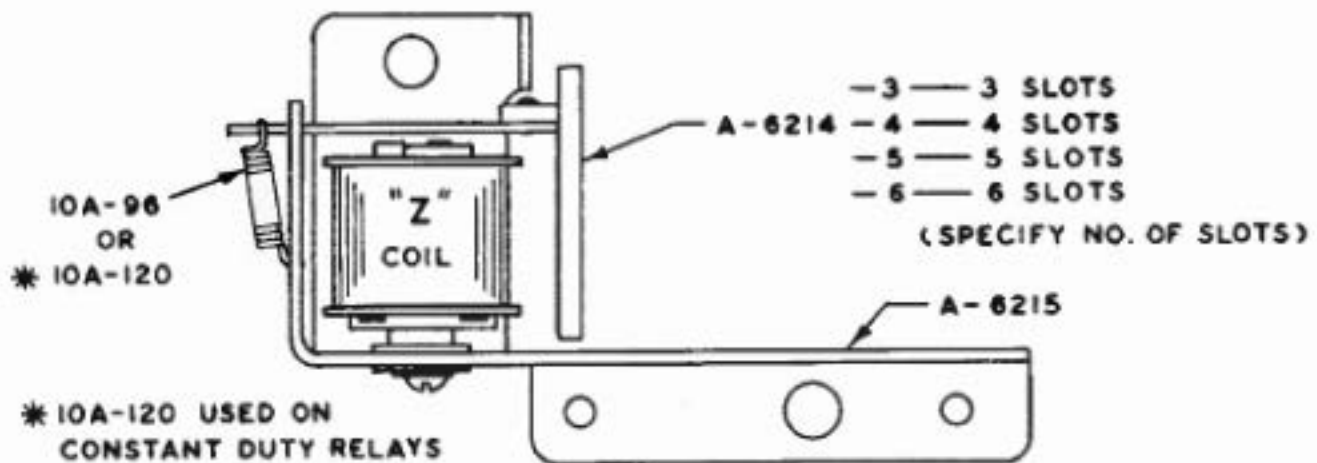

WHEN ORDERING COILS
 REFER TO COIL LIST
 SUPPLIED WITH GAME

(OLD TYPE)
"Z" TYPE RELAY ASSEMBLY
B-5645

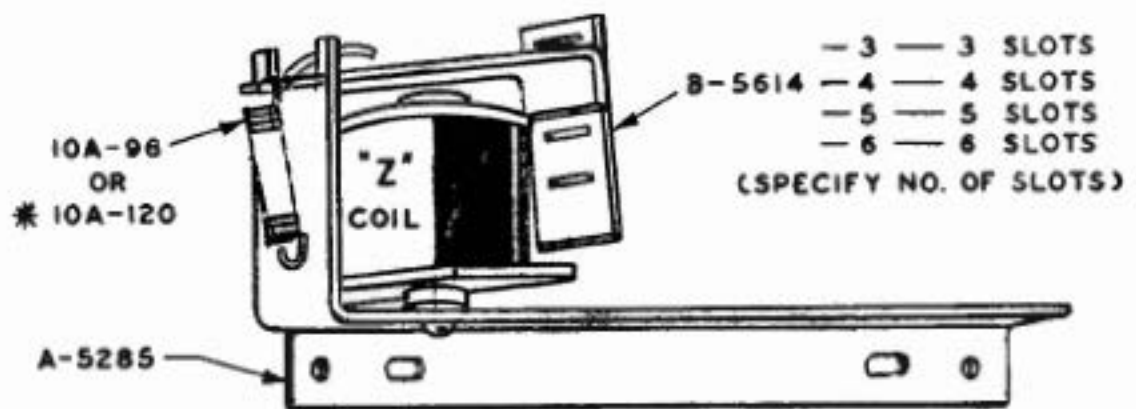

"L" & "Z" RELAY SWITCHES




SW. 1-Z MAKE SWITCH
(SMALL CONTACTS)



SW. 1-Z1 MAKE SWITCH
(SMALL CONTACTS)



SW. 10-Z MAKE SWITCH
(LARGE CONTACTS)



SW. 2-Z BREAK SWITCH
(SMALL CONTACTS)




SW. 20-Z BREAK SWITCH
(LARGE CONTACTS)



SW. 3-Z MAKE-BREAK SWITCH
(SMALL CONTACTS)


B-5247 NEW BALL SHOOTER ASSEMBLY

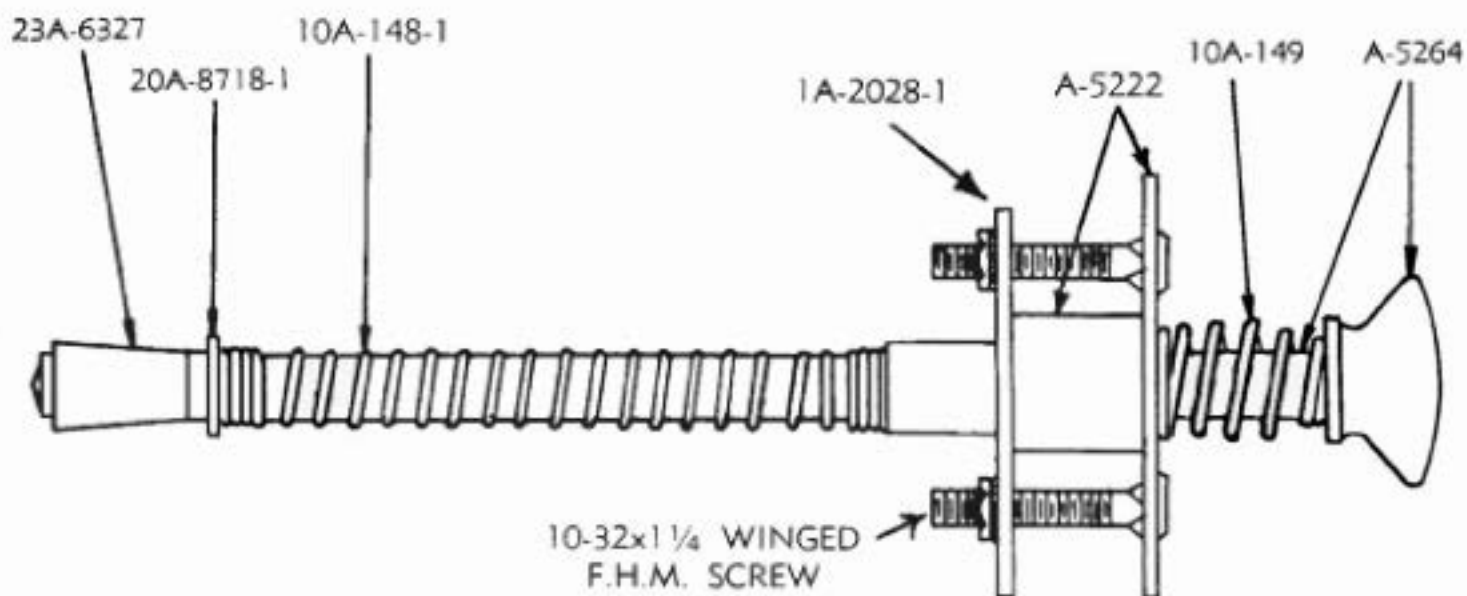


BALL RELEASE ASSEMBLY

B-5073


Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.

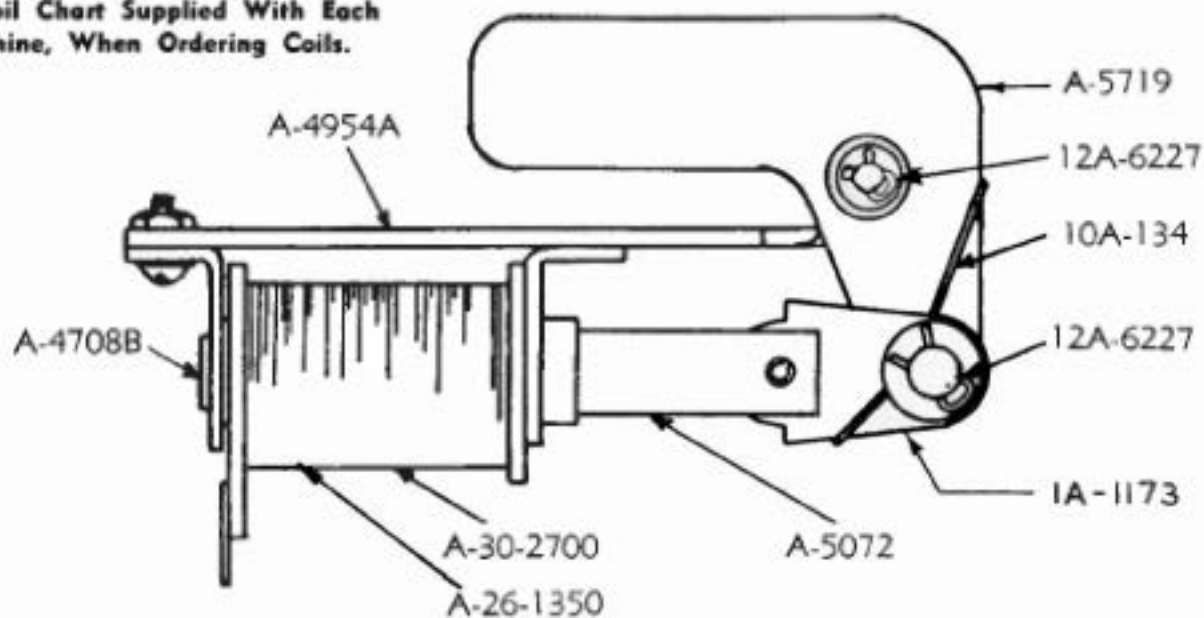


(NEW) BALL LIFT PUSHER ASSEMBLY
B-5663-1

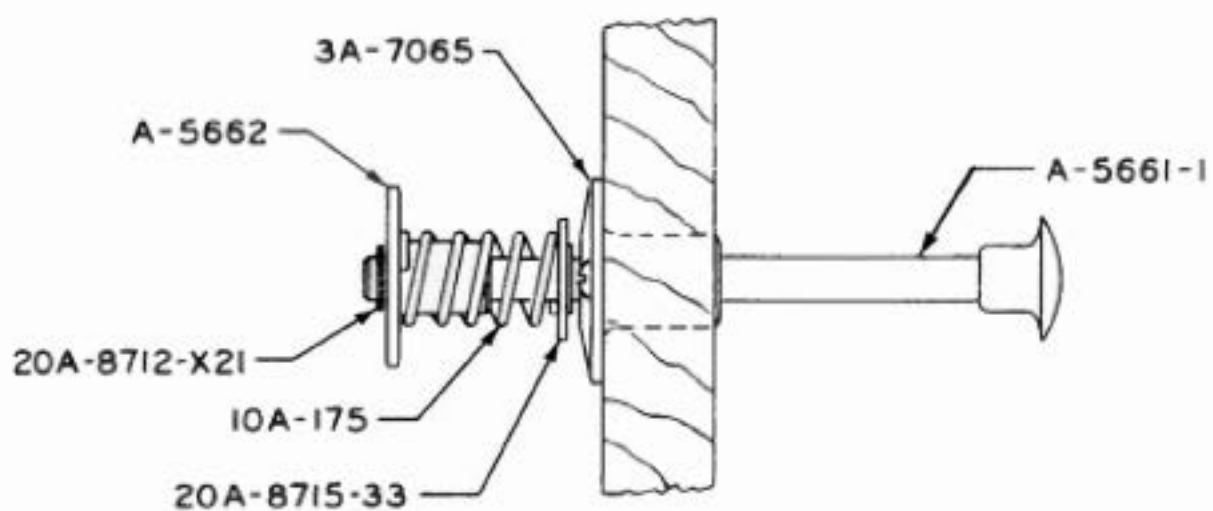


1B-2573 BALL LIFT GUIDE

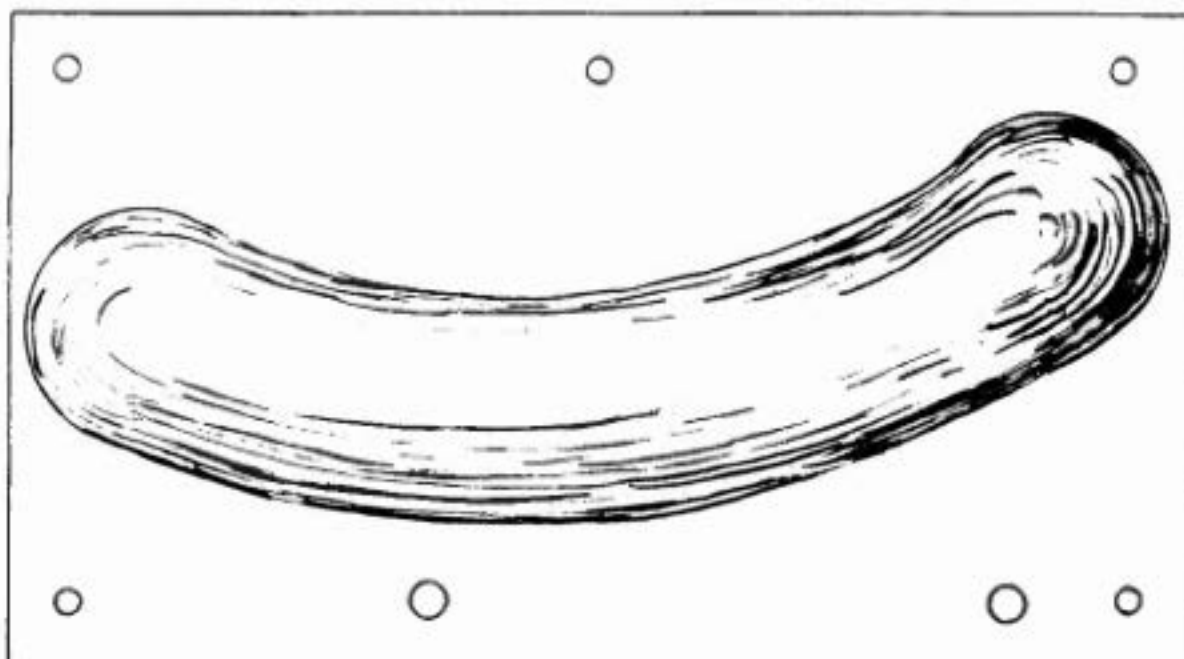

C-5676 BALL LIFT ASSEMBLY

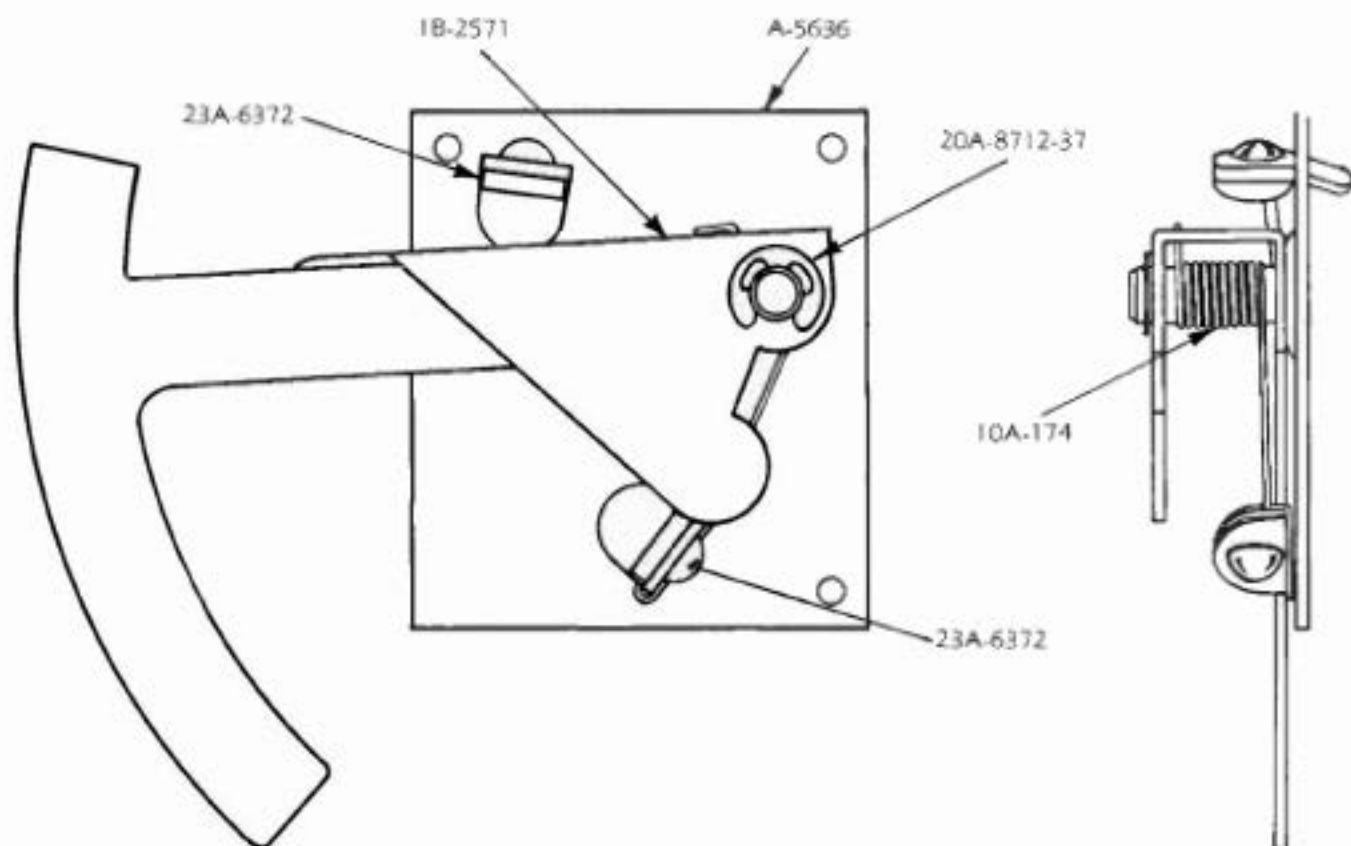


B-5663 BALL LIFT PUSHER ASSEMBLY

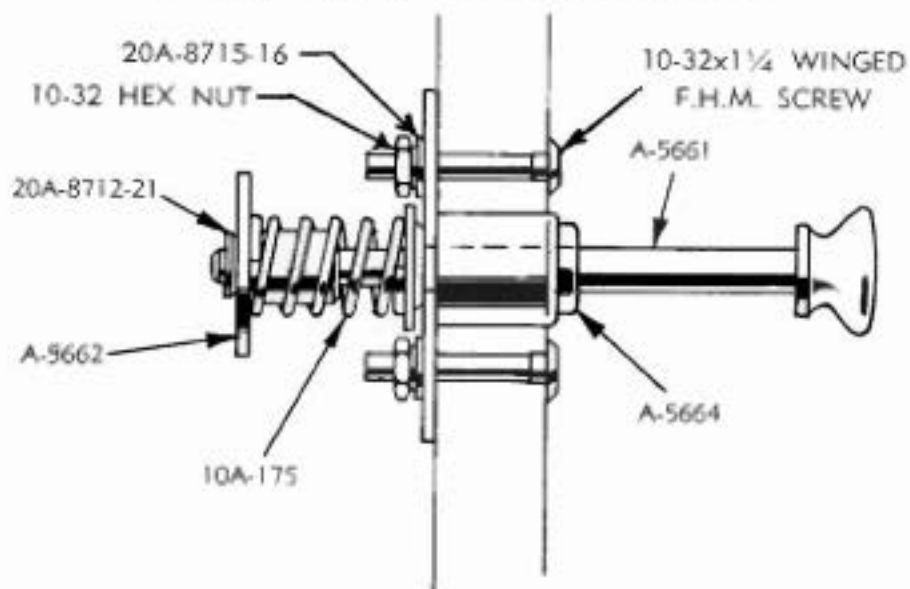


(METAL)
B-6228 FLIPPER & COIL ASSEMBLY

Coil No's Printed in Black - 50V
 Coil No's Printed in Red - 24V
 Use Coil Chart Supplied With Each
 Machine, When Ordering Coils.

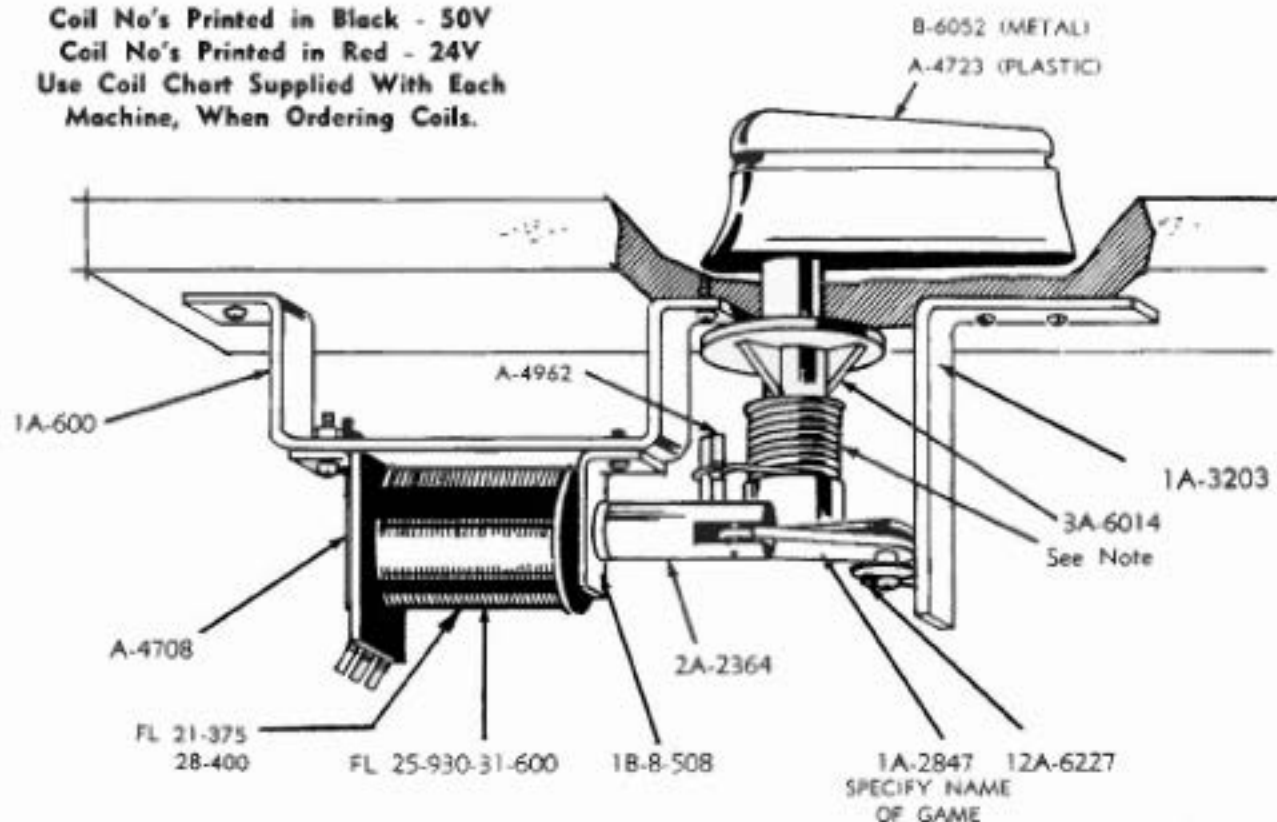


NOTE: 10A-127 RIGHT FLIPPER ASSEMBLY — SPRING
 10A-136 LEFT FLIPPER ASSEMBLY — SPRING

METAL
B-6052 FLIPPER ASSEMBLY

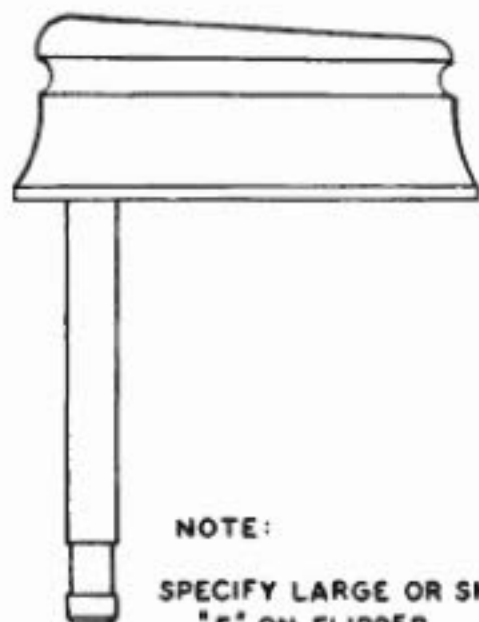

NOTE:
 SPECIFY LARGE OR SMALL
 "F" ON FLIPPER
 B-6052 L — LARGE F
 B-6052 R — SMALL F

PLASTIC
A-4723 FLIPPER ASSEMBLY

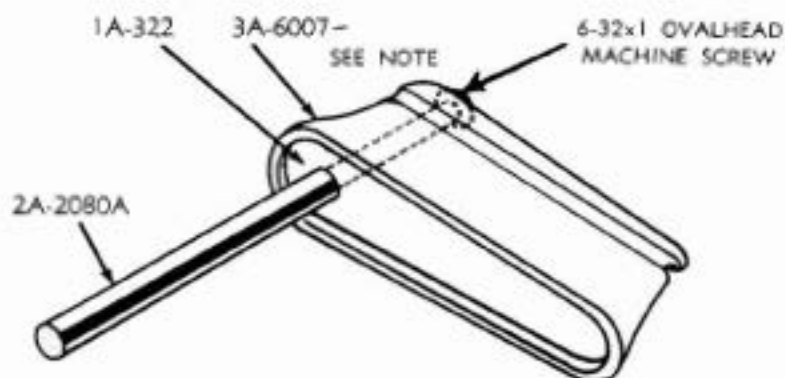


NOTE:
 SPECIFY LARGE OR SMALL
 "F" ON FLIPPER
 3A-6007 L — LARGE F
 3A-6007 R — SMALL F


PARTS FOR FLIPPERS




A-4962 L

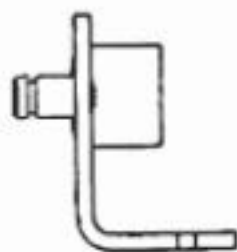

A-4962-IL

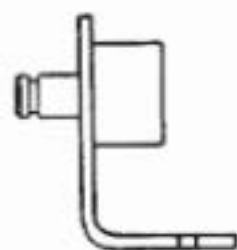

A-4962 R

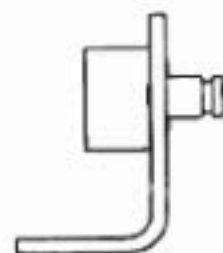

A-4962-IR



10A-136 (L)




10A-127 (R)




FLIPPER RETURN SPRINGS

B-4756 BALL EJECT ASSEMBLY (VERTICAL)

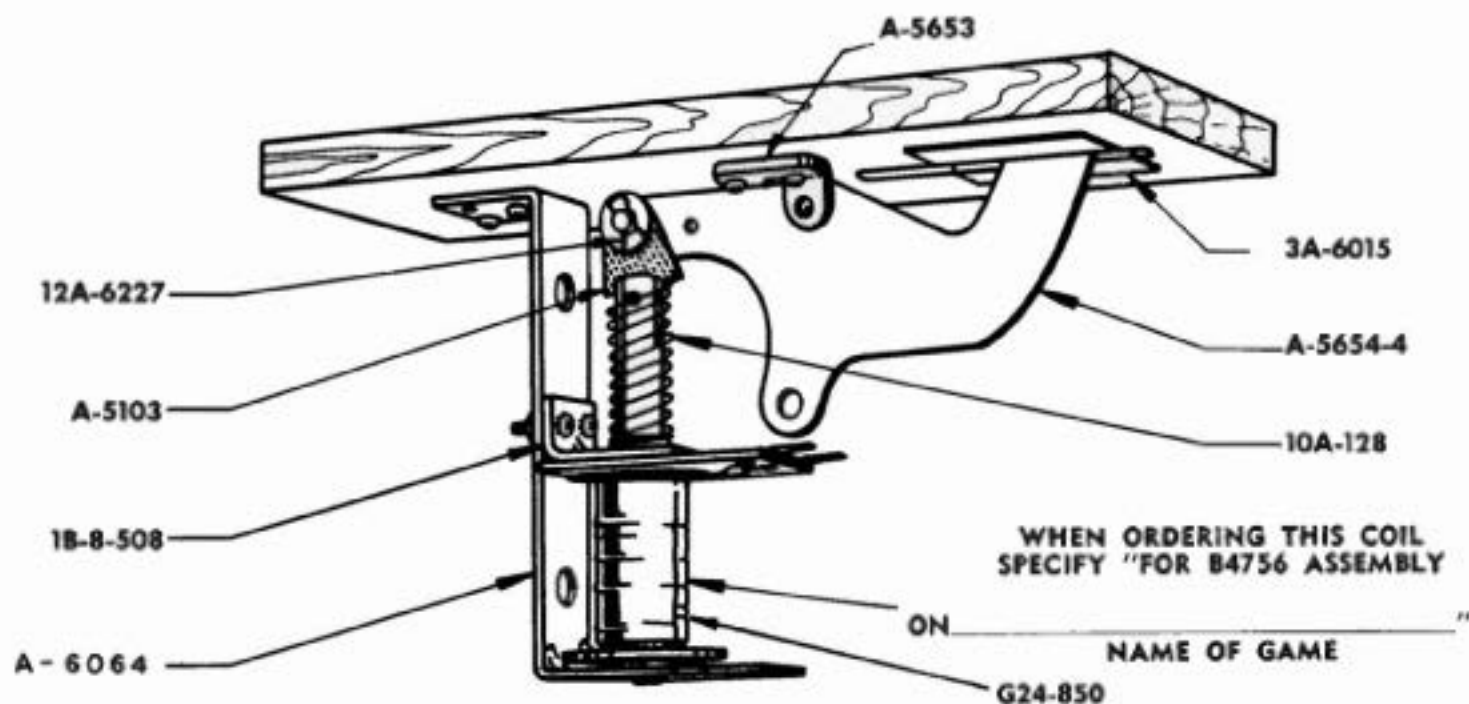


Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.


B-4759 BALL EJECT ASSEMBLY (with Link)

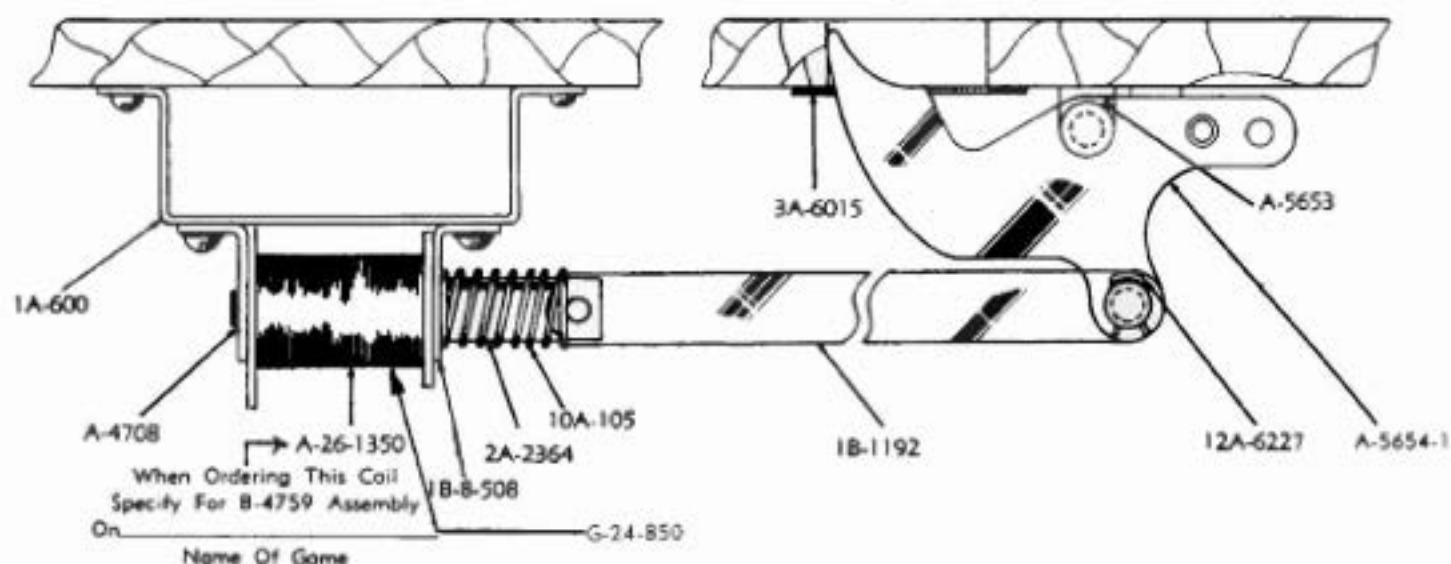


CHIME BOX ASSEMBLY B-6072

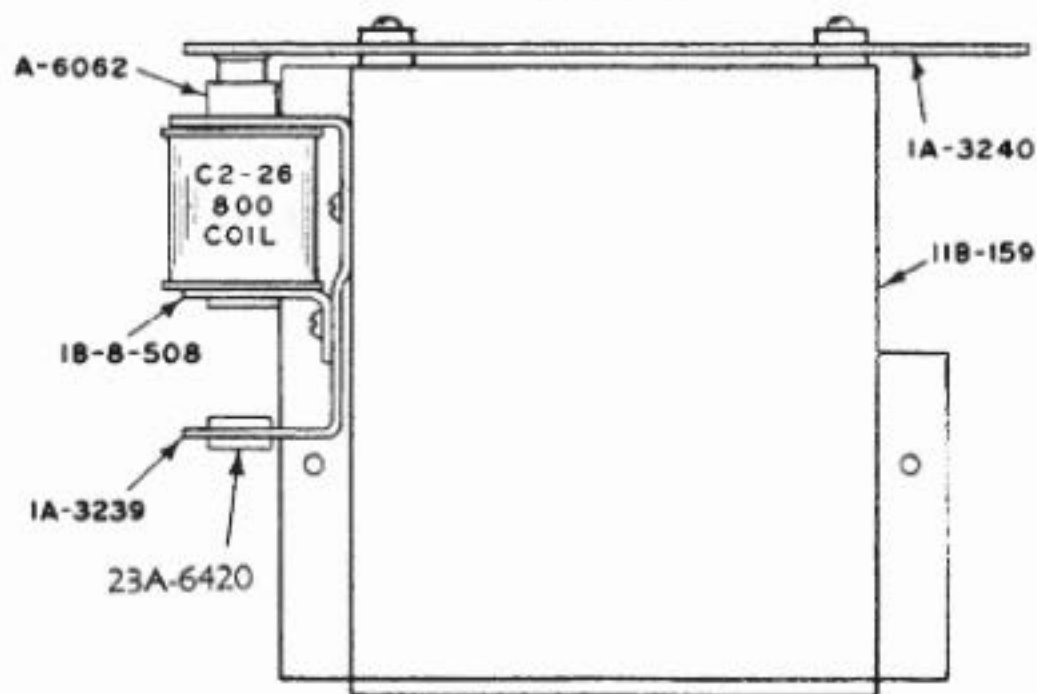

B-5104 KICKER ASSEMBLY

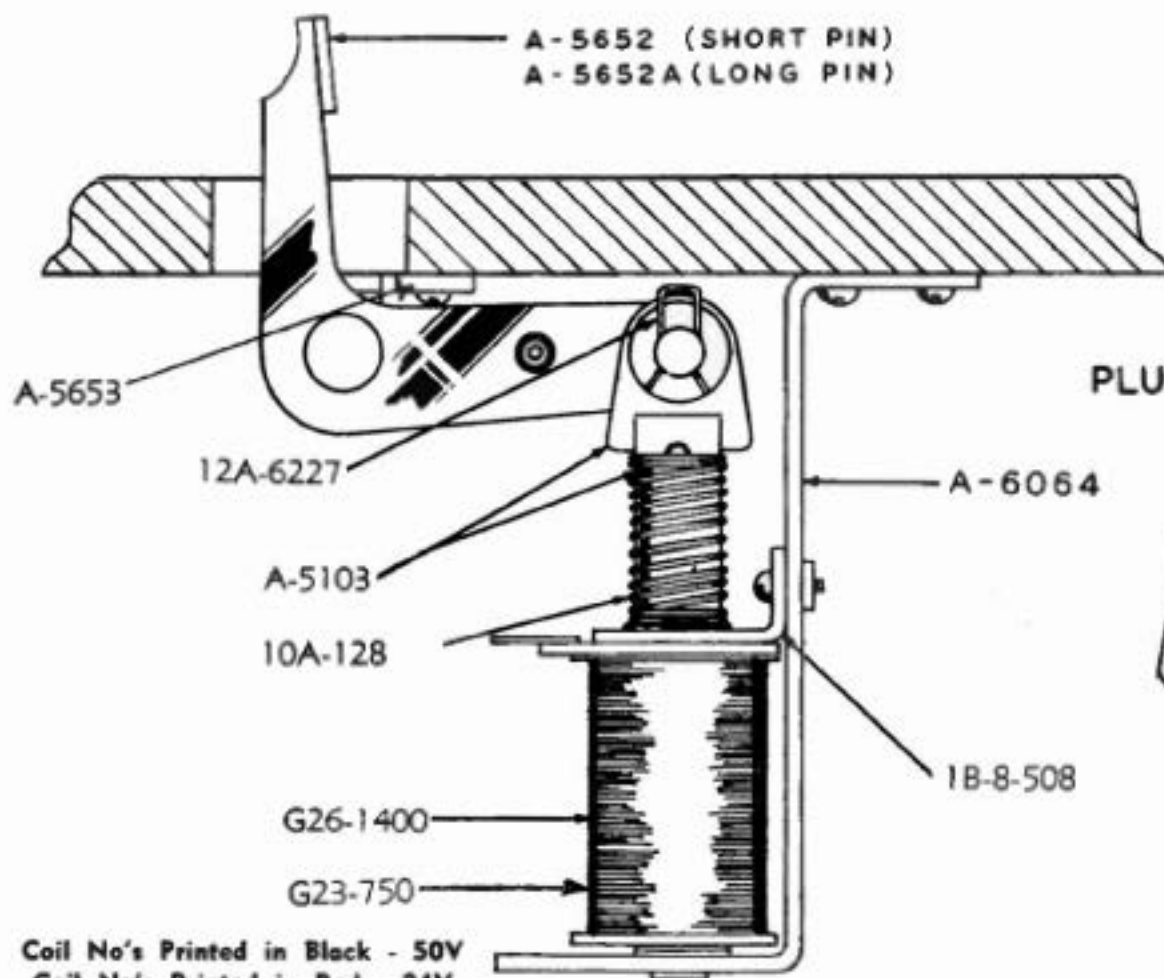


A-5103 PLUNGER ASSEMBLY

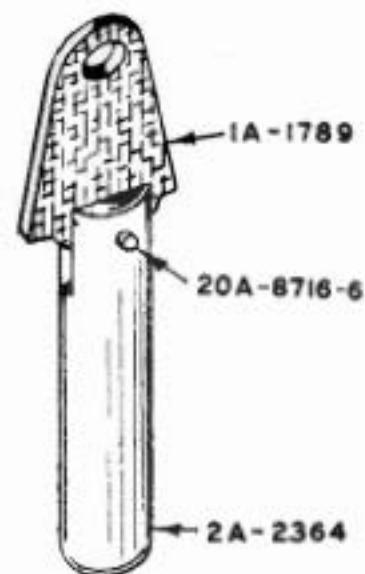

Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.


**NEW
B-5779 KNOCKER ASS'Y**

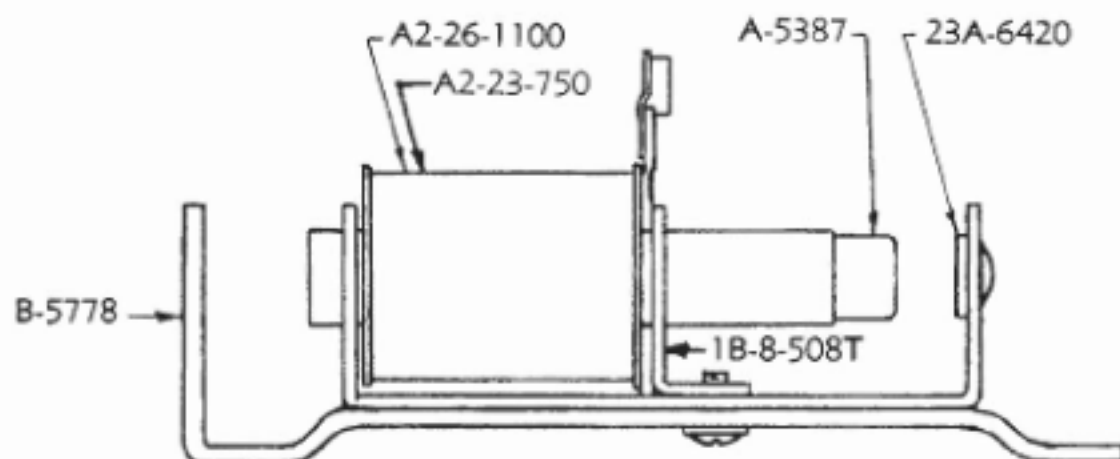


Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.

OLD TYPE


A-4761 KNOCKER ASSEMBLY

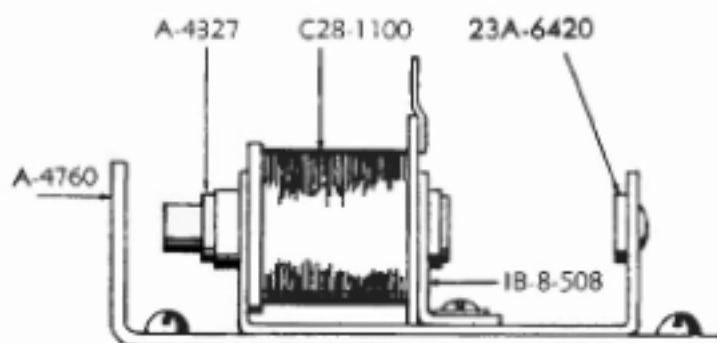

A-5230 SHOOTER COIL ASSEMBLY

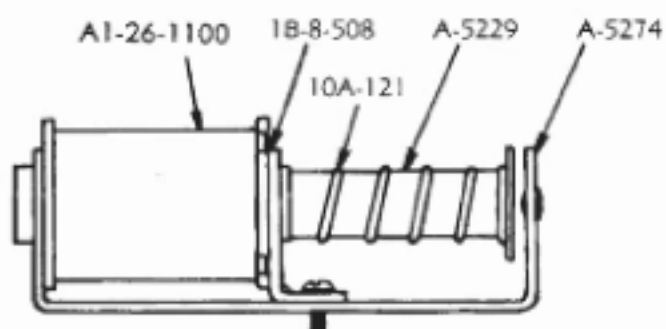

**SMALL BELL ASSEMBLY
B-6071**

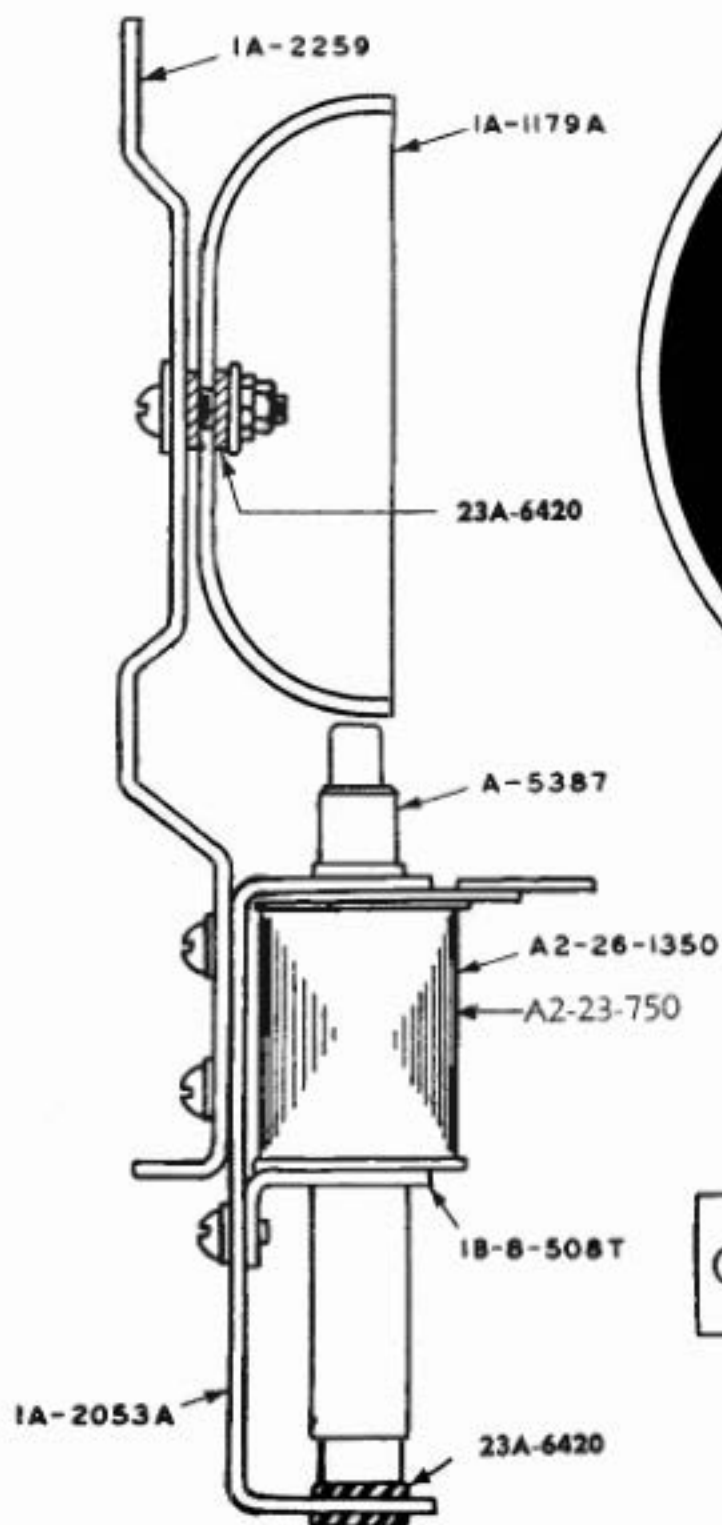


Coil No's Printed in Black - 50V
Coil No's Printed in Red - 24V
Use Coil Chart Supplied With Each
Machine, When Ordering Coils.


**LARGE BELL
1B-1178**




**COIL & BRACKET ASSEMBLY
B-5393**

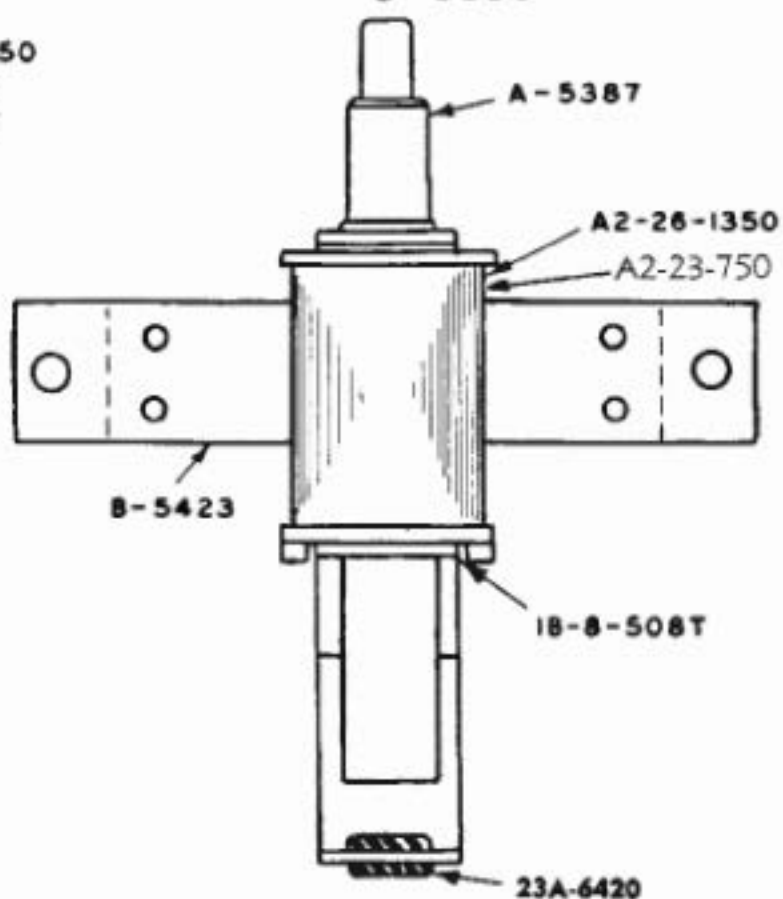


SOLENOID PLUNGERS



2A-2364



A-4959




2A-2527




2A-2770



2A-2767




2A-2676-1



A-5387

3A-6013




2A-2670



2A-2051




2A-2952

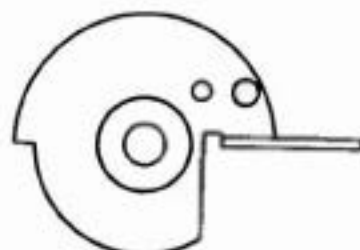


TARGET TRIP CAM
A-5804

MOTOR CAM ASSEMBLIES

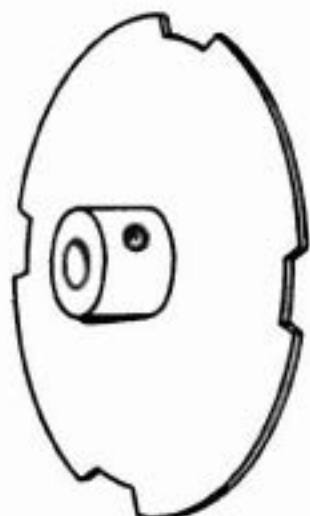


B5798

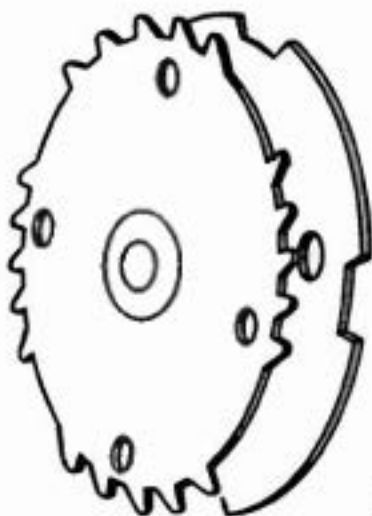


A5610

"JUNGLE" TARGETS

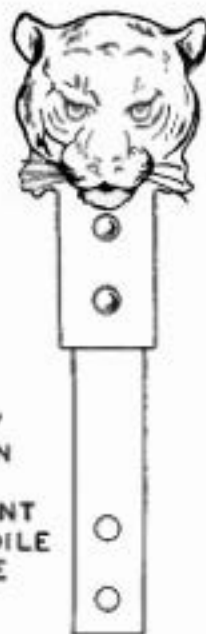


- | | |
|----------|-----------|
| A-5811-1 | TIGER |
| A-5811-2 | MONKEY |
| A-5811-3 | PELICAN |
| A-5811-4 | LION |
| A-5811-5 | ELEPHANT |
| A-5811-6 | CROCODILE |
| A-5811-7 | GIRAFFE |
| A-5811-8 | DEER |


COIL REPLACEMENT SLEEVES

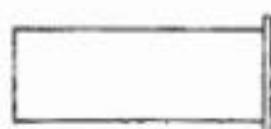


3A-7066-1

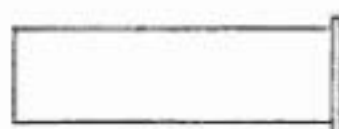


3A-7066-2

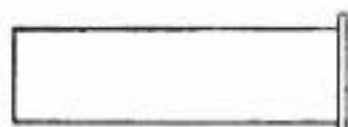


3A-7066

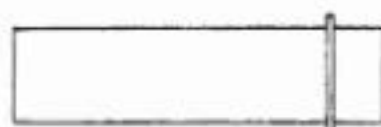


3A-7067

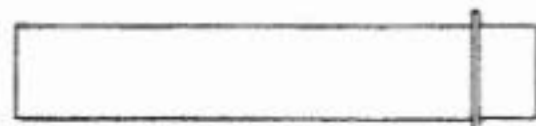

3A-7067-1

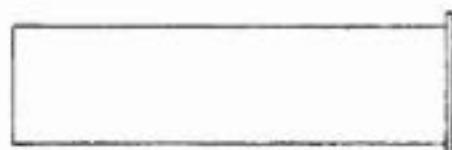

3A-7068

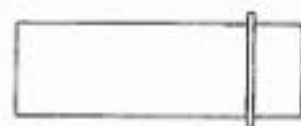

3A-7067-2

Coil Sleeve Replacement Chart

24 VOLT COILS

COIL No.	SLEEVE
A-22-550	3A-7066
A-23-600	3A-7066
A-23-650	3A-7066
A-26-1350	3A-7066
A1-23-750	3A-7067
A2-23-750	3A-7067-1
B-26-800	3A-7066-1
C2-26-800	3A-7067-2
DU-23-740	3A-7066-2
FL-21-28	3A-7066
G-22-550	3A-7066
G-23-650	3A-7066
G-23-750	3A-7066
G-24-850	3A-7066

50 VOLT COILS

COIL No.	SLEEVE
A-25-900	3A-7066
A-26-1100	3A-7066
A1-26-1100	3A-7067
A2-26-1100	3A-7067-1
A2-26-1350	3A-7067-1
A3-25-950	3A-7067-1
A-30-2700	3A-7066
AS-20-900	2A-2709
B-29-1600	3A-7066-1
D-22-1150	3A-7068
D-24-1150	3A-7068
D-24-1400	3A-7068
D-24-1600	3A-7068
DU-26-1350	3A-7066-2
FL-25/31	3A-7066
G-25-1100	3A-7066
G1-25-1100	3A-7066
G-26-1400	3A-7066

MOTOR UNIT SWITCHES (NEW STYLE UNIT)




SW-1CA MAKE SWITCH
(SMALL CONTACTS)



SW-10CA MAKE SWITCH
(LARGE CONTACTS)




SW-1CA-1 MAKE SWITCH
(SMALL CONTACTS)




SW-10CA-1 MAKE SWITCH
(LARGE CONTACTS)



SW-1CA-2 MAKE SWITCH
(SMALL CONTACTS)




SW-10CA-2 MAKE SWITCH
(LARGE CONTACTS)

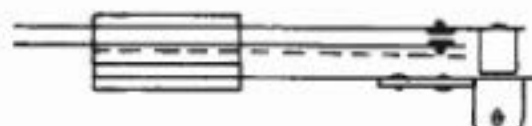

SW-2CA BREAK SWITCH
(SMALL CONTACTS)



SW-20CA BREAK SWITCH
(LARGE CONTACTS)




SW-2CA-1 BREAK SWITCH
(SMALL CONTACTS)



SW-20CA-1 BREAK SWITCH
(LARGE CONTACTS)



SW-3CA-1 MAKE-BREAK SW.
(SMALL CONTACTS)



SW-30CA MAKE-BREAK SW.
(LARGE CONTACTS)



SW-30CA-1 MAKE-BREAK SW.
(LARGE CONTACTS)



SW-30CA-2 MAKE-BREAK SW.
(LARGE CONTACTS)


MOTOR CAM SWITCHES (OLD TYPE MOTOR UNIT)




SW-1-C MAKE SWITCH
(SMALL CONTACTS)




SW-20C BREAK SW.
(LARGE CONTACTS)

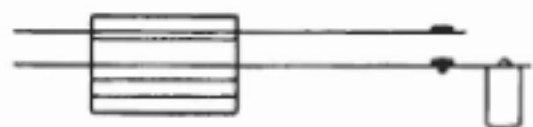

SW-1-CI MAKE SWITCH
(SMALL CONTACTS)

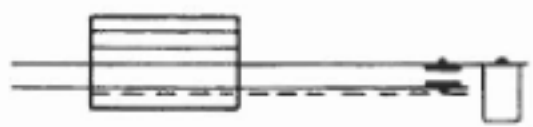


SW-20C-I BREAK SWITCH
(LARGE CONTACTS)

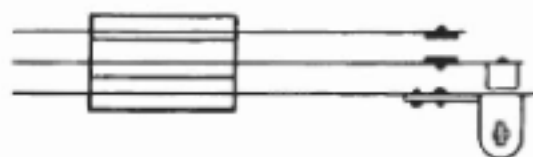


SW-10C MAKE SWITCH
(LARGE CONTACTS)



SW-30C MAKE-BREAK SW.
(LARGE CONTACTS)

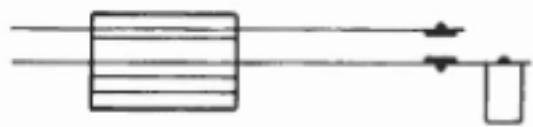


SW-10C-I MAKE SWITCH
(LARGE CONTACTS)

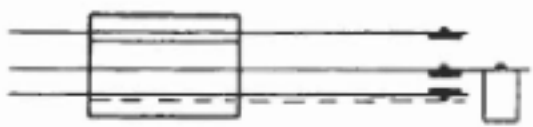

SW-30C-I MAKE-BREAK SW.
(LARGE CONTACTS)


MISCELLANEOUS PIN GAME SWITCHES




SW. 1A-2
ROLL-OVER WIRE
SINGLE MAKE SW.



SW. 1A-6
BALL TROUGH SW.

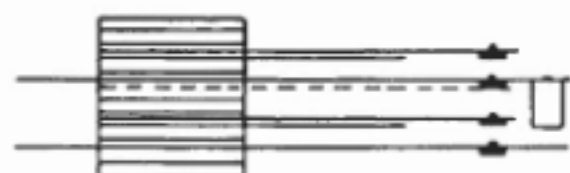

SW. IIA-2
ROLL-OVER WIRE
DOUBLE MAKE SW.



SW. 1A-5
KICKER COUNT SW.



SW. 1A-45
ROLL-OVER BUTTON
MAKE SWITCH



SW. 2A-3
GAME KICK-OFF SWITCH



SW. 20A
ROLL-OVER BUTTON
BREAK SWITCH



SW. 1A-1
SHAKE TILT SWITCH



SW. 1A-27
SINGLE EJECT SWITCH



SW. 1A-3
(RIGHT) FLIPPER BUTTON SW.




SW. IIA-10
DOUBLE EJECT SWITCH




SW. IIA-19
(LEFT) FLIPPER BUTTON SW.




A-5324 BUMPER SWITCH ASSEMBLY

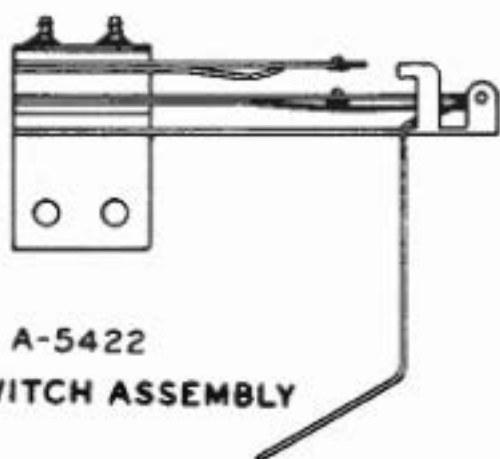


**A-5422
BASE SWITCH ASSEMBLY**

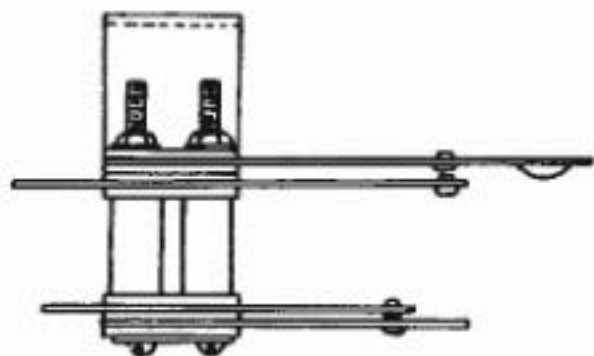


A-4783 JET BUMPER SWITCH ASSEMBLY

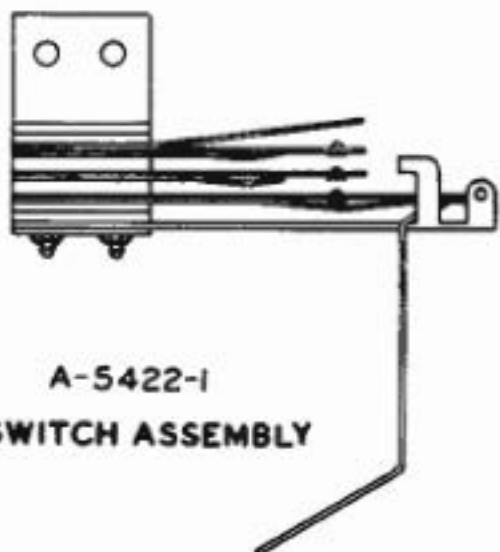

**A-5422-1
RUN SWITCH ASSEMBLY**

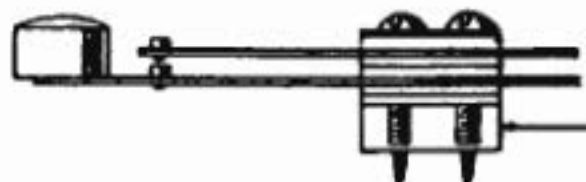


A-5325 TILT SWITCH ASSEMBLY

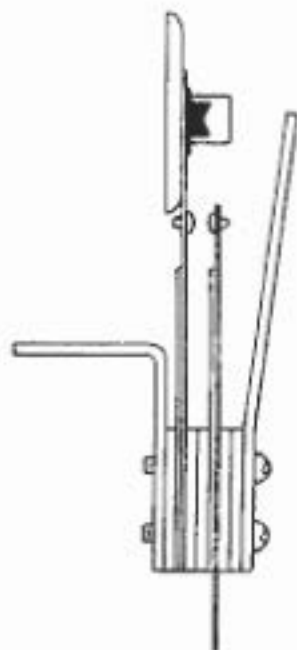


**A-4735
TARGET SWITCH
ASS'Y.**

(SINGLE MAKE SWITCH)

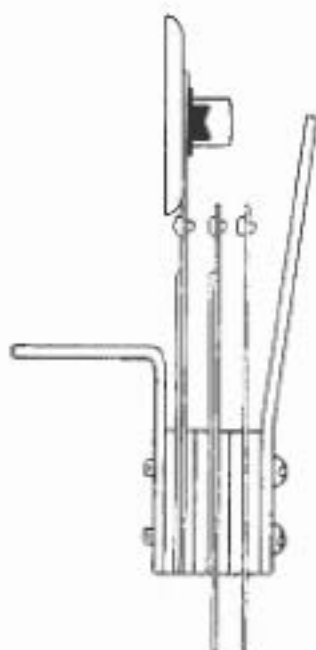

**A-4735-B
TARGET SWITCH
ASS'Y.**

(DOUBLE MAKE SWITCH)

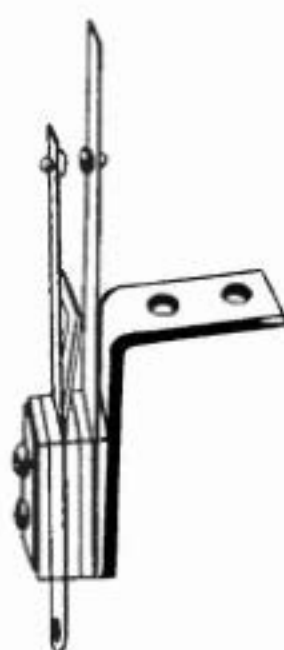


**A-4834
STAND-UP SWITCH
ASS'Y.**


CAM FOLLOWERS



A-4705

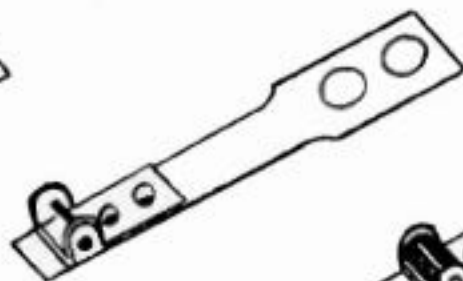


A-4608

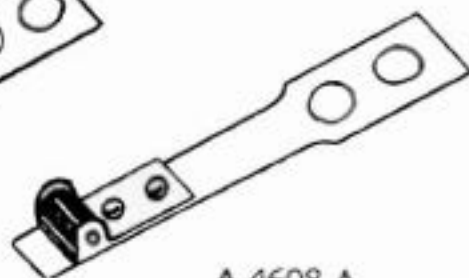


A-4608-A



A-4608-B

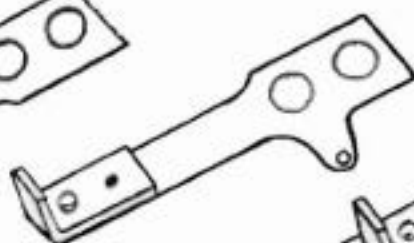

A-5041

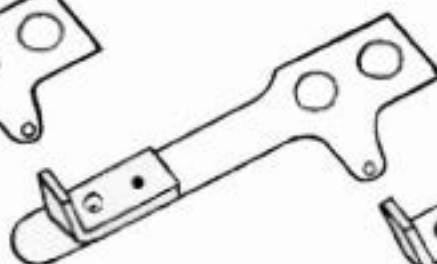


A-5041-A




A-5041-B

SWITCH BLADES

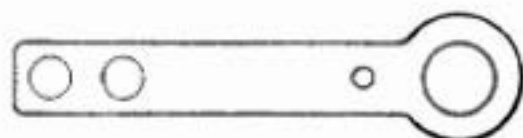


A-4744

BUMPER SWITCH BLADE

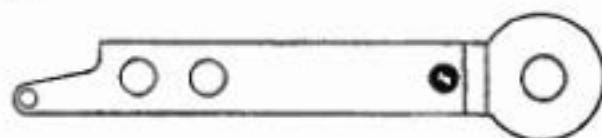


A-4744-2

R.O. BUTTON SWITCH BLADE

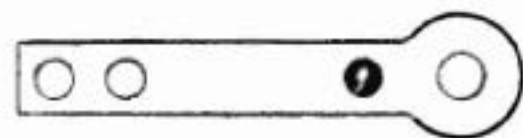

A-4744-1


TARGET SWITCH BLADE

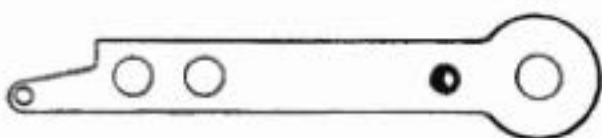


A-4744-3

R.O. BUTTON SWITCH BLADE


SWITCH BLADES



6A-15-10
SHORT BLADE FOR
J & M RELAY SWITCH



A-6311
SHORT BLADE WITH
SMALL CONTACT # 5A-6541B



A-6312
SHORT BLADE WITH
LARGE CONTACT # 5A-6198




6A-16-8
LONG BLADE FOR
J & M RELAY SWITCH




A-6313
LONG BLADE WITH
SMALL CONTACT # 5A-6541B




A-6314
LONG BLADE WITH
LARGE CONTACT # 5A-6198



6A-25-8
LONG BLADE (SIDE LUG)
FOR J & M RELAY SWITCH



A-6315
SIDE LUG BLADE WITH
SMALL CONTACT # 5A-6541B



A-6316
SIDE LUG BLADE WITH
LARGE CONTACT # 5A-6198



6A-1-14
STANDARD SHORT BLADE




A-6317
SHORT BLADE WITH
SMALL CONTACT # 5A-6541A




A-6318
SHORT BLADE WITH
LARGE CONTACT # 5A-7603



6A-2A-10
STANDARD LONG BLADE



A-6319
LONG BLADE WITH
SMALL CONTACT # 5A-6541A



A-6320
LONG BLADE WITH
LARGE CONTACT # 5A-7603


SWITCH COVER PLATE




IA-2048



IA-1248

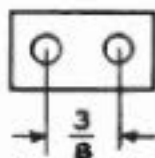

STEEL
IA-15


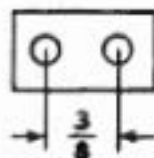


ALUMINUM
IA-916 RA

SWITCH BLADE LIFTER



SWITCH SPACERS BAKELITE

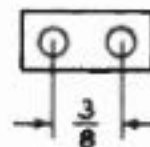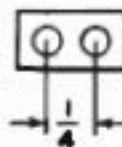

THICKNESS	NO.
1/64	IA-2005-4
1/32	IA-2005-2
1/16	IA-2005-1
3/32	IA-2005-3

THICKNESS	NO.
3/32	IA-916-B
1/16	IA-916-L
1/32	IA-916-T




SWITCH TUBING
3A-7006
FOR "M" RELAY SWITCHES
SPECIFY LENGTH



SWITCH TUBING
3A-7007
SPECIFY LENGTH

LENGTH	NO.
1/16	3A-6022-2
3/32	3A-6022-3
1/8	3A-6022-4
5/32	3A-6022-5
3/16	3A-6022-6
7/32	3A-6022-7
1/4	3A-6022-8
9/32	3A-6022-9
5/16	3A-6022-10
11/32	3A-6022-11
3/8	3A-6022-12




6A-14



6A-14 B

WIRE FORMS

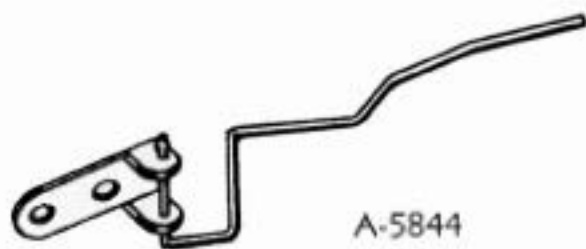

A-5844




A-5844-1



A-5844-2




A-5844-3

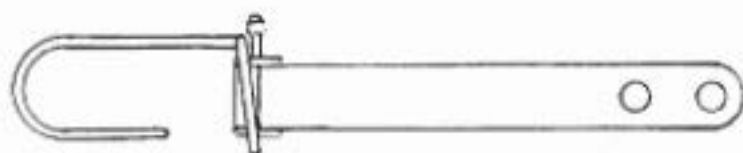


A-5844-4




A-5844-5

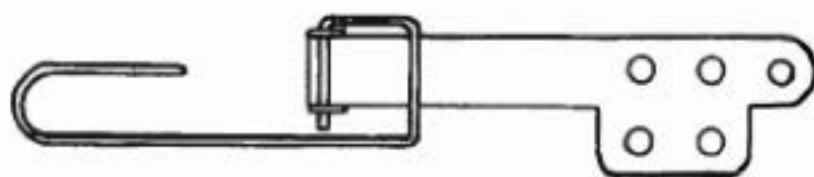


A-5844-6

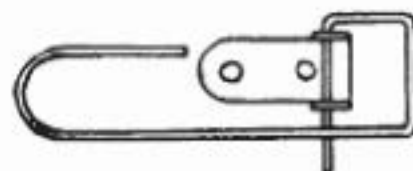

A-5844-7

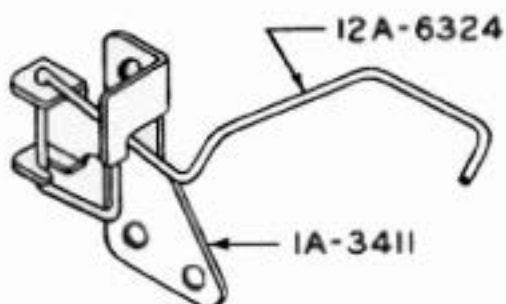

A-5844-8

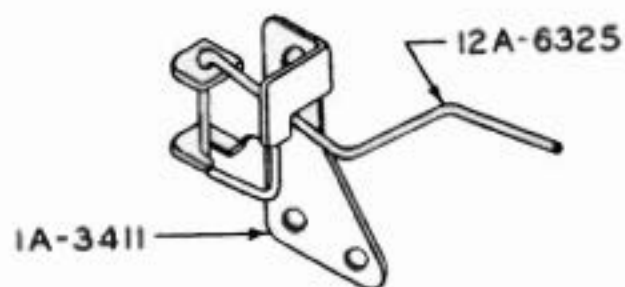

A-5844-9



12A-6285
(LONG)



12A-6285-A



12A-6285-B
(SHORT)

1A-497

12A-6326




A-5844-10



A-5844-11



A-5844-12

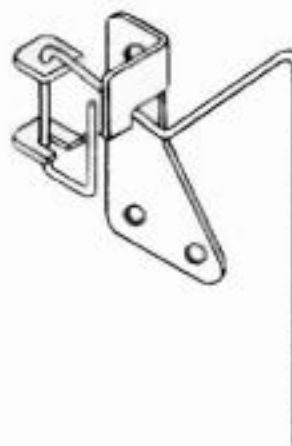


A-5844-13

(NEW) COIN SWITCH & COVER ASSEMBLY

B-6291

COIN SWITCH ASSEMBLY

B-6291-1

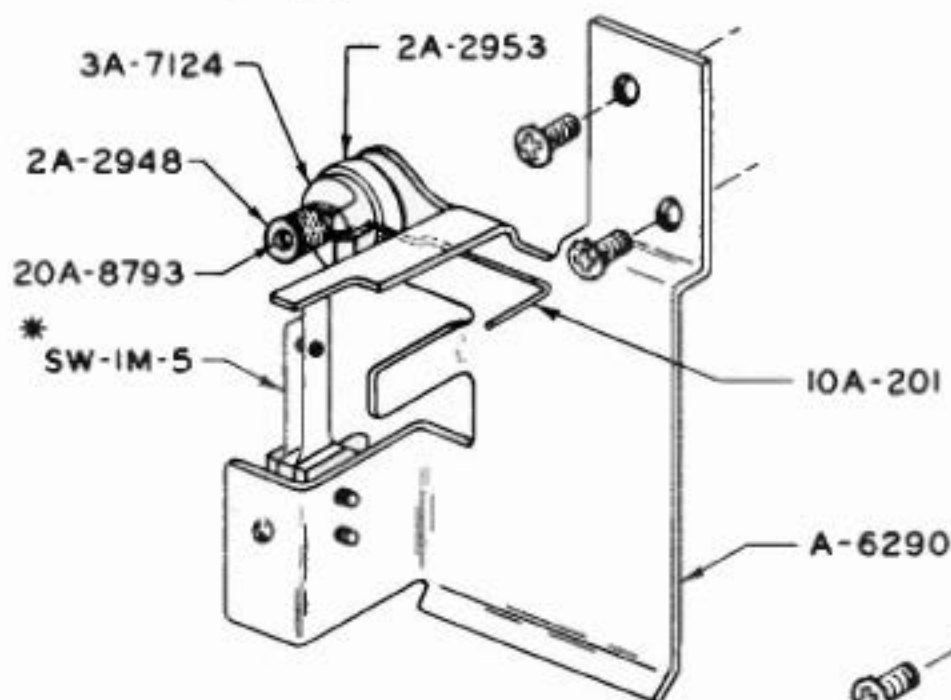


SWITCH ACTUATOR

3A-7124



COIN SWITCH COVER


1A-3431

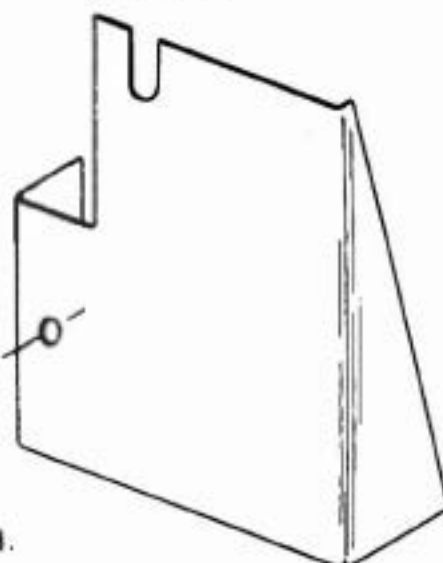


* FOR VENEZUELA,
ORDER SW-1M-4.

(3) 6-32 X $\frac{1}{4}$
PH. HD SEM.


B-5151
SLUG REJECTOR MOUNTING ASSEMBLY

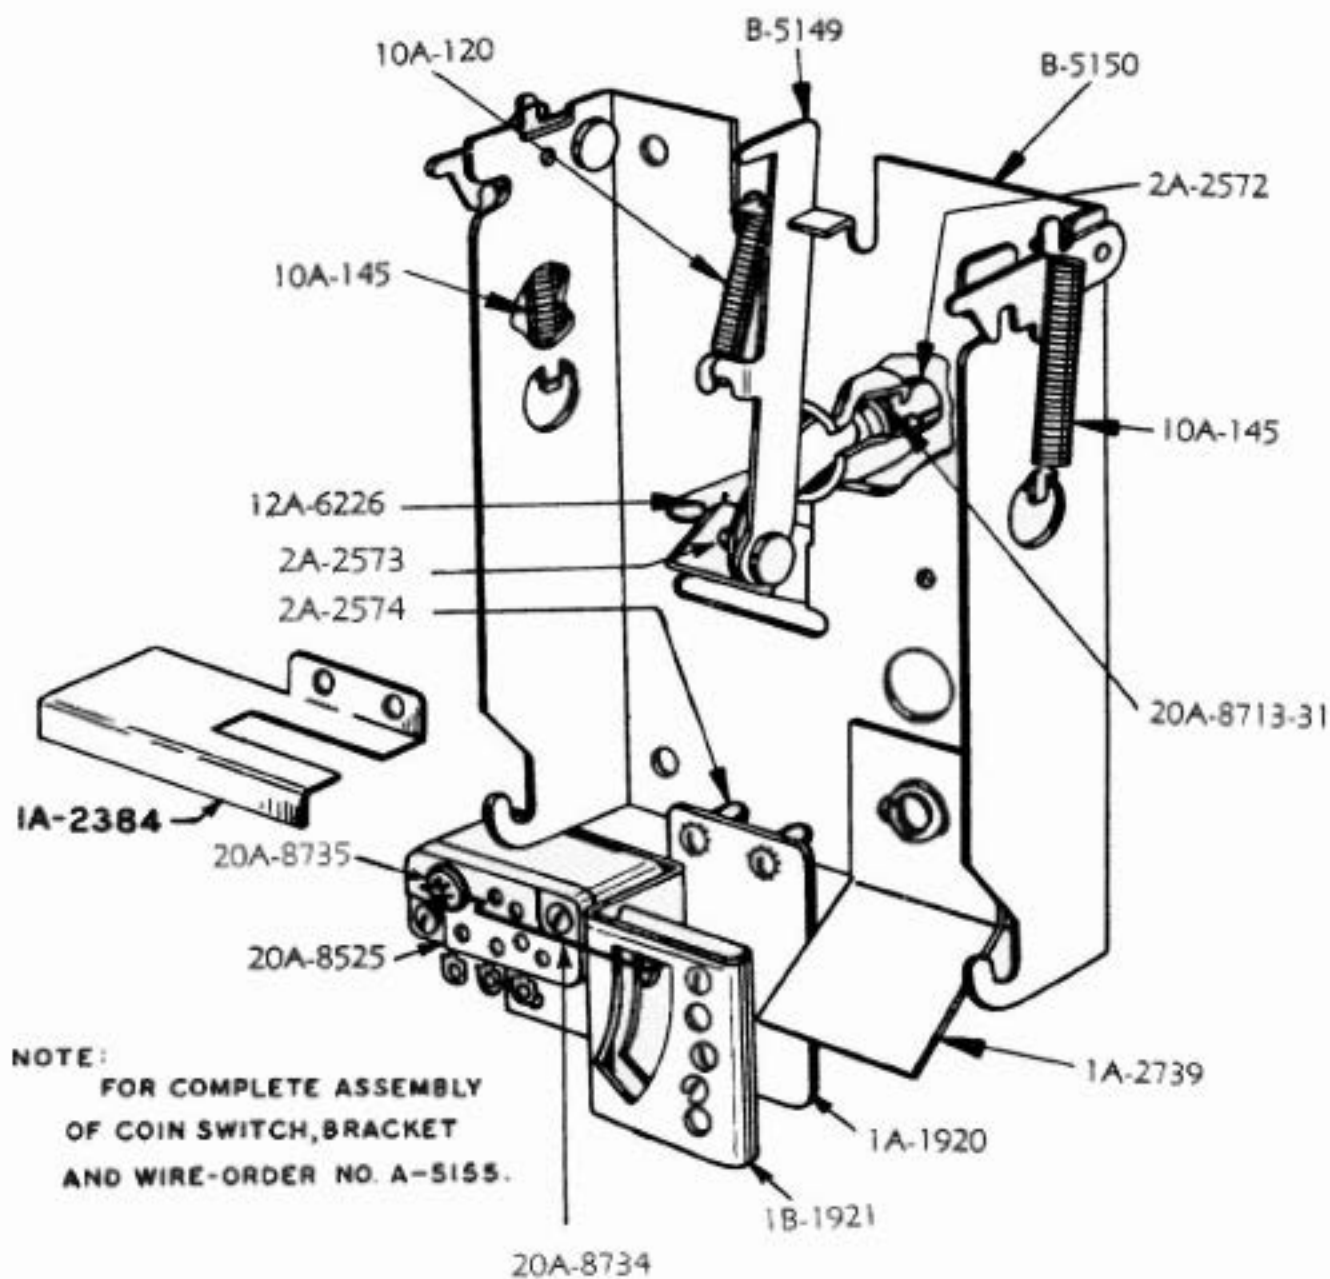

A-5489
COIN RETURN CUP

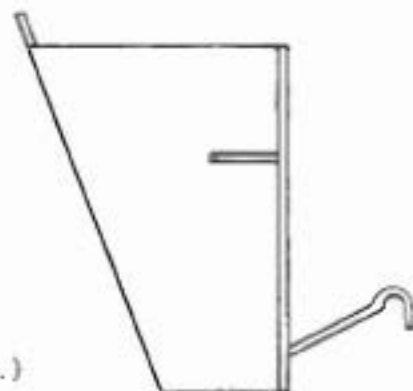


A-5956
COIN LOCKOUT COIL

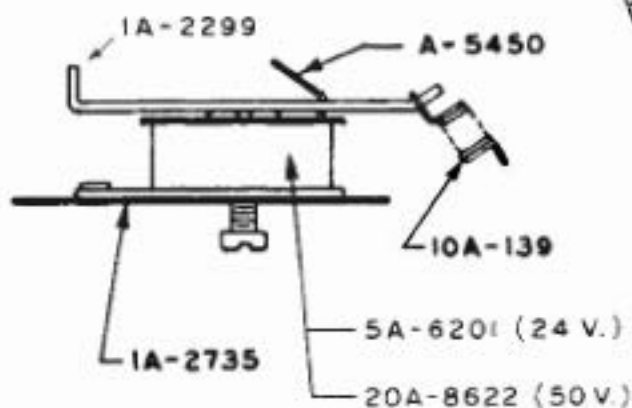


20A-8734
COIN SWITCH
WIRE




**A-6229
BALL GATE ASSEMBLY**

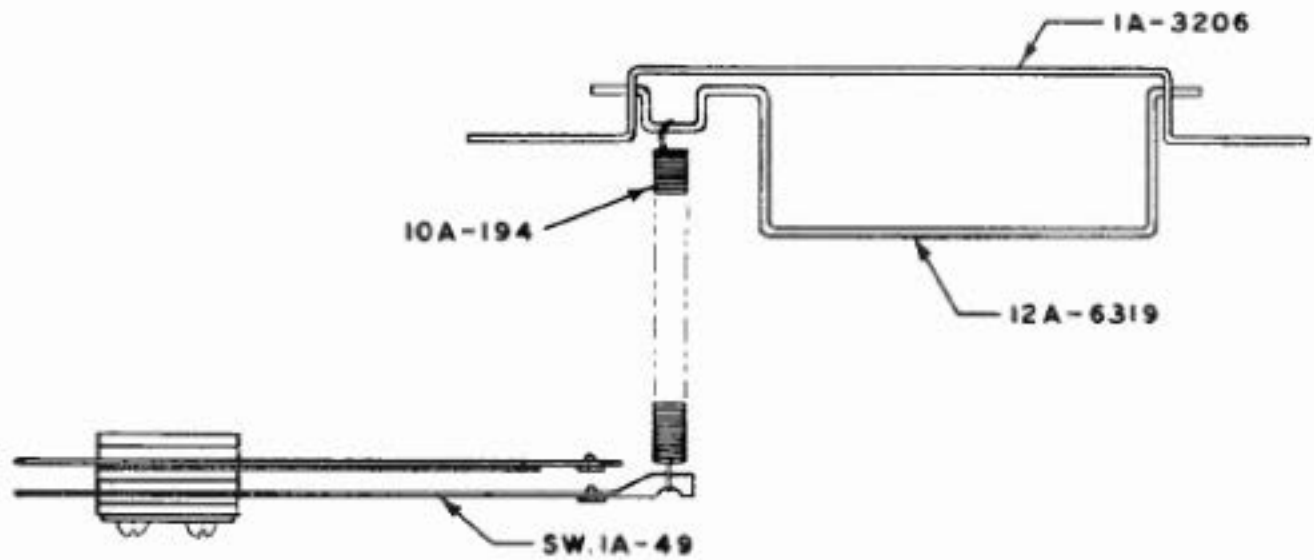

**A-6213
MERCURY TILT SWITCH
& BRACKET ASSEMBLY.**

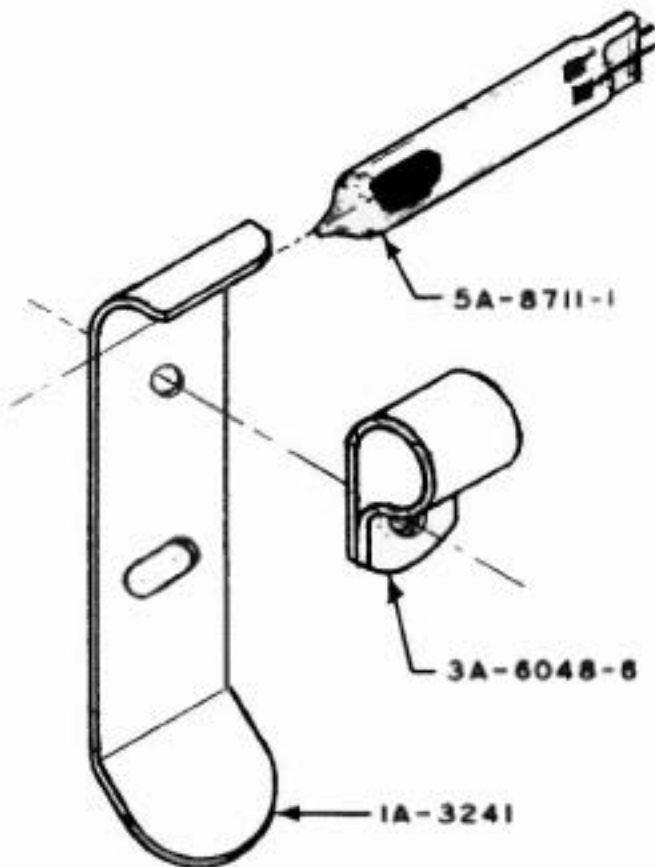


A-4786 HOLE COVER ASSEMBLY

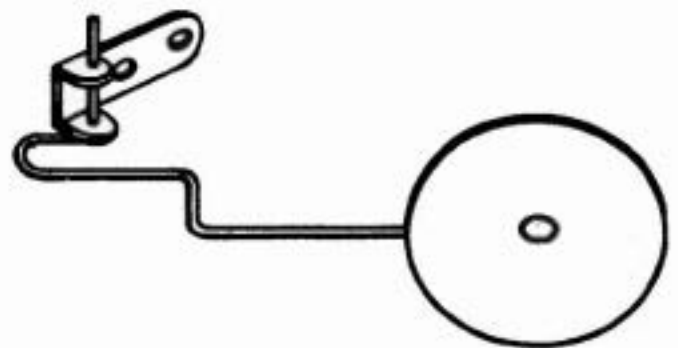


ASSEMBLY NO.	HOLE COVER SIZE
A- 4786-1	1.312 DIA.
A- 4786-2	1.625 DIA.
A- 4786-3	.875 DIA.
A- 4786-4	.625 DIA.
A- 4786-5	.750 DIA.

**A-5069 FLIPPER BUTTON
ASSEMBLY (New Style)**

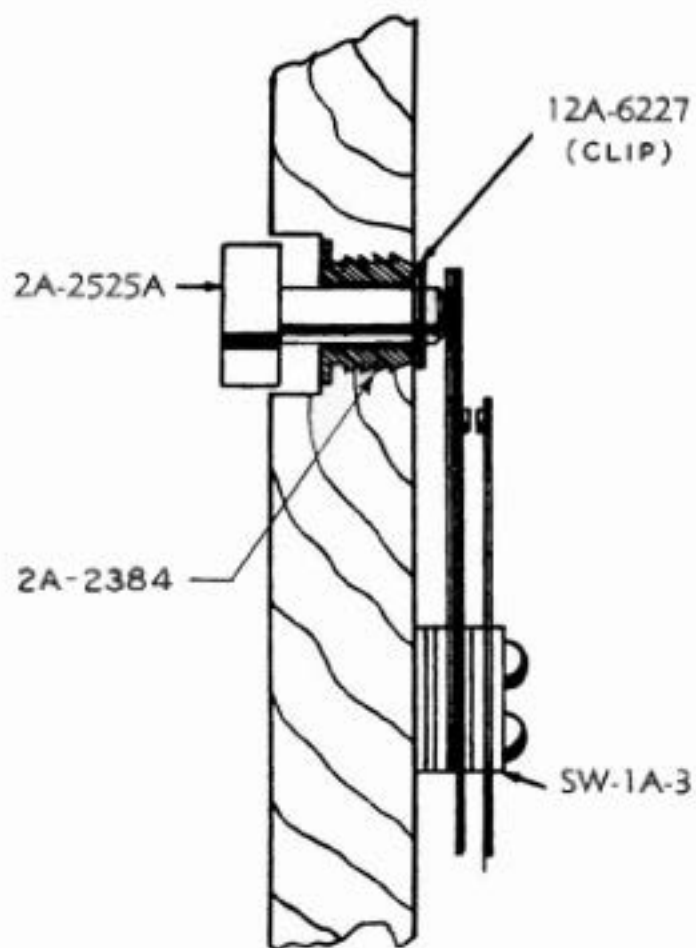


**B-4729-R
TILT BOB ASSEMBLY**

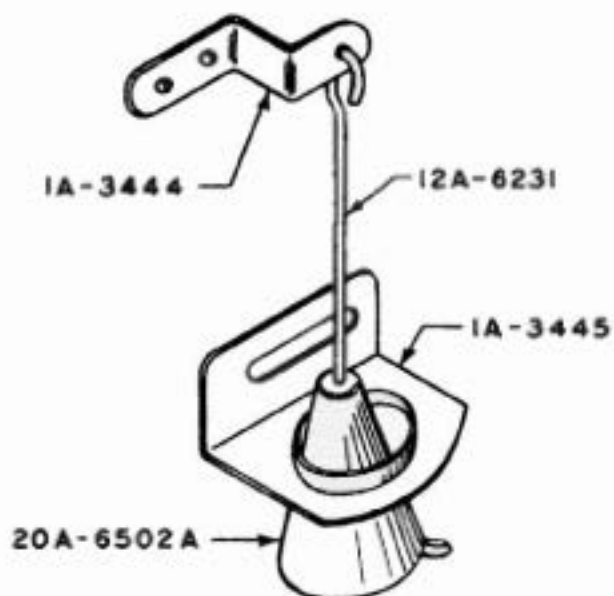


A-4817 BALL GATE ASSEMBLY



**A-4741 REBOUND
ASSEMBLY**

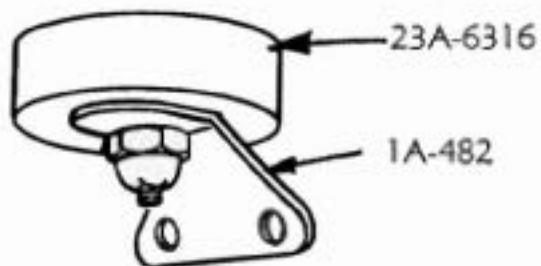


**20A-8757 ELECTRIC COUNTER
(24 VOLT)**

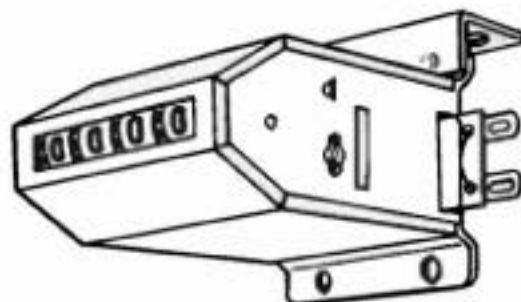

**20A-6512 ELECTRIC COUNTER
(50 VOLT)**

**NEW STYLE
COIN ENTRY PLATE**

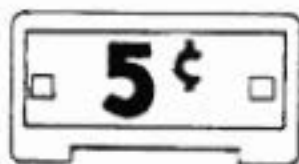

1B-2760-2
1B-2760-3
1B-2760-4

10 CENT
5 CENT
25 CENT

**OLD STYLE
COIN ENTRY PLATE**



9B-8561-2
9B-8561-3
9B-8561-4

10 CENT
5 CENT
25 CENT


IMPORTANT:

When ordering foreign entry plates & slug rejector parts,
always specify country name, name and denomination of coin.

12A-6230 KEY HOOK




B-4724 ROLL TILT ASSEMBLY

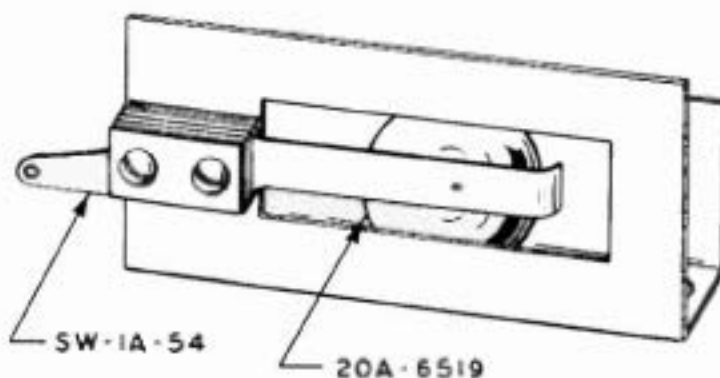


1A-1860 CIGARETTE HOLDER



1A-1900 CIGARETTE HOLDER

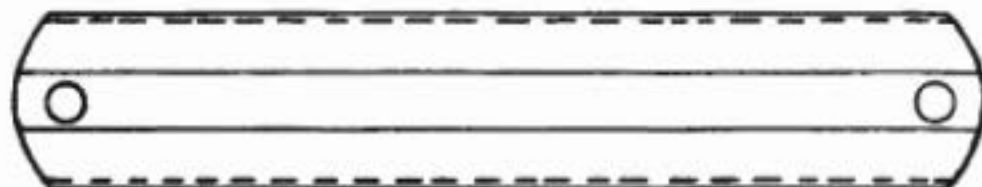


9A-6561-1

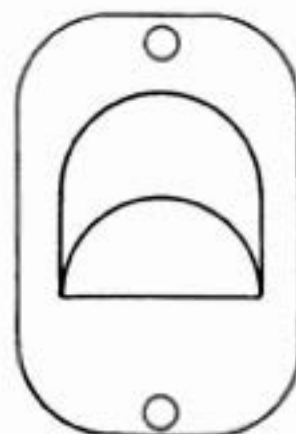


END VIEW

BOTTOM ARCH


C-5632

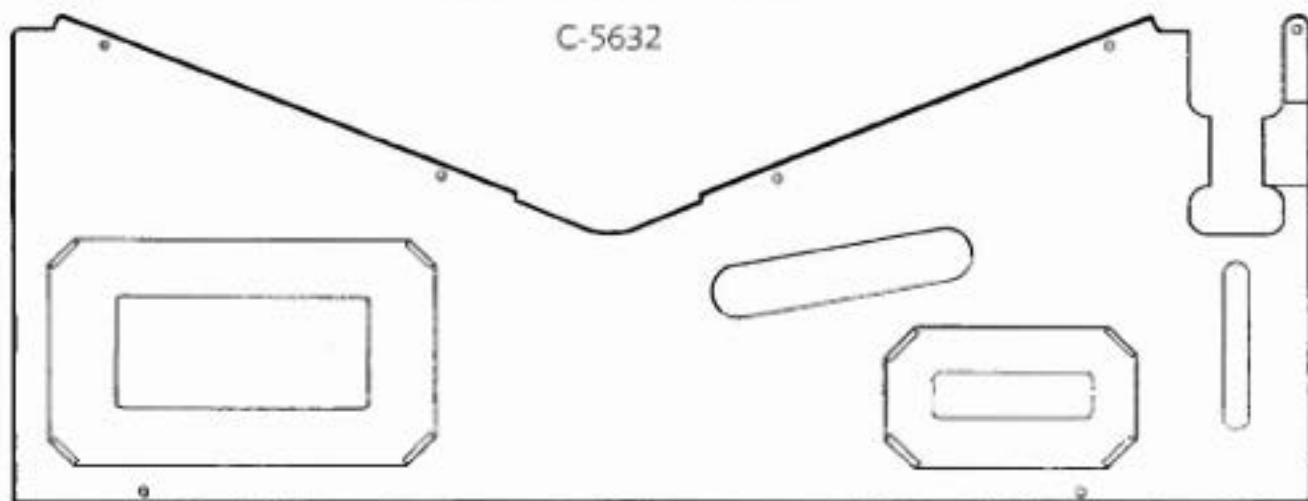


C-5632A

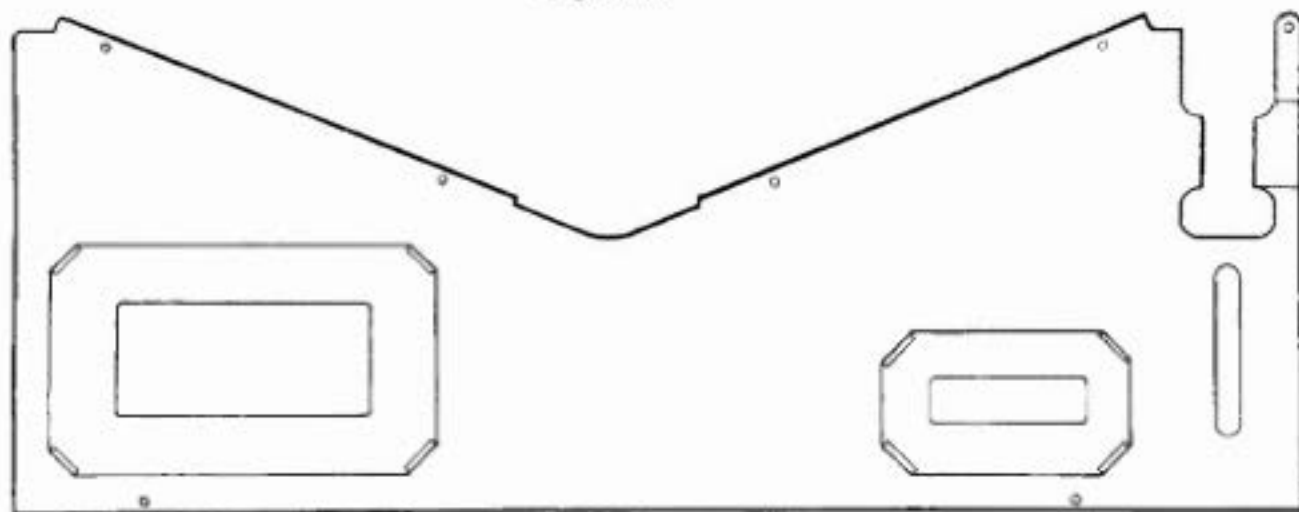


ARCH HOLE LINER ASSEMBLY

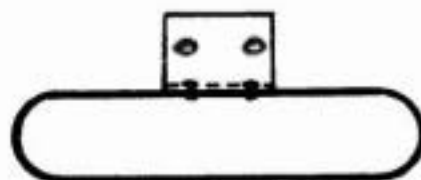

A-5233A

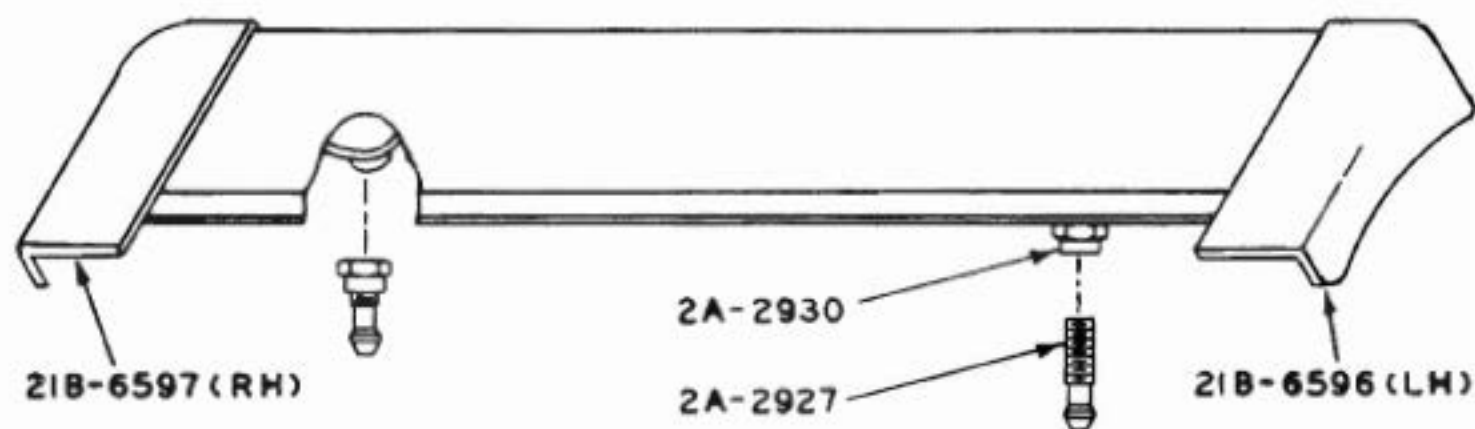


**D-6061 FRONT MOULDING (LATCH TYPE)
FOR SINGLE AND MULTI-PLAYER**

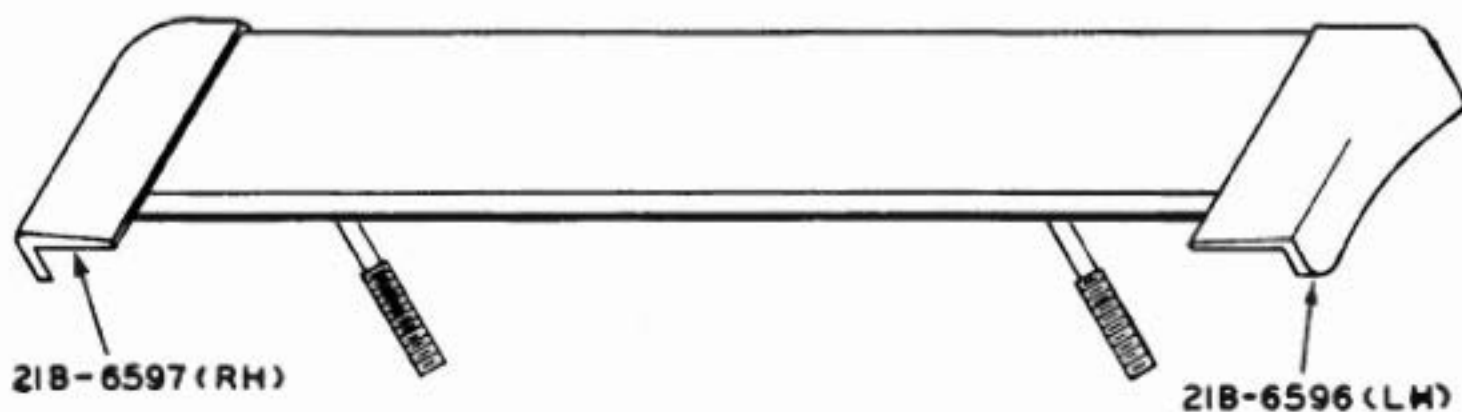

FRONT MOULDING (WITH CARRIAGE BOLTS)

**D-5835 FOR SINGLE PLAYER
D-5835-1 FOR MULTI-PLAYER**

PLAYFIELD LOCKING ASSEMBLY B-6301

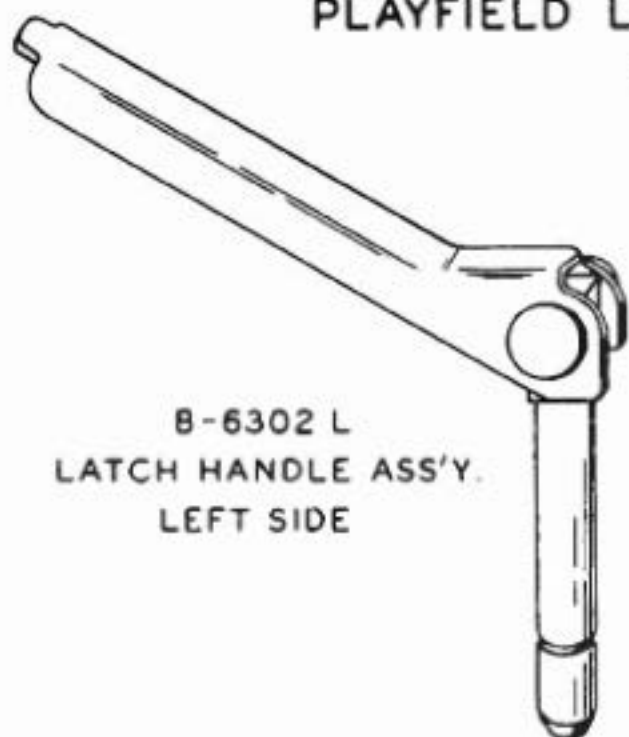

B-6302 L
LATCH HANDLE ASS'Y.
LEFT SIDE



B-6302 R
LATCH HANDLE ASS'Y.
RIGHT SIDE



IA-3435 L
SWIVEL PLATE




IA-3435 R
SWIVEL PLATE



20A-8712-31




20A-8712-31

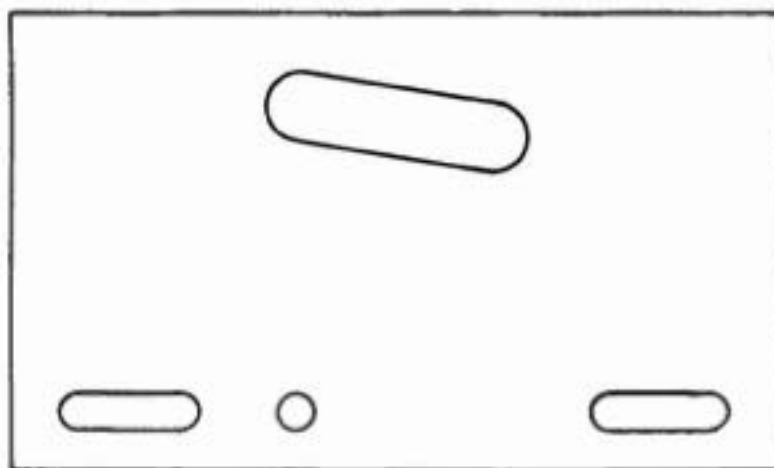

IB-3434
LOCK PLATE


1A-2961
INSERT HINGE

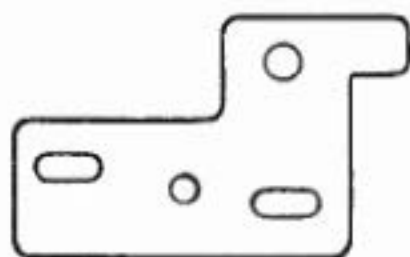

1A-2962
INSERT HINGE PIVOT



1B-2572
BALL STOP

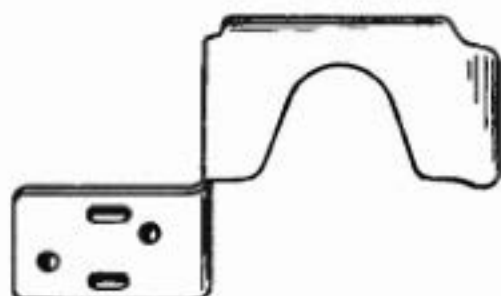


1A-3015
BALL LIFT DEFLECTOR




1A-3022
COIN DEFLECTOR




A-5775-1
COIN SLIDE ASSEMBLY

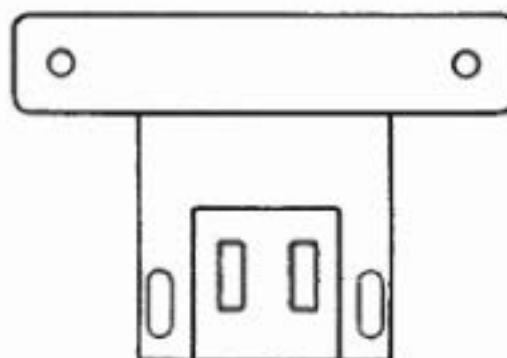


A-6051
COIN GUIDE ASSEMBLY

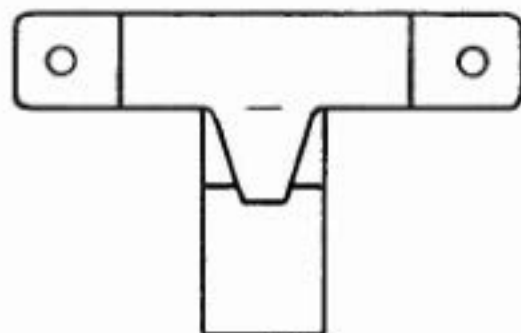


B-5496
COIN SLIDE ASSEMBLY
(COLD TYPE)

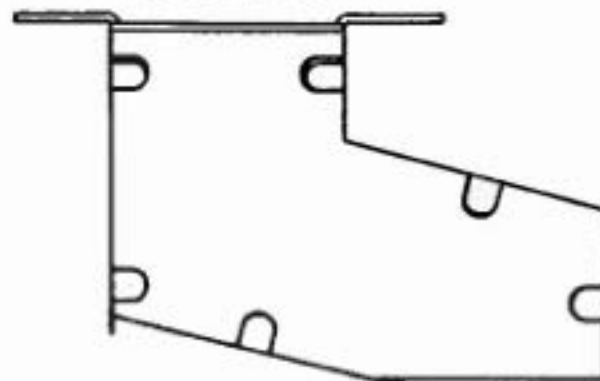

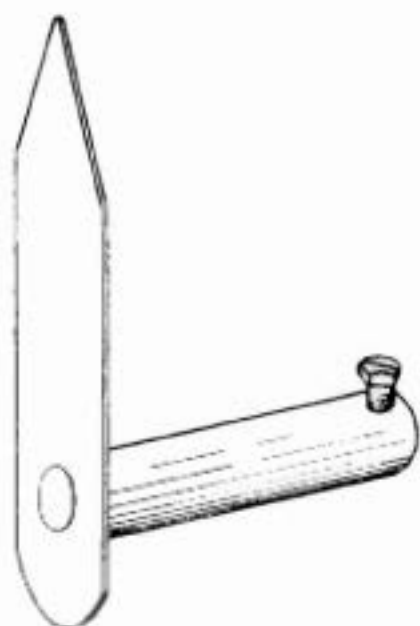


POINTER ASSEMBLY

A-6303 USED ON "BEAT THE CLOCK"
 A-6303-1 USED ON "SAN FRANCISCO"

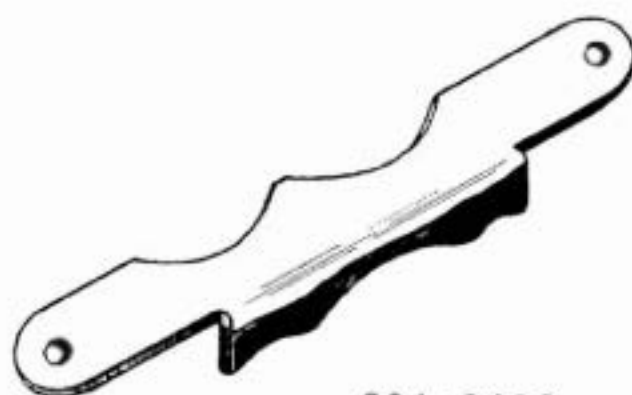

23A-6430

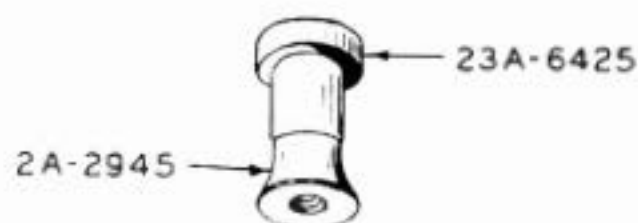


PLAYFIELD POST & BUMPER
 A-6304




PLASTIC SUPPORT PIN
 2A-2947

A-6308 "GOAL" KICKER & COIL ASS'Y.

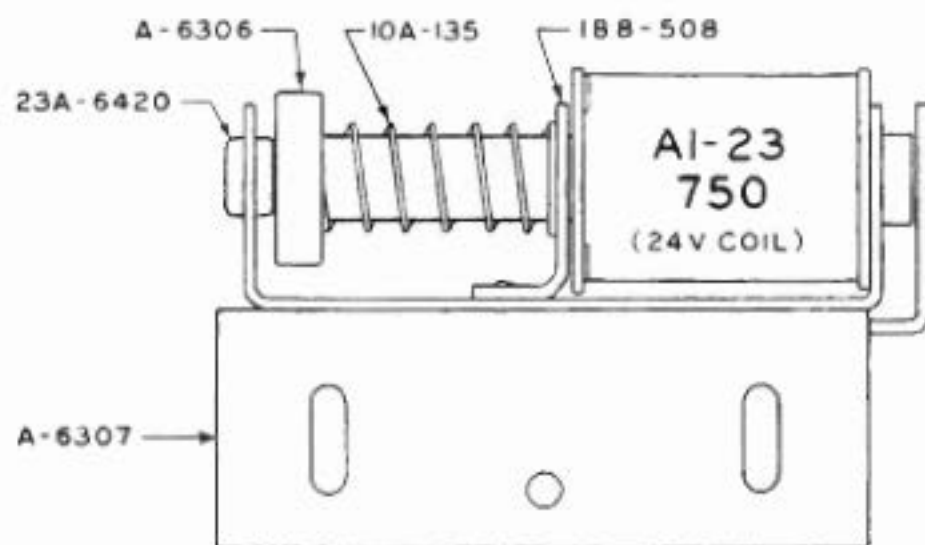

USED ON "SOCCER"

CONTACT WIPER, THERMOMETER TAPE & ROLLER ASSEMBLY C-6345 (COMPLETE AS SHOWN)


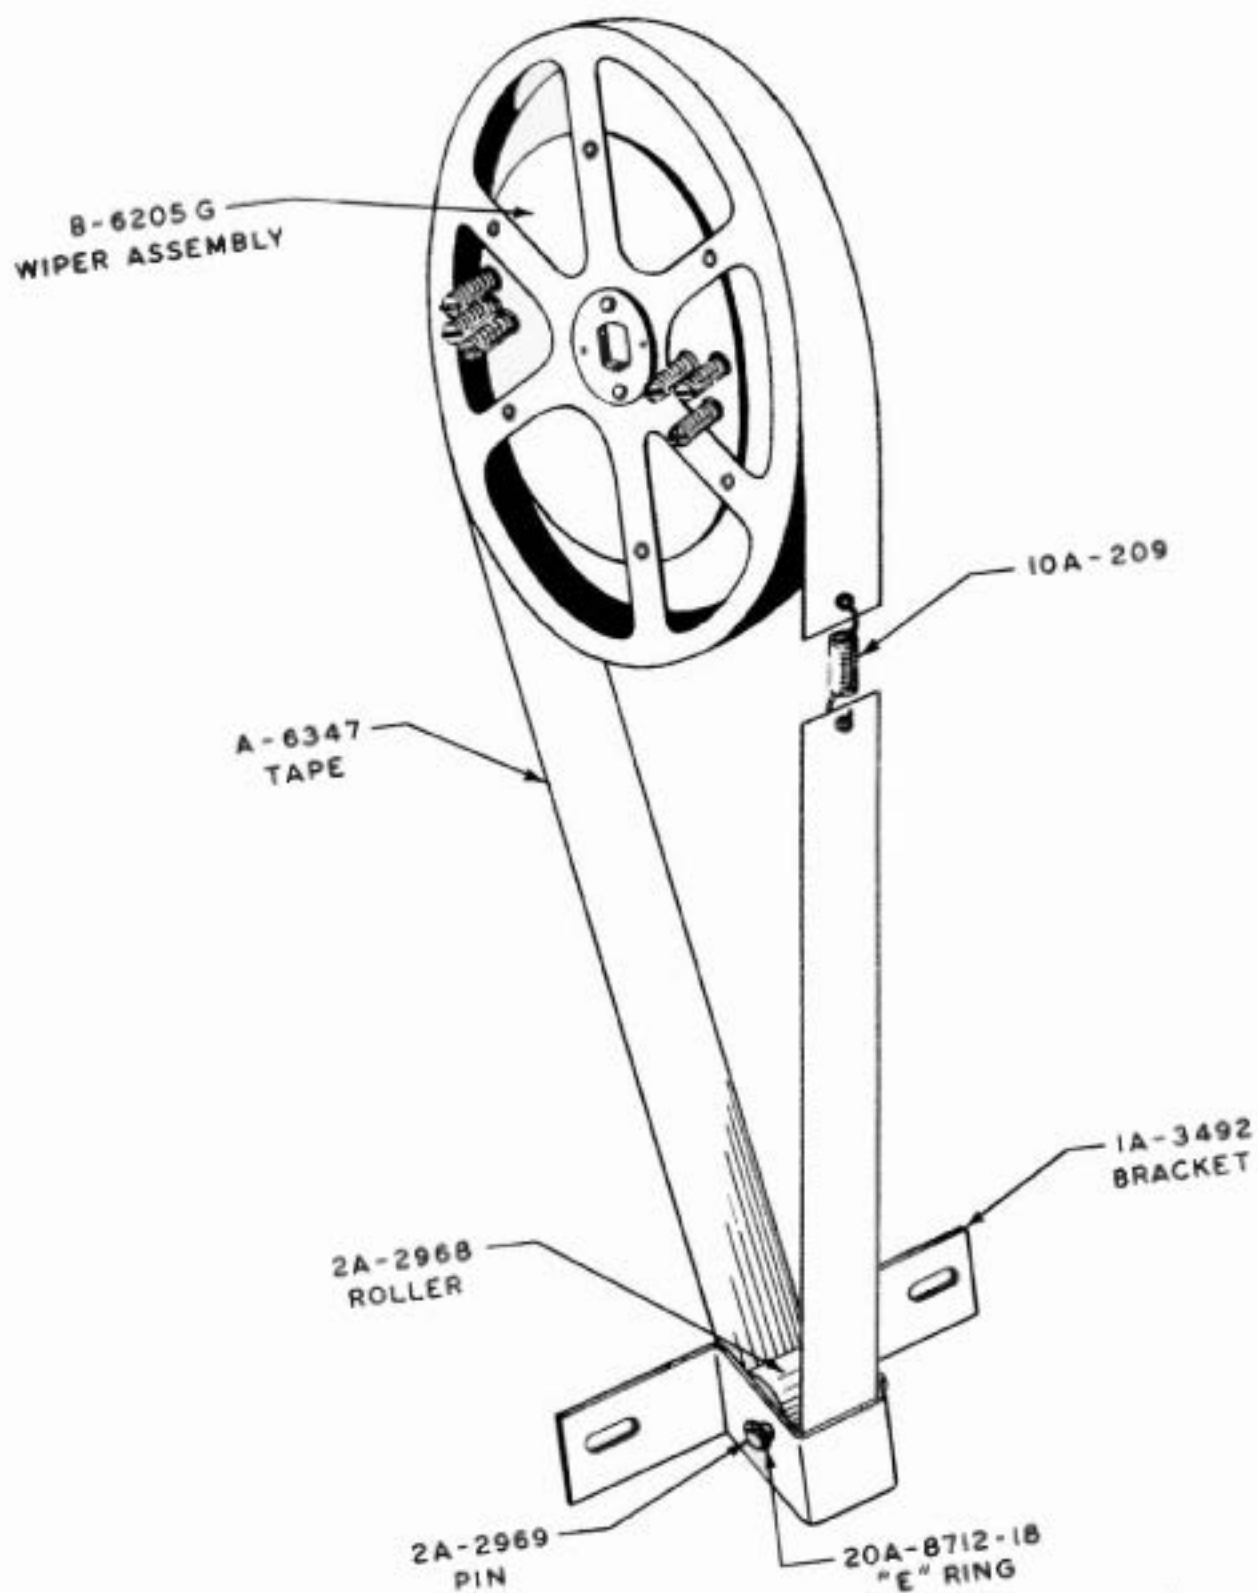


USED ON ADVANCE UNIT ON "HEAT WAVE".

ROADRACER PARTS


B-5917

STEERING WHEEL ASSEMBLY

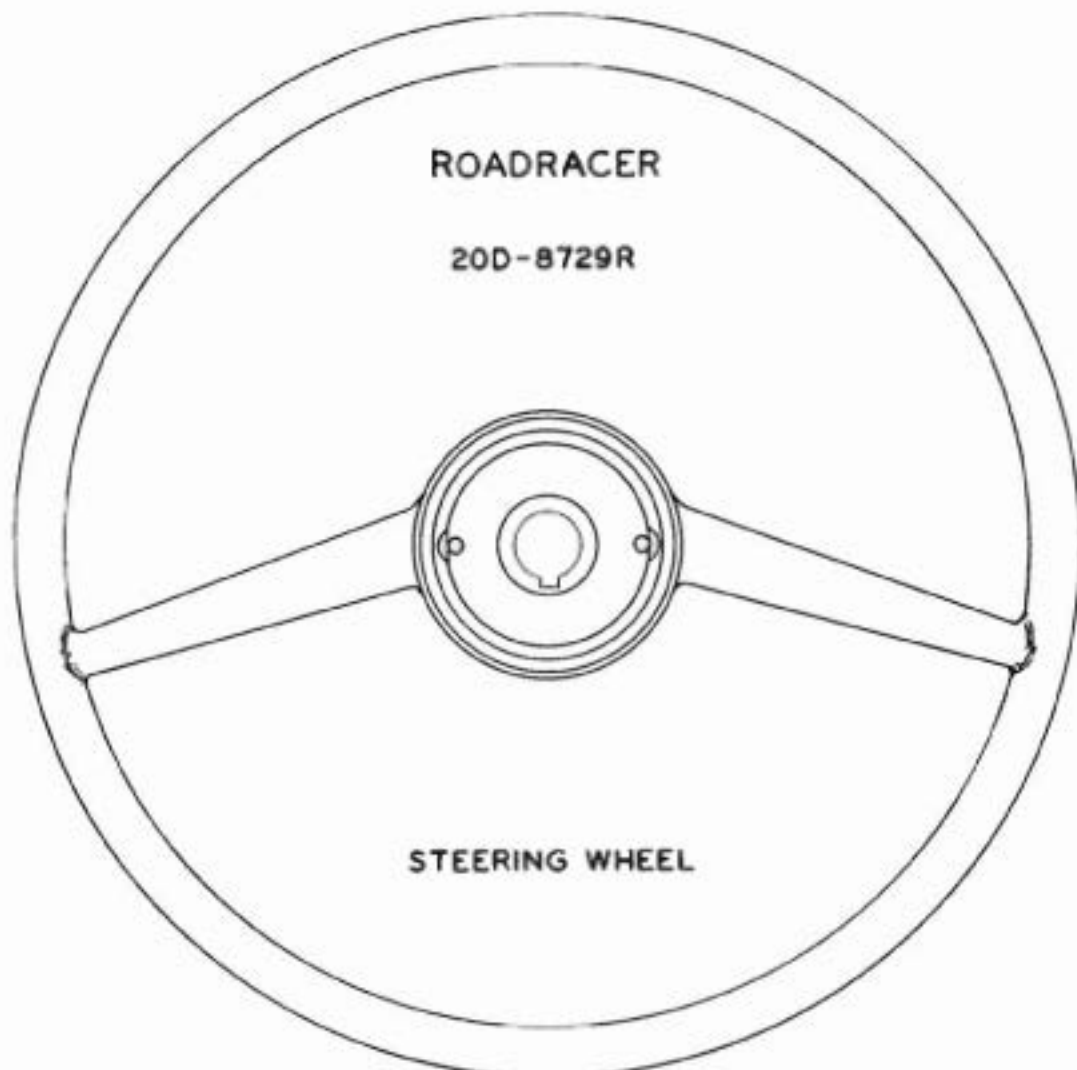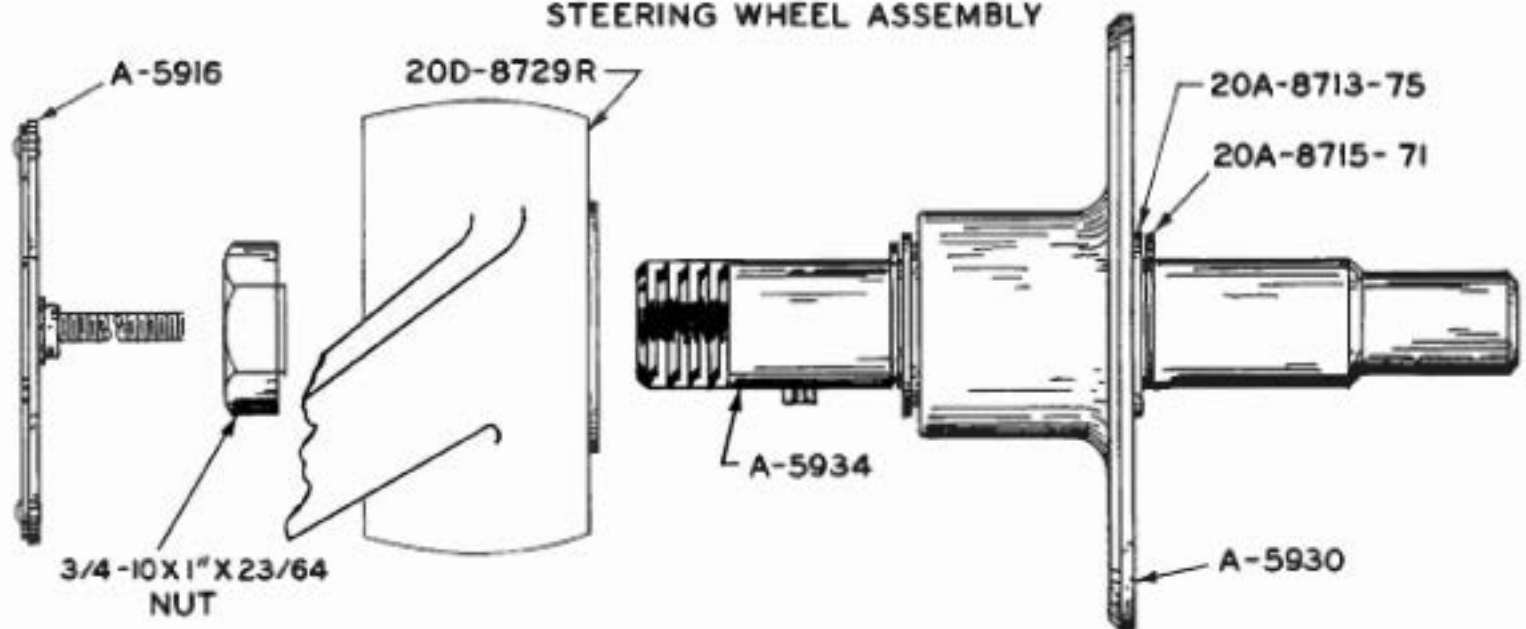


ROADRACER

TIMER MOTOR UNIT ASSEMBLY B-5943

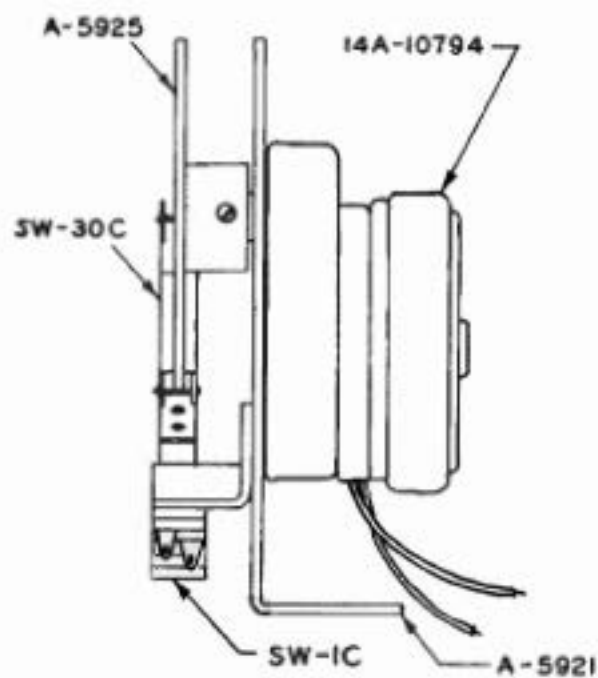


C-5936 CARRIAGE BRACKET ASSEMBLY

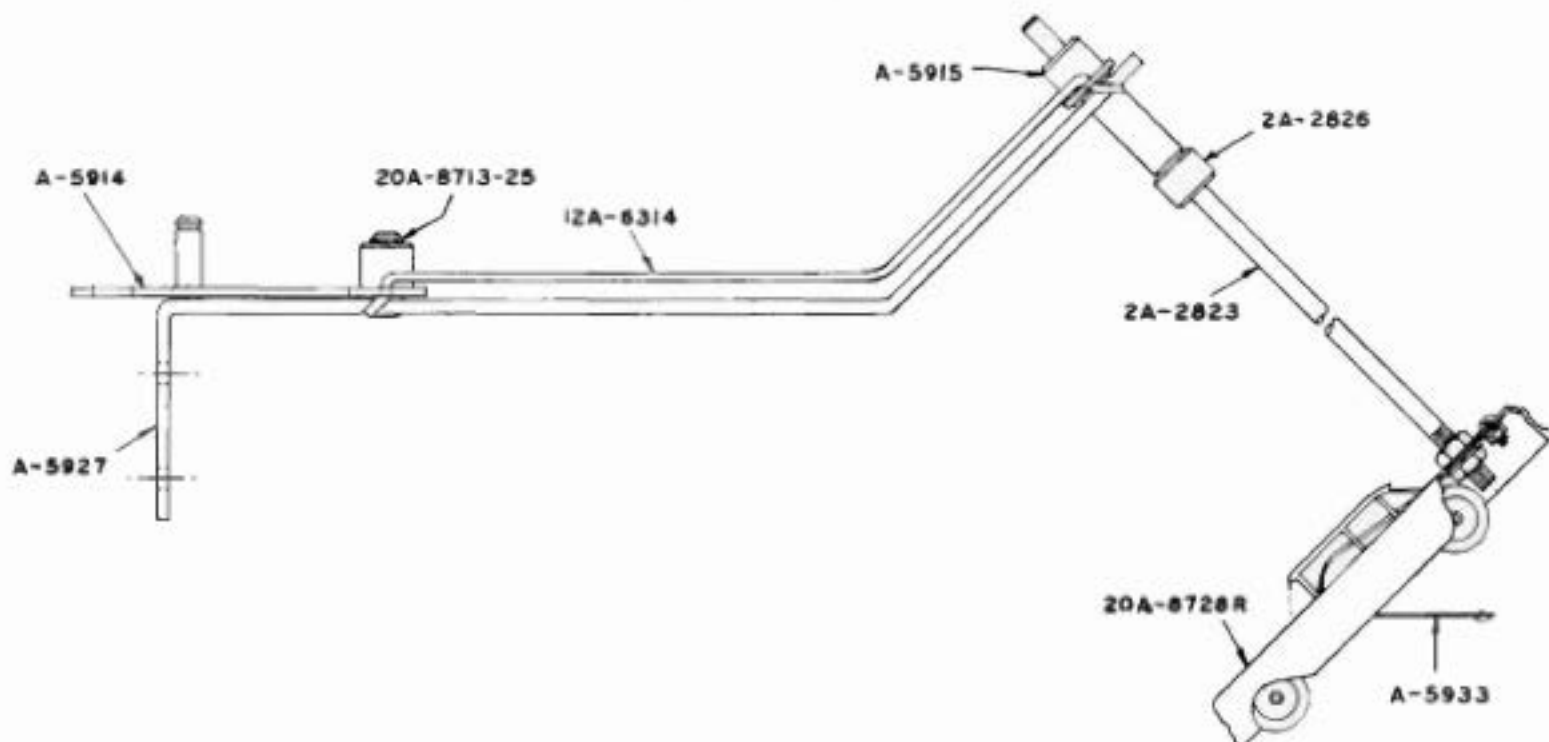


ROADRACER



DRUM MOTOR UNIT ASSEMBLY B-5942

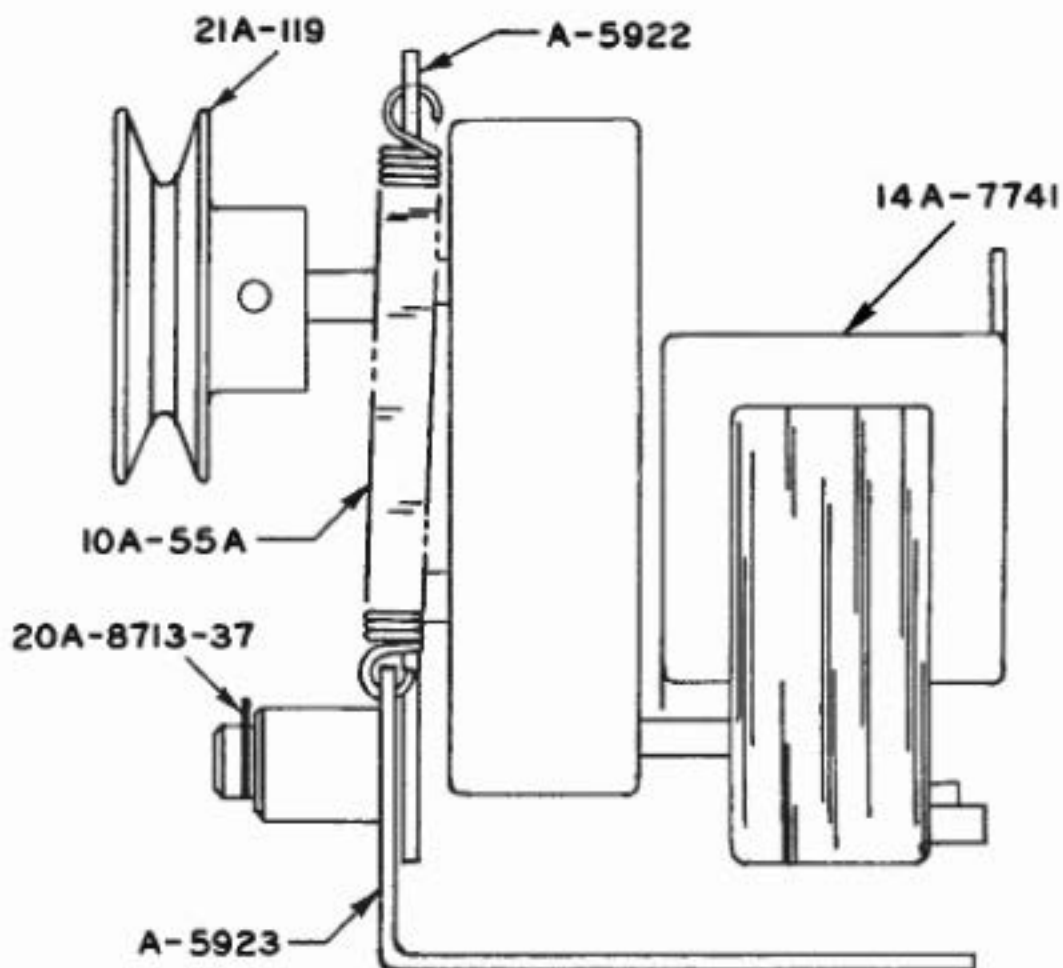


20A-8726 1/4 DIAMETER LEATHER BELT

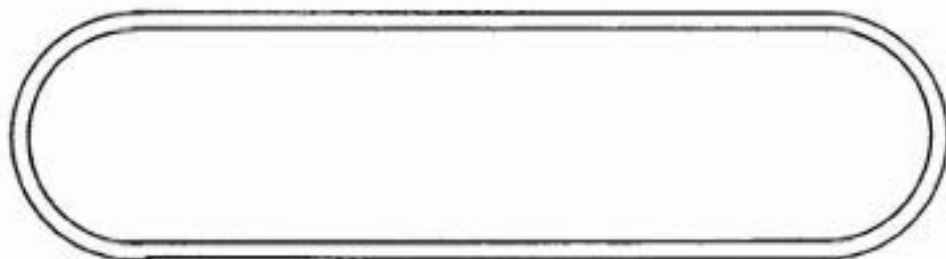


ROADRACER

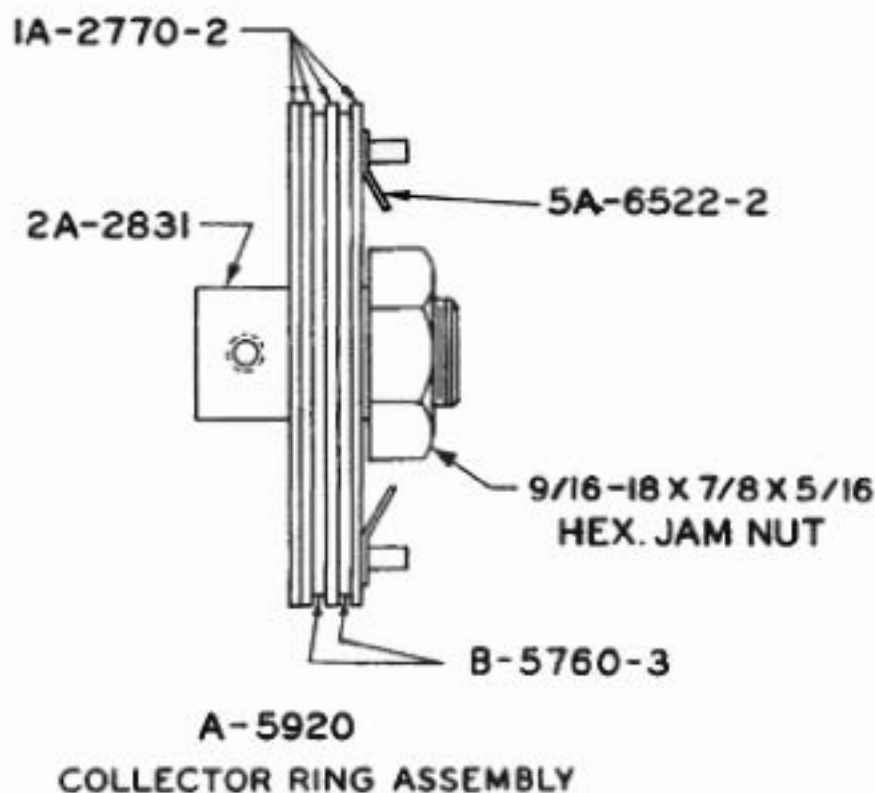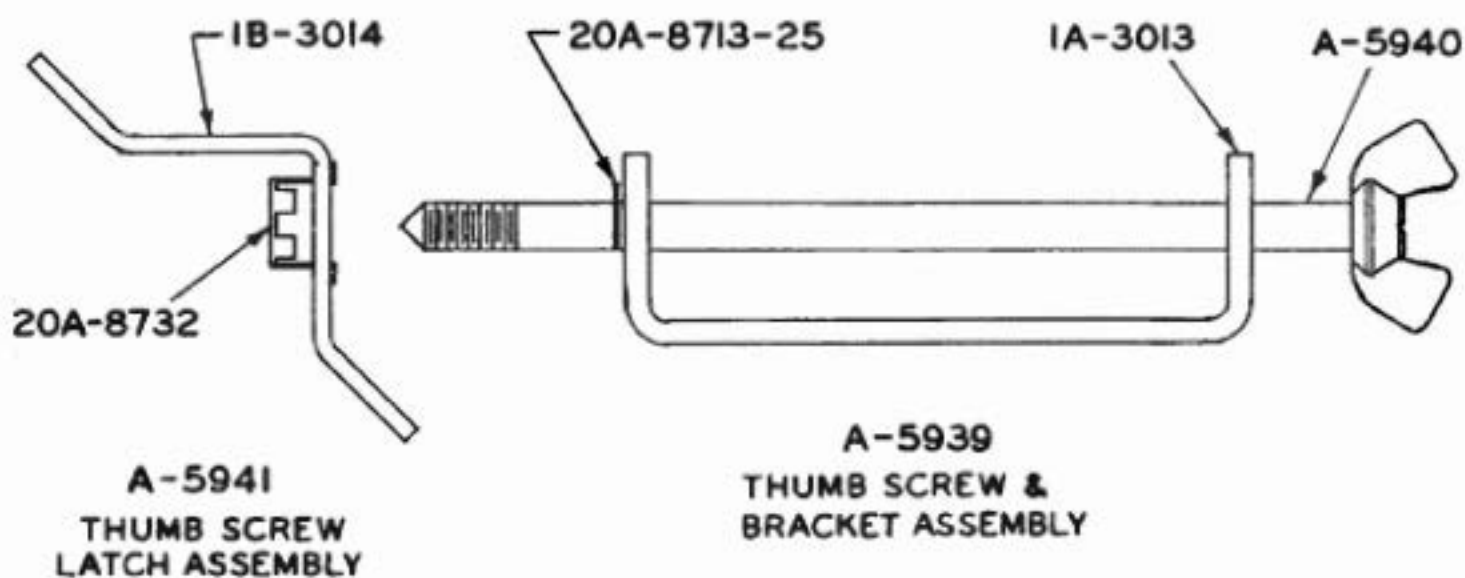


POOL TABLE

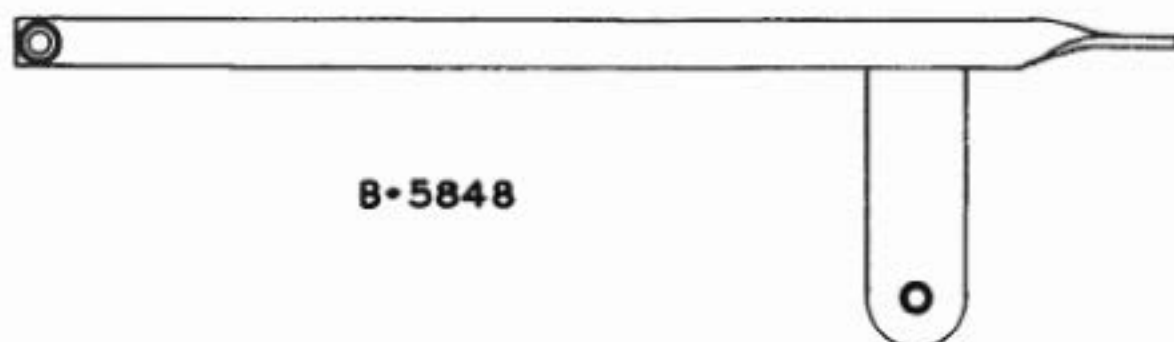


B-5848




A-5843

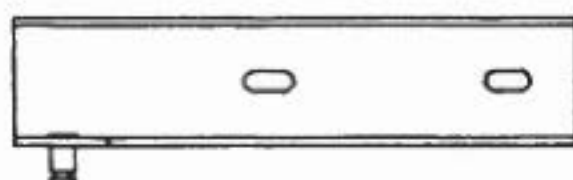

A-5853

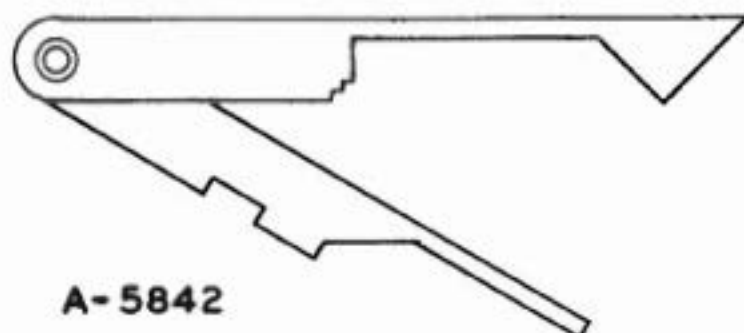

A-5842



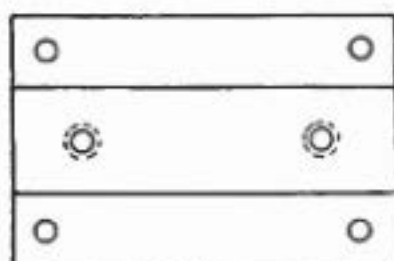


1A-2898




1A-2914


PITCHER UNIT ASSEMBLY (OFFICIAL BASEBALL)

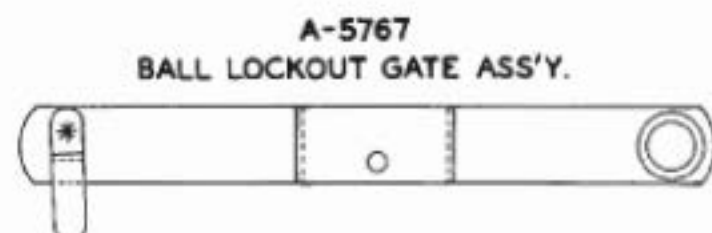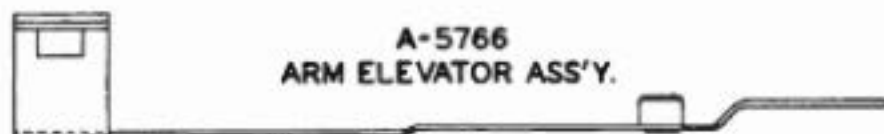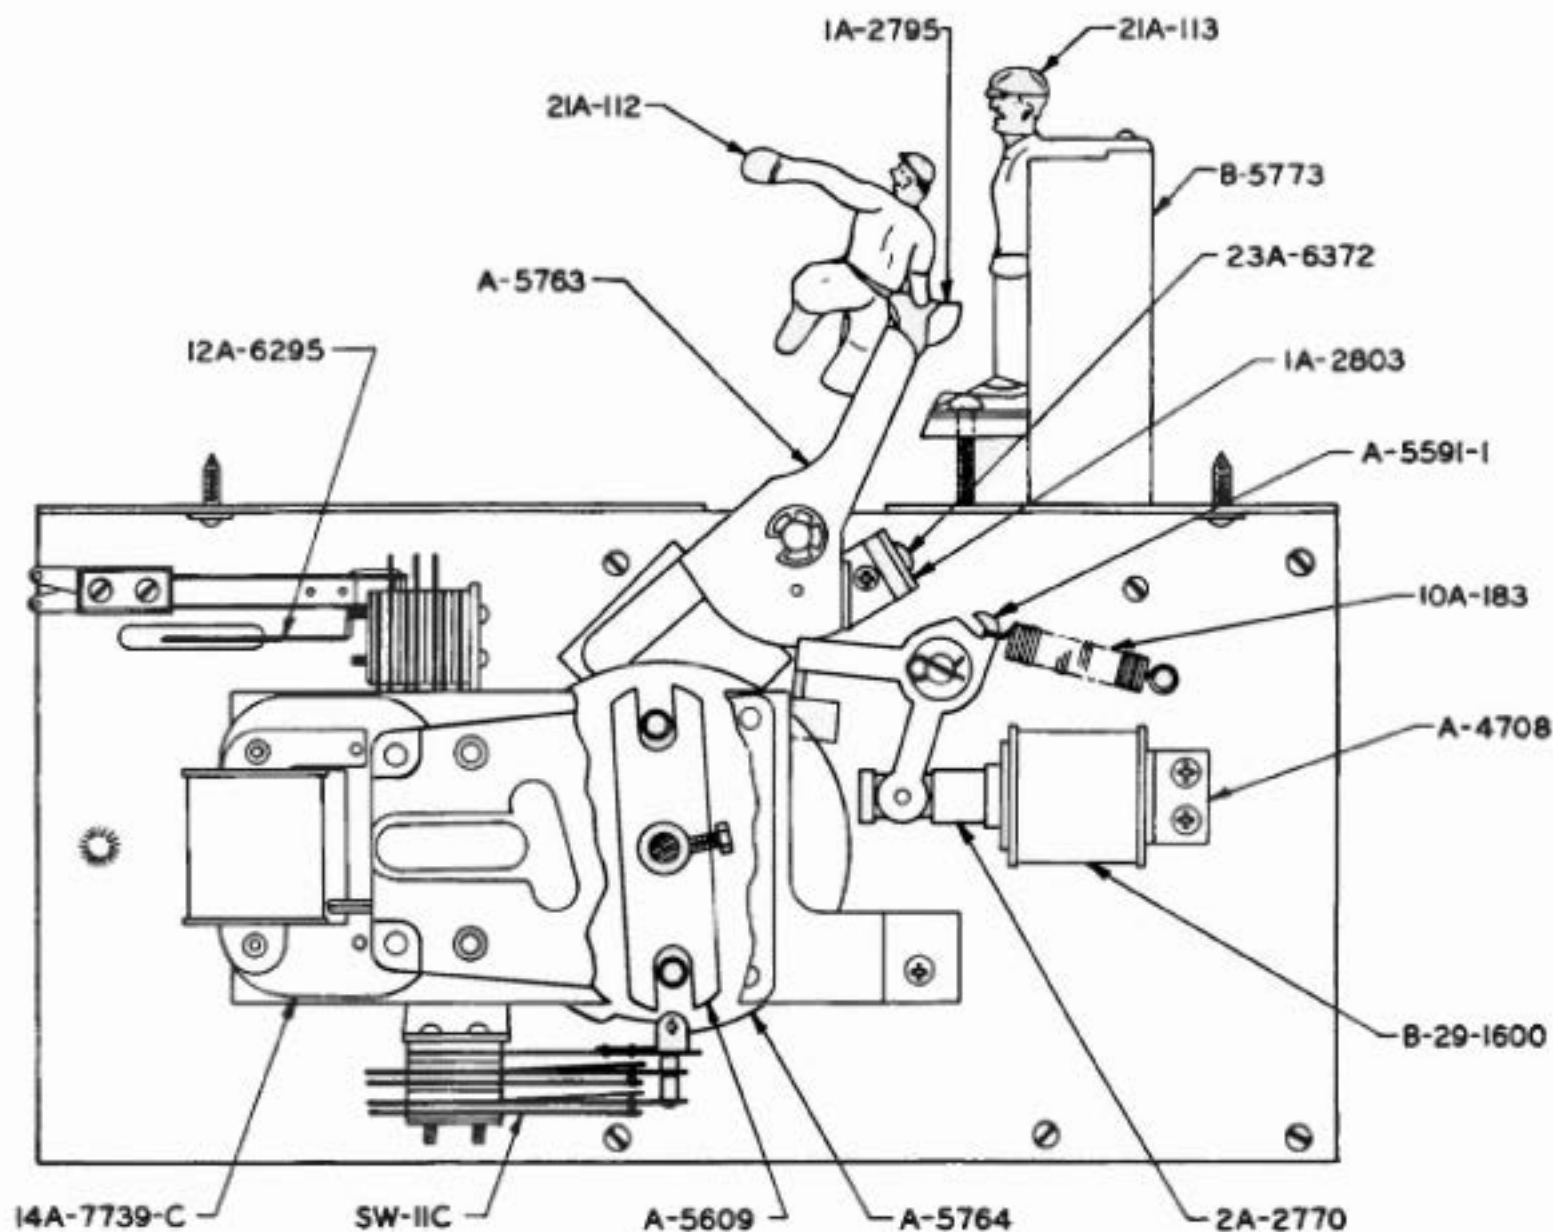



C-4775
BALL TRACK ASSEMBLY

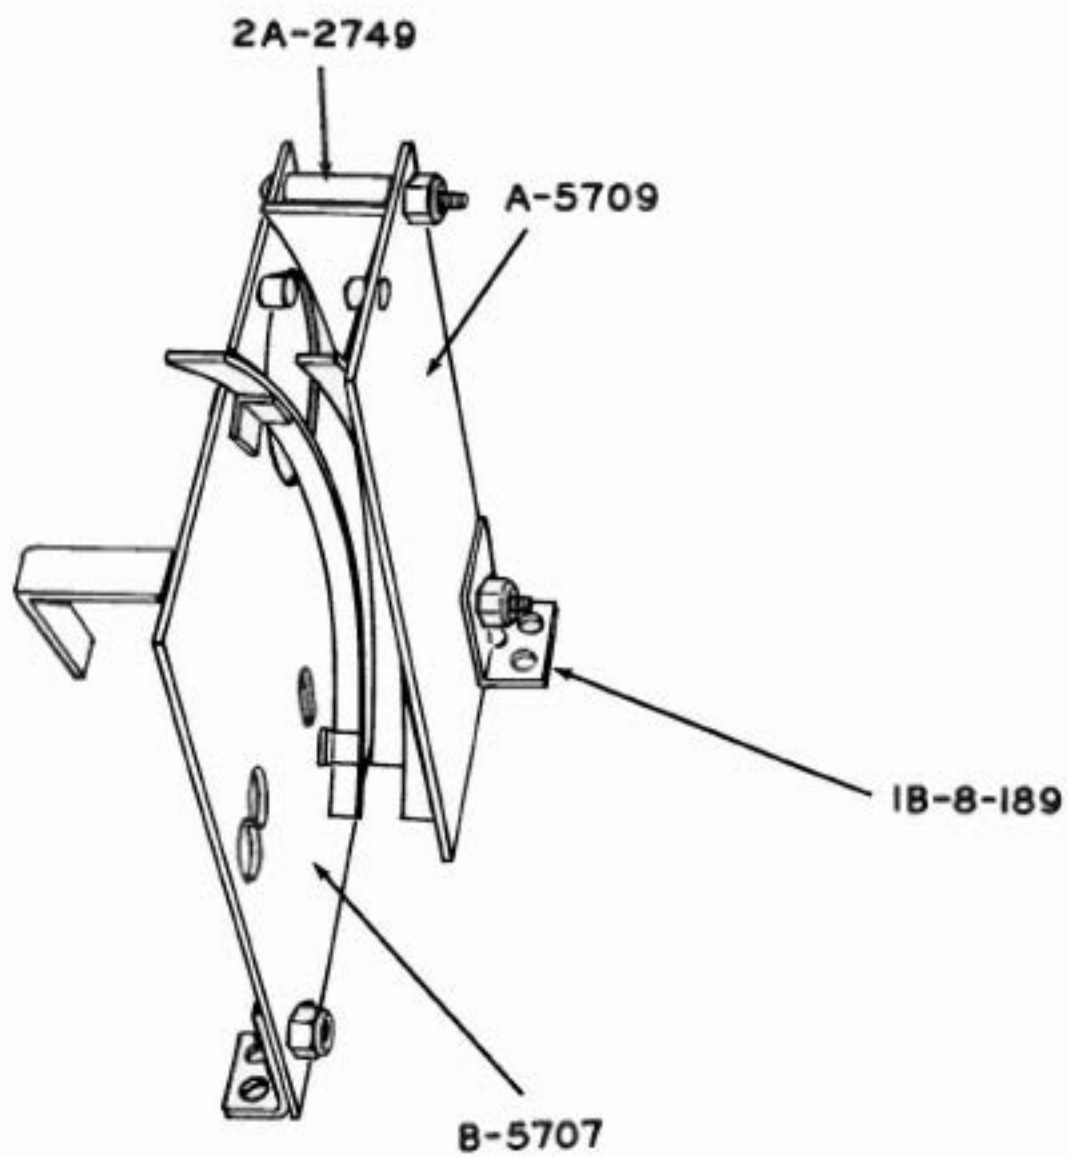

E-5613 **PITCHER UNIT ASSEMBLY**

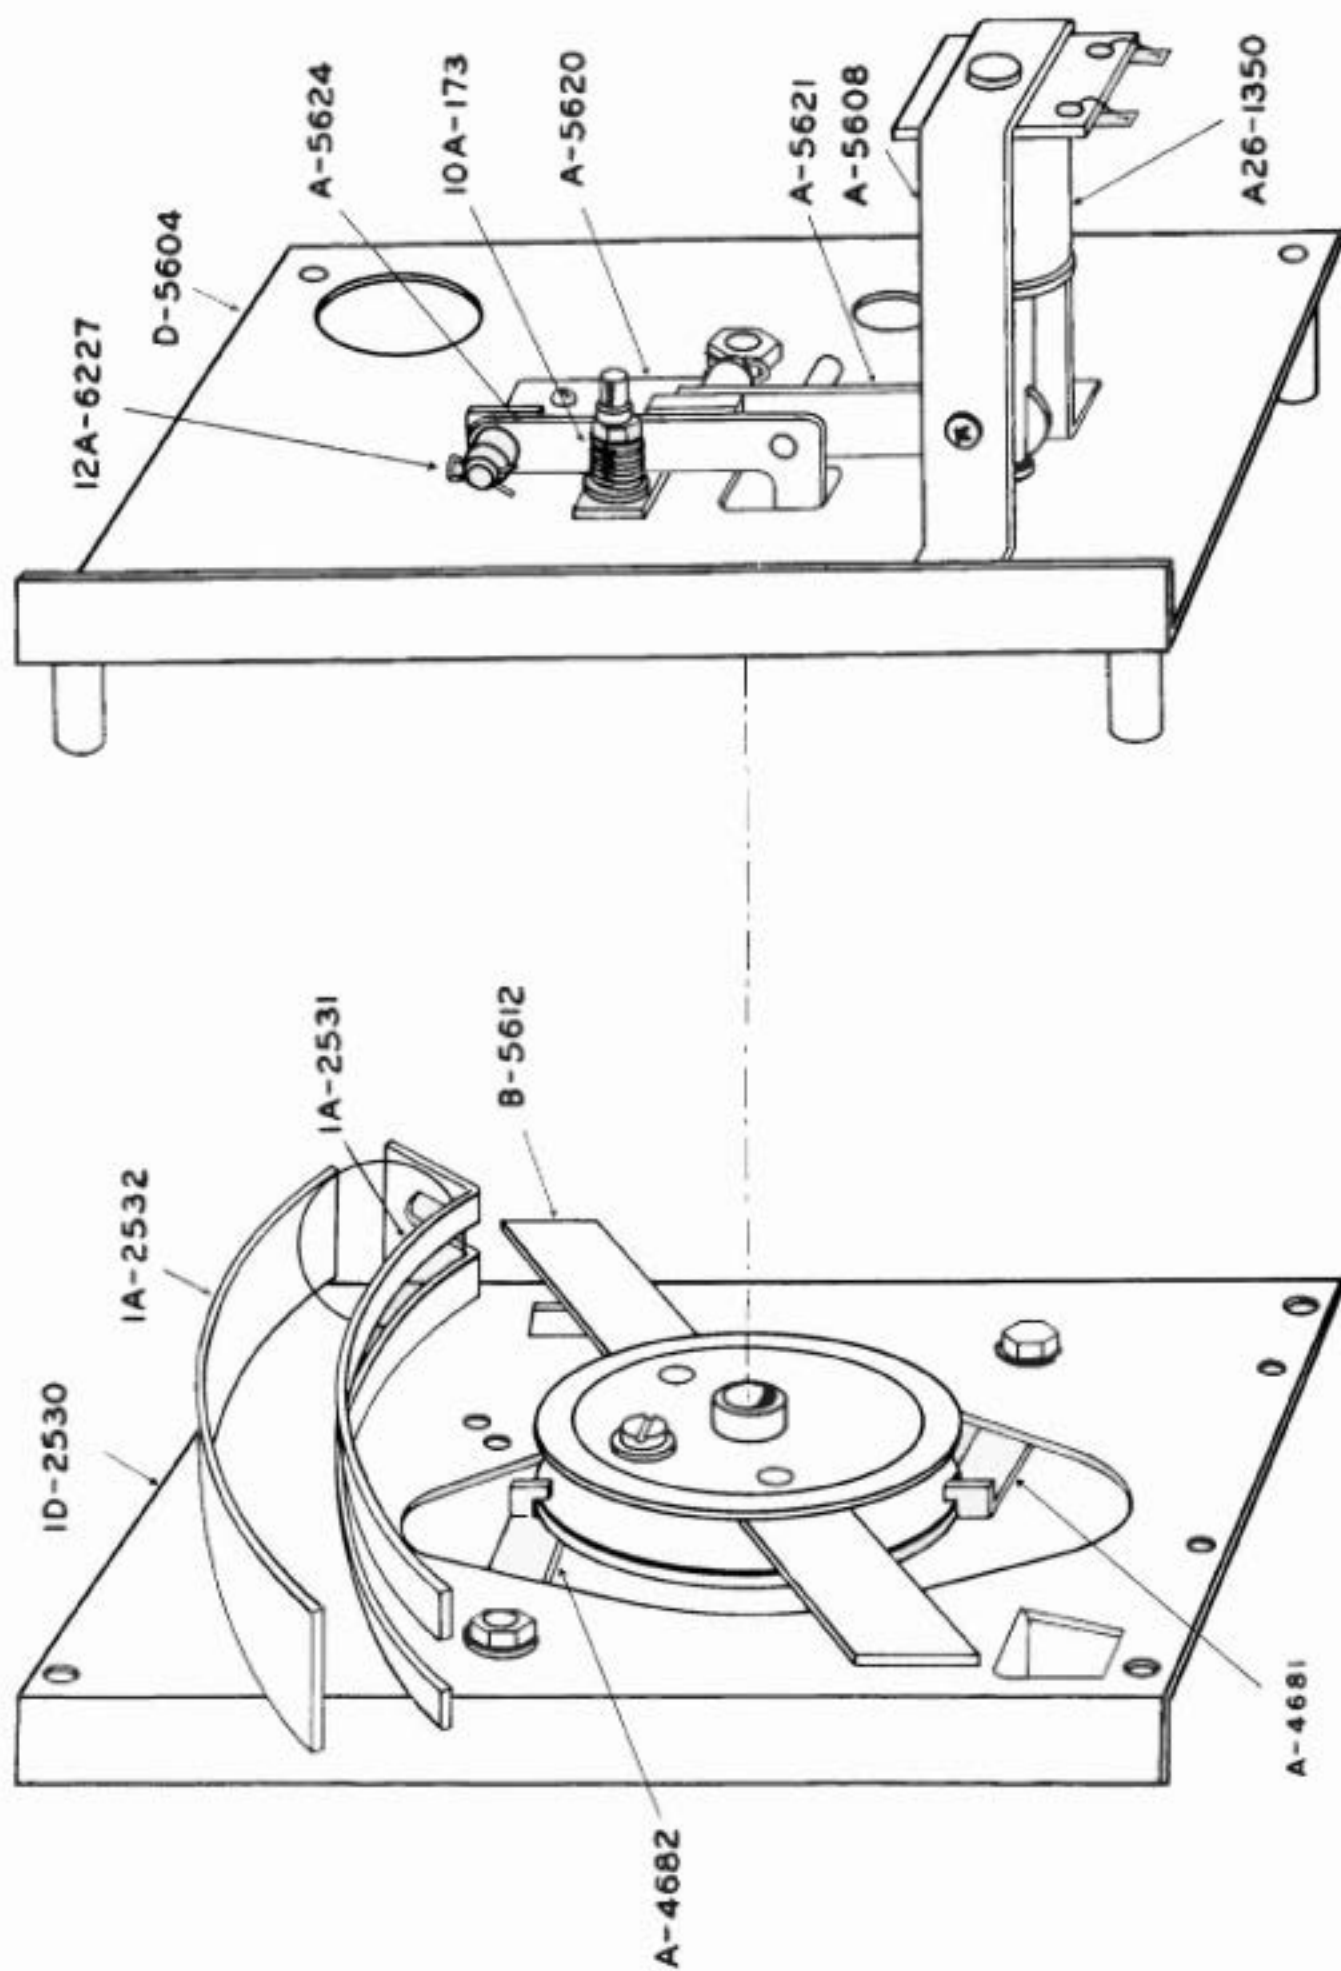


PITCHER UNIT ASSEMBLY E-5613

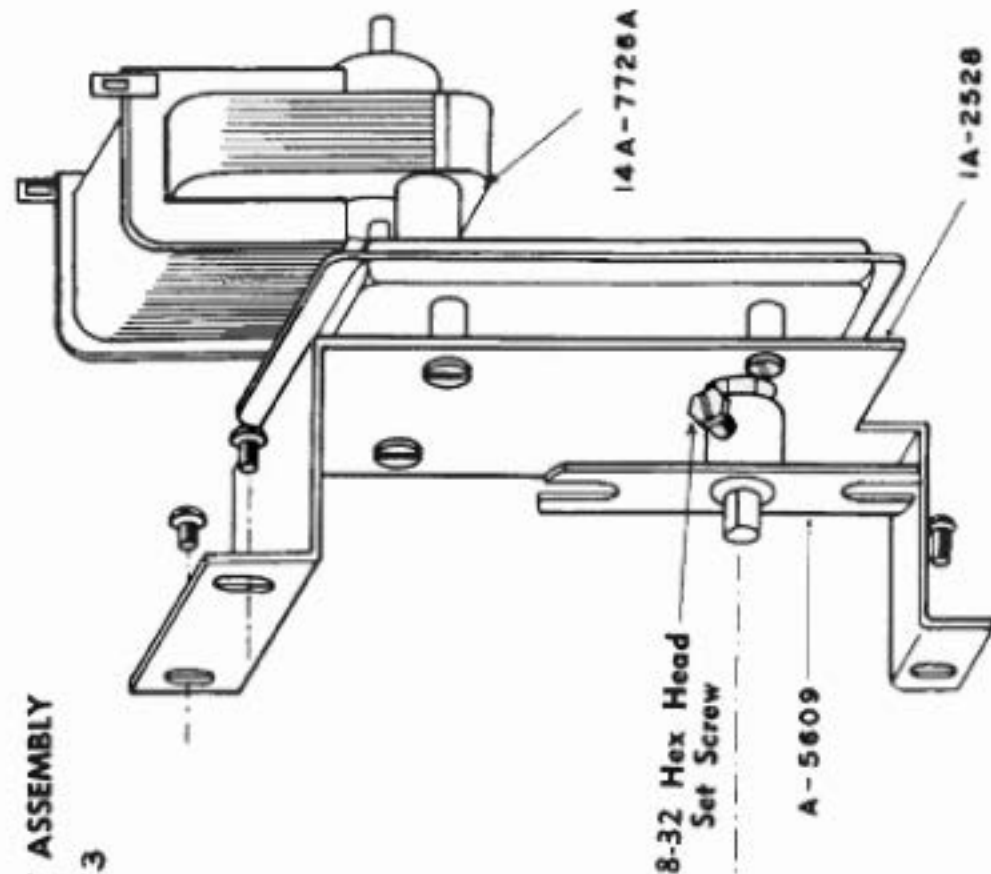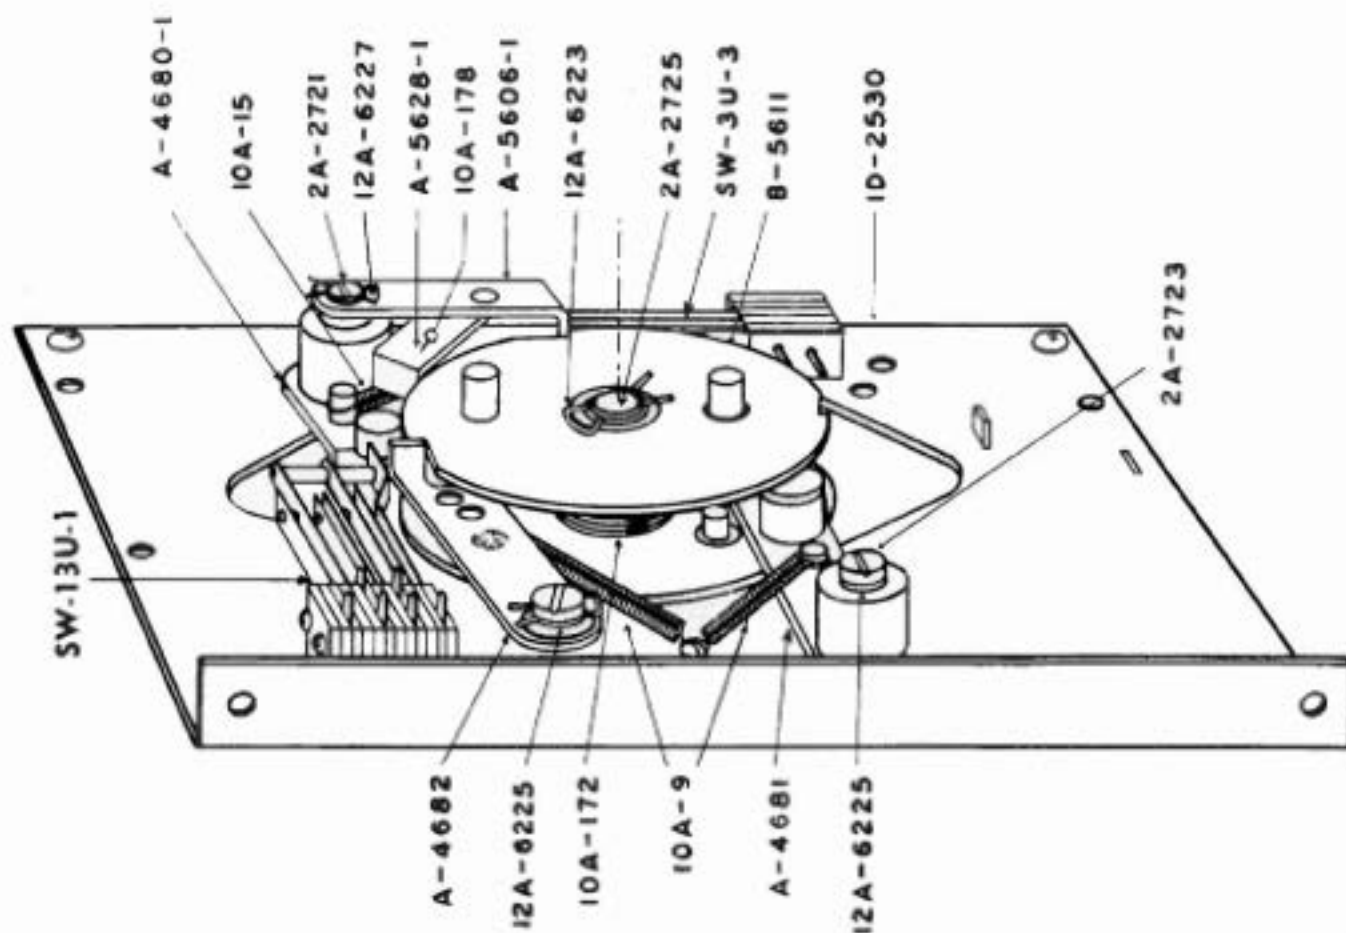

PITCHER MOTORS

1957 BASEBALL	—	14A-7704
SHORT-STOP	—	14A-7726
PINCH HITTER	—	14A-7726
OFFICIAL BASEBALL	—	14A-7739C
BATTING CHAMP	—	14A-7726
EXTRA INNING	—	14A-7744
1962 WORLD SERIES	—	14A-7744
BIG INNING	—	14A-7752
1963 MAJOR LEAGUE	—	14A-7752

COMPLETE PITCHER UNIT D-6322

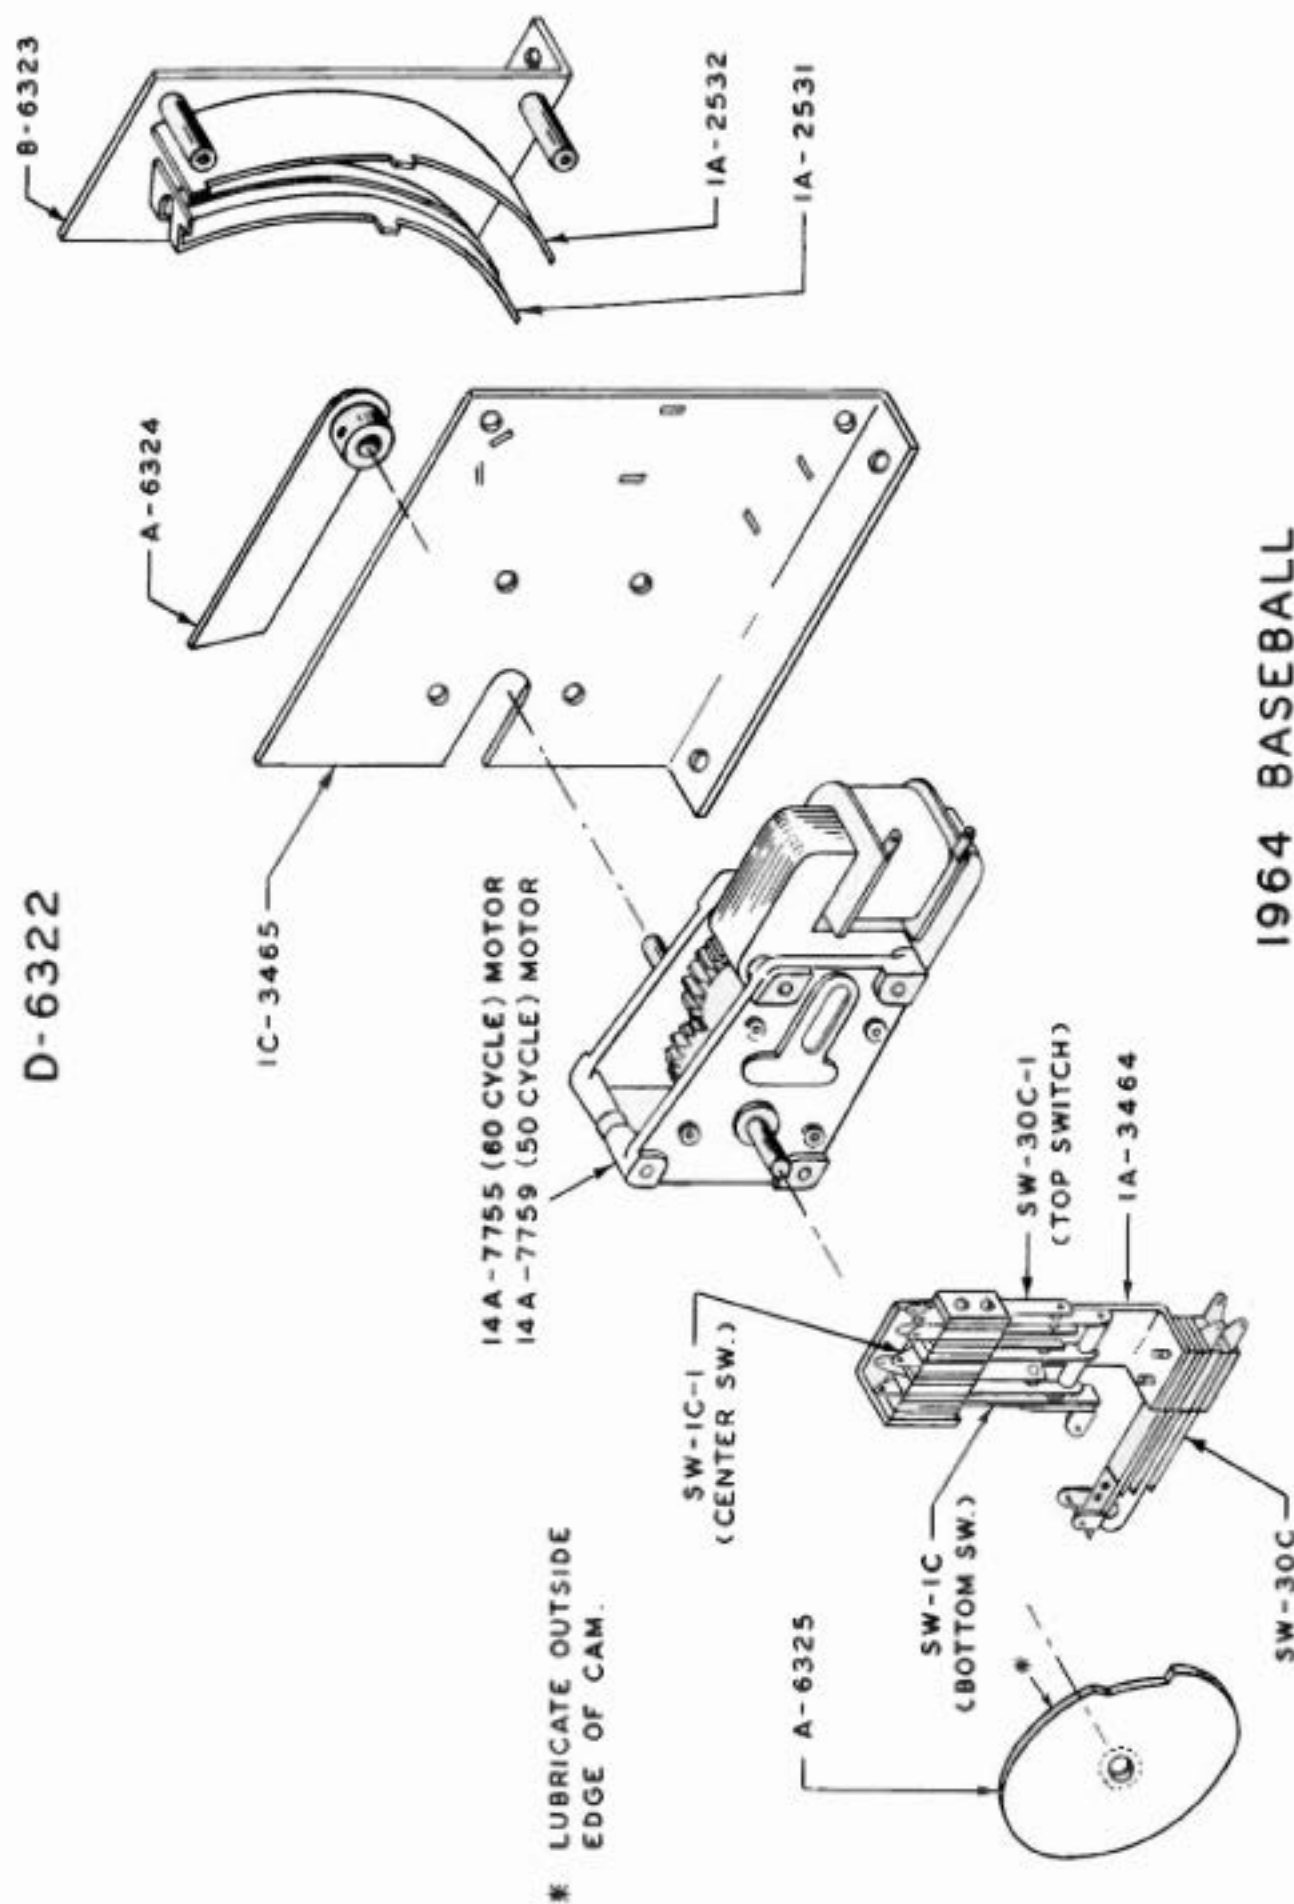


1964 BASEBALL
GRAND SLAM & 10TH INNING

BATTER UNIT ASSEMBLY

C-5161-2 --- USED ON
C-5161-3 --- USED ON
C-5161-4 --- USED ON
C-5161-4 --- USED ON

OFFICIAL BASEBALL
BATting CHAMP
1962 WORLD SERIES & EXTRA INNING
1963 MAJOR LEAGUE & BIG INNING

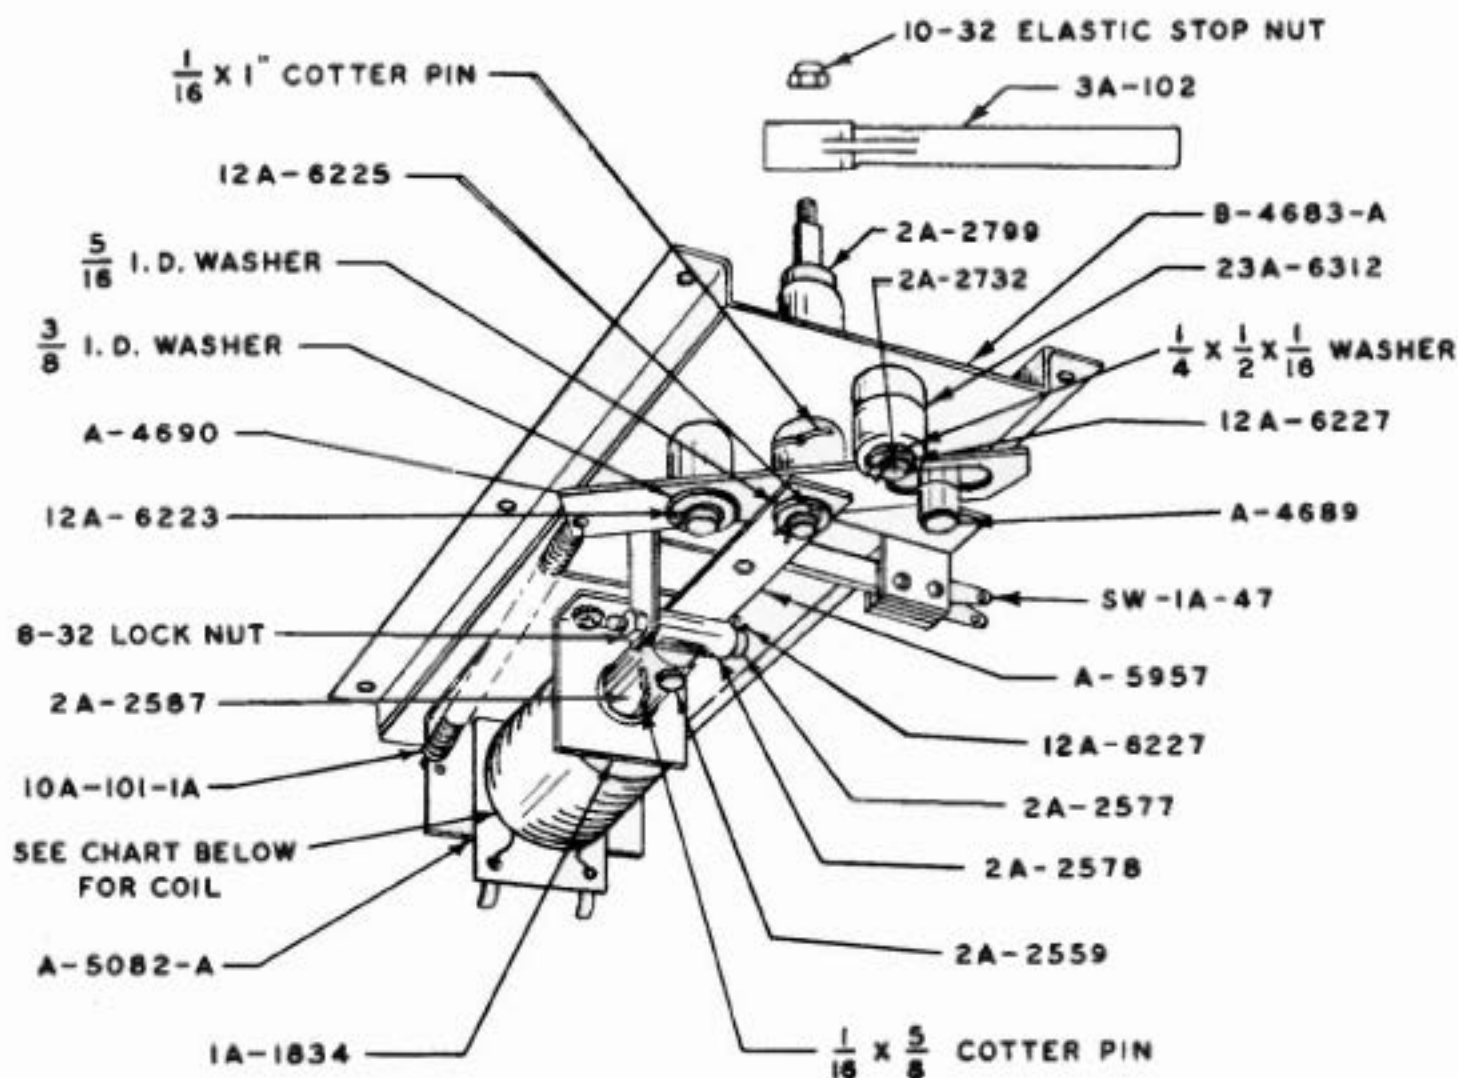


BAT COIL

OFFICIAL BASEBALL
BATting CHAMP
EXTRA INNING
1962 WORLD SERIES
BIG INNING
1963 MAJOR LEAGUE


USE -- H-22-700
USE -- H-24-1150
USE -- H-23-870
USE -- H-23-870
USE -- H-23-870
USE -- H-23-870

BATTER UNIT ASSEMBLY

C-5161 ----- USED ON 1957 BASEBALL
C-5161-1 ----- USED ON PINCH HITTER

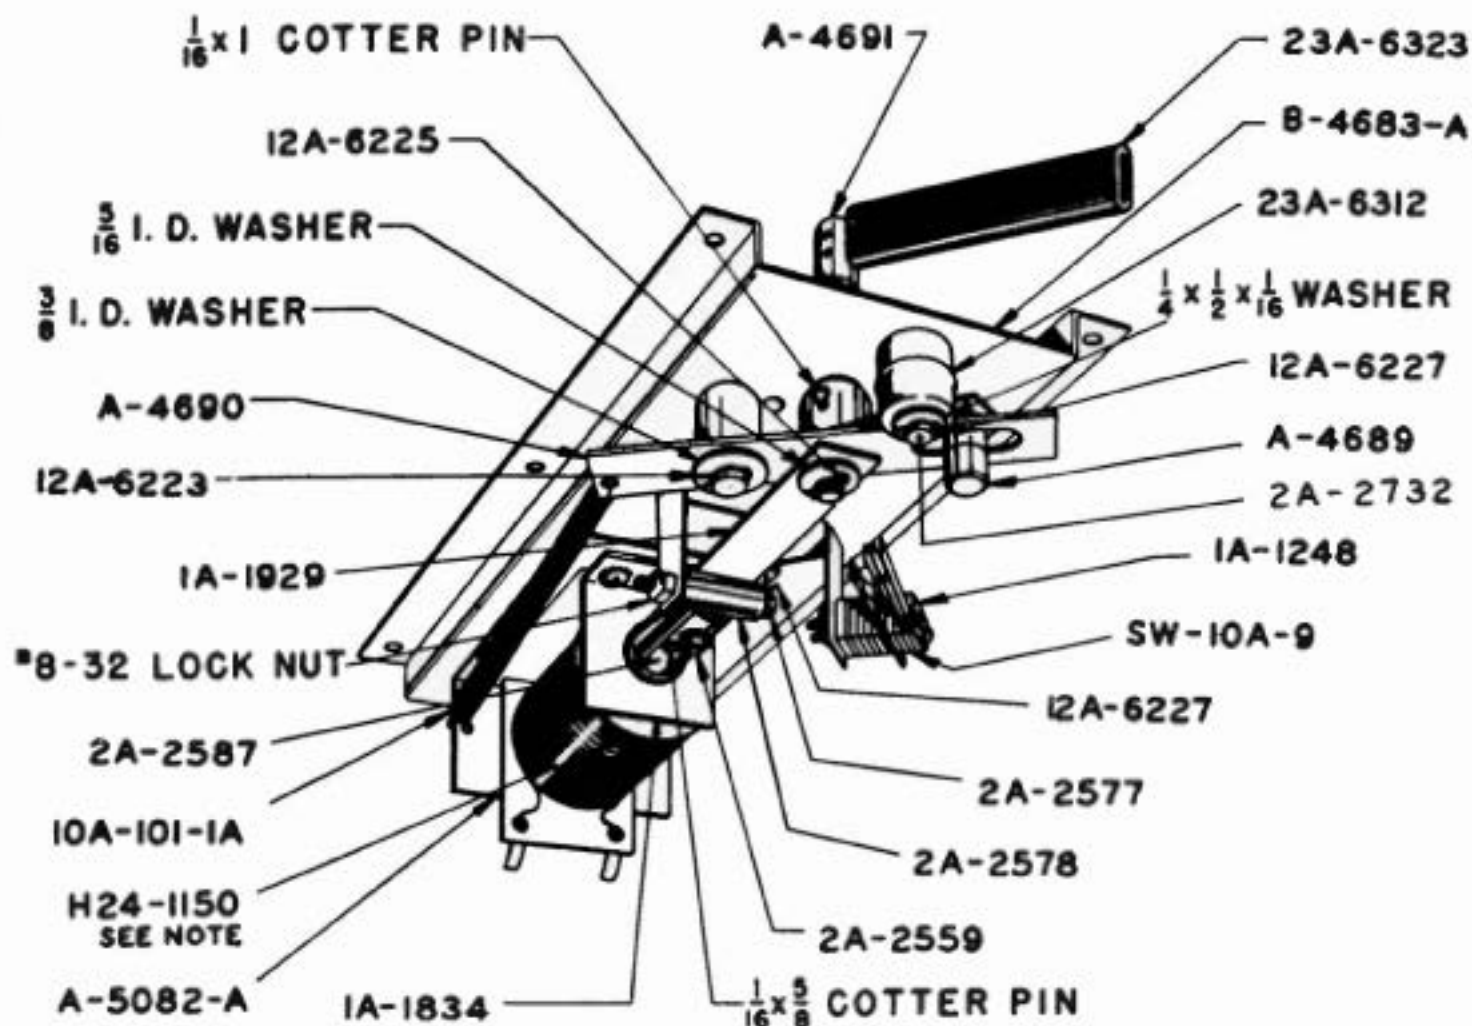


PLASTIC BAT
3A-102

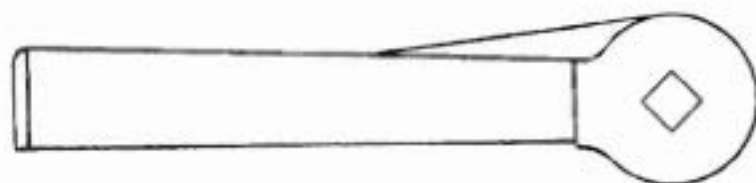


IMPORTANT

ITEM A-4691 USED ON 1957 BASEBALL & PINCH HITTER. REPLACED BY SHAFT 2A-2799 & 3A-102 ON OFFICIAL BASEBALL, BATTING CHAMP, EXTRA INNING, 1962 WORLD SERIES, BIG INNING & 1963 MAJOR LEAGUE.

C-516I-64 COMPLETE BATTER UNIT FOR GRAND SLAM & 10TH INNING

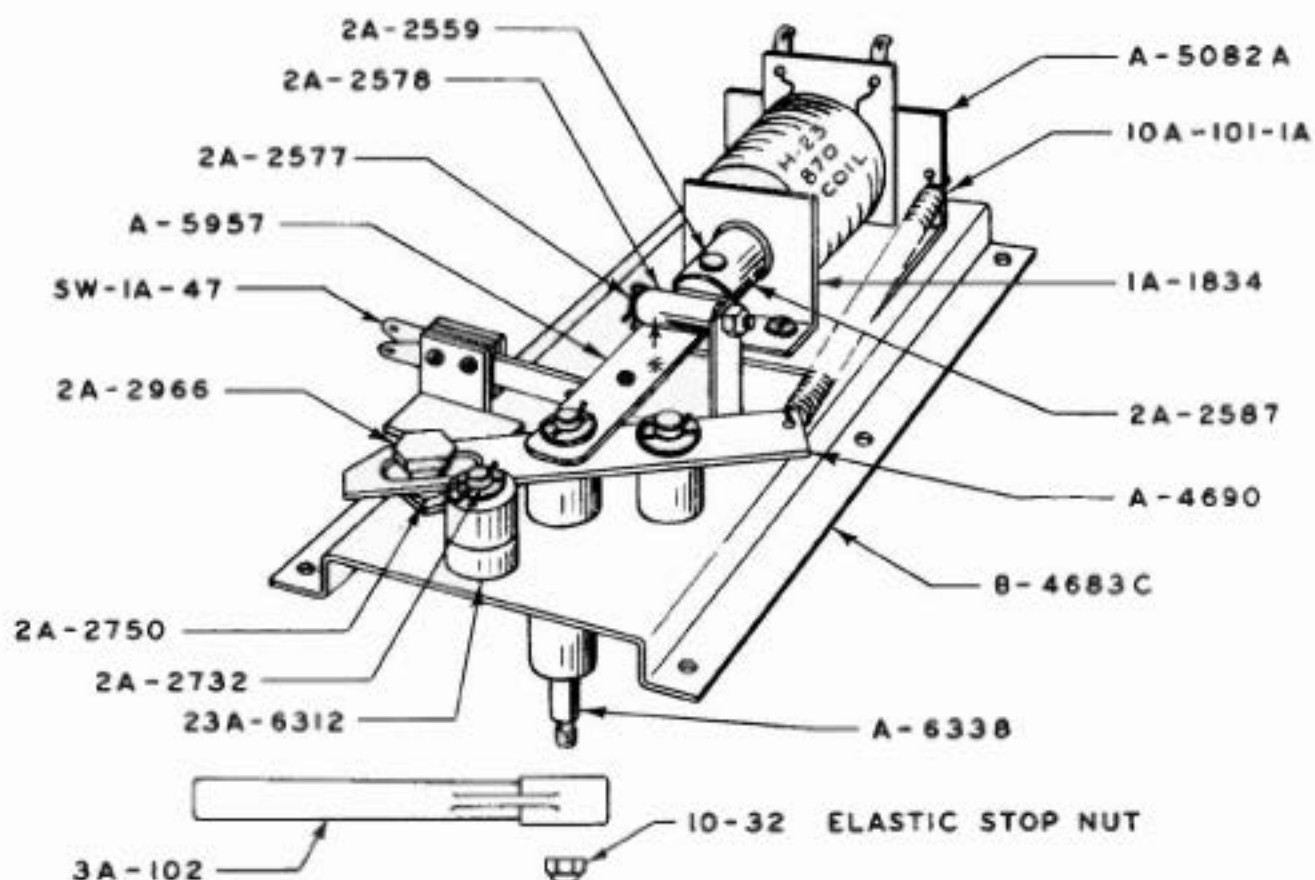


BATTER UNIT PARTS

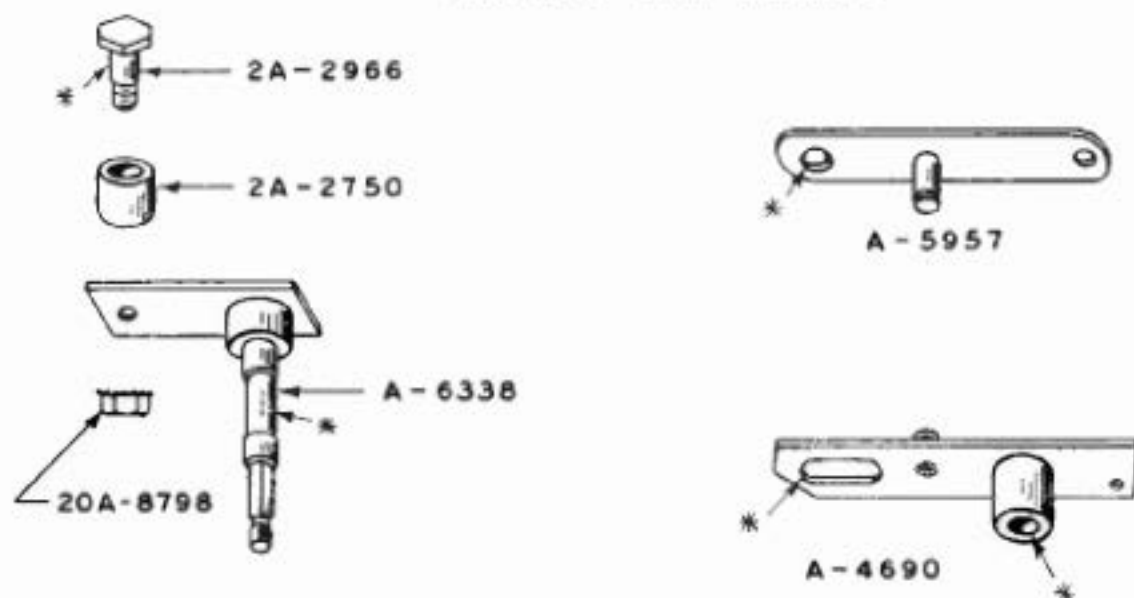


* LUBRICATE AT POINTS INDICATED


B-5625
BAT HANDLE LEVER ASSEMBLY

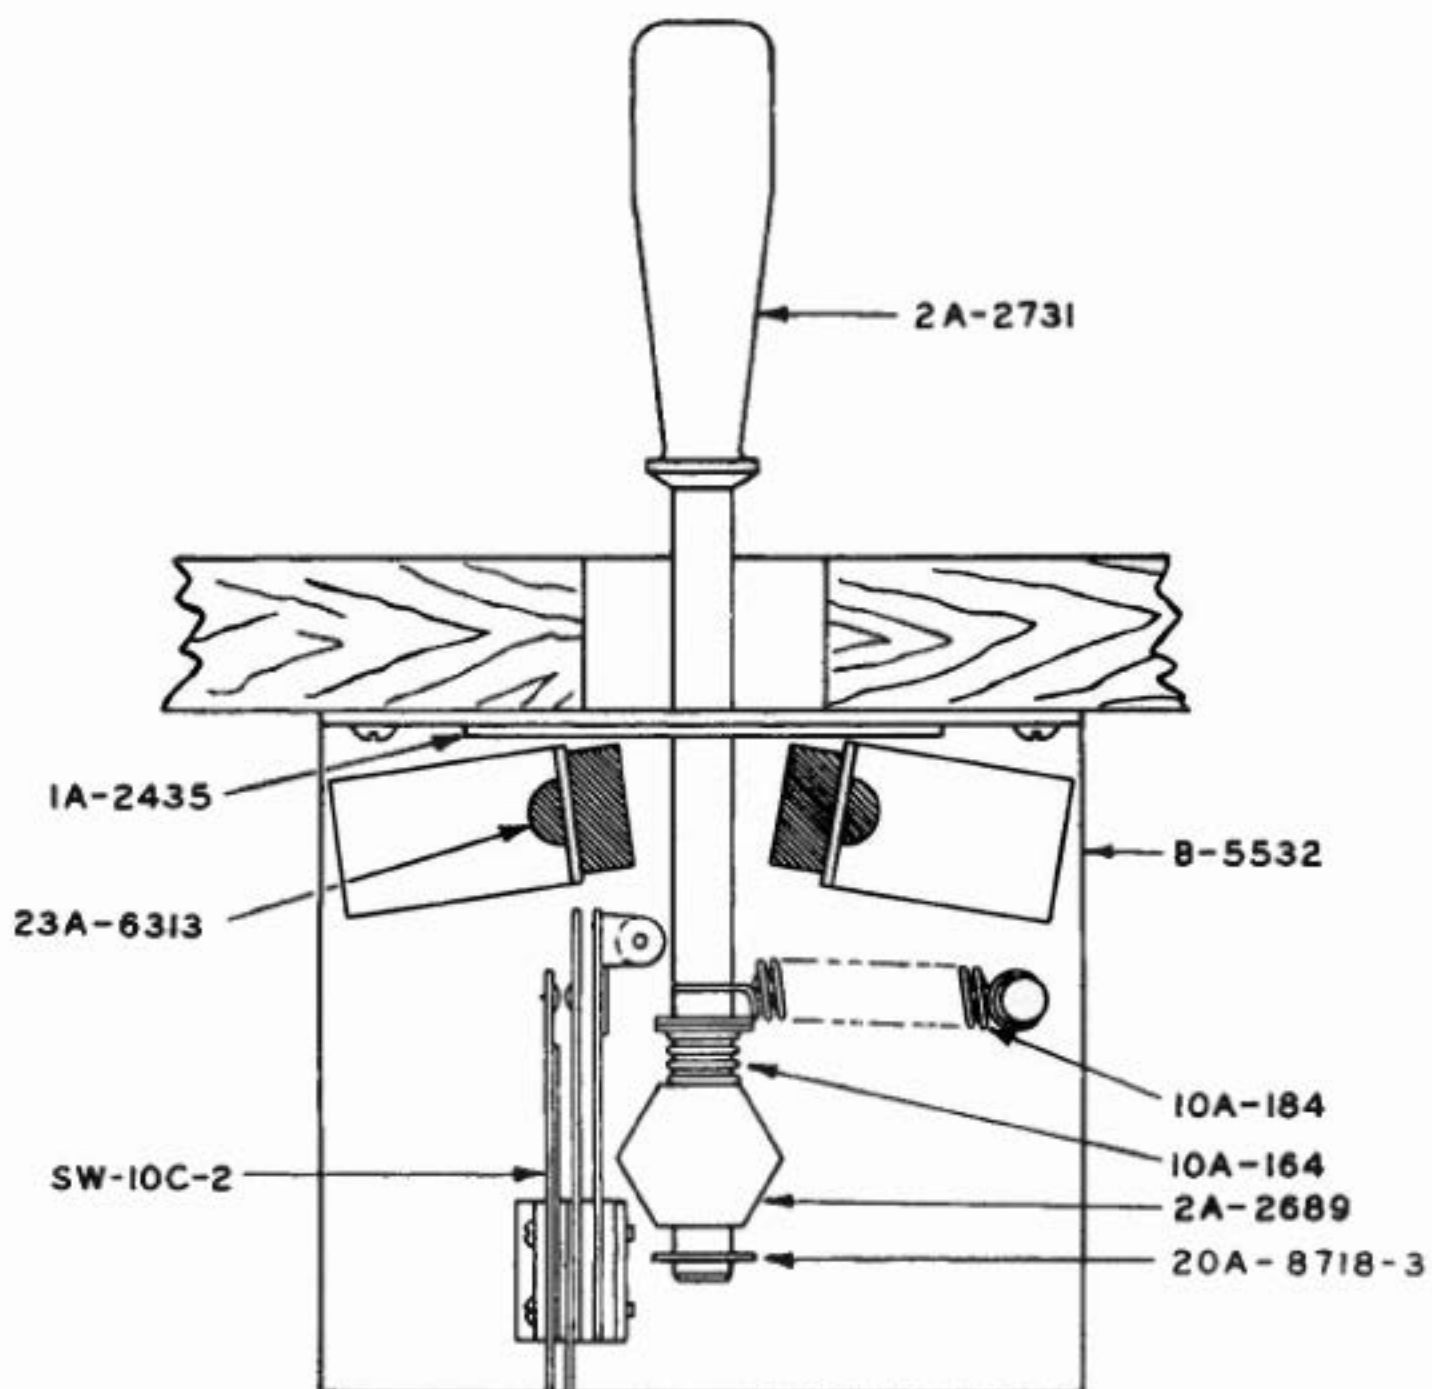

D-5431
BAT HANDLE ASSEMBLY (COMPLETE) 1957 BASEBALL

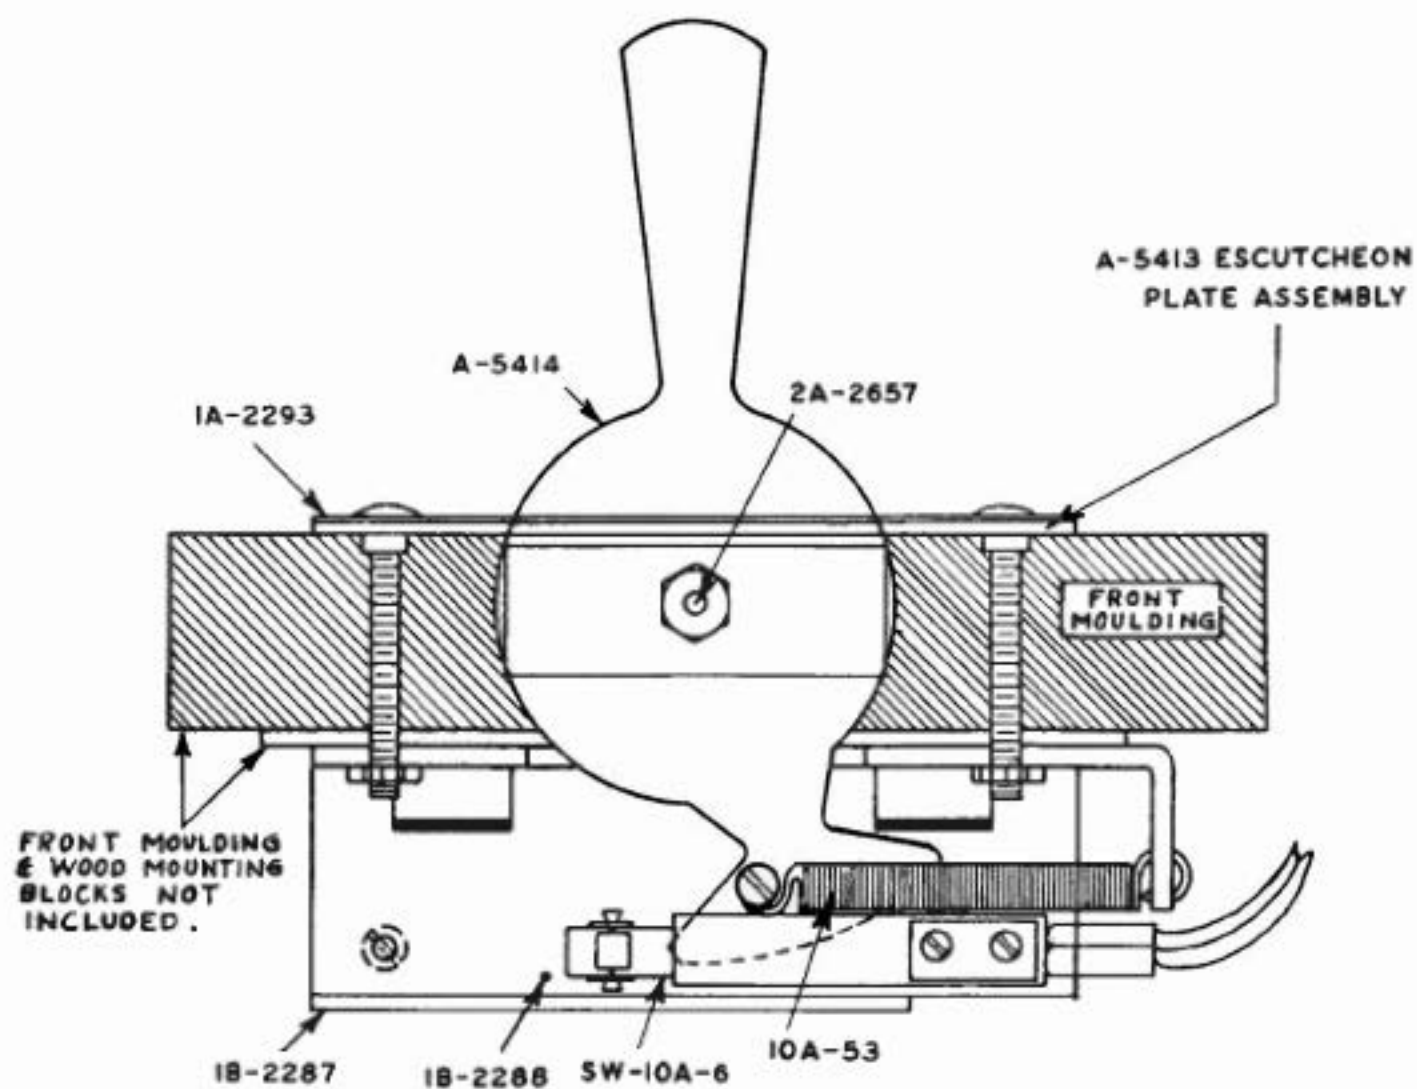

E-5420 **MAN RUNNING UNIT ASSEMBLY**

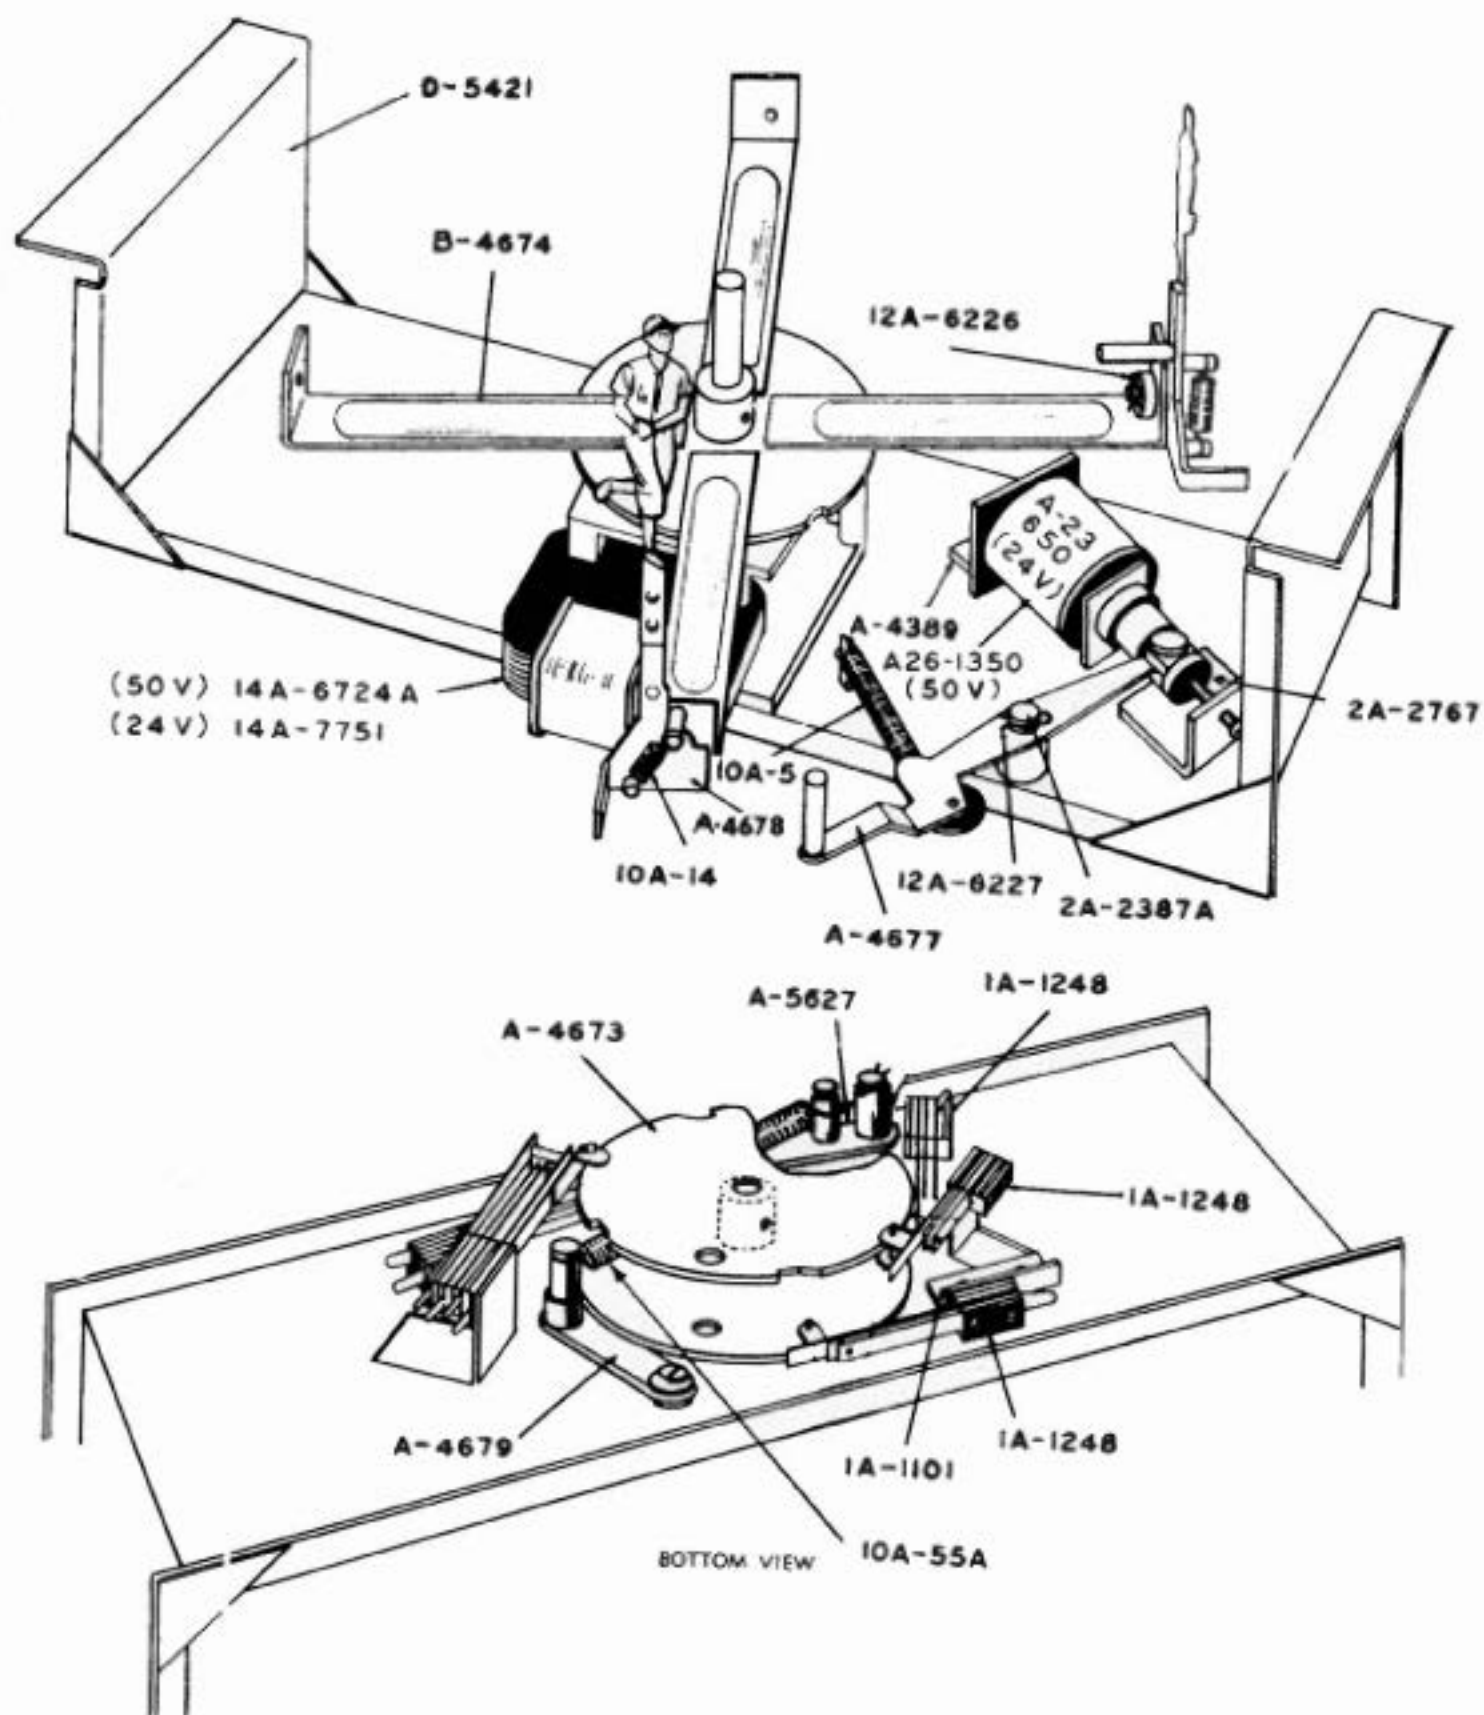



A-4678
BASE RUNNER ASS'Y.



A-4779
CATCHER



A-4779-A
UMPIRE



A-4779-B
BATTER



A-4779-C
PITCHER



A-4779-D
FIRST BASEMAN



A-4779-E
SECOND BASEMAN



1A-2768
BASEBALL HOLE DEFLECTOR



A-4779-F
SHORT STOP



A-4779-G
THIRD BASEMAN

TARGET & BRACKET ASSEMBLY B-6276




TARGET (ONLY)

- { 30C-285-1 TRIPLE
- { 30C-285-2 HOME RUN


B-6276-1 TRIPLE

B-6276-2 HOME RUN

(CHICAGO MODEL ONLY)

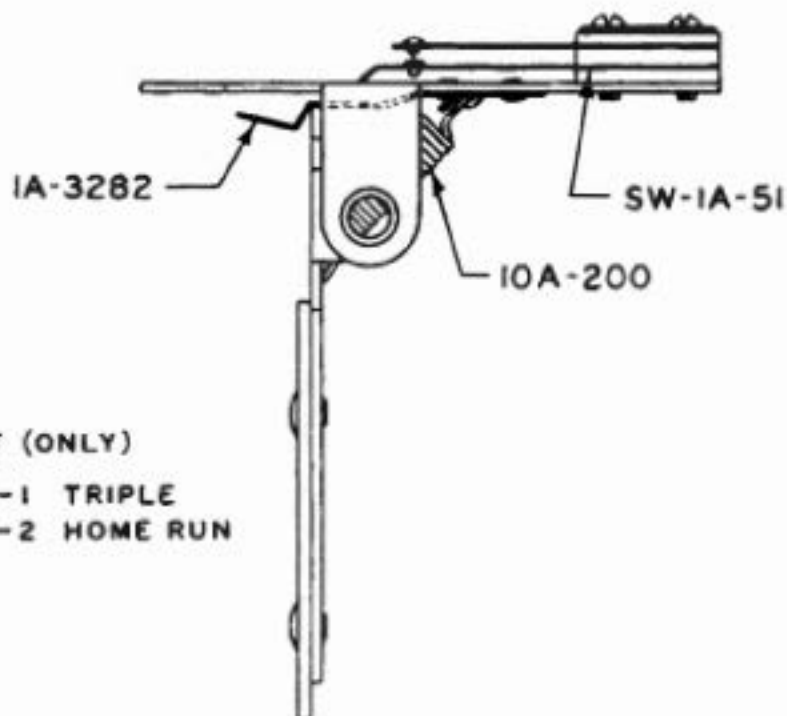

B-6275

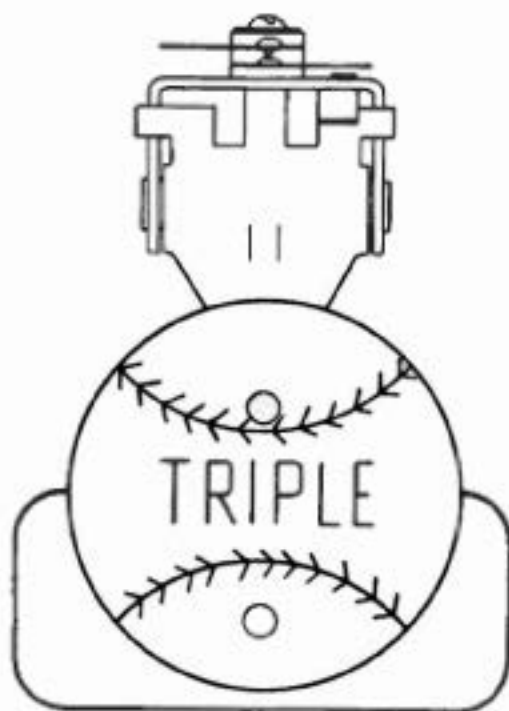

TARGET (ONLY)


- { 30C-286-1 OUT
- { 30C-286-2 SINGLE
- { 30C-286-3 DOUBLE
- { 30C-286-4 TRIPLE

B-6275-1 OUT

B-6275-2 SINGLE

B-6275-3 DOUBLE


78 B-6275-4 TRIPLE

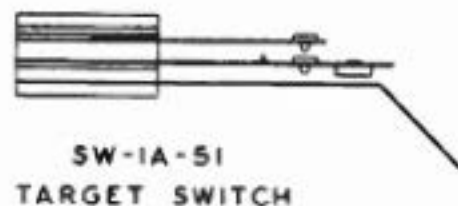

SW-1A-51
TARGET SWITCH



SW-1A-56
"BULLS EYE" TARGET SW.

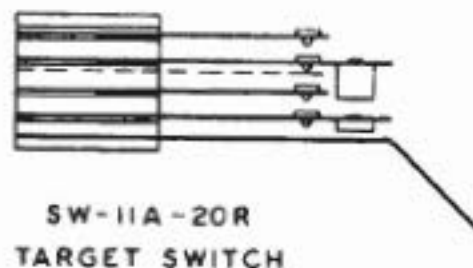


SW-11A-20R
TARGET SWITCH




SW-3A
REPLAY BUTTON SW.


D-6278 COMPLETE TARGET UNIT FOR 1963 MAJOR LEAGUE AND BIG INNING

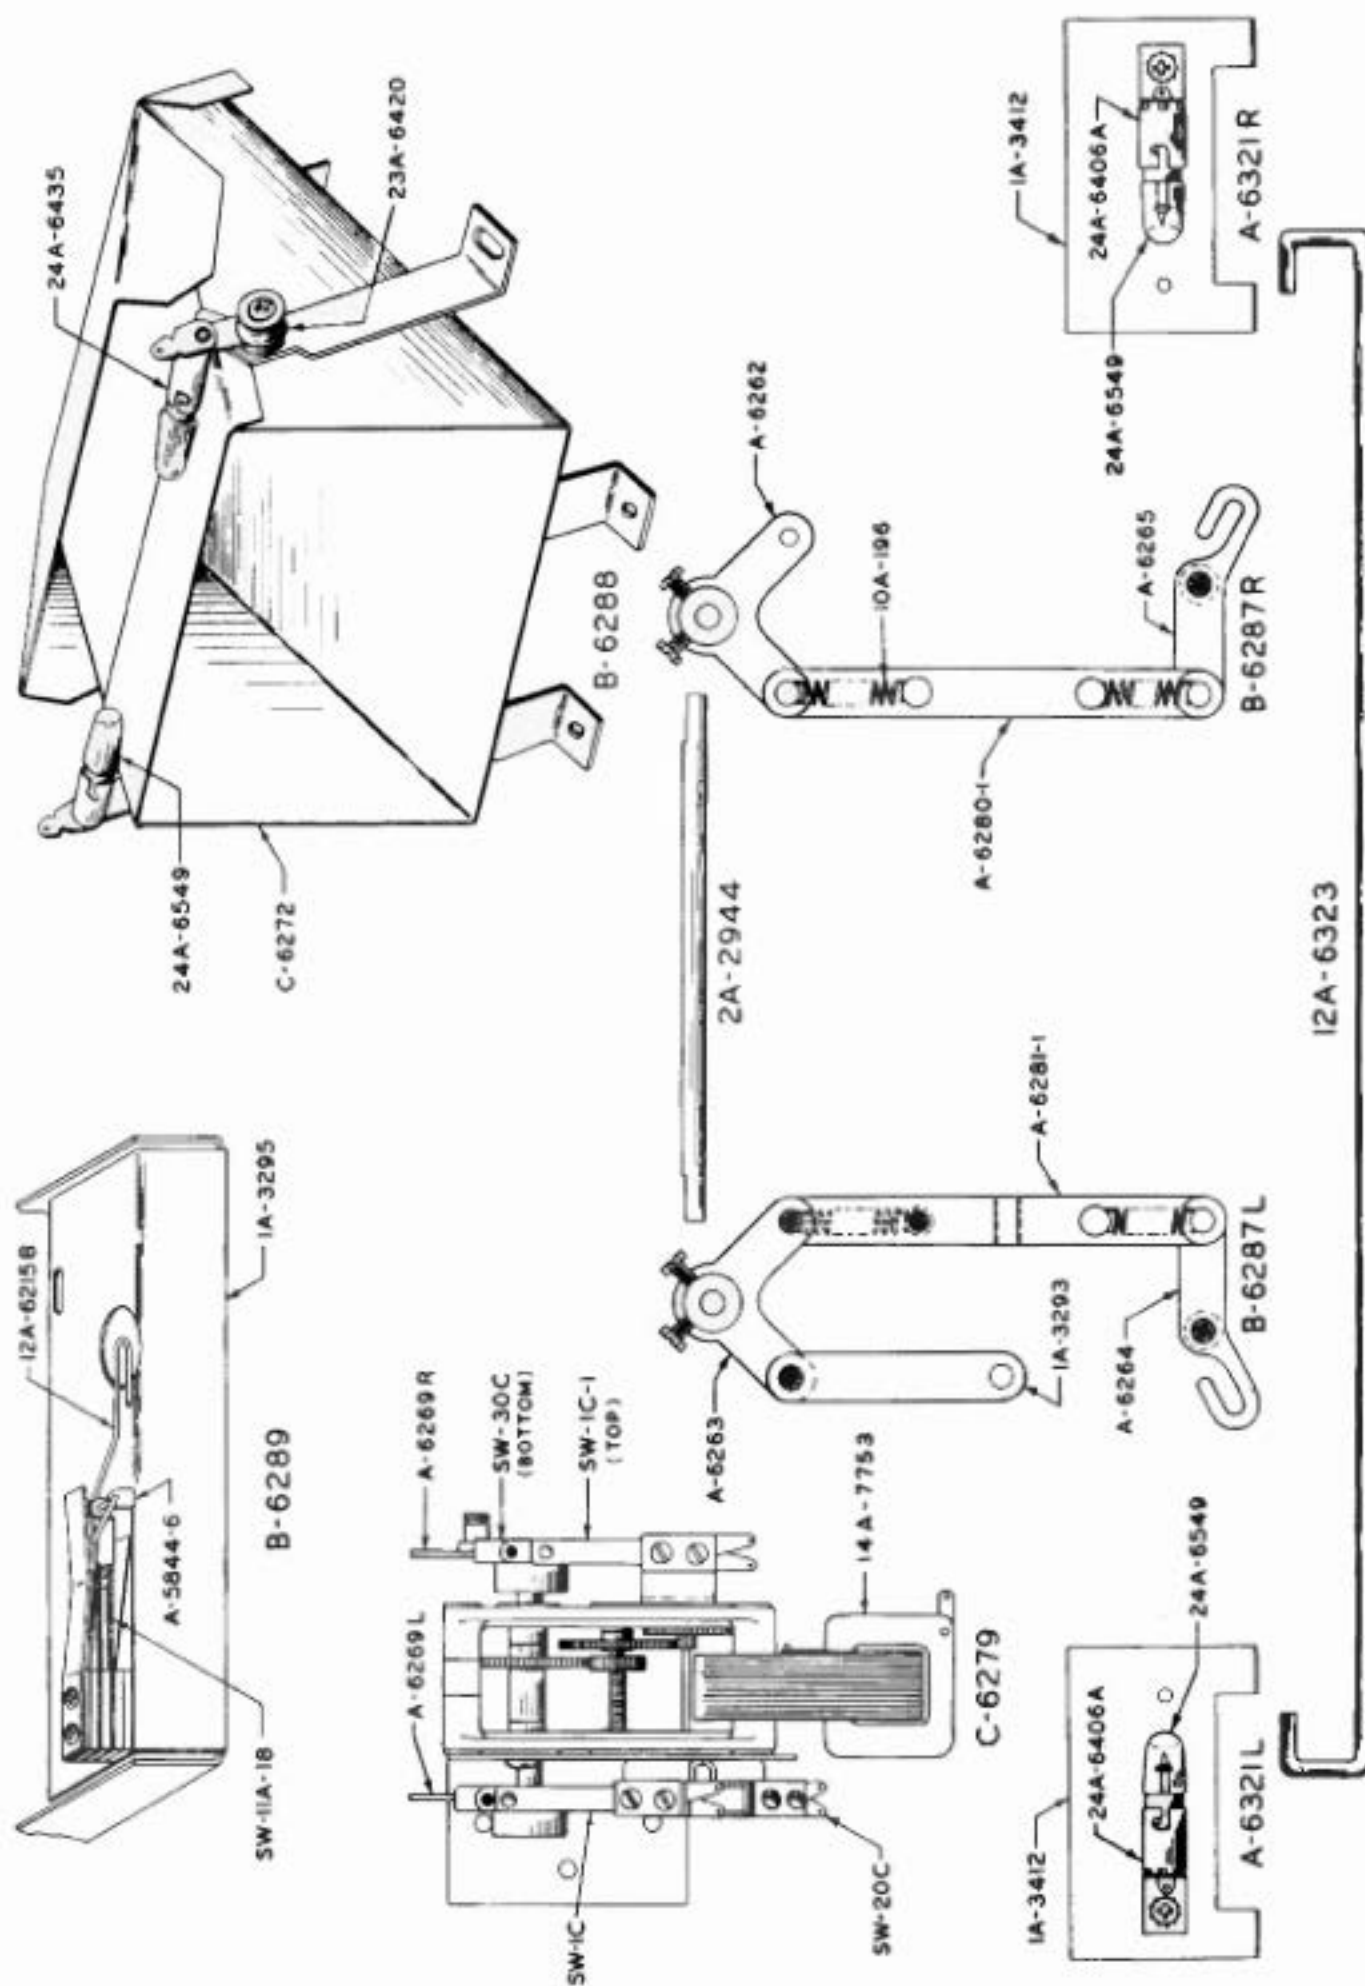

D-6336 COMPLETE TARGET UNIT FOR "GRAND SLAM"

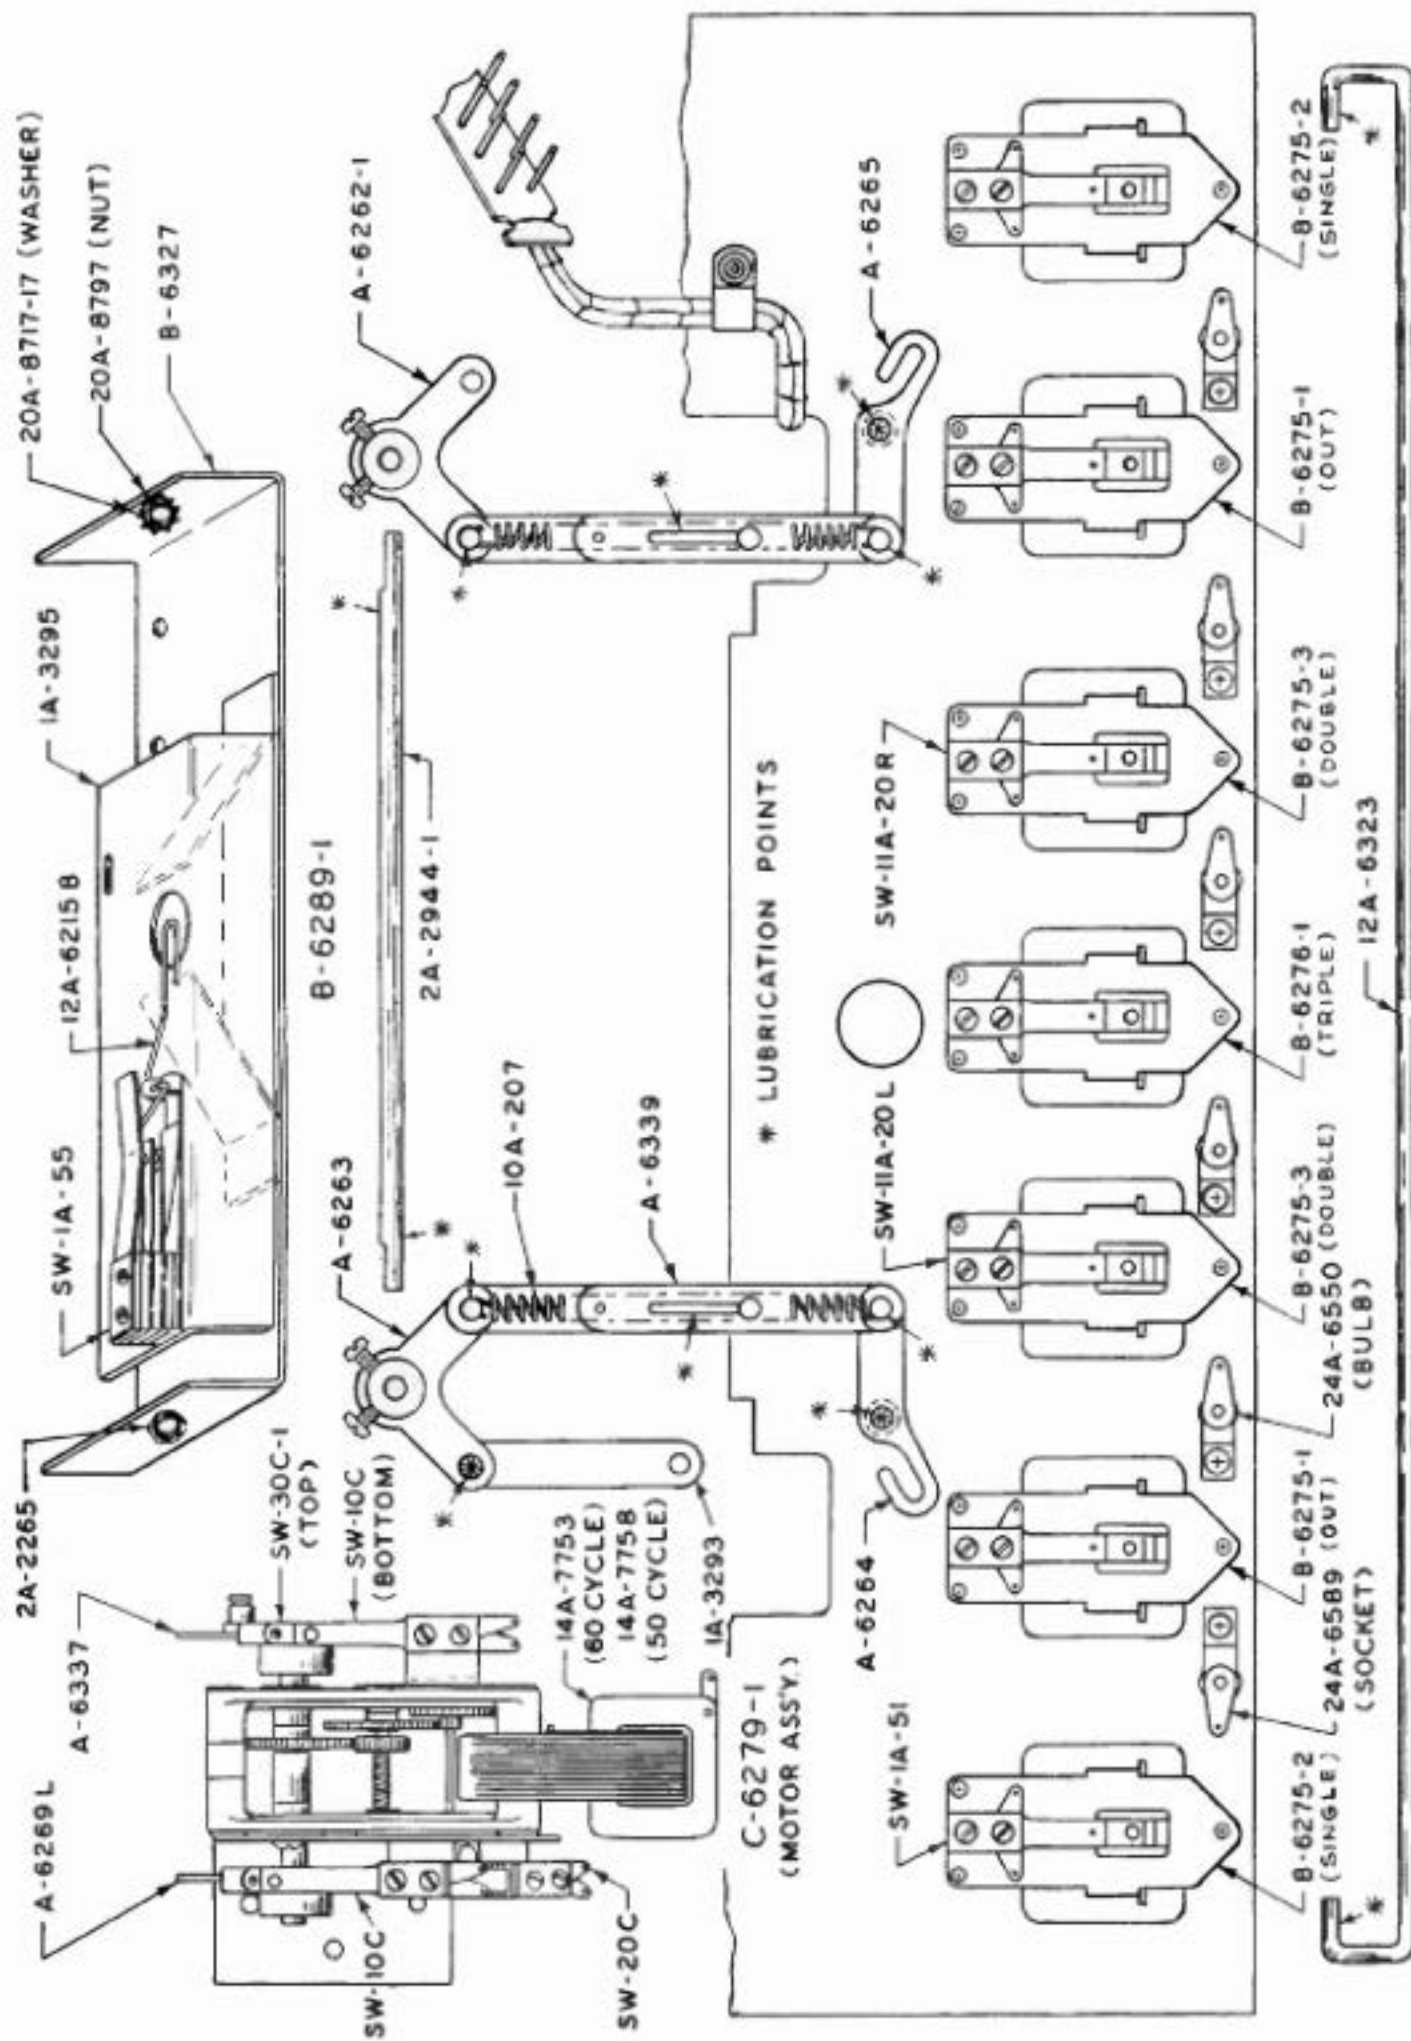


"BULLS EYE" C-6330 HOME RUN TARGET UNIT FOR "GRAND SLAM"

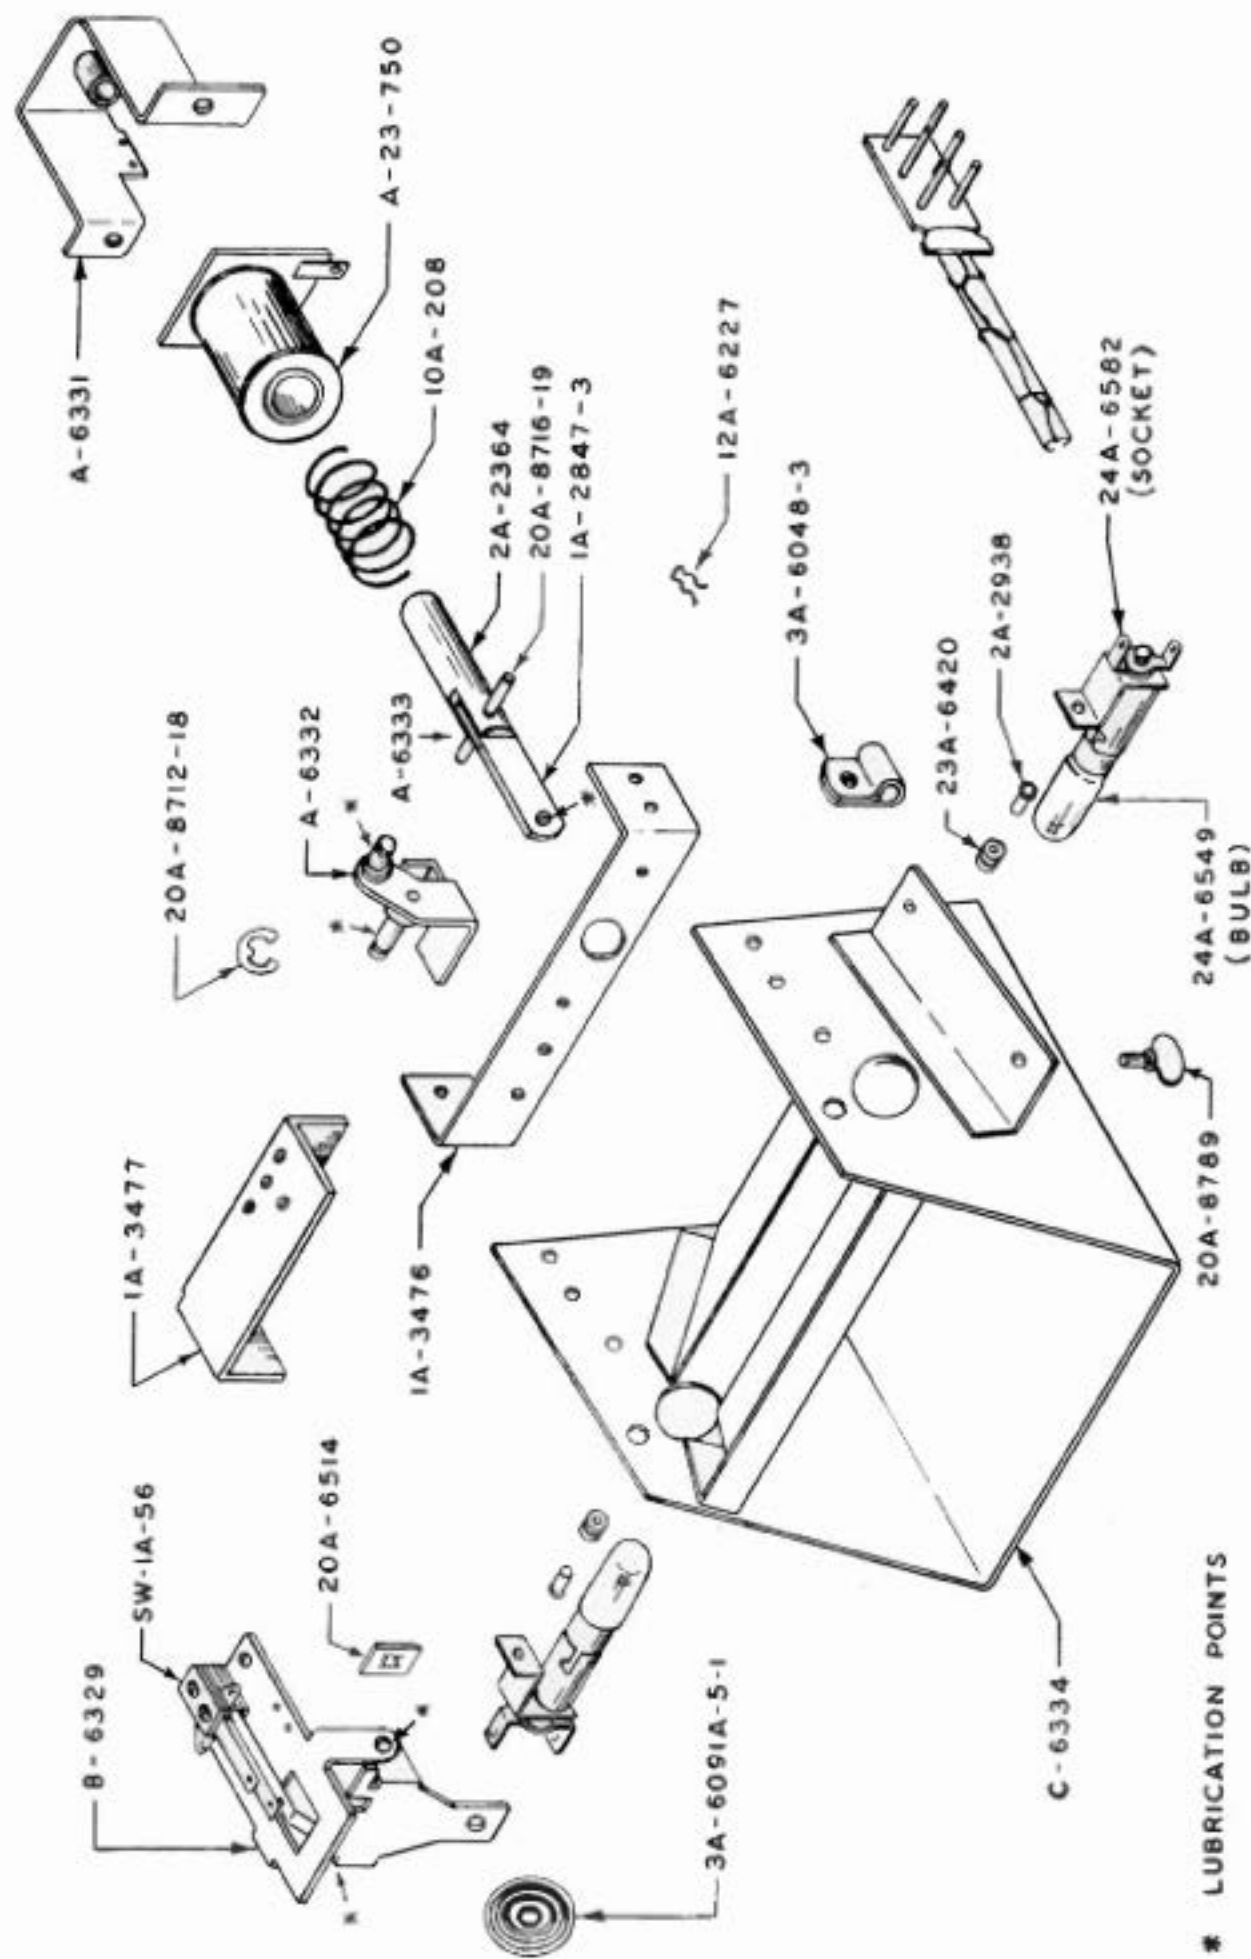

D-6340 MOTOR UNIT (NEW STYLE) FOR GRAND SLAM & 10TH INNING.

POSITION	CAM NO.
J	1A-3440
A-C-E-G	1A-3441-1
B-D-F-H	1A-3441-2

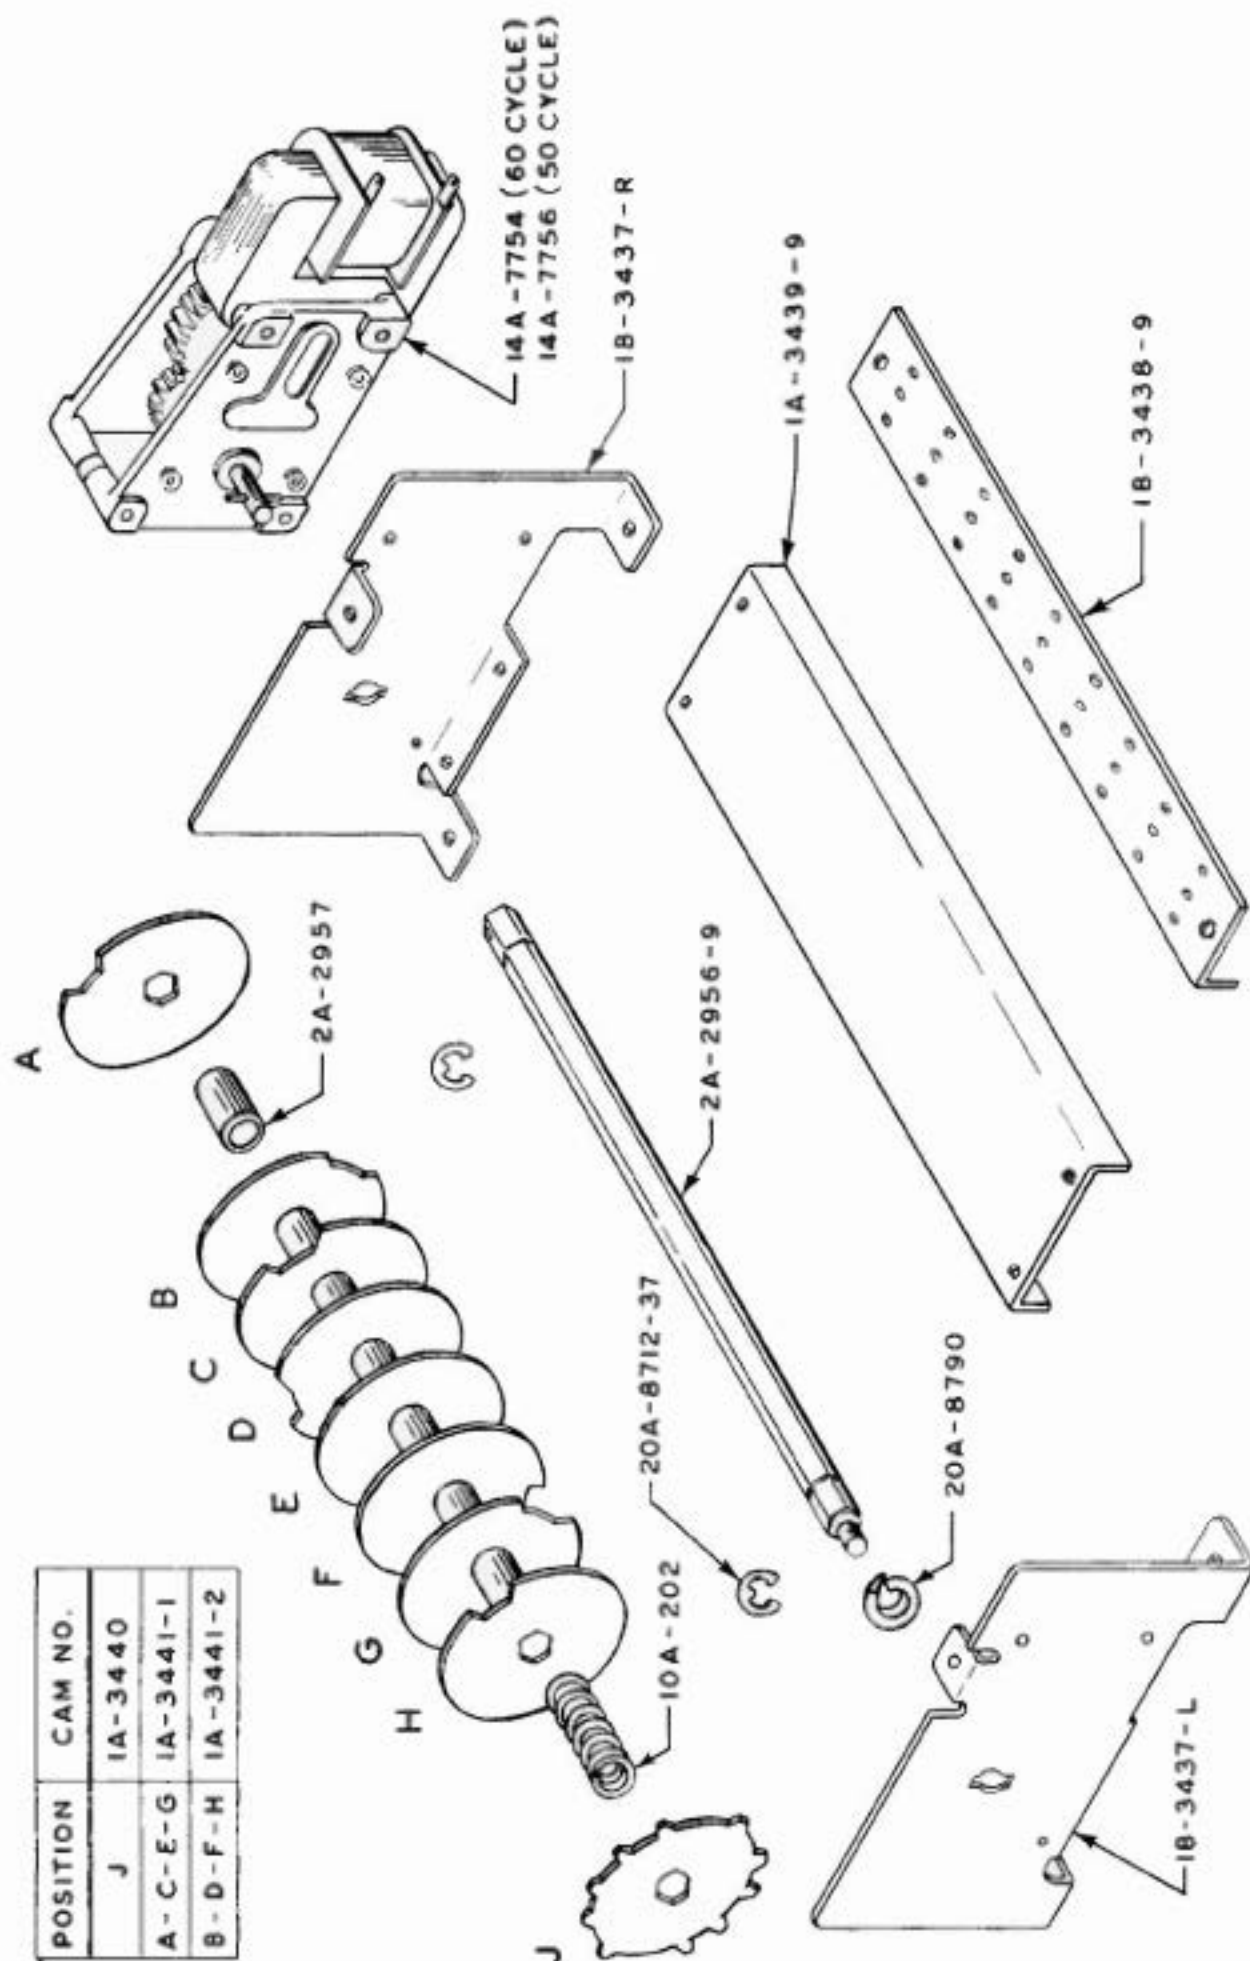

WHEN ORDERING REPLACEMENT CAMS USE TABLE SHOWN ABOVE.
LUBRICATE OUTSIDE EDGE OF EACH CAM

20A-8702
CURVE MAGNET COIL



5A-6202
RHEOSTAT



10A-63A
BALL GUIDE SPRING




A-5718
CURVE MAGNET COIL BRACKET




10A-63
BALL GUIDE SPRING


3B-7062
PLASTIC BALL RAMP

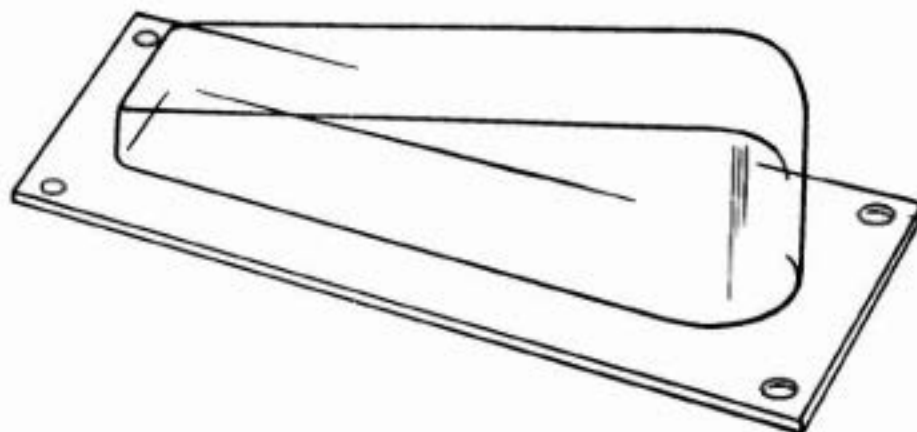


20B-8689-1
METAL BALL RAMP

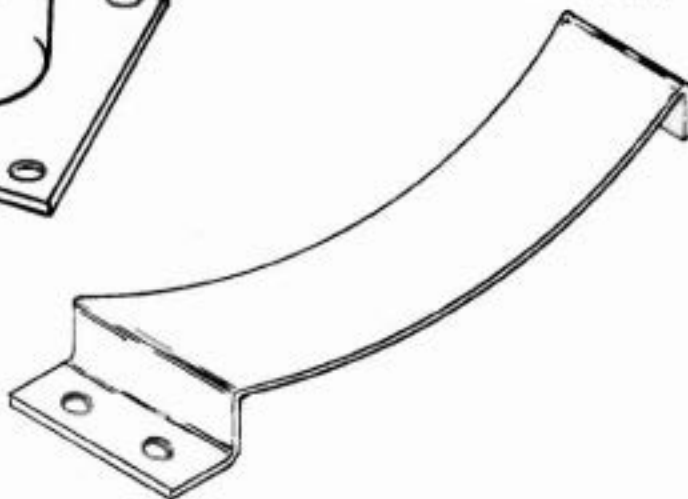

A-5703
BALL FLAP

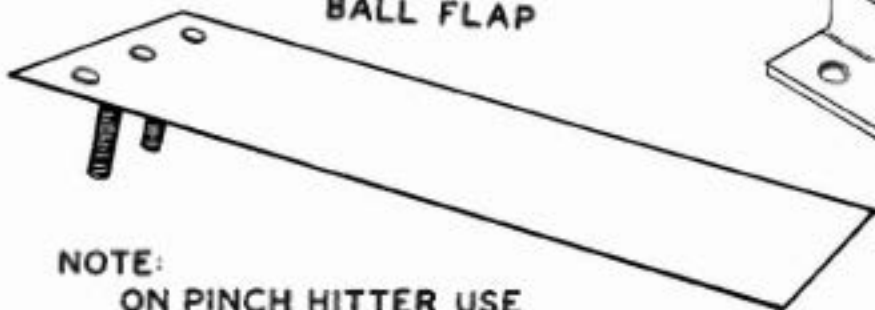

NOTE:
ON PINCH HITTER USE
BALL FLAP NO. A-5723

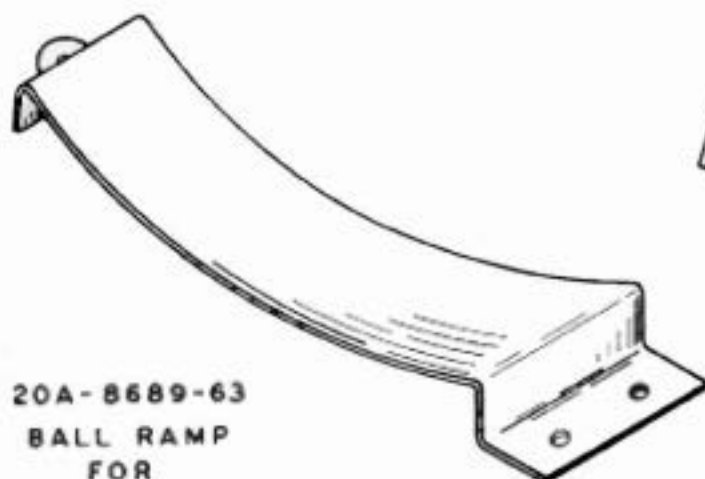


20A-8689-63
BALL RAMP
FOR
MAJOR LEAGUE
BIG INNING
GRAND SLAM



A-5703-64
BALL FLAP



A-5703 R
BALL FLAP

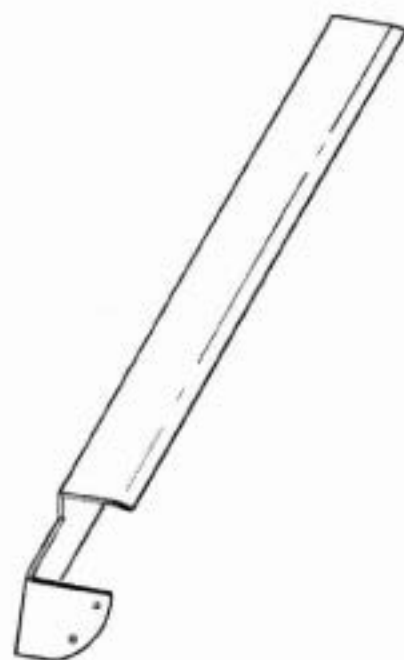

SIDE MOULDING
1964 BASEBALL
1D-2887-64 (R. SIDE)
1D-2888-64 (L. SIDE)

PARTS NOT SHOWN :


- 22D-104-64 GRANDSTAND SCENERY (BACK BOX)
- 22E-106-L CABINET SCENERY (L. SIDE)
- 22E-106-R CABINET SCENERY (R. SIDE)

1964 BASEBALL MOTORS : (24 VOLT)

- 14A-7751 MAN RUNNING MOTOR (60 CYCLE)
- 14A-7753 TARGET RESET MOTOR (60 CYCLE)
- 14A-7754 CONTROL MOTOR (60 CYCLE)
- 14A-7755 PITCHER UNIT MOTOR (60 CYCLE)
- 14A-7756 CONTROL MOTOR (50 CYCLE)
- 14A-7757 MAN RUNNING MOTOR (50 CYCLE)
- 14A-7758 TARGET RESET MOTOR (50 CYCLE)
- 14A-7759 PITCHER UNIT MOTOR (50 CYCLE)


FRONT MOULDING - 1964 BASEBALL GRAND SLAM & 10TH INNING

(TOP VIEW)

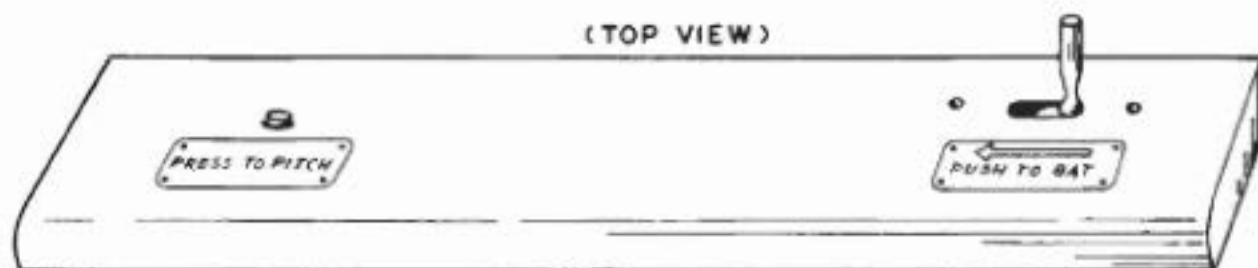

B-6310-64 COMPLETE WITH ALL HARDWARE
IID-154-64 MOULDING - LESS HARDWARE

(BOTTOM VIEW OF MOULDING)

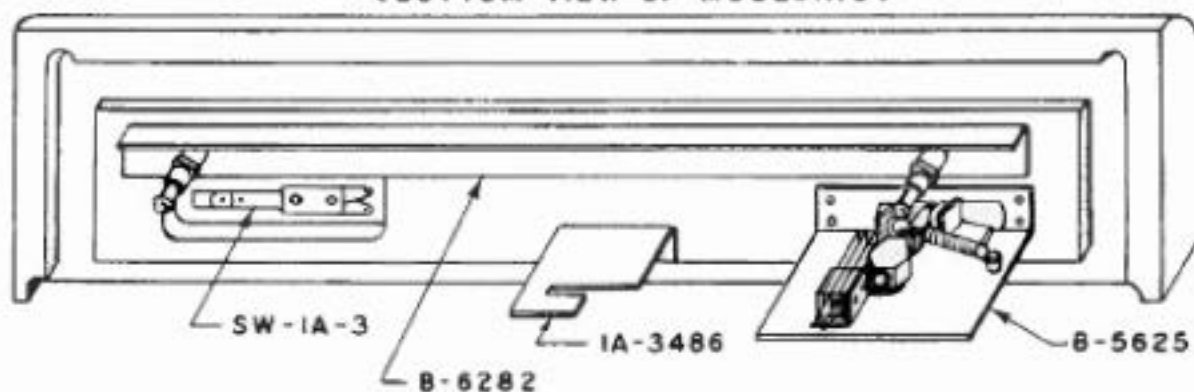

FRONT MOULDING LOCKING PARTS (ON CABINET)



B-6271



B-6059




A-6058

TOP FRONT MOULDING FOR BASEBALL



FOR "SHORT STOP"

B-6310-58 - COMPLETE WITH ALL HARDWARE
IID-154-58 - MOULDING - LESS HARDWARE

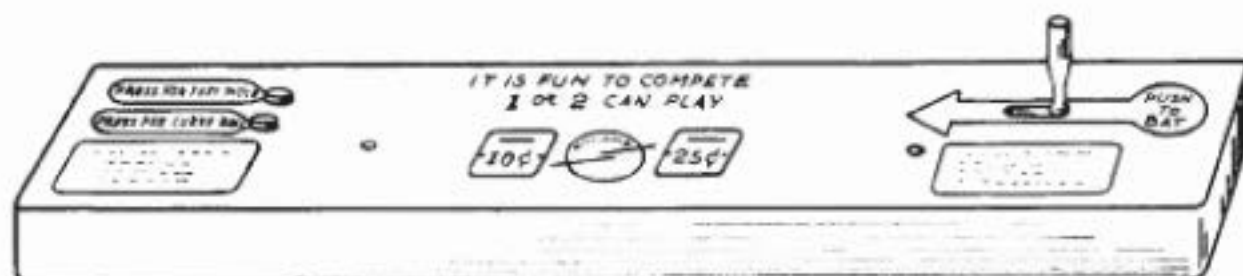

FOR "PINCH HITTER"

B-6310-59 - COMPLETE WITH ALL HARDWARE
IID-154-59 - MOULDING - LESS HARDWARE



1960 OFFICIAL BASEBALL { B-6310-60 - COMPLETE WITH ALL HARDWARE
IID-154-60 - MOULDING-LESS HARDWARE

1961 BATTING CHAMP { B-6310-61 - COMPLETE WITH ALL HARDWARE
IID-154-61 - MOULDING - LESS HARDWARE



1962 WORLD SERIES { B-6310-62 - COMPLETE WITH ALL HARDWARE
1962 EXTRA INNING { IID-154-62 - MOULDING - LESS HARDWARE

1963 MAJOR LEAGUE { B-6310-63 - COMPLETE WITH ALL HARDWARE
1963 BIG INNING { IID-154-63 - MOULDING - LESS HARDWARE

HOME RUN PLASTICS FOR BASEBALL



30C-7080-59
PINCH HITTER



30C-7080-61
BATTING CHAMP


30C-7080-62
WORLD SERIES
EXTRA INNING



30C-7080-63
MAJOR LEAGUE




30C-7080-63-1
BIG INNING

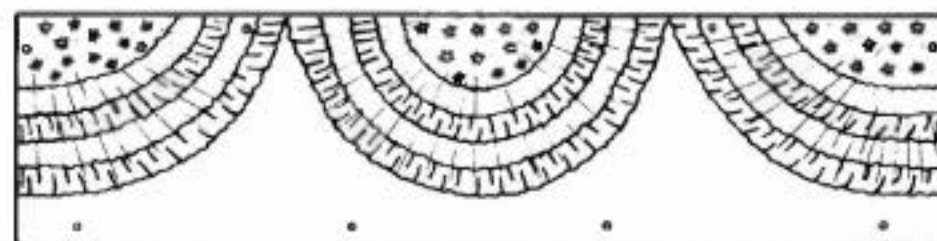


30C-7080-63-2
BIG INNING
(CHICAGO MODEL-ONLY)


INSTRUCTION PLATES FOR BASEBALL GAMES.

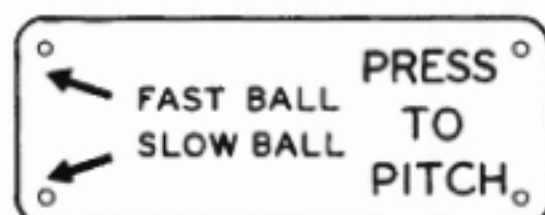


16A-8601
FOR "SHORT STOP"

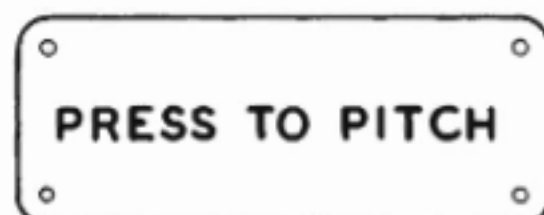

16A-8603
FOR ALL BASEBALL GAMES
FROM "OFFICIAL BASEBALL" TO
GRAND SLAM & 10TH INNING.

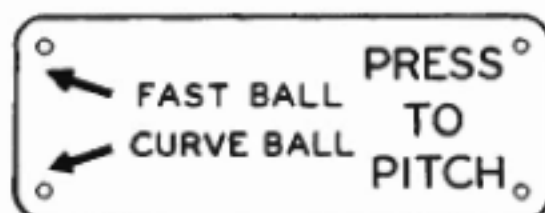

16A-8602
FOR "PINCH HITTER"

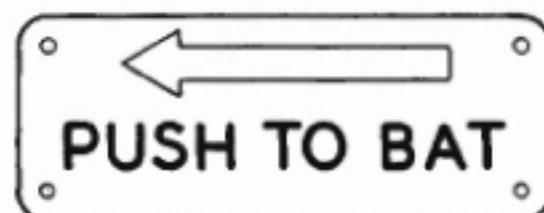


16A-8604
FOR ALL BASEBALL GAMES
FROM "SHORT STOP" TO
GRAND SLAM & 10TH INNING.

HOME RUN PLASTICS FOR BASEBALL




30C-7080-64
FOR "GRAND SLAM"

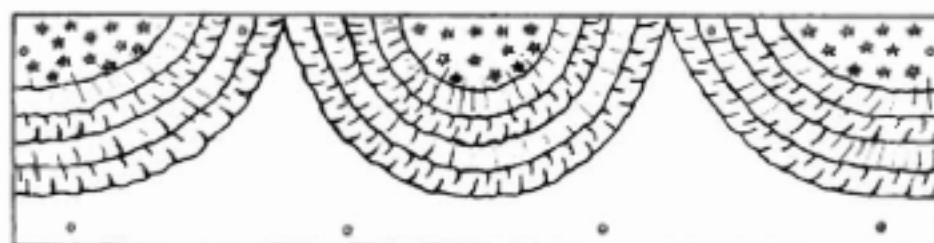


30C-7080-64-1
FOR "10TH INNING"

20E-8597 RIFLE ASSEMBLY

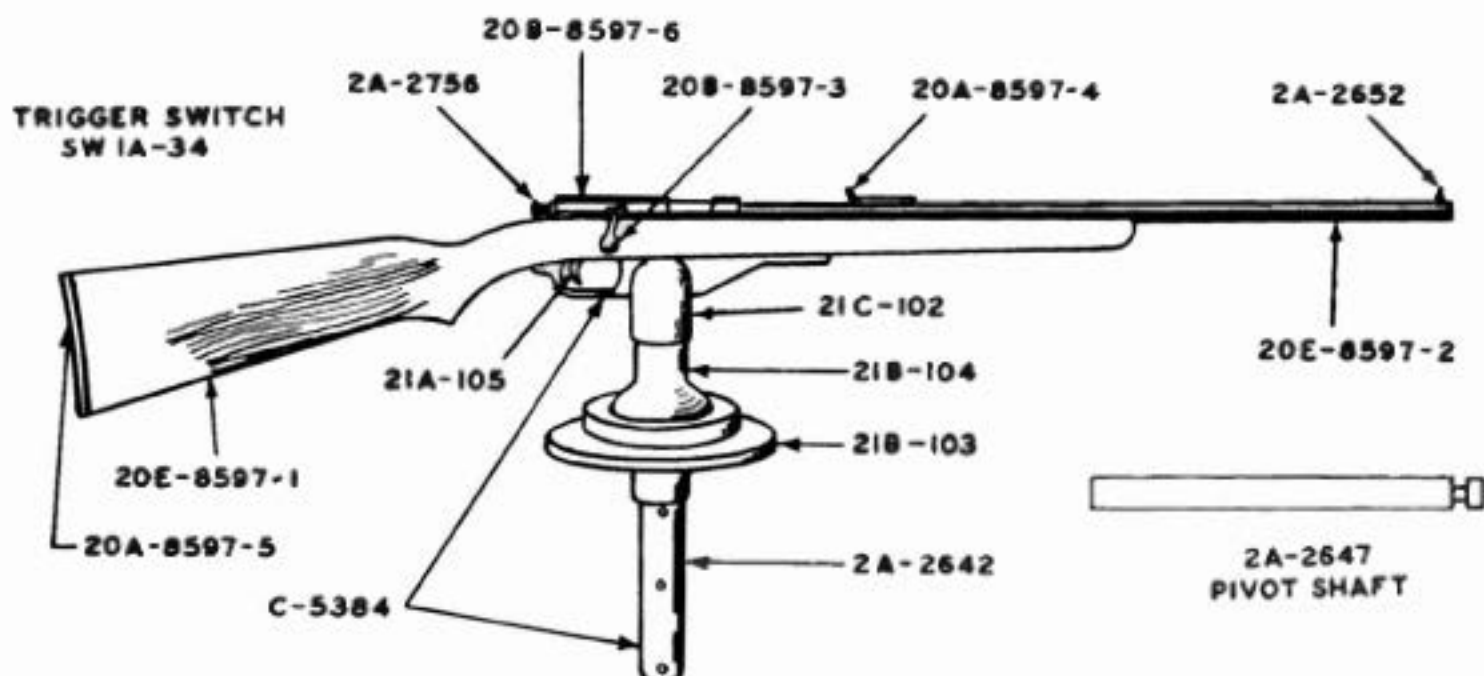


C-5679 SCANNING WIPER & COLLECTOR ASSEMBLY

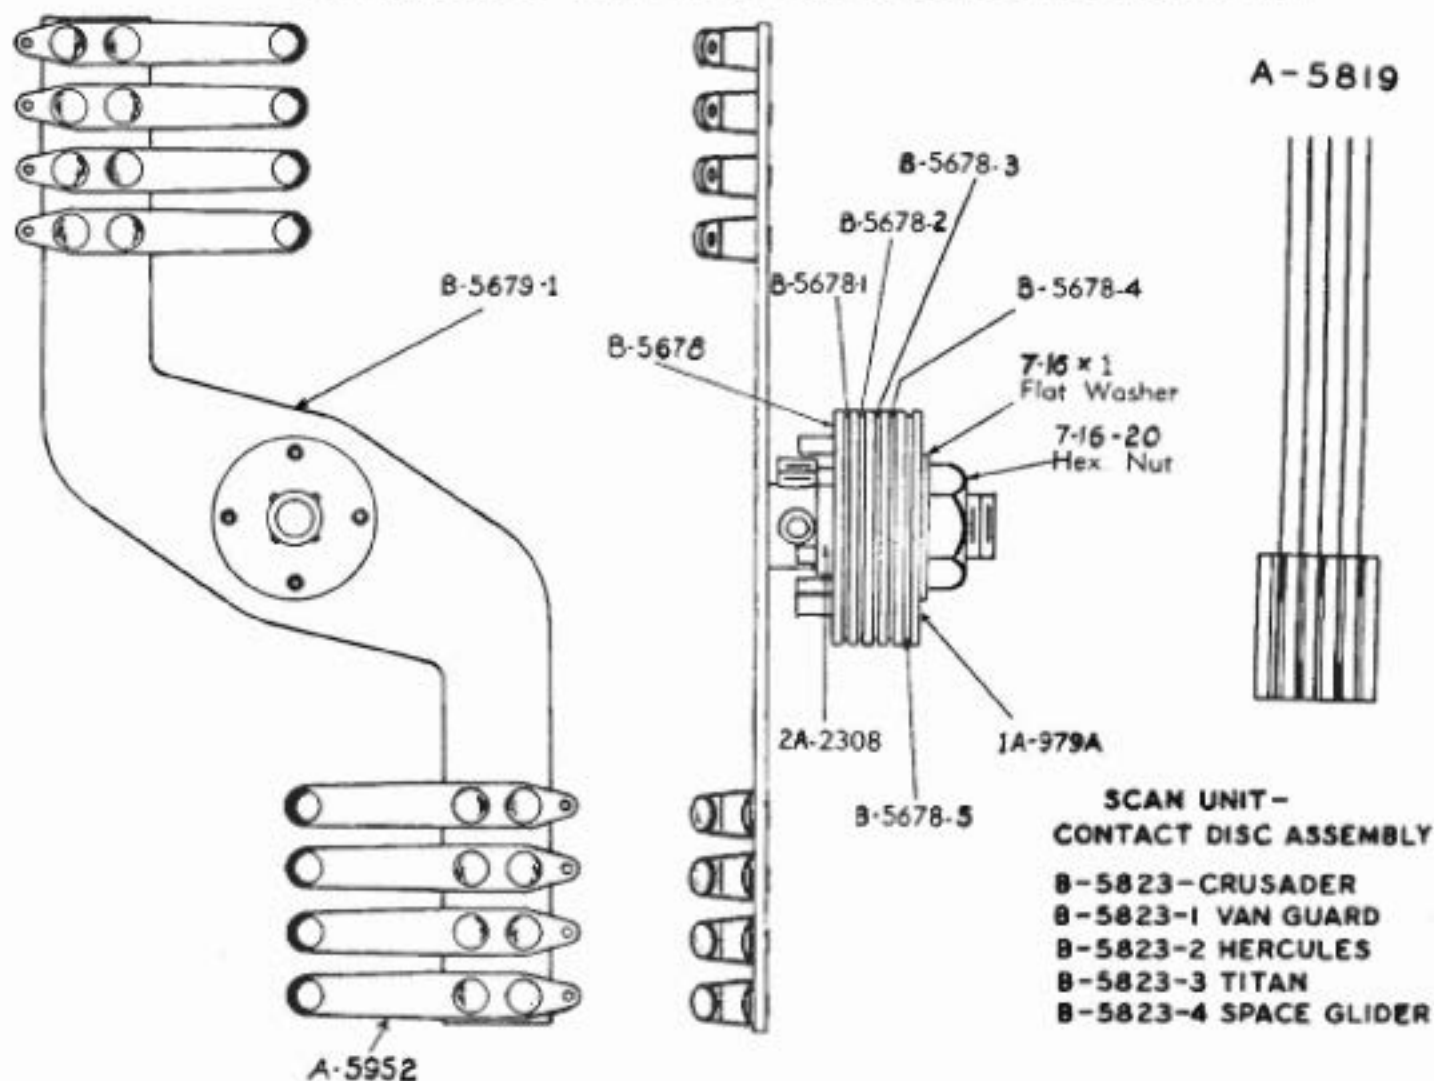

A-5727

KICKER COIL ASSEMBLY

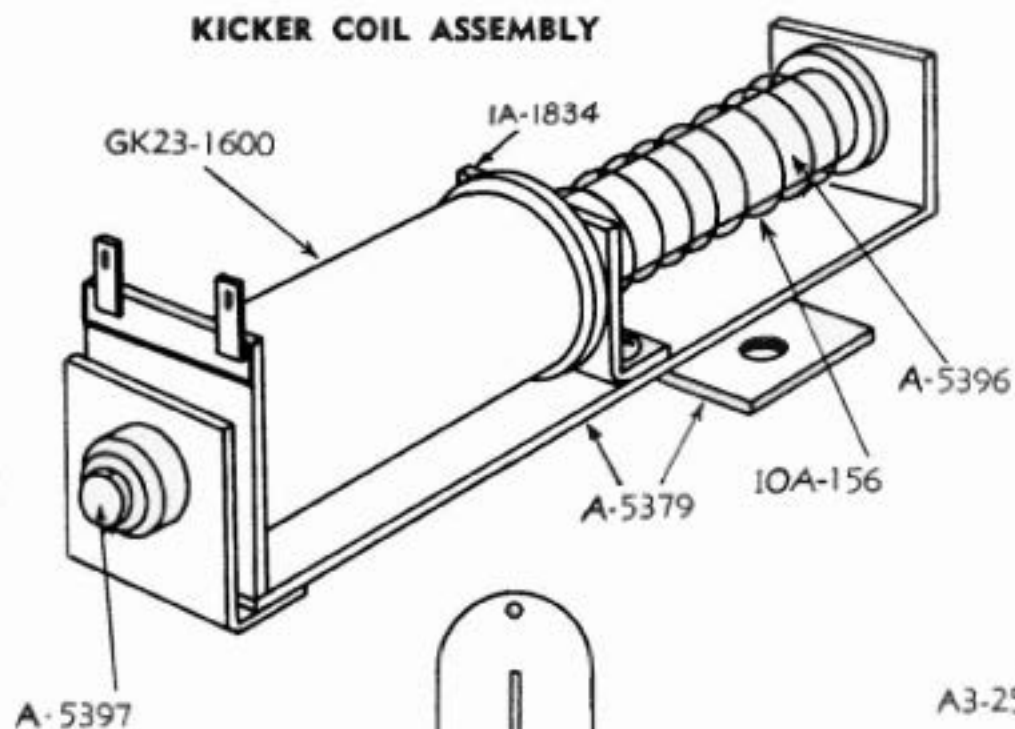


IA-2238-1

COIN ENTRY PLATE




A-5675

BALL KICKER

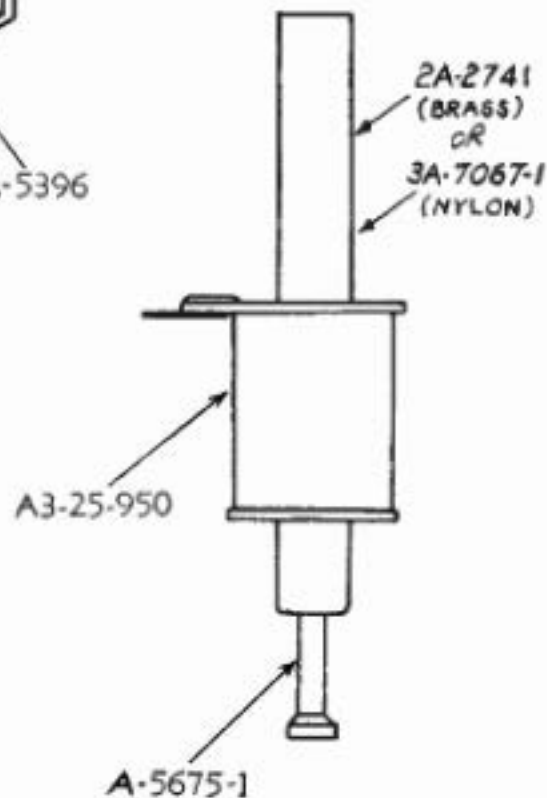


C-4886 CONTACT PLATE DISC ASSEMBLY


SPECIFY GAME

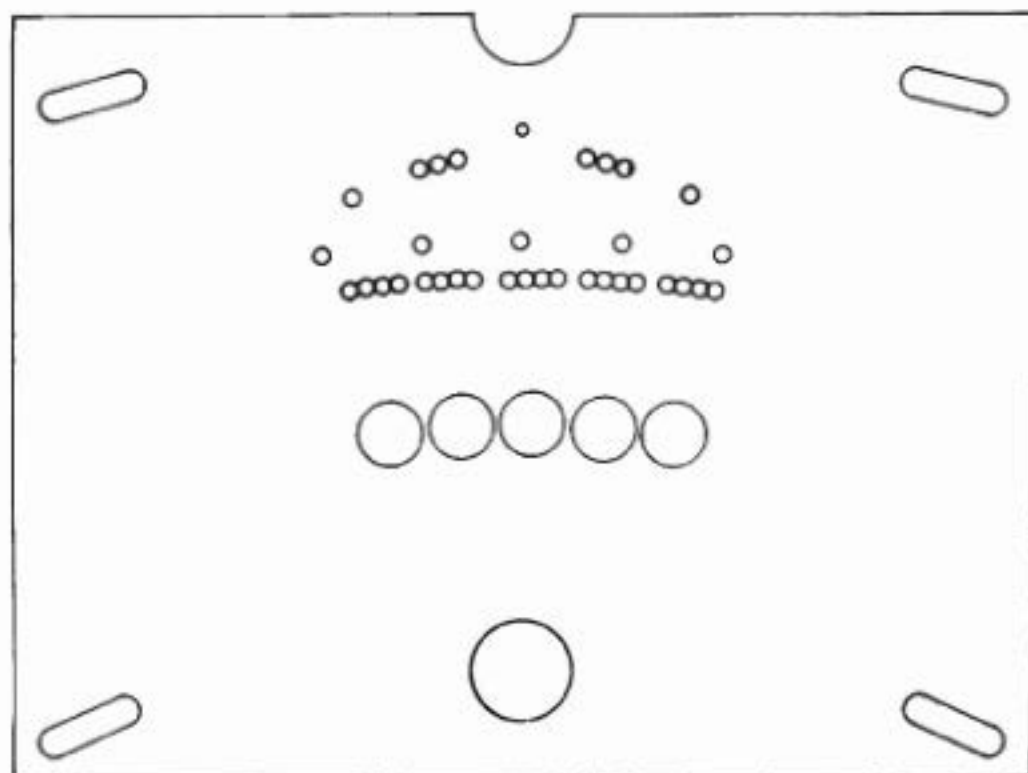

B-5371 YOKE & CHANNEL ASSEMBLY
(SPECIFY NAME OF GUN GAME)

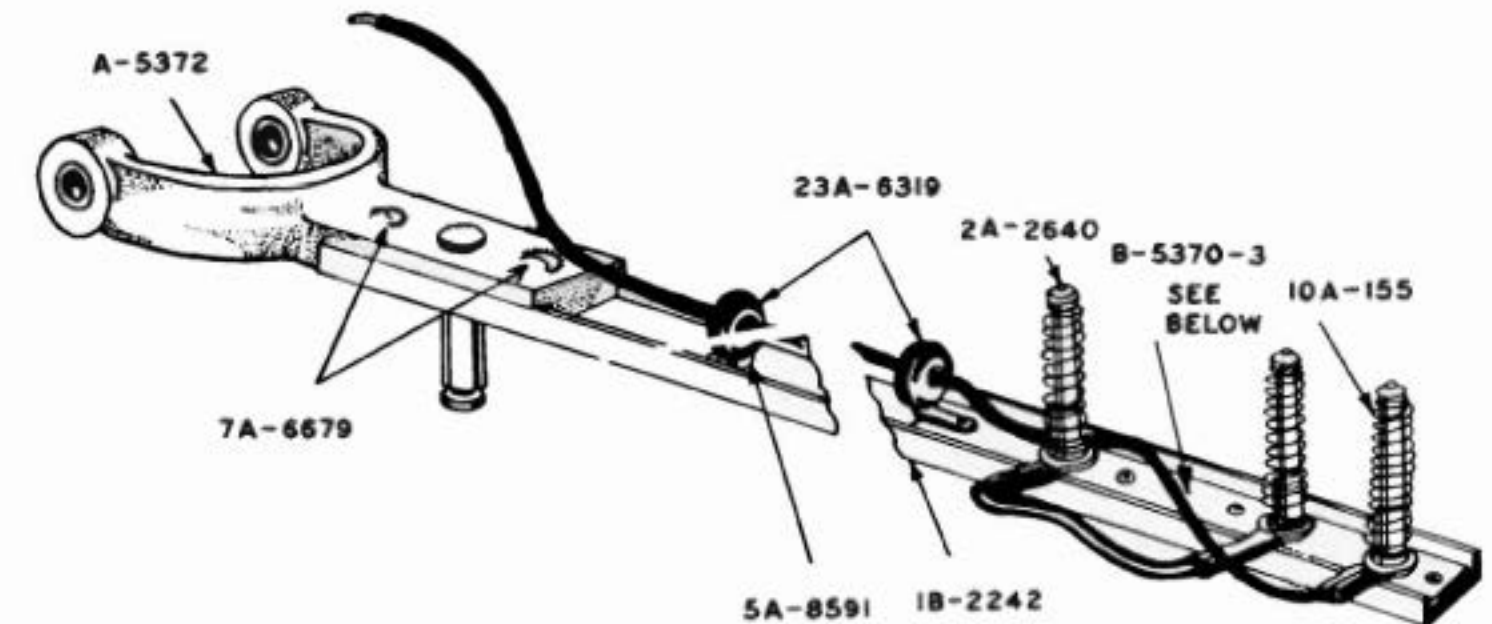

2A-2640
YOKE HINGE PIN

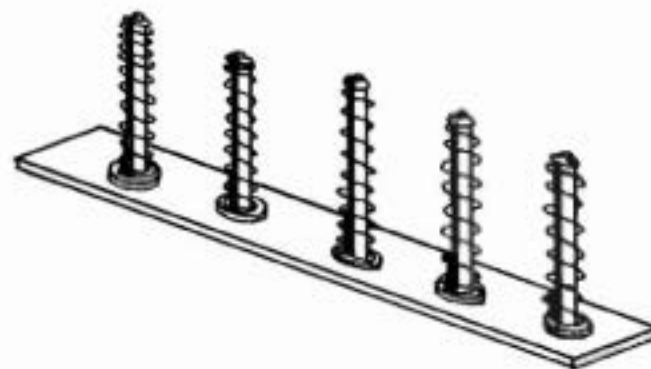

B-5370-5
BUSHING & LUG ASSEMBLY
(SPECIFY GAME)

NOTE :

		{SPACE GLIDER
B-5370-1	USED ON -	VANGUARD, HERCULES, CRUSADER & TITAN
B-5370-2	USED ON -	CROSSFIRE
B-5370-3	USED ON -	SAFARI
B-5370-5	USED ON -	POLAR HUNT




A-5565



20A-8650-12


E-5560

BOWLER MANNIKIN ASSEMBLY

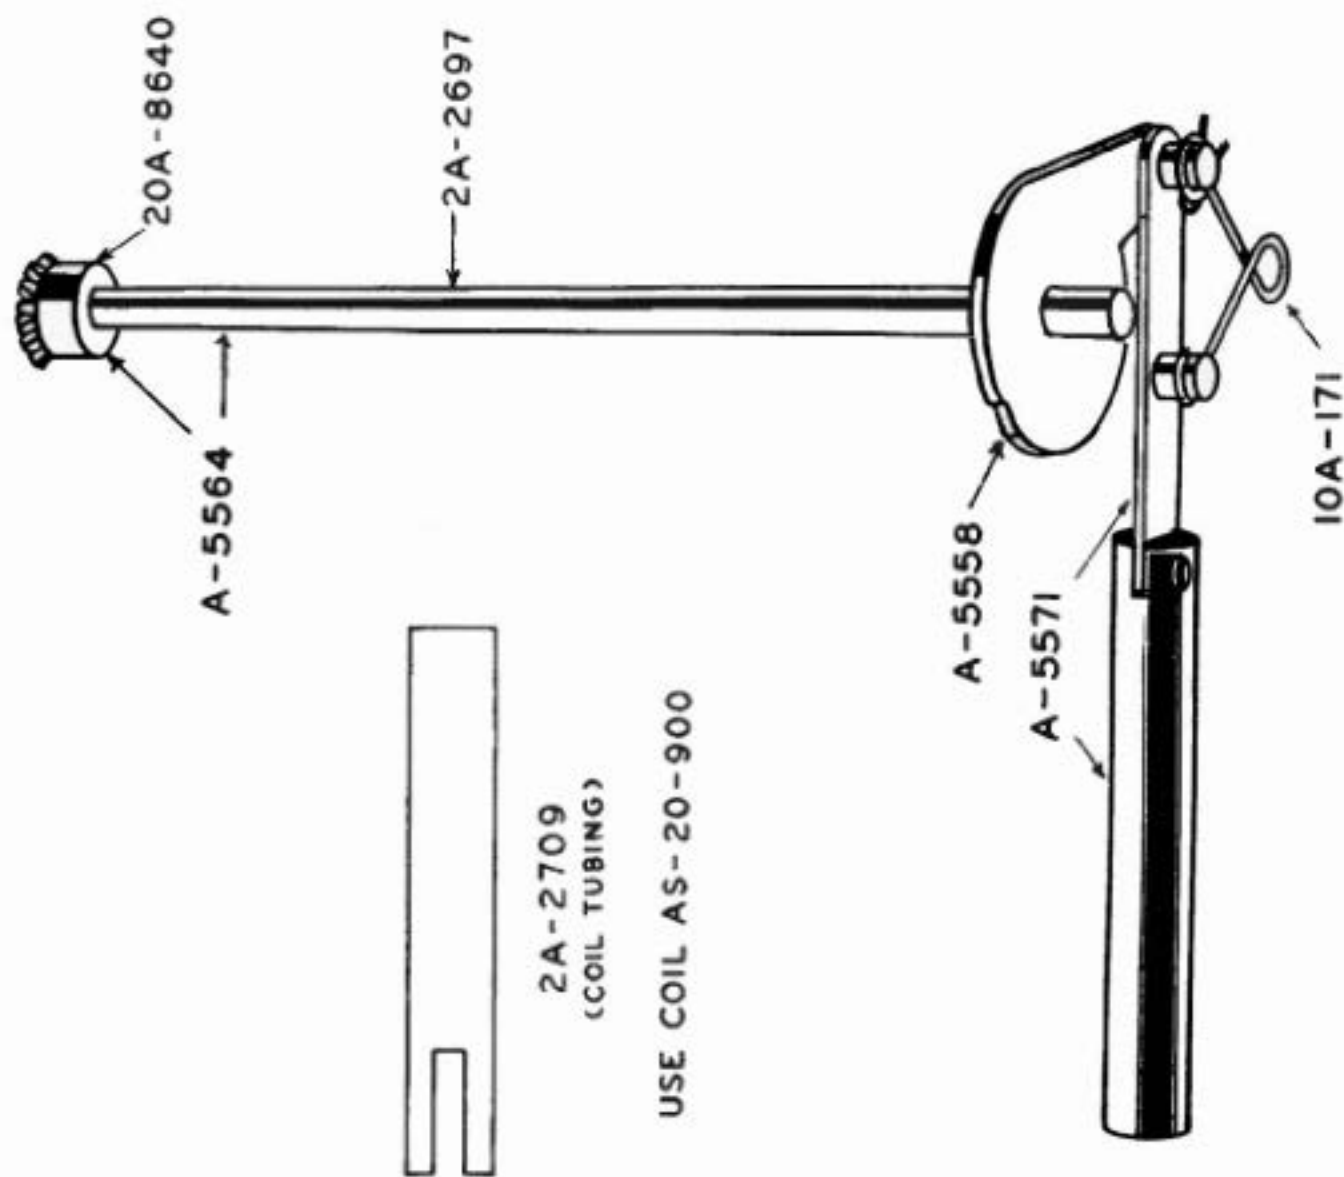


2A-2709
(COIL TUBING)

USE COIL AS-20-900


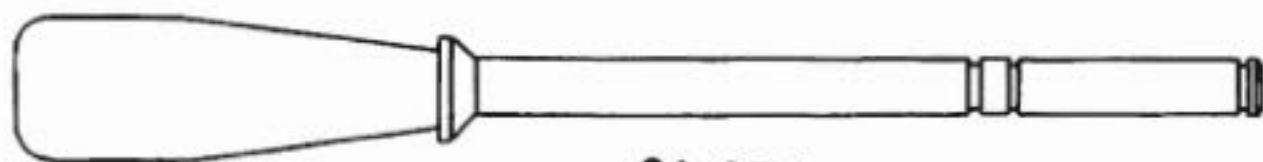


2A-2731

A-5725
PIN ASSEMBLY
(Complete)

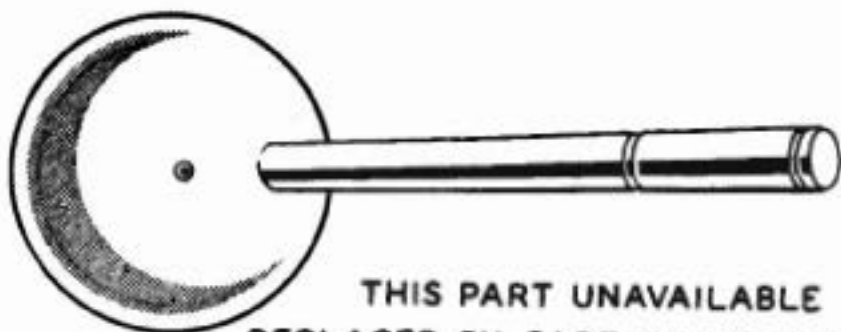

THIS PART UNAVAILABLE
REPLACED BY PART NO. 2A-2731
(SHOWN ABOVE)

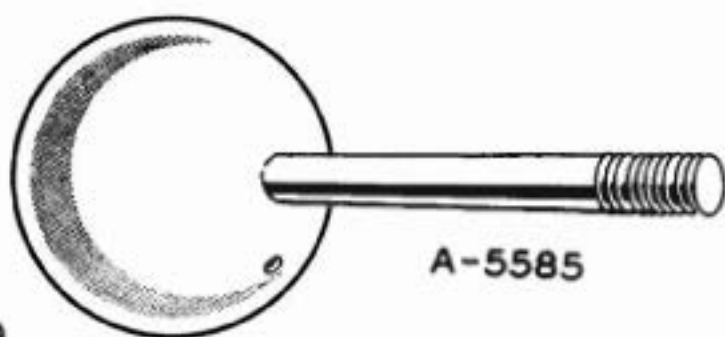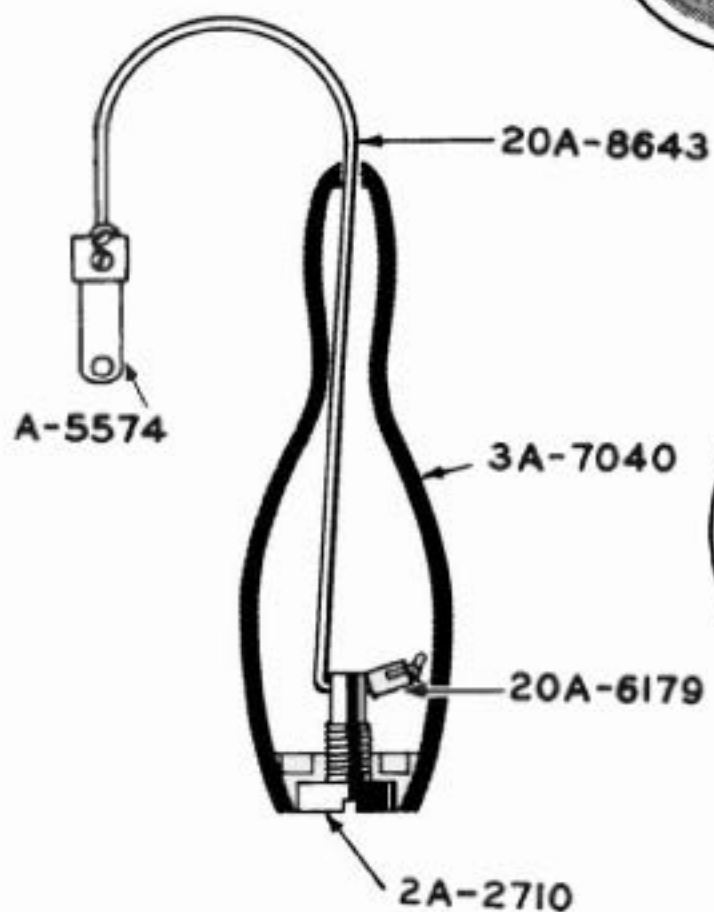


A-5585


**20A-8673
(TURF CHAMP)**



**BRAKE RELAY
ASSEMBLY
A-5671A & A-5671B**

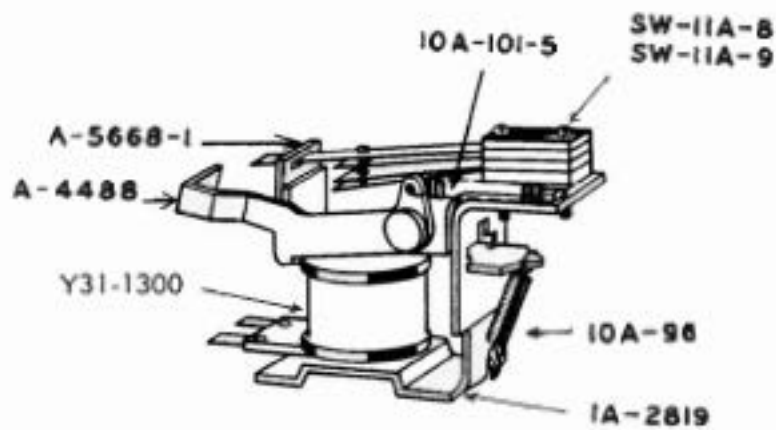

**A-5783
(ALL OTHER HORSE GAMES)**

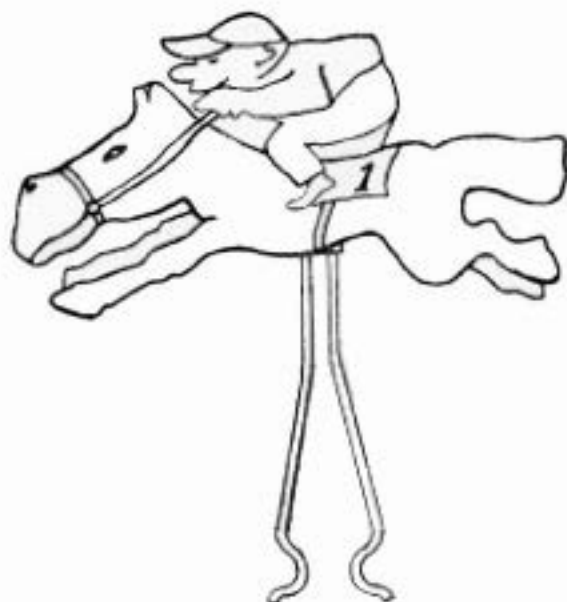

A-4488



PARTS LIST

GAME	UNITS				RELAY BANK		FLIPPER LINKS Dimensions Are To Hole Centers		SHIELD		MOTOR
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Relay Coil	Reset Spring			Plastic	Metal	
YEN SPOT	REPLAY NO. MATCH SELECTION O-9 TENS HUNDREDS	C-5900-7 C-5900-1 A-5003-1	B-5903-8 B-5903-8 A-4722-8	A-5948 A-5946 A-5946 3C-7070 3C-7070	D-22-1150	10A-65	1A-2847-1	25/32	3B-7083TS	1C-1241-29	14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE) 14A-7740 SWINGING TARGET
DOUBLE BARREL	REPLAY NO. MATCH BALL COUNT BONUS O-9 TENS HUNDREDS	C-5900-3 C-5900-4 C-5900-5 A-5003-1	B-5903-8 B-5733-4 B-5906-C A-4722-8	A-5948 A-5946 A-5947-12 A-5947-3 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-1	25/32	3B-70830B	1C-1241-43	14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE) 14A-7740 SWINGING TARGET
SKILL BALL	BALL COUNT ADVANCE O-9 TENS HUNDREDS THOUSANDS	C-5900-6 C-5910-1 A-5003-1	B-5733-5 B-5905-8 A-4722-8	A-5947-30 A-5909 3C-7070 3C-7070 3C-7070			1A-2847-2	1"	3B-70835B	1C-1241-28S	14A-6738A - 60 CYCLE 14A-6738-50 (50 CYCLE) 14A-7740 SWINGING TARGET
RESERVE	REPLAY NO. MATCH BONUS O-9 TENS HUNDREDS	C-5900-7 C-5900-8 A-5003-1	B-5903-8 B-5733-1 A-4722-8	A-5948 A-5946 A-5947-10 3C-7070 3C-7070 3C-7070	D-22-1150	10A-66	1A-2847-1	25/32	3B-7083R	1C-1241-44	14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE)
KISMET	REPLAY NO. MATCH BALL COUNT SELECTION PLAYER COIN O-9 TENS HUNDREDS	C-5900-10 C-5900-13 C-5910-1 C-5900-9 C-5900-6 A-5003-1	B-5902-8 B-5903M B-5906C B-5906-8 B-5906-0 A-4722-8	A-5948 A-5946 A-5947-7 A-5909-36 A-5947-3 A-5947-3 3C-7070 3C-7070	D-22-1150	10A-66	1A-2847-2	1"	3B-7083K	1C-1241-21 1C-1241-29	14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE) 14A-7740 SWINGING TARGET
SPACE SHIP	REPLAY NO. MATCH 10,000 100,000 #1 ADVANCE #2 ADVANCE #3 ADVANCE #4 ADVANCE	C-5900-15 C-5900-7 C-5744 C-5900-16 C-5900-16 C-5900-16 C-5900-16	B-5902-8 B-5903-8 B-5732 B-5733-3 B-5733-3 B-5733-3 B-5733-3	A-5948 A-5946 A-5946 A-5949-89 A-5947-7 A-5947-7 A-5947-7 A-5947-7	D-24-1400	10A-66	1A-2847-2	1"	3B-7102		14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE)
METRO	REPLAY NO. MATCH BALL COUNT SELECTION O-9 TENS HUNDREDS	C-5900-10 C-5900-4 C-5900-18 A-5003-1	B-5903-8 B-5733-4 B-5903-L A-4722-8	A-5948 A-5946 A-5947-12 A-5946 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3B-7103	1C-1241-16	14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE) 14A-7735A (60C) DIS. BUMPER 14A-7735A-50 (50C) DIS. BUMP.
JOLLY JOKERS	BALL COUNT ADVANCE O-9 TENS HUNDREDS THOUSANDS	C-5900-6 C-5906-14 A-5003-1 A-5003-1	B-5733-6 B-5906-C A-4722-8 A-4722-8	A-5947-10 A-5947-15 3C-7070 3C-7070 3C-7070			1A-2847-2	1"	3B-7100		14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE) 14A-7740 SWINGING TARGET
3 COINS	REPLAY NO. MATCH ADVANCE O-9 TENS HUNDREDS	C-5900-7 C-5900-14 A-5003-1	B-5903-8 B-5903-8 A-4722-8	A-5948 A-5946 A-5947-15 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3B-7104		14A-6738A - 60 CYCLE 14A-6738A-50 (50 CYCLE) 14A-7740 SWINGING TARGET
EXTRA INNING	INNING MIXER OUT RUN O-9 RUN TENS HOME RUN O-9 HOME RUN TENS	C-5900-24 C-5900-22 C-5900-23 A-5003-1 A-5003-1 A-5003-1 A-5003-1	B-5733-7 B-5903M B-5733-7 A-4722-8 A-4722-8 A-4722-8 A-4722-8	A-5947-9 A-5946 A-5947-3 B-4709 B-4709 B-4709 B-4709							14A-6724A (60 C) MAN RUN 14A-6724A-50 (50 C) MAN RUN 14A-6738A (60 C) SCORE 14A-6738A-50 (50 C) SCORE 14A-7744 (60 C) PITCHER 14A-7744-50 (50 C) PITCHER
1962 WORLD SERIES	INNING MIXER OUT RUN NAME RUNS O-9 RUNS 10-90 H. SCORE O-9 H. SCORE 10-90	C-5900-24 C-5900-27 C-5900-26 C-5900-25 C-5900-28 A-5003-1 A-5003-1 A-5003-1	B-5733-9 B-5903M B-5733-4 B-5903-P B-5907-C A-4722-8 A-4722-8 A-4722-8	A-5947-9 A-5946 A-5947-3 A-5947-45 A-5947-11 B-4709 B-4709 B-4709							14A-7744-50 (50 C) PITCHER 14A-7744 (60 C) PITCHER 14A-6738A-50 (50 C) SCORE 14A-6738A (60 C) SCORE 14A-6724A-50 (50 C) MAN RUN 14A-6724A (60 C) MAN RUN

PARTS LIST

GAME	UNITS				RELAY BANK		FLIPPER LINKS		SHIELD		MOTOR
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Relay Coil	Reset Spring	Dimensions Are To Hole Centers		Plastic	Metal	
COQUETTE	REPLAY NO. MATCH BALL COUNT SELECTION 0 TO 9 TENS HUNDREDS	C-5900-10 C-5900-4 C-5900-13 A-5003-1 A-5003-1	B-5902B B-5733-4 B-5903B A-4722B A-4722B	A-5948 A-5946 A-5947-12 A-5946 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3B-7106	1C-1241-21 1C-1241-33	14A-6738A - 60 CYCLE 14A-6738A-50 150 CYCLE 14A-7745 SWINGING TARGET
TRADE WINDS	REPLAY NO. MATCH ADVANCE 0-9 TENS HUNDREDS	C-5900-7 C-5900-20 A-5003-1 A-5003-1	B-5903B B-5902E A-4722B A-4722B	A-5948 A-5946 A-5947-25 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3B-7105	1C-1241-44	14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
FRIENDSHIP 7	BALL COUNT ADVANCE 0-9 TENS HUNDREDS THOUSANDS REEL	C-5900-30 C-5900-29 A-5003-1 A-5003-1 A-5003-1 A-5003-1	B-5733-2 B-5903B A-4722B A-4722B A-4722B A-4722B	A-5947-10 A-5946 3C-7070 3C-7070 3C-7070 3C-7070	D-24-1600	10A-10	1A-2847-2	1"	3B-7110	1C-1241-1 1C-1241-46	14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
VALIANT	REPLAY NO. MATCH BALL COUNT ADVANCE 0-9 TENS HUNDREDS	C-5900-10 C-5900-31 C-5900-19 A-5003-1 A-5003-1	B-6202B B-6203S B-6200-5 A-4722B A-4722B	A-5948 A-5946 A-5947-12 A-5947-4 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3B-7107	1C-1241-30	14A-7745 SWINGING TARGET 14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
KING PIN	REPLAY NO. MATCH SPARE 0-9 TENS HUNDREDS	C-5900-2 C-5910-2 A-5003-1 A-5003-1	B-6203B B-6205D A-4722B A-4722B	A-5948 A-5946 A-5909-10 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3B-7109	1C-1241-17 1C-1241-21 1C-1241-45	14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
TOM - TOM	REPLAY NO. MATCH BALL COUNT ADVANCE 0-9 TENS HUNDREDS	C-5900-32 C-5900-31 C-5900-21 A-5003-1 A-5003-1	B-6203B B-6203S B-6203B A-4722B A-4722B	A-5948 A-5946 A-5947-12 A-5946 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3B-7108		14A-7745 SWINGING TARGET 14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
MARCH GRASS	REPLAY NO. MATCH BALL COUNT PLAYER COUNTS 0-9 TENS HUNDREDS SELECTION	C-5900-32 C-5900-33 C-5900-9 C-5900-34 A-5003-1 A-5003-1 A-5003-1	B-6203B B-6203U B-6206B B-6203T A-4722B A-4722B A-4722B	A-5948 A-5946 A-5947-7 A-5947-3 A-5947-3 3C-7070 3C-7070 3C-7070	D-24-1150	10A-66	1A-2847-2	1"	3B-7113	1C-1241-21 1C-1241-47	14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
VARABOND	BALL COUNT ADVANCE 0 TO 9 TENS HUNDREDS	C-5900-39 C-5900-38 A-5003-1 A-5003-1	B-6200-1B B-6207-D A-4722C A-4722C	A-5947-10 A-5947-9 3C-7070 3C-7070 3C-7070	D-24-1600	10A-66	1A-2847-2	1"	3C-7114	1C-1241-17	14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
4 ROSES	REPLAY NO. MATCH ADVANCE ADVANCE 0-9 TENS HUNDREDS	C-5900-36 C-5900-37 C-5900-37 A-5003-1 A-5003-1	B-6202B B-6206E B-6206E A-4722-C A-4722C	A-5948 A-5946 A-5947-19 A-5947-19 3C-7070 3C-7070 3C-7070	D-24-1150	10A-10	1A-2847-2	1"	3C-7111		14A-7749 - 60 CYCLE 14A-7750 - 50 CYCLE
BIG DEAL	REPLAY NO. MATCH ADVANCE 0-9 TENS HUNDREDS	C-5900-41 C-5900-40 A-5003-1 A-5003-1	B-6203B B-6203B A-4722C A-4722C	A-5948 A-5946 A-5947-5 3C-7070 3C-7070 3C-7070	D-24-1600	10A-66	1A-2847-2	1"	3C-7115		14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE
JUMPIN JACKS	REPLAY BALL COUNT NO. MATCH ADVANCE 0-9 TENS HUNDREDS	C-5900-42 C-5900-7 C-5900-43 A-5003-1 A-5003-1	B-6203S B-6203B B-6206F A-4722-C A-4722C	A-5948 A-5947-12 A-5946 A-5947-5 3C-7070 3C-7070 3C-7070	D-24-1400	10A-66	1A-2847-2	1"	3C-7110	1C-1241-21	14A-7746 - 60 CYCLE 14A-7747 - 50 CYCLE

PARTS LIST

GAME	SWITCHES				RELAY BANK		FLIPPER LINKS Dimensions Are To Hole Centers	SHIELD		MOTOR
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Relay Coil	Reset Spring		Plastic	Metal	
1953 MAJOR LEAGUE	REPLAY			A-5948						14A-7746 (50 C) SCORE
	MIX UNIT	C-5900-44	B-6203-N	A-5946						14A-7747 (50 C) SCORE
	OUT	C-5900-45	B-6203-T	A-5947-7						14A-7751 (50 C) MAN RUN
	RUN	C-5900-46	B-6203-Z	A-5947-45S						14A-7752 (50 C) PITCHER
	NO. MATCH	C-5900-47	B-6203-B	A-5946						14A-7752-50 (50 C) PITCHER
	RUNS 0-9	A-5903-1	A-4722C	3C-7070						14A-7753 (50 C) TARGET
	RUNS 10-90	A-5903-1	A-4722C	3C-7070						14A-7758 (50 C) TARGET
	SCORE TO BEAT 0-9	A-5903-1	A-4722C	3C-7070						
1953 BIG INNING	REPLAY	C-5900-24	B-6200-7	A-5947-9						14A-7746 (50 C) SCORE
	OUT	C-5900-48	B-6200-8	A-5947-3						14A-7747 (50 C) SCORE
	MIX	A-5903-1	A-4722-C	3C-7070						14A-7751 (50 C) MAN RUN
	RUNS 0-9	A-5903-1	A-4722C	3C-7070						14A-7752 (50 C) PITCHER
	RUNS 10-90	A-5903-1	A-4722C	3C-7070						14A-7752-50 (50 C) PITCHER
	HOME RUN	A-5903-1	A-4722C	3C-7070						14A-7753 (50 C) TARGET
										14A-7758 (50 C) TARGET
SWING TIME	BALL COUNT	C-5900-39	B-6206-10	A-5947-10			1A-2847-2	1"	30C-7116	1C-1241-45S
	ADVANCE	C-5900-3	B-6205-A	A-5909						
	0-9			3C-7070						
	TENS			3C-7070						
SKILL POOL	REPLAY			A-5948	D-24-1600	10A-10	1A-2847-2	1"	30C-283	
	NO. MATCH	C-5900-53	B-6203B	A-5946	D-24-1600	10A-66				
	0-9	A-5903-1	A-4722C	3C-7070						
	TENS			3C-7070						
EL TORO	REPLAY			A-5948	D-24-1400	10A-66	1A-2847-2	1"	30C-284	1C-1241-33
	BALL COUNT	C-5900-50	B-6203S	A-5947-12						1C-1241-47
	NO. MATCH	C-5900-49	B-6203B	A-5946						
	0-9	A-5903-1	A-4722C	3C-7070						
BIG DADDY	REPLAY			A-5948	D-24-1150	10A-10	1A-2847-2	1"	30C-287	1C-1241-44
	ADVANCE	C-5900-55	B-6203B	A-5946						
	NO. MATCH	C-5900-52	B-6202B	A-5946						
	0-9	A-5903-1	A-4722C	3C-7070						
MERRY WIDOW	REPLAY			A-5948	D-24-1150	10A-10	1A-2847-2	1"	30C-291	
	BALL COUNT	C-5900-59	B-6203B	A-5947-7						
	ADVANCE	C-5900-57	B-6203B	A-5946						
	NO. MATCH	C-5900-29	B-6203B	A-5946						
BEAT THE CLOCK	REPLAY			A-5948	D-24-1400	10A-10	1A-2847-2	1"	30C-290	1C-1241-39
	BALL COUNT	C-5900-56	B-6203-B	A-5946			1A-3451	3/8"		1C-1241A-43
	ADVANCE	C-5910-4	B-6205A	A-5909A						
	0-9	B-6297	A-6294	3C-7128						
1964 GRAND SLAM	REPLAY			A-5948	D-24-1400	10A-10				
	BALL COUNT	C-5900-62	B-6207E	A-5947-9						
	ADVANCE	C-5900-61	B-6200-4	A-5947-7						
	1st PLAYER 0-9	B-6297	A-6294	3C-7128						
1964 10th INNING	REPLAY			A-5948	D-24-1400	10A-10				
	BALL COUNT	C-5900-64	B-6200-1	A-5947-9						
	ADVANCE	C-5900-63	B-6200-1	A-5947-3						
	1st PLAYER 0-9	B-6297	A-6294	3C-7128						
OH BOY	REPLAY			A-5948	D-24-1400	10A-10	1A-2847-2	1"	30C-288	1C-1241-21
	BALL COUNT	C-5900-51	B-6203S	A-5947-12						1C-1241-47
	ADVANCE	C-5900-52	B-6202B	A-5946						1C-1241-49
	0-9	B-6297	A-6294	3C-7128						

PRICE LIST

Arranged by Groups of Related Parts

5 BALL CABINETS (Shelf Type)

Part No.	Description	Price
	Cabinet Only	\$55.00
	Light Box Only (Single Player)	17.00
	Light Box Door Only (Single Ply.)	6.00
	Light Box with Door (Single Ply.)	22.00
	Screened Light Box Glass (Sin. Ply.)	16.00
	Plexi-Glass Screened (Single Ply.)	21.00
	Light Box Only (Multi-Player)	24.00
	Light Box Door Only (Multi-Ply.)	6.50
	Light Box with Door (Multi-Player)	30.00
	Screened Light Box Glass (Multi-Player)	18.00
	Plexi-Glass Screened (Multi-Ply.)	25.00
	Screened Playboard	45.00
8C-7031-L	Left Side Moulding	6.50
8C-7031-R	Right Side Moulding	6.50
8B-7032	Front Shelf Trim	1.40
8B-7034	Glass Channel	1.50
1C-2862	Shelf Trim (Top)	1.40
B-5945	Front Moulding Ass'y.	6.50
20C-8709	Tubular Leg	5.50
	21 x 43 Playfield Glass	6.50

5 BALL CABINETS Single Player

	Cabinet Only	\$50.00
	Light Box Only	25.00
	Light Box Door Only (Wood)	6.50
	Light Box with Door (Wood)	31.50
	Screened Light Box Glass	16.00
	Plexi-Glass Screened	21.00
	Screened Playboard	45.00
1D-2887	Right Side Moulding Stainless Steel	9.50
1D-2888	Left Side Moulding Stainless Steel	9.50
1B-2892-2	Rear Moulding-Bottom Plate	2.65
1B-2893	Rear Moulding Top Plate Stainless Steel	4.50
D-5835	Front Moulding Ass'y.	9.50
20B-8719	Glass Channel	1.50
1E-2263-1	Metal Legs (each)	3.00
	21 x 43 Playfield Glass	6.50
B-6056	Light Box Door Only (Metal)	\$ 6.75
	Light Box with Metal Door	31.75
D-6061	Front Moulding Ass'y. (latch type)	6.50
A-6058	Front Moulding Lock Lever Ass'y.	1.00
B-6059	Front Moulding Lock Rail Ass'y.	1.20
B-6078	Front Moulding Lever & Lock Slide Ass'y.	3.00

5 BALL CABINETS Multi-Player

	Cabinet Only	\$65.00
	Light Box Only	27.00
	Light Box Door Only (Wood)	6.75

5 BALL CABINETS (cont.) Multi-Player

	Light Box with Door (Wood)	33.50
	Screened Light Box Glass	18.00
	Plexi-Glass Screened	25.00
	Screened Playboard	45.00
1D-2887	Right Side Moulding Stainless Steel	9.50
1D-2888	Left Side Moulding Stainless Steel	9.50
1B-2892-2	Rear Moulding Bottom Plate	2.65
1B-2893	Rear Moulding Top Plate Stainless Steel	4.50
D-5835-1	Front Moulding Ass'y.	9.50
20B-8719	Glass Channel	1.50
1E-2263-2	Metal Legs (each)	3.00
	21 x 43 Playfield Glass	6.50
B-6057	Light Box Door only (Metal)	\$ 7.00
	Light Box with Metal Door	34.00
A-6058	Front Moulding Lock Lever	1.00
B-6059	Front Moulding Lock Rail	1.20
B-6078	Front Moulding Lever & Lock Slide	3.00
D-6061	Front Moulding Ass'y. (Latch Type)	6.50

MISCELLANEOUS CABINET HARDWARE

1A-2385	Metal Door Frame Hinge Cover	\$.25
1A-2386A	Metal Door Frame Locking Bracket	.30
1B-2572	Ball Stop	.75
1D-2759-5	Metal Door Frame (Single Chute)	1.50
1D-2759-6	Metal Door Frame (Twin Chute)	1.50
1B-2894	Cabinet Front Armor	.55
1A-2961	Insert Hinge (Male)	.30
1A-2962	Insert Hinge (Female)	.30
1A-3015	Ball Lift Deflector	.30
2A-2384	Flipper Button Bushing	.40
2A-2525A	Flipper Button	.50
8A-7025-A	Leg Leveler	.30
8A-7025B	Leg Leveler Nut	.06
20A-6500	1-1/16" Steel Ball (Pin Games)	.60
20A-6502A	Carbon Tilt Bob	.55
20A-6518	3/8" Steel Ball (Baseball Games)	.40
20A-6519	15/16" Steel Ball (Roll Tilt)	.50
20A-6520	3/4" Steel Ball (Official Baseball)	.40
20A-6542	Front Door Lock (2 Keys)	1.75
20A-6543	Back Door Lock (2 Keys)	1.75
C-5592	Cash Box Cover	1.50
C-5669	Cash Box 2 1/2" Deep	4.00
	Leg Bolt (For Tubular Legs) 3/8-16 x 1 1/4"	.06
	Leg Bolt (Metal Legs) 3/8-16 x 2 3/8"	.12
	Leg Bolt Washer	.02
	Light Box Mounting Bolt 3/8-16 x 4"	.14
1A-2591	Cash Box Divider 2 1/2" Deep	\$.20
1A-2591-1	Cash Box Divider 4 1/2" Deep	.20
20-8710	Curved Blue Spring Washer	.02
21B-6597	Front Moulding Casting (R. H.)	1.20
21B-6596	Front Moulding Casting (L. H.)	1.20
B-4669	Hinge Assembly Wooden Doors	1.40
C-5669-1	Cash Box 4 1/2" Deep	4.40

COMPLETE ASSEMBLIES

D-4798	100 Step Unit	\$25.00
B-5053	Jet Bumper Assembly	6.50
B-5073	Ball Release Assembly	6.00
B-5104	Ball Kicker Assembly	5.00
C-5161	Batter Unit Comp. (Specify Game)	15.00
B-5163	Flipper & Coil Assembly	5.00
B-5247	Ball Shooter Assembly	4.00
E-5590	Disappearing Jet Bumper Ass'y.	25.00
E-5613	Pitcher Unit Ass'y. (Specify Game)	40.00
C-5676	Ball Lift Assembly	3.50
C-5694	50 Step Unit (Resetting Type)	20.00
C-5726	10 Step Unit	20.00
C-5726A	10 Step Unit	20.00
C-5745	50 Step Unit (Non Resetting Type)	20.00
E-5770	Pitcher Unit (Official Baseball)	40.00
B-5839	Swinging Target Assembly	9.50
C-5866	Replay Unit	20.50
B-6043	Swinging Target (Slave Unit)	6.00
B-6045	Swinging Target Assembly	14.50
B-6217	Drop Target Assembly	7.50
B-6228	Metal Flipper and Coil Assembly	5.50
D-6278	Complete Target Unit	82.00
C-6279	Target Motor Unit	22.50
C-6279-1	Target Motor Unit	22.50
B-6288	Home Run Pocket Assembly	5.50
C-6296	New 10 Step Unit (with Printed Circuit)	18.00
C-6296A	New 10 Step Unit (without Printed Circuit)	16.50
B-6301	Playfield Lock Assembly	5.00
D-6322	Pitcher Unit Assembly	35.00
C-6330	"Bulls Eye" Home Run Target Unit	15.00
D-6336	Target Unit (Complete Unit)	75.00
D-6340	New Motor Unit (Less Switches)	35.00

DOORS

	Wood Door (Specify Game)	\$ 4.00
	Metal Door with 5c or 10c Rejector (Single Chute)	35.00
	Metal Door with Rejectors (Twin Chute)	45.00
	Metal Door with Rejector Mounting Pads less Rejectors (Single Chute)	28.00
	Metal Door with Rejector Mounting Pads less Rejectors (Twin Chute)	31.00
C-5490-1	Metal Door (Single Chute)	4.50
C-5490-2	Metal Door (Twin Chute)	4.75

ROAD RACER PARTS

1A-2770-2	Collector Ring Insulator	\$.16
1A-2994	Track Screw Bracket	.20
1A-3013	Thumb Screw Bracket	.30
1B-3014	Latch (Top Section)	.25
2A-2816	Track	1.00
2A-2818	Belt Coupler	1.20
2A-2823	Car Shaft	.45
2A-2826	Steering Crank Collar	.40
2A-2831	Commutator Bushing	.70
2A-2827	Drum Shaft Road Racer	.18

BASEBALL CABINETS

1962 World Series & Extra Inning

	Cabinet Only	\$65.00
	Light Box Only	25.50
	Light Box Door Only	6.75
	Light Box with Door	31.00
	Light Box Removable Side Moulding	4.00
	Screened Light Box Glass	18.00
	Screened Playboard	45.00
1A-3026	Rear Moulding Stainless Steel	7.50
1D-2887-1	Right Side Moulding Stainless Steel	9.50
1D-2888-1	Left side Moulding Stainless Steel	9.50
1D-2887-64	Side Moulding (R)	11.50
1D-2888-64	Side Moulding (L)	11.50
11D-154-58	Front Moulding - Less Hardware (Short-Stop)	25.00
11D-154-59	Front Moulding - Less Hardware (Pinch Hitter)	25.00
11D-154-60	Front Moulding - Less Hardware (Official Baseball)	25.00
11D-154-61	Front Moulding - Less Hardware (Batting Champ)	25.00
11D-154-62	Front Moulding - Less Hardware (World Series - Extra Inning)	25.00
11D-154-63	Front Moulding - Less Hardware (Major League - Big Inning)	25.00
11D-154-64	Front Moulding - Less Hardware "Grand Slam" - "10th Inning"	25.00
20B-8719-1	Glass Channel	1.50
C-5669	Cash Box	4.00
1E-2263-2	Metal Legs (each)	3.00
B-6310-58	Front Mouldings with Hardware (Short-Stop)	35.00
B-6310-59	Front Mouldings with Hardware (Pinch-Hitter)	35.00
B-6310-60	Front Mouldings with Hardware (Official Baseball)	35.00
B-6310-61	Front Mouldings with Hardware (Batting Champ)	35.00
B-6310-62	Front Mouldings with Hardware (World Series - Extra Inning)	35.00
B-6310-63	Front Mouldings with Hardware (Major League - Big Inning)	35.00
B-6310-64	Front Mouldings with Hardware "Grand Slam" - "10th Inning"	35.00

MISCELLANEOUS BASEBALL PARTS

1A-2949	Panel Support (Batting Champ)	\$.20
1B-2726	Back Stop	1.00
1E-1936	Ball Hole Deflector (rear playboard)	2.50
3A-7051	Curved Front Acetate (Shortstop)	9.50
3B-7062	Playfield Ball Ramp	1.20
30C-7080-64	Home Run Plastic "Grand Slam"	12.00
30C-7080-64-1	Target Unit Plastic "10th Inning"	4.50
30C-7080-59	Home Run Plastic (Pinch Hitter)	4.50
30C-7080-61	Home Run Plastic (Batting Champ)	4.50
30C-7080-62	Home Run Plastic (World Series - Extra Inning)	4.50
30C-7080-63	Home Run Plastic (Major League)	12.00
30C-7080-63-1	Home Run Plastic (Big Inning)	12.00
30C-7080-63-2	Home Run Plastic (Big Inning - Chicago Model)	4.50
D-5164	Ball Deflector Cover (Red)	5.40
A-5703	Pitcher Ball Flap	1.00
A-5703R	Pitcher Ball Flap Assembly	1.00
A-5703-64	Ball Flap Assembly	1.00

ROAD RACER PARTS (cont.)

3A-7087	Insulator Bushing	.30
5A-6522-2	Solder Lug	.03
8A-7114	Screened Display Glass	23.00
8A-7115	Mirror	12.00
10A-55	Spring	.05
10A-55-A	Spring	.05
12A-6314	Steering Link	.32
14A-7741	Drum Unit Motor	15.00
14A-10794	Timer Unit Motor	7.00
20A-8713-25	'C' Ring Fastener	.08
20A-8713-31	'C' Ring Fastener	.05
20A-8713-37	'C' Ring Fastener	.06
20A-8713-75	'C' Ring Fastener	.12
20A-8715-71	Flat Washer	.02
20A-8725	1/4 x 45" Leather Belt	2.20
20A-8726	1/4 x 42" Endless Leather Belt	5.20
20A-8728-R	Automobile	1.20
20D-8729-R	Steering Wheel	14.00
20A-8731	Ball Race	1.70
20A-8732	Nut Retainer	.10
21A-118	4" Pulley 3/8" Hole	1.60
21A-118-1	4" Pulley 3/8" Hole	1.60
21A-119	2" Pulley 5/16" Hole	.80
21A-120	1 1/2" Pulley 5/16" Hole	.60
22A-105	Indicator Dial	3.00
22A-105-1	Front Scenery	7.50
22A-105-2	Left Side Scenery	7.50
22A-105-3	Right Side Scenery	7.50
23A-6314	#47 Collar Button	.03
23A-6406	Rubber Grommet	.03
23A-6414	Rubber Grommet	.03
B-5760-3	Collector Ring & Pin	.32
B-5911	Mounting Plate	4.50
A-5912	Idler Arm	1.30
A-5913	Carriage	3.20
A-5914	Crank	1.00
A-5915	Steering Crank	.50
A-5916	Steering Hub Cover	3.50
B-5917	Steering Wheel	32.50
A-5919	Drum & Cover	56.00
A-5920	Commutator	2.50
A-5921	Timer Motor Bracket	.75
A-5922	Motor Plate	.60
A-5923	Drum Motor Mount	.80
A-5924	Commutator Brush	.45
A-5925	Timer Motor Cam	.90
A-5926	Drum End	7.00
A-5927	Carriage Bracket	1.00
A-5929	Sound Box	3.50
A-5930	Steering Wheel Bearing	10.00
A-5932	Pointer	.30
A-5933-1	Car Contact (Small)	.20
A-5933-2	Car Contact (Medium)	.20
A-5933-3	Car Contact (Large)	.20
A-5934	Steering Shaft	1.75
D-5935	Steering Mechanism	30.00
C-5936	Carriage Bracket	5.95
A-5937	Cash Box	1.50
A-5938	Cash Box Cover	.85
A-5939	Thumb Screw & Bracket	1.00
A-5940	Thumb Screw	.60

ROAD RACER PARTS (cont.)

A-5941	Thumb Screw Latch	.35
B-5942	Drum Motor Unit	17.50
B-5943	Timer Motor Unit	10.50
21A-117R	Drum Mounting Hub	.60
POOL TABLE PARTS		
	Cash Box Door	\$ 3.00
1A-2897	Hinge Bracket	.30
1A-2898	Reset Pivot Mounting Bracket	.65
1A-2901	Latch Plate	.60
1A-2914	Coin-Chute Brkt	.20
1A-2950	Coin Chute Adaptor	.60
2A-2811	Hinge-Shoulder Screw	.18
3A-7081	Rail Insert (Plastic)	.06
3A-7082	Plexi-Glass Window	4.75
9A-7542	10c Coin Chute-Duplex	18.00
9A-8608	25c Coin Chute	12.00
11C-141-1C	Covered Rail End (75" Pool Table)	7.10
11C-141-C	Covered Rail End (90" Pool Table)	8.00
11C-142-1C	Covered Rail Right (75" Pool Table)	7.10
11C-142-C	Covered Rail Right (90" Pool Table)	8.00
11C-143-1C	Covered Rail Left (75" Pool Table)	7.10
11C-143-C	Covered Rail Left (90" Pool Table)	8.00
20A-6385	Plastic Shake Bottle	2.00
20A-6542-W	Cash Box Lock	1.75
20A-7537	Billiard Chalk	.08
20A-7538	48" Cue Stick (75" Pool Table)	4.00
20A-7539	Chalk Holder	.15
20A-7540	Chalk Cord	.08
20A-7569	57" Cue Stick (90" Pool Table)	7.30
20A-8603	Marker Button (Set-20 Black, 20-White)	1.25
20A-8605	1 Set Peas (1 to 15)	1.20
20B-8617-A	Slate Top 35 1/4" x 67 1/2" (75" Pool Table)	82.00
20A-8617-B	Slate Top 43" x 83" (90" Pool Table)	119.00
20A-8618	2 1/4" Ball (1 to 15)	3.70
20A-8618-C	2 3/8" White Cue Ball	4.00
20A-8619	Triangular Ball Rack	3.00
20A-8720	Cash Box	.68
20A-8721-1	Rail Cloth 5 x 34 1/4" (75" Pool Tbl.)	1.30
20A-8721	Rail Cloth 5 x 41" (90" Pool Table)	1.50
20A-8722	Drawer Lock	1.75
20A-8723-1	Slate Cloth 39" x 71 1/4" (75" Pool Table)	26.00
20A-8723	Slate Cloth 47" x 87" (90" Pool Tbl.)	31.00
23B-6411	Rubber Corner Pocket	2.00
23B-6412	Rubber Side Pocket	2.00
23B-6413	Gully Boot (Rubber)	2.40
A-5842	Ball Release Assembly	3.20
A-5843	Pivot Arm Assembly	.95
C-5845	Ball Gate	12.00
B-5848	Connecting Link Assembly	1.10
A-5853	Pivot Bracket Assembly	1.35
B-5872-1	Slate with Cloth Cover (75" Pool Table)	110.00
C-5872-2	Slate with Cloth Cover (90" Pool Table)	150.00
B-5882	Ball Separator (90" Pool Table)	7.50
B-5883	Ball Separator (75" Pool Table)	7.00

POOL TABLE PARTS (cont.)

21D-6599	Chrome Corners-Pool Table ..	\$15.00
23A-6410	Rubber Rail	ft. 1.09

TEN STRIKE & TEN PINS

Miscellaneous Parts

1A-2464	Switch Bracket	\$.15
1A-2465	Mannikin Coil Bracket (Rear).....	\$.35
1A-2477	Mannikin Coil Bracket (Front).....	.50
1A-2479	Plexiglass Bracket	1.50
1A-2484	Front Molding (Specify Ten Strike or Ten Pins)	3.50
2A-2697	Arm Activating Shaft.....	.72
2A-2709	Brass Tubing for Coil As-20-900....	.80
2A-2711-1	Mannikin Arm Shaft Bearing (Short).....	.50
2A-2711-2	Mannikin Arm Shaft Bearing (Long).....	.70
3A-7030	Plexiglass Hood (Ten Strike)	35.00
3A-7050	Plexiglass Hood (Jumbo Ten Strike)	45.00
10A-165	Ball Release Spring	.20
10A-167	Arm Return Spring	.20
20A-8641	Pin Magnet.....	1.00
20A-8646	1 1/4" Steel Ball	1.50
20A-8650-10	Taper Pin for Pinion Gear	.04
20A-8650-12	Taper Pin for Solenoid Crank	.04
20A-8650-20	Taper Pin for Arm & Gear Assy.....	.05

TURNTABLE ASSEMBLY (Nags)

E-5771	Turntable Assembly Complete.....	\$75.00
1A-2528	Motor Mounting Bracket	.80
1A-2785	Turntable Plate (Under Playfield)...	.60
2A-2775	Turntable Driven Coupler.....	.75
2A-2776	Turntable Drive Coupler.....	.75
3A-6040	Jet Bumper Cap (Spe. No. on Cap) ..	.45
11C-111	Turntable Disc (Top)	4.50
14A-7737	Gear Motor.....	12.00
20A-6559	Thrust Bearing	.75
B-5053	Jet Bumper Assembly.....	6.50
A-5324	Bumper Switch Assembly	.60
A-5748	Turntable Drive Plate Assy.....	.70
A-5751	Turntable Roller Assembly	.60
A-5752	Turntable Roller Assembly.....	.70
A-5754	Drive Shaft Assembly	.80
B-5759	Mounting Bracket & Brush Assy.....	3.00
B-5759-1	Mounting Bracket & Brush Assy.....	3.20
B-5761	Commutator Assembly.....	15.80

HORSE UNIT ASSEMBLY

E-5777	Horse Unit Assembly Complete	\$110.00
1A-2813	Clutch Washer	.06
3A-6018	Sprocket.....	.50
10A-93	Chain Connecting Spring	.05
10A-94	Friction Drive Spring	.07
14A-6716	Motor	15.00
20A-6529	Horse Chain	.50
20A-6529-1	Drive Chain	.20
20A-7550	Felt Washer	.06
20A-7551	Friction Washer (Leather).....	.06
20A-8673	Horse Assy. (Turf Champ Only).....	
	Specify No. of Horse	2.00
A-4472	Horse Carriage Bracket Assy.....	1.10

HORSE UNIT ASSEMBLY (cont.)

A-4488	Brake Relay Latch	.60
A-5668	Brake Relay	4.00
A-5668-1	Brake Relay Armature Assembly...	.50
A-5671-A	Brake Relay Assy. (Complete)	5.00
A-5671-B	Brake Relay Assy. (Complete)	5.15
A-5783	Horse Assy. (Specify No. on Horse)	.75
SW-1A-22A-2	Double Break Switch	.75
SW-1A-25	Make Switch	.60
SW-2A-5	Break Switch	.60
Y-31-1300	Brake Relay Coil	1.60

PLASTIC PARTS

3A-6000	Small Plastic Post	\$.10
3A-6001	Large Plastic Post	.14
3A-6003	Large Rollover Guide.....	.08
3A-6004	Medium Rollover Guide	.08
3A-6005	Small Rollover Guide	.07
3A-6007-R	Plastic Flipper-small "F" Spe. color...	.20
3A-6007-L	Plastic Flipper-large "F" spe. color...	.20
3A-6008	Jet Bumper Body.....	.22
3A-6009-A	Jet Bumper Base	.14
3A-6013	Nylon Plunger	.10
3A-6014	Nylon Flipper Bushing	.30
3A-6015-A	Eject Hole Shield	.12
3A-6015-C	Eject Hole Shield	.12
3A-6016	Small Rollover Button	.10
3A-6020	Round Bumper Cap (Plain).....	.14
3A-6020	Round Bumper Cap (Lettered)	.18
3A-6021-A	Bumper Assy. - wafer with plastic stem, less rubber ring & socket	1.00
3A-6032A	Amber Sleeve	\$.02
3A-6035	Jet Bumper Wafer-plastic stem	.22
3A-6040	Jet Bumper Cap - sunburst edge, colored rim, white insert-(Plain)...	.40
3A-6040	Jet Bumper Cap - sunburst edge, colored rim, white insert-(Let.)...	.45
3A-6056	Bumper Wafer - Plastic Stem	.22
3A-6091	Target Plastic 1 1/8"	.20
3A-6091-A	Target Plastic 1"	.20
3A-6092	1" Plastic Insert (Playfield)	.10
3A-6095	3/4" Plastic Insert (Playfield)	.07
3A-6097	R. O. Button Holder 1-3/16"	.26
3A-7023	Acetate Cover (Service Call).....	.04
3A-7024	Acetate Score Card Cover	.06
3A-7034-1	Plastic Lite Hood 1 1/2" Dbl. Apron ..	.16
3A-7035	Plastic Lite Hood 2 1/8" Dbl. Apron...	.16
3A-7036	Plastic Lite Hood 2 1/8" Single Apron	.18
3A-7037	Plastic Lite Hood 1 1/2" Single Apron	.18
3B-7062	Ball Ramp	1.20
3A-7065	Bushing-Kick Off Plunger	.30
3C-7070	Cam & Ratchet Hub	.40
3A-7086	Regular Bumper Body	.22
3A-7124	Coin Switch Actuator	.20
3A-7125	Ratchet Pawl	.25
3A-7126	10 Step Unit Switch Actuator	.30
3B-7127	Drive Pawl	.35
3A-7128	Ratchet and Cam	.40
3A-7134	Arch Ball Rail 1964BB	Ft. .20

MOTORS

14A-6716	Horse Unit Motor.....	\$15.00
14A-6724A	Man Running Unit Motor.....	12.00
14A-6734	Target Motor (Safari-Polar Hunt).....	12.00
14A-6736	Swinging Target Motor (Safari).....	12.00
14A-6738A	Score Motor (All 5-Ball Type Games).....	10.00
14A-6738-50	Score Motor 50 Cycle.....	12.00
14A-7704	Pitcher Unit Motor (4 Bagger-Only).....	12.00
14A-7722	Score Motor (Ten Pins & Ten Strike).....	12.00
14A-7723	Pin Reset Motor (Ten Pins & Ten Strike).....	12.00
14A-7724	Ball Lift Motor (Ten Pins & Ten Strike).....	12.00
14A-7726A	Pitcher Unit Motor (All Baseball Games Except Four Bagger & Official Baseball).....	12.00
14A-7731A	Search Unit Motor (On Gun Types).....	12.00
14A-7732A	Score Motor (Bouncing Ball Type, Except Titan).....	10.00
14A-7735A	Motor for Disappearing Jet Bumper.....	10.00
14A-7735A-50	Motor for Disappearing Jet Bumper-50 Cycle.....	12.00
14A-7736A	Score Motor (Titan).....	10.00
14A-7737	Turntable Motor (Nags).....	12.00
14A-7739C	Pitcher Unit Motor (Official Baseball).....	12.00
14A-7740-50	Moving Target Motor.....	7.00
14A-7741	Drum Unit Motor (Roadracer).....	15.00
14A-7744-A	Pitcher Motor 1962 World Series and Extra Inning.....	\$15.00
14A-7745	New Swinging Target Motor.....	10.50
14A-7746	Score Motor (5 ball type) 24 volts.....	10.00
14A-7747	Score Motor (5 ball type) 50 cycle-24 volts.....	12.00
14A-7748	Disappearing Jet Bumper Motor-24 volts.....	12.00
14A-7749	Score Motor - 60 Cycle (4 Roses - Only).....	10.00
14A-7750	Score Motor - 50 Cycles (4 Roses - Only).....	12.00
14A-7751	Man Running Motor - 60 Cycle 1963 1964BB.....	12.00
14A-7752	Pitcher Unit Motor - (60 Cycle) (1963 Major League - Big Inning).....	15.00
14A-7752-50	Pitcher Unit Motor - (50 Cycle) (1963 Major League - Big Inning).....	15.00
14A-7753	Target Unit Motor - (60 Cycle)..... 1963 1964BB.....	12.00
14A-7754	Score Control Motor - (60 Cycle)..... New Motor Unit.....	12.00
14A-7755	Pitcher Unit Motor - (60 Cycle)..... "Grand Slam" "10th Inning".....	15.00
14A-7756	Score Control Motor - (50 Cycle) New Motor Unit.....	12.00
14A-7757	Man Running Motor - (50 Cycle) 1963 1964BB.....	12.00
14A-7758	Target Unit Motor - (50 Cycle) 1963 1964BB.....	12.00
14A-7759	Pitcher Unit Motor - (50 Cycle) "Grand Slam" "10th Inning".....	15.00
14A-10794	Timer Motor Used on Road Racer - Voice-O-Graph.....	7.00

TRANSFORMERS

15A-6764X-1	Transformer (50 Volt) 5 Ball Type Games.....	\$12.00
15A-6767-50	Transformer (50 Volt) (50 Cycle).....	18.00
15A-6768	Transformer (Bouncing Ball Gun Types).....	14.00
15A-6771	Transformer (all 5 ball type games) 24 volts.....	\$14.00
15A-6773	Transformer (all 5 ball type games) 50 cycle - 24 volts.....	20.00

COIN CHUTES and REJECTORS

9A-7542	ABT Duplex 10c Chute.....	\$28.00
9A-8529	National 10c Rejector.....	8.00
9A-8551	National 5c Rejector.....	8.00
9A-8552	National 25c Rejector.....	8.00
9A-8608	ABT 25c Push Chute..... All Foreign Rejectors.....	12.00
9A-8621	ABT 5c Duplex Push Chute.....	\$28.00
9A-7544	ABT 10c Push Chute.....	19.00

NOTE: When ordering foreign coin chutes or rejectors, enclose sample of coin.

BALLS

3A-6086	1½" Catalin Ball (Specify Color).....	\$1.00
20A-6403	Rubber Ball (Vanguard) (Set of 7 Balls).....	1.50
20A-6500	1-1/16" Steel Ball.....	.60
20A-6518	¾" Steel Ball (Baseball Games).....	.40
20A-6519	15/16" Steel Ball (Roll Tilt Assy.).....	.50
20A-6520	¾" Steel Ball (Official Baseball).....	.40
20A-8618	2¼" Billiard Ball (Num. 1-15).....	3.70
20A-8618C	2¾" White Cue Ball.....	4.00
20A-8646	1¼" Steel Ball (Ten Strike & Ten Pins).....	1.50
20-7534	2½" Red Balls.....	\$ 3.00
20-7535	2½" White Balls.....	3.00

FUSES, FUSE HOLDERS and RESISTORS

5A-6134-A	4 Clip Fuse Block.....	\$1.20
5A-6134-C	1 Clip Fuse Block.....	.30
5A-6507	5 Amp Fuse.....	.06
5A-6508	10 Amp Fuse.....	.05
5A-6509	20 Amp Fuse.....	.05
5A-6567	15 Amp Fuse.....	.05
5A-6569	1 Amp Slo Blo Fuse.....	.30
5A-7518	2 Amp Slo Blo Fuse.....	.28
5A-8633	3 Amp Slo Blo Fuse.....	.28
20A-8628	500 OHM 10 Watt Resistor.....	.35
20A-8629	500 OHM 7 Watt Resistor.....	.35
5A-8713	.75 Amp Slo Blo Fuse.....	\$.30
5A-8714	1.6 Amp Slo Blo Fuse.....	.28
5A-6171	5 Clip Fuse Block.....	1.35

A-22-550	Drop Target Coil	\$ 1.50
A-23-600	Step Up Coil	1.50
A-23-650	Step Up Coil	1.50
A-23-750	"Bullseye" Reset Coil	1.60
A-26-1350	Ball Release Coil	\$1.65
A1-23-750	"Goal Kicker" Coil	\$1.60
A2-23-750	Bell & Knocker Coil	1.65
B-26-800	Reset Coil	1.50
C2-26-800	Chime Coil	1.50
D-22-1150	Relay Bank Reset	2.20
D-24-1150	Relay Bank Reset	2.20
D-24-1400	Relay Bank Reset	2.20
D-24-1600	Relay Bank Reset	2.20
DU-23-740	Drum Unit Coil	1.40
FL-21/28	Flipper Coil	1.65
G-22-550	Jet Bumper Coil	1.60
G-23-650	Shooter Coil	1.60
G-23-750	Kicker Coil	1.65
G-24-850	Eject Coil	1.60
H23-870	Bat Coil	\$ 2.50
IT-27-800	Trip Relay Coil	1.50
M-29-1000	Relay Coil	1.30
M-29-1100	Relay Coil	1.30
M-30-1300	Relay Coil	1.30
M-30-1400	Relay Coil	1.30
M-36-5500	Relay Coil	1.40
X-25-400	Relay Bank Coil	.80
X-27-500	Relay Bank Coil	.80
X-27-700	Relay Bank Coil	.80
Z-25-400	Relay Coil	1.30
Z-27-1000	Relay Coil	1.60
Z-28-1200	Relay Coil	1.55
Z-35-4200	Relay Coil	1.70
5A-6201	Coin Lockout Coil	1.50
20A-8702	Curve Magnet Coil	3.50

COILS FOR 50 VOLT GAMES

A-25-950	Step Up Coil	1.60
A-26-1100	Step Up Coil	1.60
A-27-1650	Eject Coil	1.50
A-30-2700	Ball Release Coil	1.65
A1-26-1100	Shooter Coil	1.50
A2-26-1100	Knocker Coil	1.60
A2-26-1350	Bell Coil	1.60
A3-25-950	Target Hole Coil (Gun Type)	1.70
AS-20-900	Mannikin Coil	5.50
B-29-1600	Reset Coil	1.50
C-28-1100	Old Knocker Coil	1.50
D-22-1150	Relay Bank Reset	2.20
D-24-1150	Relay Bank Reset	2.20
D-24-1400	Relay Bank Reset	2.20
D-24-1600	Relay Bank Reset	2.20
DU-26-1350	Drum Unit Coil	1.60
E-32-1800	Relay Coil	1.60
E-33-2500	Relay Coil	1.60
FL-25-31	Flipper Coil	1.65
G-25-1100	Jet Bumper Coil	1.65
G-26-1400	Kicker Coil	1.70
GI-25-1100	Disappearing Bumper Coil	1.65
GK-23-1600	Kicker Coil (Gun Type)	2.50

H-22-700	Bat Coil (Official Baseball)	2.40
H-24-1150	Bat Coil (Except Official Baseball)	2.50
IT-29-1000	Latch Relay Coil	1.10
IT-30-1500	Latch Relay Coil	1.25
IT-32-2100	Latch Relay Coil	1.25
IT-35-4200	Latch Relay Coil	1.40
M-28-600	Relay Coil	1.10
M-29-950	Relay Coil	1.20
M-31-1700	Relay Coil	1.30
M-32-1800	Relay Coil	1.30
M-33-2800	Relay Coil	1.40
M-34-3100	Relay Coil	1.40
X-28-800	Relay Bank Coil	.80
X-30-1000	Relay Bank Coil	.80
Y-31-1300	Brake Relay Coil (Turf Champ)	1.30
Z-30-1800	Relay Coil	1.60
Z-31-2300	Relay Coil	1.70
Z-35-5500	Relay Coil	1.60
20A-8622	Coin Lockout Coil	1.50

RUBBER PARTS

23A-6300	5/16" Rubber Ring	\$.05
23A-6301	3/4" Rubber Ring	.06
23A-6302	1" Rubber Ring	.07
23A-6303	1 1/4" Rubber Ring	.08
23A-6304	1 1/2" Rubber Ring	.08
23A-6305	2" Rubber Ring	.10
23A-6306	2-5/16" Rubber Ring	.14
23A-6307	2 3/8" Rubber Ring	.16
23A-6308	3 3/8" Rubber Ring	.18
23A-6309	3 7/8" Rubber Ring	.20
23A-6310	5" Rubber Ring	.30
23A-6311	5/16" Jumbo Rubber Ring	.05
23A-6312	Rubber Bumper	.15
23A-6313	Rubber Bumper	.10
23A-6313-1	Rubber Grommet (Drop Target)	\$.04
23A-6314	Rubber Bumper	.03
23A-6316	Large Rebound Rubber	.30
23A-6319	Rubber Grommet	.03
23A-6322	Arch Rubber	Ft. .20
23A-6323	Bat Sleeve	.25
23A-6327	Shooter Tip	.08
23A-6332	Dead Rubber Ring for Plastic Bump	.07
23A-6350	Idler Wheel	2.00
23A-6359	Live Rubber Ring for Plastic Bump	.07
23A-6366-1	Ball Deflector Rubber	.66
23A-6372	Rubber Bumper	.10
23A-6400	Arm Post Rubber	.16
23A-6406	Rubber Grommet	.03
23A-6408	Rubber Bumper	.06
23A-6409-1	Front Moulding Rubber Strip	.32
23A-6410	Rubber Rail (Pool Table)	1.09 ft.
23B-6411	Rubber Corner Pocket	2.00
23B-6412	Rubber Side Pocket	2.00
23B-6413	Gully Boot (Rubber)	2.40
23A-6414	Rubber Grommet	.03
23A-6420	Rubber Grommet (Relay Mtg. etc.)	.04
23A-6425	Rubber Bumper (Miniature Post)	.04
23A-6428	Rubber Bumper	.06
23A-6429	6" Rubber Ring	.40
23A-6430	Ball Gate	.75

SWITCHES and SWITCH ASSEMBLIES

SW-1A	Ball Trough (Playfield Bottom)	.44
SW-1A-1	Shake Tilt	.60
SW-1A-2	Lane Roll-over (Single)	.44
SW-1A-3	Flipper Button	.55
SW-1A-5	Flipper	.44
SW-1A-6	Ball Trough (Cabinet)	.44
SW-1A-20	Roll Tilt	.20
SW-1A-22A-2	Double Break Sw. Horse Unit	.75
SW-1A-25	Make Switch Horse Unit	.60
SW-1A-27	Eject Hole	.45
SW-1A-34	Trigger Switch	.50
SW-1A-45	Roll-Over Button (Make)	.50
SW-1A-47	Bat Unit Switch	\$.44
SW-1A-49	Ball Gate Switch	.55
SW-1A-50	Drop Target Make Switch	.44
SW 1A-51	Target Switch (Make)	.44
SW 1A-55	Home Run Hole Switch	.44
SW 1A-56	"Bulls Eye" Target Switch	.44
SW 1C	Motor Cam Switch	.55
SW 1C-1	Motor Cam Switch	.44
SW 1CA	Motor Cam Switch	.55
SW 1CA-1	Motor Cam Switch	.44
SW 1CA-2	Motor Cam Switch	.44
SW-1-M1	Make Switch "M" Relay	.44
SW-1M-3	Make Switch	.44
SW-1M-4	Coin Trip Switch (Venezuela Coin)	.44
SW-1M-5	Coin Trip Switch	.44
SW-1M-75	"0" Index Switch - 10 Step Unit	.44
SW-1U	10 Step Unit Switch	.55
SW-1U-1	M Switch Drum Unit	.44
SW-1U-2	M Switch Drum Unit	.44
SW-1Z	Make Switch	.44
SW-1Z1	Make Switch	.44
SW-2A-3	Kick-Off	.45
SW-2A-5	Break Switch Horse Unit	.60
SW 2CA	Motor Cam Switch	.55
SW 2CA-1	Motor Cam Switch	.44
SW-2M-1	Break Switch	.44
SW-2U-8	Disappearing Bumper (Motor)	.45
SW-2U-12	E.O.S. Switch - 10 Step Unit	.44
SW-2Z	Break Switch	.44
SW 3A	Replay Reset Button Switch	.55
SW 3CA-1	Motor Cam Switch	.55
SW-3-M1	Make Break Switch "M" Relay	.68
SW-3U-3	Cam Switch	.50
SW-3Z	Make Break Switch	.68
SW-10A-5	Single Outhole	.44
SW-10A-6	Bat Handle Switch	.55
SW-10A-7	Anti-Cheat (Door)	.65
SW-10A-9	Bat Unit Switch	.50
SW-10A-11	Swinging Target Switch	.55
SW-10A-14	Target Switch	.55
SW-10C	Make Switch (Motor)	.55
SW-10C-1	Make Switch (Motor)	.55
SW-10C-2	Bat Lever Switch	.55
SW 10CA	Motor Cam Switch	.55
SW 10CA-1	Motor Cam Switch	.44
SW 10CA-2	Motor Cam Switch	.44

SW-10-M1	Make Switch "M" Relay	\$.44
SW-10U-7	Drum Unit Drive Make Switch	.44
SW-10-Z	Make Switch	.44
SW-11A-2	Lane Roll-over (Double)	.50
SW-11A-8	Switch (Horses #1 to 5) Brake Re	.44
SW-11A-9	Switch (Horse #6) Brake Re	.44
SW-11A-10	Kicker	.50
SW-11A-18	Home Run Hole Switch	.55
SW-11A-19	Flipper Button Switch	.60
SW 11A-20L	Target Switch (Make-Make)	.68
SW 11A-20R	Target Switch (Make-Make)	.68
SW-11C	Pitcher Cam Switch	.60
SW-11M-5	"0" and "9" Position Switch 10 Step Unit	.55
SW-12A-3	Disappearing Bumper	.85
SW-13U-1	Switch	.60
SW-20A	Roll-over Button (Break)	.50
SW-20-C	Break Switch (Motor)	.55
SW-20C-1	Break Switch (Motor)	.44
SW 20CA	Motor Cam Switch	.55
SW 20CA-1	Motor Cam Switch	.44
SW-20-M1	Break Switch "M" Relay	.44
SW-20U-1	M Switch Drum Unit	.44
SW-20-Z	Break Switch	.44
SW 30C	Motor Cam Switch	.60
SW 30C-1	Motor Cam Switch	.68
SW 30CA	Motor Cam Switch	.60
SW 30CA-1	Motor Cam Switch	.55
SW 30CA-2	Motor Cam Switch	.55
SW-30-M1	Make Break Switch "M" Relay	.68
SW-31-B	Drop Target Switch	.75
SW-221-U-1	Switch	.60
5A-8711-1	Mercury Tilt Switch	.60
A-4735	Target Switch Assembly	1.35
A-4735 B	Target Switch Assembly	1.60
A-4783	Jet Bumper Switch Assembly	1.10
A-4834	Stand Up Switch Assembly	.55
A-5324	Bumper Switch Assembly	.60
A-5325	Tilt Switch Assembly	.88
A-5422	Man Running Base Switch Assy.	.70
A-5422-1	Man Running Run Switch Assy	.70

FASTENERS

12A-6223	Hairpin Clip	\$.04
12A-6225	Hairpin Clip	.04
12A-6226	Hairpin Clip	.04
12A-6227	Hairpin Clip	.04
12A-6267	Snap-on Cotter Key	.04
20A-6514	Tinnerman Speed Nut	.04
20A-6516	Tinnerman Speed Nut	.03
20A-8712-15	"E" Retaining Ring	.02
20A-8712-18	"E" Retaining Ring	.03
20A-8712X-21	"E" Retaining Ring	.03
20A-8712-25	"E" Retaining Ring	.04
20A-8712-31	"E" Retaining Ring	.03
20A-8712-37	"E" Retaining Ring	.05
20A-8713-25	"C" Ring Fastener	.08
20A-8713-31	Tru-Arc Ring	.05
20A-8713-37	"C" Ring Fastener	.06
20A-8713-75	"C" Ring Fastener	.12

MISCELLANEOUS HARDWARE

3-48 (specify length) Round Head Machine Screw.....	\$.60C
5-40 (specify length) Round Head Machine Screw.....	.60 C
6-32 x 1 1/8 Oval Head Nylock Flipper Screw.....	5.42C
5-40 Steel Hex Nut.....	.60 C
6-32 Steel Hex Nut.....	.60 C
6-32 Elastic Stop Nut.....	.06
8-32 Elastic Stop Nut.....	.07
8-32 Steel Hex Nut.....	.75 C
10-32 Steel Hex Nut.....	.75 C
1/4-20 Steel Hex Nut.....	1.40 C
7/16 x 20 Hex Jam Nut.....	.06
9/16-18 Hex Jam Nut.....	.08
3/4-10 Hex Jam Nut.....	.10
1/4-20 Wing Nut.....	.04
3/8-16 x 1 1/4" Leg Bolt (Tub. Legs).....	.06
3/8-16 x 2 3/8" Leg Bolt (Metal Legs).....	.12
3/8-16 x 4" Light Box Mounting Bolt.....	.14
8/32 x 1/2 Allen Head Cap Screw.....	8.10 C
8/32 x 1/4 Socket Screw.....	7.62 C
8/32 x 1/4 Hex Head Set Screw.....	.09
1/4-20 x 1 Socket Head Screw.....	.08
1/4-20 x 1 1/2 Socket Head Screw.....	.08
7/16 x 1 x 1/16 Flat Washer.....	1.40 C
1/4 x 1/2 x 1/16 St. Washer.....	1.40 C
3/16 x 2 1/2" Carriage Bolt.....	.06
3/16 x 3" Carriage Bolt.....	.06
3/16 x 5" Carriage Bolt.....	.10
#10 x 4" F. H. Ph. W. S.....	.10
#10 Finishing Washer.....	.02
10/32 x 1 1/4 Winged F.H.M.S.....	.04
10-32 Elastic Stop Nut.....	.02
8-32 x 1/4 Set Screw.....	.02
8A-7024 3/8 x 1 x 1/16 Leg Bolt Washer.....	1.00 C
20A-6514 Speed Nut.....	.04
20A-6530-A 1/16 x 1 Cotter Pin.....	.75 C
20A-8695 1/16 x 3/8 Cotter Pin.....	.50 C
20A-8715-40 5/16 x 5/8 x 1/16 St. Washer.....	1.00 C
20A-8715-47 3/8 x 3/4 x 1/16 St. Washer.....	1.00 C
20A-8716-6 1/8 x 1/2 Roll Pin.....	.02
20A-8716-7 1/8 x 3/8 Roll Pin.....	.03
20A-8789 Thumb Screw.....	.10
20A-8790 Nylon Bearing.....	.22
20A-8793 Slotted Mach. Screw 2 - 56 x 3/16.....	2.00 C
20A-8794 Thread Forming Screw #4 x 1/4	2.00 C
20A-8795 Thread Forming Screw #4 x 3/8	2.00 C
20A-8797 3/8-24 Jam Nut.....	.03
20A-8798 1/4-28 Hex Nut Sem.....	.04

LIGHT SOCKETS

24A-6404-1 Standup Playfield Socket (Long).....	\$.10
24A-6405 Standup Socket (Short).....	.10
24A-6406A Lite Socket.....	.10
24A-6409-A Insert Lite Socket.....	.10
24A-6416 Bumper Socket.....	.10
24A-6431 Light Socket 115V.....	.30
24A-6435 Lite Socket.....	.10
24A-6436 Horizontal Socket (Playfield).....	.10
24A-6437 Disapp. Jet Bumper - Lite Socket.....	.15
24A-6582 Playfield Socket (Short Stand Up).....	.12
24A-6587 Insert Lite Socket.....	.10
24A-6589 Target Unit Lite Socket.....	.12
24A-6590 Insert Lite Socket (Drum Unit).....	.12
B-6069 Lite Socket Strip (Friendship 7).....	1.50

LIGHT BULBS

24A-6549 #44 Bayonet Type Light Bulb.....	\$.12
24A-6550 #55 Bayonet Type Light Bulb.....	.12
24A-6551 #63 Bayonet Type Light Bulb.....	.20
24A-6552 #40 Bayonet Type Light Bulb.....	.12
24A-6583 25 Watt 115 V. Standard Light Bulb-White.....	.70
24A-6584 100 Watt 115 V. Standard Light Bulb-Red.....	1.40
24A-6585 15 Watt 115 V. Standard Light Bulb-White.....	.80
24A-8667 Disappearing Bumper Bulb.....	.20

PRICE LIST

ARRANGED IN NUMERICAL ORDER

Part No.	Description	Price	Part No.	Description	Price
1B-8-189	Bracket	\$.18	1A-2048	Switch Cover Plate	.04
1B-8-508	Coil Bracket	.18	1A-2053A	Coil Mounting Bracket	.45
1B-8-508T	Coil Bracket	.20	1B-2055	Relay Bank Cover	1.00
1A-15	Switch Cover Plate - Steel	.03		Specify Number of Relays)	
1A-96	Switch Limit Bracket	.15	1A-2098	Wiper Blade	.05
1A-322	Flipper Base	.10	1A-2238-1	Coin Entry Plate (Specify 5c or 10c)	.70
1A-335	Flipper Stop Bracket	.30	1B-2242	Target Selector Channel	.30
1A-389B	Tilt Wire Bracket	.10	1A-2259	Bell Mounting Bracket	.45
1A-482	Rebound Bracket	.20	1A-2299	Coin Lockout Armature	.60
1A-497	Roll-over Wire Bracket	.16	1B-2362	Mounting Bracket - 50 Step Unit	1.00
1A-524	Roll Tilt Bracket	.60	1B-2373	Mounting Bracket - Replay Unit	1.00
1A-600	Mounting Bracket	.45	1A-2384	Switch Cover	.16
1A-916B	Fibre Spacer 3/32	.03	1A-2423	Switch Bracket	.25
1A-916L	Fibre Spacer 1/16	.02	1A-2464	Switch Bracket - Ten Strike	.15
1A-916RA	Switch Spacer - Aluminum	.04	1A-2484	Front Moulding (Specify	
1A-916T	Fibre Spacer 1/32	.02		Ten Strike or Ten Pins	3.50
1A-941	Latch Relay Mounting Plate	.70	1B-2499	Bumper Slide Bracket	.60
1A-954	Jet Bumper Armature Link	.14	1A-2503	Bumper Stop	.50
1A-979A	Collector Ring Insulator	.10	1A-2505	Disap. Jet Bumper-Spacer Plate	.25
1A-1101	Switch Bracket	.15	1A-2528	Motor Mounting Bracket	.80
1A-1173	Fibre Link - Ball Release	.25	1D-2530	Pitcher Unit Plate	1.50
1B-1178	Large Bell	1.60	1A-2531	Ball Guide Rail	1.30
1A-1179A	Bell Shell 3 3/8"	.95	1A-2532	Ball Guide Rail	1.20
1B-1192	Link	.30	1A-2546	Cover Mounting Bracket	.50
1A-1231	Jet Bumper Armature Link Fibre	.25	1B-2571	Ball Lift Arm	1.75
1C-1241-1	Metal Shield 3-15/16" Centers	\$.35	1B-2572	Ball Stop	.75
1C-1241-16	Metal Shield 3" Centers	.35	1B-2573	Ball Guide	1.00
1C-1241-17	Metal Shield 4 1/2" Centers	.40	1A-2591	Cash Box Divider 2 1/2" deep	.20
1C-1241-21	Metal Shield 6" Centers	.45	1A-2591-1	Cash Box Divider 4 1/2" deep	.20
1C-1241-28S	Metal Shield 2 1/8" Centers	.30	1B-2726	Back Stop	1.00
1C-1241-29	Metal Shield 4 5/8" Centers	.40	1A-2735	Insulator Coin Lockout	.06
1C-1241-30	Metal Shield 3 3/8" Centers	.35	1A-2739	Return Cup Baffle	.20
1C-1241-33	Metal Shield 4" Centers	.35	1B-2740	"E" Relay Frame	.78
1C-1241-39	Metal Shield 4 3/4" Centers	.40	1B-2746-1	"E" Relay Mounting Bracket (Single)	.50
1C-1241A-43	Metal Shield 5 1/2" Centers (Offset)	.45	1B-2746-2	"E" Relay Mounting Bracket (Dbl.)	.70
1C-1241-43	Metal Shield 5 1/2" Centers	.40	1A-2747	"E" Relay Backing Plate	
1C-1241-44	Metal Shield 2 1/2" Centers	.30		Upper Break	.12
1C-1241-45	Metal Shield 2 3/4" Centers	.30	1D-2759-5	Metal Door Frame (Single Chute)	1.50
1C-1241-45S	Metal Shield 2 3/4" Centers (Star)	.35	1D-2759-6	Metal Door Frame (Twin Chute)	1.50
1C-1241-46	Metal Shield 4 1/4" Centers	.40	1B-2760-2	Coin Entry Plate (10c)	.40
1C-1241-47	Metal Shield 2 1/4" Centers	.30	1B-2760-3	Coin Entry Plate (5c)	.40
1C-1241-49	Metal Shield 1 1/2" Centers	.30	1B-2760-4	Coin Entry Plate (25c)	.40
1A-1248	Switch Cover Plate	.03	1A-2768	Hole Deflector (Official Baseball)	.50
1A-1354	Ball Gate	.35	1A-2770-2	Collector Ring Insulator	.16
1C-1538	Screened Reel	2.75	1A-2771	Collector Ring	.16
1A-1628	Stop Bracket	.40	1A-2785	Turntable Plate (Under Playfield)	.60
1A-1747	Coil Retaining Bracket	.35	1A-2795	Pitcher Cup	.50
1A-1789	Armature Link	.25	1A-2803	Pitcher Arm Stop Bracket	.16
1A-1792	Coil Bracket	.25	1A-2813	Clutch Washer	.06
1A-1834	Coil Bracket	.35	1A-2819	Relay Frame	1.00
1A-1860	Cigarette Holder	.40	1A-2847-1	Flipper Link	.20
1A-1900	Cigarette Holder	.40	1A-2847-2	Flipper Link	.20
1A-1920	Coin Switch Mounting Plate	.40	1A-2847-3	Plunger Link	.20
1B-1921	Coin Switch Bracket	1.00	1B-2851	Upper Arch (Bottom Plate)	2.00
1A-1929	Armature Link	.15	1C-2852	Upper Arch (Top Plate)	
1E-1936	Ball Hole Deflector	2.50		specify game	\$3.00
1A-2000	Wiper Blade	.05	1C-2862	Shelf Trim (Top)	1.40
1A-2005-1	Switch Spacers Bakelite 1/16	.03	1D-2887	Right Side Moulding (Stain Steel)	9.50
1A-2005-2	Switch Spacers Bakelite 1/32	.02	1D-2887-1	Right Side Moulding Stainless	
1A-2005-3	Switch Spacers Bakelite 3/32	.03		Steel (Baseball)	9.50
1A-2005-4	Switch Spacers Bakelite 1/64	.02	1D-2887-64	Side Moulding (R)	11.50
1A-2028	Mounting Plate	.35	1D-2888	Left Side Moulding (Stain Steel)	9.50
1A-2028-1	Mounting Plate	.35	1D-2888-1	Left Side Moulding Stainless	
1B-2034-1	Ball Trough Track Channel	.80		Steel (Baseball)	9.50

Part No.	Description	Price	Part No.	Description	Price
1D-2888-64	Side Moulding (L)	11.50	2A-2387-A	Pivot Screw	.16
1B-2892-2	Rear Moulding Bottom Plate	2.65	2A-2476	Spring Stud	.10
1B-2893	Rear Moulding Top Plate (Stainless Steel)	4.50	2A-2525-A	Flipper Button	.50
1B-2894	Cabinet Front Armor	.55	2A-2527	Jet Bumper Solenoid Plunger	.55
1A-2897	Hinge Bracket	.30	2A-2559	Armature Pin	.20
1A-2898	Reset Pivot Mntg. Brk't.	.65	2A-2572	Coin Reject Plunger	.20
1A-2901	Latch Plate	.60	2A-2573	Actuating Arm Shaft	\$.20
1A-2914	Coin Chute Bracket	.20	2A-2574	Spacer	.15
1A-2924	Bell Mounting Bracket	.25	2A-2577	Roller Stud	.20
1A-2926	Drive Stop Bracket	.20	2A-2578	Roller	.25
1A-2928	Adjustable Stop Bracket	.20	2A-2587	Armature	.60
1A-2931-L	Frame Mounting Bracket	.35	2A-2589-1	Wiper Bushing	.08
1A-2931-R	Frame Mounting Bracket	.35	2A-2597-2	Ratchet Shaft (Resetting Type)	.50
1A-2949	Panel Support (Batting Champ)	.20	2A-2597-2A	Ratchet Shaft (Replay Unit)	.50
1A-2950	Coin Chute Adaptor	.60	2A-2610-1	Ratchet Shaft (Non-Resetting Type)	.40
1A-2961	Insert Hinge (Male)	.30	2A-2640	Target Arm Contact Point	.16
1A-2962	Insert Hinge (Female)	.30	2A-2642	Rifle Pivot Tube	5.00
1A-2994	Track Bracket	.20	2A-2647	Pivot Shaft	.20
1A-3013	Thumb Screw Bracket	.30	2A-2648	Yoke Hinge Pin	.16
1B-3014	Locking Latch (Top Section)	.25	2A-2652	Front Sight	.50
1A-3015	Ball-Lift Deflector	.30	2A-2657	Shoulder Screw	.18
1A-3022	Coin Deflector	.30	2A-2670	Relay Bank Reset Plunger	.70
1A-3026	Rear Moulding Stainless Steel	7.50	2A-2674	Reset Arm Post	.30
1A-3203	Flipper Stop Bracket	.30	2A-2676-1	10 Step Unit Solenoid Plunger	.60
1A-3206	Ball Gate	.30	2A-2689	Lever Pivot Stud	.70
1A-3239	Coil Mounting Bracket	.35	2A-2697	Arm Activating Shaft	.72
1A-3240	Chime Bar	.25	2A-2709	Brass Tubing for Coil AS-20-900	.80
1A-3241	Mercury Tilt Switch Bracket	.50	2A-2710	Bowling Pin Base	.30
1A-3248	Snowshoe Wiper Blade	.05	2A-2711-1	Mannikin Arm-Shaft Bearing (Short)	.50
1A-3251	Trip Relay Armature (new interlock)	.35	2A-2711-2	Mannikin Arm-Shaft Bearing (Long)	.70
1A-3251-1	Latch Relay Armature	.35	2A-2716	Bumper Spacer	.15
1A-3282	Target Leaf Spring	.08	2A-2717	Spring Stud	.15
1A-3293	Target Reset Link	.30	2A-2721	Stop Dog Stud	.20
1A-3295	Home Run Switch Bracket	.85	2A-2723	Stop Dog Pin	.20
1A-3411	Roll-over Wire Bracket	.20	2A-2725	Pitcher Unit Shaft	.60
1A-3412	Light Reflector Shield	.70	2A-2731	Bot Handle Lever	2.50
1B-3430-1	10 Step Unit Brk't. (1 unit)	.50	2A-2732	Stop Adjustment	.20
1B-3430-2	10 Step Unit Brk't. (2 units)	.65	2A-2741	Solenoid Tube Only (Brass)	.50
1B-3430-3	10 Step Unit Brk't. (3 units)	.80	2A-2746	Spring Stud	.10
1B-3430-4	10 Step Unit Brk't. (4 units)	.95	2A-2749	Track Spacer	.40
1A-3431	Coin Switch Cover	.40	2A-2750	Roller	.22
1B-3434	Playfield Lock Plate	.50	2A-2756	Gun Bolt Plug	.50
1A-3435L	Swivel Plate	.24	2A-2767	Drive Coil Plunger	.60
1A-3435R	Swivel Plate	.24	2A-2770	Reset Coil Plunger 50 Step Unit	.60
1B-3437-L	Side Plate (Left)	1.10	2A-2775	Turntable Driven Coupler	.75
1B-3437-R	Side Plate (Right)	1.10	2A-2776	Turntable Drive Coupler	.75
1B-3438-9	Switch Mounting Bracket	.90	2A-2799	Bot Shaft	1.00
1A-3439-9	Connecting Brace	.75	2A-2811	Hinge Shoulder Stud	.18
1A-3440	Impulse Cam	.55	2A-2816	Track	1.00
1A-3441-1	Motor Cam	.50	2A-2818	Belt Coupler	1.20
1A-3441-2	Motor Cam	.50	2A-2823	Car Shaft	.45
1A-3444	Tilt Wire Bracket	.20	2A-2826	Steering Crank Collar	.40
1A-3445	Tilt Bob Bracket	.25	2A-2827	Drum Shaft	.18
1A-3451	Flipper Link - "Beat The Clock"	.35	2A-2831	Commutator Bushing	.70
1A-3459	Coil Bracket Adaptor	.30	2A-2921	Shaft Coupling	1.00
1A-3464	Switch Mounting Bracket	.60	2A-2924	Swinging Target Shaft	.35
1C-3465	Pitcher Unit Plate	1.20	2A-2927	Lock Adjusting Screw	.16
1A-3476	Bullseye Target Coil Bracket	.65	2A-2930	Guide Lock Nut	.14
1A-3477	Bullseye Target Mnt'g. Bracket	.60	2A-2931	Wiper Bushing	.08
1A-3486	Front Moulding Lock Bracket	.60	2A-2938	Grommet Spacer	.05
1A-3492		.80	2A-2944	Target Reset Shaft	.55
2A-2051	Reset Coil Plunger	.60	2A-2944-1	Target Reset Shaft	.60
2A-2080A	Flipper Shaft	.14	2A-2945	Playfield Miniature Post	.20
2A-2129	Ball Lift Tip	.25	2A-2947	Plastic Support Pin	.20
2A-2143	Switch Pin	.18	2A-2948	Retainer Bushing	.16
2A-2265	Shaft Bushing	.25	2A-2952	Armature - (10 Step Unit)	.55
2A-2306-3	Commutator Pin	.05	2A-2953	Coin Trip Weight	.20
2A-2308	Insulator Bushing	.80	2A-2956-9	Motor Cam Shaft	.90
2A-2364	Solenoid Plunger	.60	2A-2957	Motor Cam Spacer	.10
2A-2384	Flipper Button Bushing	.40	2A-2966	Roller Stud	.25
			2A-2968	Tape Roller	.45
			2A-2969	Roller Pin	.20

Part No.	Description	Price	Part No.	Description	Price
3A-102	Plastic Bat	2.50	3B-7062	Ball Ramp	1.20
3A-6000	Small Plastic Post	.10	3C-7063	Home Run Plastic for Pinch Hitter	4.00
3A-6001	Large Plastic Post	.14	3A-7065	Bushing-Kick Off Plunger	.30
3A-6003	Large Rollover Guide	.08	3A-7066	Coil Sleeve	.20
3A-6004	Medium Rollover Guide	.08	3A-7066-1	Coil Sleeve	.20
3A-6005	Small Rollover Guide	.07	3A-7066-2	Coil Sleeve	.20
3A-6007L	Plastic Flipper-large 'F' - spe. color	.20	3A-7067	Coil Sleeve	.20
3A-6007R	Plastic Flipper-small 'f' - spe. color	.20	3A-7067-1	Coil Sleeve	.20
3A-6008	Jet Bumper Body	.22	3A-7067-2	Coil Sleeve	.20
3A-6009A	Jet Bumper Base	.14	3A-7068	Coil Sleeve	.20
3A-6013	Nylon Plunger	.10	3C-7070	Cam & Ratchet Hub	.40
3A-6014	Nylon Flipper Bushing	.30	3A-7078	Plastic Light Shield 6" x 12"	1.00
3A-6015A	Eject Hole Shield	.12	3A-7079	Plastic Light Shield 4 1/2" x 5 1/4"	.55
3A-6015C	Eject Hole Shield	.12	3A-7081	Rail Insert (Plastic)	.06
3A-6016	Small Rollover Button	.10	3A-7082	Plexiglass Window	4.75
3A-6018	Sprocket	.50	3B-7083-K	Plastic Shields (set)	6.80
3A-6020	Bumper Cap (plain) (round)	.14	3B-7083-R	Plastic Shields (set)	6.80
3A-6020	Bumper Cap (lettered)	.18	3B-7083-DB	Plastic Shields (set)	6.80
3A-6021A	Bumper Assembly - wafer with plastic stem, less rubber ring & socket	1.00	3B-7083-SB	Plastic Shields (set)	6.80
3A-6022-2	Switch Blade Lifter 1/16	.04	3B-7083-TS	Plastic Shields (set)	6.80
3A-6022-3	Switch Blade Lifter 3/32	.04	3A-7086	Regular Bumper Body	.22
3A-6022-4	Switch Blade Lifter 1/8	.04	3A-7087	Insulator Bushing	.30
3A-6022-5	Switch Blade Lifter 5/32	.04	3B-7100	Plastic Shields (set)	6.80
3A-6022-6	Switch Blade Lifter 3/16	.04	3B-7102	Plastic Shields (set)	6.80
3A-6022-7	Switch Blade Lifter 7/32	.04	3B-7103	Plastic Shields (set)	6.80
3A-6022-8	Switch Blade Lifter 1/4	.04	3B-7104	Plastic Shields (set)	6.80
3A-6022-9	Switch Blade Lifter 9/32	.04	3B-7105	Plastic Shields (set)	6.80
3A-6022-10	Switch Blade Lifter 5/16	.04	3B-7106	Plastic Shields (set)	6.80
3A-6022-11	Switch Blade Lifter 11/32	.04	3B-7107	Plastic Shields (set)	6.80
3A-6022-12	Switch Blade Lifter 3/8	.04	3B-7108	Plastic Shields (set)	6.80
3A-6032A	Amber Sleeve	\$.02	3B-7109	Plastic Shields (set)	6.80
3A-6035	Jet Bumper Wafer-plastic stem	.22	3B-7110	Plastic Shields (set)	\$6.80
3A-6040	Jet Bumper Cap-sunburst edge, colored rim, white insert	.40	3C-7111	Plastic Shields (set)	\$6.80
3A-6040	Jet Bumper Cap, sunburst edge, colored rim, white insert (let.)	.45	3B-7113	Plastic Shields (set)	6.80
3A-6048-3	3/16 Plastic Clamp	.06	3C-7114	Plastic Shields (set)	6.80
3A-6048-6	3/8" Plastic Cable Clamp	.08	3A-7124	Coin Switch Actuator	.20
3A-6056	Bumper Wafer Plastic Stem	.22	3A-7125	Ratchet Pawl	.25
3A-6085	Drive Crank	.20	3A-7126	10 Step Unit Switch Actuator	.30
3A-6086	1 1/2# Catalin Ball Specify Color	1.00	3B-7127	Drive Pawl	.35
3A-6091	Target Plastic 1 3/8" dia.	.20	3C-7128	Ratchet and Cam	.40
3A-6091-A	Target Plastic 1" dia.	.20	3A-7133	Light Shield - 1964 Baseball	.60
3A-6092	1" Plastic Insert (Playfield)	.10	3A-7134	Arch Ball Rail - 1964 Baseball	Ft. 20
3A-6095	3/4" Plastic Insert (Playfield)	.07	5A6134-A	4 Clip Fuse Block	1.20
3A-6097	R. O. Button Holder 1-3/16"	.26	5A-6134-C	1 Clip Fuse Block	.30
3A-7006	Switch Tubing for 'M' Relays (Specify Length)	.04	5A-6171	5 Clip Fuse Block	\$1.35
3A-7007	Switch Tubing (Specify Length)	.04	5A-6183	Insulated Jumper Wire	
3A-7023	Acetate Cover (Service Call)	.04		Specify Red or Black	.16
3A-7024	Acetate Score Card Cover	.06	5A-6198	Large Silver Contact (J-Relay)	.06
3A-7030	Plexiglass Hood Ten Strike & Ten Pin	35.00	5A-6201	Coin Lockout Coil	1.50
3A-7034-1	Plastic Lite Hood 1 1/2" (Double Apron) specify color	.16	5A-6202	Rheostat - Baseball	7.15
3A-7035	Plastic Lite Hood 2 3/8" (Dbl. Apron)	.16	5A-6507	5 Amp Fuse	.06
3A-7036	Plastic Lite Hood 2 3/8" (Sgl. Apron)	.18	5A-6508	10 Amp Fuse	.05
3A-7037	Plastic Lite Hood 1 1/2" (Sgl. Apron)	.18	5A-6509	20 Amp Fuse	.05
3A-7040	Plastic Pin (Ten Strike & Ten Pins)	1.00	5A-6522-2	Solder Lug	.03
3A-7044	Plastic Bumper Cap (Disappearing Jet Bumper)	.40	5A-6541-A	Contact Point (Small Regular)	.03
	Lettered	.45	5A-6541-B	Contact Point (Small-for 'M' switches)	.03
3A-7050	Plexiglass Hood (Jumbo Ten Strike)	45.00	5A-6567	15 Amp Fuse	.05
3A-7051	Curved Acetate for Short Stop	9.50	5A-6569	1 Amp Slo Blofuse	.30
3B-7056	Plastic (Panel Light) Space Glider	.50	5A-7518	2 Amp Slo Blo Fuse	.28
			5A-7565-A	Contact Point (10 Step Contact Finger)	.03
			5A-7603	Contact Point (Large-Regular)	.04
			5A-8591	Solder Lug	.03
			5A-8633	3 Amp Slo Blo Fuse	.28
			5A-8705	Contact Point ('E' Relay only)	.04

Part No.	Description	Price	Part No.	Description	Price
5A-8711-1	Mercury Tilt Switch	.60	10A-145	Spring	.10
5A-8713	75 Amp Slo Blo Fuse	.30	10A-147-1	Wiper Spring	.03
5A-8714	1.6 Amp Slo Blo Fuse	.28	10A-148-1	Ball Shooter Spring	.14
6A-1-14	Short Switch Blade (Standard)	.06	10A-149	Shooter Rod Spring, short	.16
6A-2A-10	Long Switch Blade (Standard)	.06	10A-153	Contact Assembly Spring	.07
6A-14	Fishpaper Blade	.03	10A-156	Kicker Spring	.20
6A-14-B	Fishpaper Blade	.04	10A-162	Ball Lift Spring	.10
6A-15-10	Short Switch Blade (J-Relay)	.04	10A-164	Compression Spring	.10
6A-16-8	Long Switch Blade (J-Relay)	.04	10A-165	Ball Release Spring	.20
6A-25-8	Long Blade with Side-Lug (J-Relay)	.04	10A-167	Arm Return Spring (no drawing)	.20
7A-6679	1/8 x 1/2 Steel Rivet	.03	10A-171	Spring	.35
7-6689-1A	Rivet for Contact Disc Middle Row	\$.02	10A-172	Pitcher Spring	.35
7-6689-2A	Rivet for Contact Disc Outer Row	.02	10A-173	Compression Spring	.05
7-6689-3A	Rivet for Contact Disc Inner Row	.02	10A-174	Lift Arm Spring	.20
8A-7025-A	Leg Leveler	.30	10A-175	Push Rod Spring	.15
8A-7025-B	Leg Leveler Nut	.06	10A-178	Pitcher Torsion Spring	.35
8C-7031-L	Left Side Moulding	6.50	10A-179	Armature Spring	.05
8C-7031-R	Right Side Moulding	6.50	10A-182	Torsion Spring (Official Baseball)	.35
8B-7032	Front Shelf Trim	1.40	10A-183	Extension Spring	.05
8B-7034	Glass Channel	1.50	10A-184	Bat Handle Spring	.10
8A-7114	Screened Display Glass (Road Racer)	23.00	10A-194	Ball Gate Spring (Playboard)	.05
8A-7115	Mirror (Road Racer)	12.00	10A-196	Target Reset Linkage Spring	.10
9A-6561-A	Coin Return Cup	\$ 2.50	10A-197	Wiper Spring	.06
9A-7542	10c Duplex Coin Chute	18.00	10A-199	Drop Target Spring	.08
9A-7544	ABT 10c Push Chute	19.00	10A-200	Target Spring	.10
9A-8529	10c Slug Rejector	8.00	10A-201	Coin Switch Spring	.12
9A-8551	5c Slug Rejector	8.00	10A-202	Motor Spacer Spring	.10
9A-8552	25c Slug Rejector	8.00	10A-203	Index Pawl Spring	.08
9B-8561-2	10c Coin Entry Plate	.40	10A-206	Drive Pawl Spring	.10
9B-8561-3	5c Coin Entry Plate	.40	10A-207	Target Linkage Spring	.12
9B-8561-4	25c Coin Entry Plate	.40	10A-208	"Bulls Eye" Reset Spring	.06
9A-8608	25c Coin Chute	12.00	10A-209	Thermometer Tape Spring	.10
	All Foreign Slug Rejectors	12.00	11C-141-C	Covered Rail (90" Pool Table)	8.00
9A-8621	ABT 5c Duplex Push Chute	28.00	11C-141-1C	Covered Rail End (75" Pool Table)	7.10
10A-1B	Drive Spring	.10	11C-142-C	Covered Rail Right (90" Pool Table)	8.00
10A-2C	Torsion Spring	.40	11C-142-1C	Covered Rail Right (75" Pool Table)	7.10
10A-5	Reset Arm Spring	.05	11C-143-C	Covered Rail Left (90" Pool Table)	8.00
10A-7	Bumper Spring	.05	11C-143-1C	Covered Rail Left (75" Pool Table)	7.10
10A-9	Stop Dog Spring	.05	11D-154-58	Front Moulding - Less Hardware (Short-Stop)	25.00
10A-10	Relay Bank Reset Spring (over 8 coils)	.10	11D-154-59	Front Moulding - Less Hardware (Pinch Hitter)	25.00
10A-14	Relay Flap Spring (Heavy)	.05	11D-154-60	Front Moulding - Less Hardware (Official Baseball)	25.00
10A-15	Relay Flap Spring (Light)	.05	11D-154-61	Front Moulding - Less Hardware (Batting Champ)	25.00
10A-20	Lock Arm Spring	.06	11D-154-62	Front Moulding - Less Hardware (World Series - Extra Inning)	25.00
10A-38	Lift Spring	.05	11D-154-63	Front Moulding - Less Hardware (Major League - Big Inning)	25.00
10A-53	Bat Handle Spring	.10	11D-154-64	Front Moulding - Less Hardware "Grand Slam" "10th Inning"	25.00
10A-55	Spring	.05	11B-159	Chime Box (wood)	1.40
10A-55A	Spring	.05	12A-6215B	Home Run Hole Wire	.12
10A-63	Ball Guide Spring (Long)	.25	12A-6223	Hair Pin Clip	.04
10A-63A	Ball Guide Spring (Short)	.15	12A-6225	Hair Pin Clip	.04
10A-66	Relay Bank Reset Spring	.10	12A-6226	Hair Pin Clip	.04
10A-93	Chain Connecting Spring	.05	12A-6227	Hair Pin Clip	.04
10A-94	Friction Drive Spring	.07	12A-6230	Key Hook	.10
10A-96	Relay Armature Spring	.05	12A-6231	Tilt Bob Wire	.08
10A-101-1A	Drive Spring	.10	12A-6232-B	Plum Bob Ring	.20
10A-101-2B	Torsion Spring	.40	12A-6244	R. O. Button Fasteners	\$.05
10A-101-2C	Torsion Spring	.40	12A-6267	Snap - On Cotter Key	.04
10A-101-4	Reset Armature Spring	.05	12A-6285	Ball Trough R.O. Wire (Playfield)	.16
10A-101-5	Lock Arm Spring	.05	12A-6285-A	Ball Trough R.O. Wire (cab. trough)	.16
10A-102	Index Pawl Spring	.06	12A-6285-B	Ball Trough R.O. Wire (cab. trough)	.16
10A-105	Kicker Spring	.10	12A-6295	Roll Over Wire	.16
10A-120	Relay Armature Spring	.05	12A-6302	R. O. Wire (Baseball)	.12
10A-121	Shooter Coil Spring	.10	12A-6306	Ground Wire	.10
10A-123-D	Drive Spring	.10			
10A-127	Flipper Spring (Right)	.50			
10A-128	Kicker Spring	.06			
10A-134	Torsion Spring	.15			
10A-135	Jet Bumper Spring	.06			
10A-136	Flipper Spring (Left)	.50			
10A-139	Spring-Coin Lockout Coil	\$.08			

Part No.	Description	Price	Part No.	Description	Price
12A-6314	Steering Link	.32	16A-8601	Instruction Plate	.65
12A-6316	Ball Gate Wire	.16	16A-8602	Instruction Plate	.65
12A-6319	Ball Gate Wire (Playboard)	.16	16A-8603	Instruction Plate	.65
12A-6323	Target Reset Bar	.45	16A-8604	Instruction Plate	.65
12A-6324	Playfield Roll-Over Wire	.10	20A-6179	Cord Retainer	.04
12A-6325	Playfield Roll-Over Wire	.10	20A-6385	Plastic Shake Bottle	2.00
12A-6326	Playfield Roll-Over Wire	.12	20A-6403	Rubber Ball (7-set)	1.50
14A-6716	Motor (Horse Unit) Reversible	15.00	20A-6500	1-1/16 Steel Ball Pin Games)	.60
14A-6724-A	Motor Man Running Unit	12.00	20A-6502-A	Carbon Plumb Bob	.55
14A-6734	Target Motor Safari-Polar Hunt	12.00	20-6505	Drive Nails	\$.02
14A-6736	Swing Target Motor	12.00	20A-6512	Electric Counter	4.50
14A-6738-A	Score Motor	10.00	20A-6514	Tinnerman Speed Nut	.04
14A-6738-50	Score Motor 50 cycle	12.00	20A-6516	Tinnerman Speed Nut	.03
14A-7704	Pitcher Motor 4 bagger	12.00	20A-6518	3/8" Steel Ball (B.B. Games)	.40
14A-7722	Score Motor	12.00	20A-6519	15/16 Steel Ball	.50
14A-7723	Pin Reset Motor	12.00	20A-6520	3/4" Steel Ball Off. B.B.)	.40
14A-7724	Ball Lift Motor	12.00	20A-6529	Horse Chain	.50
14A-7726-A	Pitcher Unit Motor	12.00	20A-6529-1	Drive Chain	.20
14A-7731-A	Search Unit Motor	12.00	20A-6542	Front Door Lock (2 Keys)	1.75
14A-7732-A	Score Motor (Ball Gun Games)	10.00	20A-6542-W	Cash Box Lock	1.75
14A-7735-A	Disap. Bumper Motor	10.00	20A-6543	Back Door Lock (2 Keys)	1.75
14A-7735A-50	Disap. Bumper Motor - 50 Cycle	12.00	20A-6559	Thrust Bearing	.75
14A-7736-A	Score Motor (Titan Gun)	10.00	20-7534	2 1/8" Red Balls	3.00
14A-7737	Gear Motor Turntable	12.00	20-7535	2 1/8" White Balls	3.00
14A-7739-C	Pitcher Unit Motor (Off. Baseball)	12.00	20A-7537	Billiard Chalk	.08
14A-7740-50	Swinging Target Motor	7.00	20A-7538	48" Cue Stick (75" Pool Table)	4.00
14A-7741	Drum Unit Motor (Road Racer)	15.00	20A-7539	Chalk Holder	.15
14A-7744-A	Pitcher Motor 1962 World Series and Extra Inning	\$15.00	20A-7540	Chalk Cord	.08
14A-7745	New Swinging Target Motor	10.50	20A-7550	Felt Washer (Horse Unit)	.06
14A-7746	Score Motor (5 ball type) 24 volts	10.00	20A-7551	Friction Washer (Leather) Horse U.	.06
14A-7747	Score Motor (5 ball type) 50 cycle - 24 volts	12.00	20A-7569	57" Cue Stick (90" Pool Table)	7.30
14A-7748	Disappearing Jet Bumper Motor 24 volts	12.00	20-7589	Number Segment	.56
14A-7749	Score Motor - 60 Cycle (4 Roses - Only)	10.00	20C-7595	Screened Reel (Specify Game and Unit)	2.75
14A-7750	Score Motor - 50 Cycles (4 Roses - Only)	12.00	20A-8525	Coin Switch & Wire	3.00
14A-7751	Man Running Motor - 60 Cycle 1963 - 1964 B.B.	12.00	20A-8525V	Coin Switch & Wire	4.00
14A-7752	Pitcher Unit Motor - 60 Cycle (1963 Major League - Big Innina)	15.00	20-8582	Plexiglass Roll-A-Ball	30.00
14A-7752-50	Pitcher Unit Motor - 50 Cycle (1963 Major League - Big Innina)	15.00	20A-8590	Drive Pawl Stop	.35
14A-7753	Target Unit Motor - 60 Cycle 1963 - 1964 B.B.	12.00	20E-8597	Rifle Ass'y. (Complete)	86.50
14A-7754	Score Control Motor (60 Cycle) New Motor Unit	12.00	20E-8597-1	Rifle Stock	20.00
14A-7755	Pitcher Unit Motor (60 Cycle) Grand Slam - 10th Inning	15.00	20E-8597-2	Rifle Barrel	17.50
14A-7756	Score Control Motor (50 Cycle) New Motor Unit	12.00	20B-8597-3	Rifle Bolt	5.00
14A-7757	Man Running Motor (50 Cycle) 1963 - 1964 B.B.	12.00	20A-8597-4	Rear Sight	1.50
14A-7758	Target Unit Motor (50 Cycle) 1963 - 1964 B.B.	12.00	20A-8597-5	Butt Plate	1.50
14A-7759	Pitcher Unit Motor (50 Cycle) Grand Slam - 10th Inning	15.00	20B-8597-6	Rifle Bolt Housing	6.00
14A-10794	Timer Motor Used on Road Racer - Voice-O-Graph	7.00	20A-8603	Marker Button (Set-20 Blk. - 20-Wht.)	1.25
15A-6764-X1	Standard Transformer	12.00	20A-8605	1 - Set Peas (1 to 15)	1.20
15B-6767-50	50 Cycle Transformer	18.00	20B-8617-A	Slate Top 35 1/4" x 67 1/2" (75" Pool Table)	82.00
15A-6768	Transformer (Bouncing Ball Gun Games)	14.00	20A-8617-B	Slate Top 43" x 83" (90" Pool Tbl.)	119.00
15A-6771	Transformer (all 5 ball type games) 24 volts	\$14.00	20A-8618	2 1/4" Ball (1 to 15)	3.70
15A-6773	Transformer (all 5 ball type games) 50 cycle - 24 volts	20.00	20A-8618-C	2 3/8" White Cue Ball	4.00
			20A-8619	Triangular Ball Rack	3.00
			20A-8622	Coin Lockout Coil	1.50
			20A-8628	500 OHM 10 Watt Resistor	.35
			20A-8629	500 OHM 7 Watt Resistor	.35
			20A-8640	Pinion Gear	3.00
			20A-8641	Pin Magnet	1.00
			20A-8643	Nylon Cord Only	.10
			20A-8646	1 1/4" Steel Ball (Ten Strike)	1.50
			20A-8650-10	Taper Pin for Pinion Gear	.04
			20A-8650-12	Taper Pin for Solenoid Crank Ass'y	.04
			20A-8650-20	Taper Pin Arm & Gear Assy.	.05
			20A-8652	Rheostat (10 Strike & 10 Pins)	6.24
			20-8663	Door Buzzer	2.44
			20A-8664	Rheostat	6.24
			20A-8673	Horse Assy. (Turf Champ)	2.00
			20B-8689-1	Ball Ramp (Metal)	1.50

Part No.	Description	Price	Part No.	Description	Price
20A-8689-63	Ball Ramp	1.50	22A-105	Indicator Dial	3.00
20A-8702	Curve Magnet Coil (110 Volt)	3.50	22A-105-1	Front Scenery	7.50
20C-8709	Tubular Leg	5.50	22A-105-2	Left Side Scenery	7.50
20A-8712-15	"E" Retaining Ring	.02	22A-105-3	Right Side Scenery	7.50
20A-8712-18	"E" Retaining Ring	.03	22E-106-L	Cabinet Scenery (left side)	4.00
20A-8712 X-21	"E" Retaining Ring	.03	22E-106-R	Cabinet Scenery (right side)	4.00
20A-8712-25	"E" Retaining Ring	.04	23A-6300	5/16" Rubber Ring	.05
20A-8712-31	"E" Retaining Ring	.03	23A-6301	3/4" Rubber Ring	.06
20A-8712-37	"E" Retaining Ring	.05	23A-6302	1" Rubber Ring	.07
20A-8713-25	C Ring Fastener	.08	23A-6303	1 1/4" Rubber Ring	.08
20A-8713-31	Tru-Arc Ring	.05	23A-6304	1 1/2" Rubber Ring	.08
20A-8713-37	C Ring Fastener	.06	23A-6305	2" Rubber Ring	.10
20A-8713-75	C Ring Fastener	.12	23A-6306	2-5/16" Rubber Ring	.14
20A-8715-15	Steel Washer	.02	23A-6307	2 3/8" Rubber Ring	.16
20A-8715-16	Steel Washer	.02	23A-6308	3 3/8" Rubber Ring	.18
20A-8715-33	Steel Washer	.02	23A-6309	3 7/8" Rubber Ring	.20
20A-8715-35	Blue Spring Steel Washer	.02	23A-6310	5" Rubber Ring	.30
20A-8715-36	Steel Washer	.02	23A-6311	5/16" Jumbo Rubber Ring	.05
20A-8715-52	Blue Spring Steel Washer	.02	23A-6312	Rubber Bumper	.15
20A-8715-71	Steel Washer	.02	23A-6313	Rubber Bumper	.10
20A-8716-6	Roll Pin	.02	23A-6313-1	Rubber Grommet (Drop Target)	\$.04
20A-8716-19	Roll Pin 1/8" x 1 1/8"	.04	23A-6314	Rubber Bumper	.03
20A-8716-20	Roll Pin 1/8" x 3/8" Long	.03	23A-6316	Large Rebound Rubber	.30
20A-8717-17	3/8" Lockwasher	.02	23A-6319	Rubber Grommet	.03
20A-8718-1	C Ring	.05	23A-6322	Arch Rubber	Ft. .20
20A-8718-3	C Ring	.06	23A-6323	Bat Sleeve	.25
20B-8719	Glass Channel	1.50	23A-6327	Shooter Tip	.08
20B-8719-1	Glass Channel Baseball	1.50	23A-6332	Dead Rubber Ring for Plastic Bump	.07
20A-8720	Cash Box	.68	23A-6350	Idle Wheel	2.00
20A-8721	Rail Cloth 5" x 41"	1.50	23A-6359	Live Rubber Ring for Plastic Bump	.07
20A-8721-1	Rail Cloth 5" x 34 1/4"	1.30	23A-6366-1	Ball Deflector Rubber	.66
20A-8722	Drawer Lock	1.75	23A-6372	Rubber Bumper	.10
20A-8723	Slate Cloth 47" x 87"	31.00	23A-6400	Arm Post Rubber	.16
20A-8723-1	Slate Cloth 39" x 71 1/4"	26.00	23A-6406	Rubber Grommet	.03
20A-8725	1/4" x 45" Leather Belt	2.20	23A-6408	Rubber Bumper	.06
20A-8726	1/4" Dia. Leather Belt 42"	5.20	23A-6409-1	Front Moulding Rubber	.32
20A-8728-R	Automobile	1.20	23A-6410	Rubber Rail (Pool Table)	1.09 ft.
20D-8729-R	Steering Wheel	14.00	23B-6411	Rubber Corner Pocket	2.00
20A-8731	Ball Race	1.70	23B-6412	Rubber Side Pocket	2.00
20A-8732	Nut Retainer	.10	23B-6413	Gully Boot (Rubber)	2.40
20A-8734	Coin Switch Wire	.15	23A-6414	Rubber Grommet	.03
20A-8735	Coin Wire Retainer	.04	23A-6420	Rubber Grommet (Relay Mtg. etc.)	.04
20A-8757	Electric Counter (24 volts)	4.50	23A-6425	Rubber Bumper (Miniature Post)	.04
20A-8789	Thumb Screw	.10	23A-6428	Rubber Bumper	.06
20A-8790	Nylon Bearing	.22	23A-6429	6" Rubber Ring	.40
20A-8793	Slotted Mach. Screw 2 - 56 x 3/16	2.00 C	23A-6430	Ball Gate	.75
20A-8794	Thread Forming Screw #4 x 1/4	2.00 C	24A-6404-1	Playfield Socket Long Stand-up)	.10
20A-8795	Thread Forming Screw #4 x 3/8	2.00 C	24A-6405	Socket 10 Step Unit	.10
20A-8797	3/8-24 Jam Nut	.03	24A-6406A	Lite Socket	.10
20A-8798	1/4-28 Hex Nut Sem	.04	24A-6409-A	Insert Light Socket	.10
21C-102	Trigger Housing Assembly	15.00	24A-6416	Bumper Socket	.10
21B-103	Gun Mounting Flange	9.00	24A-6431	Light Socket 115V	.30
21B-104	Ball Type Pivot Joint	7.00	24A-6435	Lite Socket	.10
21A-105	Trigger	.50	24A-6436	Playfield Socket	.10
21A-112	Pitcher Figurine	.80	24A-6437	2 Prong Wafer Socket	.15
21A-113	Umpire Figurine	.80	24A-6549	#44 Bulb	.12
21A-114	Catcher Figurine	.60	24A-6550	#55 Bulb	.12
21A-115	Fielder Figurine	.60	24A-6551	#63 Bulb	.20
21A-117R	Drum Mounting Hub (Road Racer)	\$.60	24A-6552	#40 Bulb	.12
21A-118	4" Pulley - 5/8 Hole	1.60	24A-6582	Playfield Socket (Short Stand Up)	.12
21A-118-1	4" Pulley - 3/8 Hole	1.60	24A-6583	25 W 115V Std. White	.70
21A-119	Drum Motor Pulley	.80	24A-6584	100 W 115V Red Bulb	1.40
21A-120	1 1/2" Pulley 5/16 Hole	.60	24A-6585	15W 115V White Bulb	.80
21B-6596	Front Moulding Casting (L.H.)	1.20	24A-6587	Light Socket (insert)	\$.10
21B-6597	Front Moulding Casting (R.H.)	1.20	24A-6589	Target Unit Lite Socket	.12
21D-6599	Chrome Corners Pool Table	15.00	24A-6590	Insert Lite Socket - Drum Unit	.12
22D-104	Grandstand Scenery	9.50	24A-8667	2 Prong Ligh Bulb (Dis.) (Bumper)	.20
22D-104-64	Grandstand Scenery 1964BB	9.50			

Part No.	Description	Price	Part No.	Description	Price
30C-280	Plastic Shields (Set)	6.80	G22-550	Jet Bumper Coil (24 volt)	1.60
30C-283	Plastic Shields (Set)	6.80	G23-650	Kicker Coil (24 volt)	1.60
30C-284	Plastic Shields (Set)	6.80	G23-750	Kicker Coil (24 volt)	1.65
30C-285-1	Target - Only (Triple)	.55	G24-850	Ball Eject Coil (24 volt)	1.60
30C-285-2	Target - Only (Home Run)	.55	G-25-1100	Coil	1.65
30C-286-1	Target - Only (Out)	.55	G-26-1400	Kicker Coil	1.70
30C-286-2	Target - Only (Single)	.55	G1-25-1100	Disappearing Bumper Coil	1.65
30C-286-3	Target - Only (Double)	.55	GK-23-1600	Kicker Coil	2.50
30C-286-4	Target - Only (Triple)	.55	H-22-700	Bat Coil (Official Baseball)	2.40
30C-287	Plastic Shields (Set)	6.80	H-23-870	Bat Coil	2.50
30C-288	Plastic Shields (Set)	6.80	H-24-1150	Bat Coil	2.50
30C-290	Plastic Shields (Set)	6.80	IT-27-800	Trip Relay (24 volt)	1.50
30C-291	Plastic Shields (Set)	6.80	IT-29-1000	Latch Relay Coil	1.10
30B-3256-1	Drop Target - Only (Vagabond)	.55	IT-30-1500	Latch Relay Coil	1.25
30B-3256-2	Drop Target - Only (Big Deal)	.55	IT-32-2100	Latch Relay Coil	1.25
30B-3256-3	Drop Target - Only (Jumpin Jacks)	.55	IT-35-4200	Latch Relay Coil	1.40
30B-3256-4	Drop Target - Only (Skill Pool)	.55	M-28-600	Relay Coil	1.10
30B-3256-5	Drop Target - Only (El Toro)	.55	M-29-950	Relay Coil	1.20
30B-3256-6	Drop Target - Only (Big Daddy)	.55	M-29-1000	Trip Relay Coil	1.30
30B-3256-7R	Drop Target - Only (Merry Widow)	.55	M-29-1100	Relay Coil (24 volt)	1.30
30B-3256-7Y	Drop Target - Only (Merry Widow)	.55	M-30-1300	Relay Coil	1.30
30C-7080-59	Home Run Plastic (Pinch Hitter)	4.50	M-30-1400	Relay Coil (24 volt)	1.30
30C-7080-61	Home Run Plastic (Batting Champ)	4.50	M-31-1700	Relay Coil	1.30
30C-7080-62	Home Run Plastic (World Series - Extra Inning)	4.50	M-32-1800	Relay Coil	1.30
30C-7080-63	Home Run Plastic (Major League)	12.00	M-33-2800	Relay Coil	1.40
30C-7080-63-1	Home Run Plastic (Big Inning)	12.00	M-34-3100	Relay Coil	1.40
30C-7080-63-2	Home Run Plastic (Big Inning - Chicago Model)	4.50	M-36-5500	Relay Coil	1.40
30C-7080-64	Home Run Plastic "Grand Slam"	12.00	X-25-400	Relay Bank Coil (24 volt)	.80
30C-7080-64-1	Target Unit Plastic "10th Inning"	4.50	X-27-500	Relay Bank Coil	.80
30C-7115	Plastic Shields (Set)	6.80	X-27-700	Relay Bank Coil (24 volt)	.80
30C-7116	Plastic Shields (Set)	6.80	X-28-800	Relay Bank Coil	.80
30C-7129	Screened 4" Drum Reel	2.25	X-30-1000	Relay Bank Coil	.80
A-22-550	Drop Target Coil (24 volt)	1.50	Y-31-1300	Brake Relay Coil	1.60
A-23-600	Coil (24 volt)	1.50	Z-25-400	Relay Coil (24 volt)	1.30
A-23-650	Step Up Coil (24 volt)	1.50	Z-27-1000	Relay Coil (24 volt)	1.60
A-23-750	"Bulls Eye" Reset Coil	1.60	Z-28-1200	Relay Coil (24 volt)	1.55
A-25-950	Drive Coil	1.60	Z-30-1800	Relay Coil	1.60
A-26-1100	Drive Coil	1.60	Z-31-2300	Relay Coil	1.70
A-26-1350	Ball Release Coil (24 volt)	1.65	Z-35-4200	Relay Coil	1.70
A-27-1650	Eject Coil	1.50	Z-35-5500	Relay Coil	1.60
A-30-2700	Ball Release Coil	1.65	A-4011	Brass Flap Assembly	.56
A1-23-750	"Goal Kicker" Coil	1.60	A-4269	Ball Lift Arm Assembly (Old Style)	1.60
A1-26-1100	Ball Shooter Coil	1.50	A-4327	Armature Assembly	.66
A2-23-750	Knocker or Bell Coil (24 volt)	1.65	A-4389	Coil Stop Assembly	.60
A2-26-1100	Coil	1.60	A-4472	Horse Carriage Bracket Assembly	1.10
A2-26-1350	Bell Coil	1.60	A-4488	Brake Arm Assembly	.60
A3-25-950	Target Hole Coil (Guns)	1.70	A-4501	Contact Finger Assy. (Large)	2.25
A5-20-900	Mannikin Coil	5.50	A-4608	Cam Follower	.20
B-26-800	Reset Coil (24 volt)	1.50	A-4608-A	Cam Follower	.25
B-29-1600	Reset Coil	1.50	A-4608-B	Cam Follower	.25
C-28-1100	Knocker Coil (Old Type)	1.50	B-4669	Hinge Assembly Wooden Doors	\$ 1.40
C2-26-800	Chime Coil (24 volt)	1.50	A-4673	Man Running Disc. Assembly	1.30
D-22-1150	Relay Bank Reset Coil	2.20	B-4674	Man Running Arm Assembly	3.00
D-24-1150	Relay Bank Reset Coil	2.20	A-4677	Step Up Arm Assembly	1.30
D-24-1400	Relay Bank Reset Coil	2.20	A-4678	Base Runner Assembly	.60
D-24-1600	Relay Bank Reset Coil	2.20	A-4679	Indexing Pawl Assembly	.60
DU-23-740	Drum Unit Coil (24 volt)	1.40	A-4680	Stop Dog Assembly	1.20
DU-26-1350	Coil	1.60	A-4680-1	Stop Dog Assembly	1.20
E-32-1800	"E" Relay Coil	1.60	A-4681	Stop Dog Assembly	1.20
E-33-2500	"E" Relay Coil	1.60	A-4682	Stop Dog Assembly	1.20
FL21-28	Flipper Coil (24 volt)	1.65	B-4683-A	Main Frame Assembly	2.00
FL-25-31	Flipper Coil	1.65	B-4683C	Bat Unit Frame	2.00
			A-4689	Driven Arm Assembly (Specify Name of Game)	.80
			A-4690	Drive Arm Assembly	.75
			A-4691	Bat & Shaft Assembly	1.60

A-4703	Index Pawl Assembly	.30	A-5045	Contact Finger Assembly	1.60
A-4705	Cam Follower	.15	A-5052	Bumper Bracket Assy.	.60
A-4708	Coil Stop Assembly	.45	B-5053	Jet Bumper Assy.	6.50
A-4708-B	Coil Stop Assembly (Brass)	.75	A-5069	Flipper Button Assy. New Style	1.10
B-4709R	Metal Ratchet and Cam	2.00	A-5072	Plunger Assy.	.80
A-4722	Contact Finer Assembly	.40	B-5073	Ball Release Assy.	6.00
A-4722-A	Contact Finger Assembly (Left Arm Cut Off)	.40	A-5082-A	Bracket & Stop Assy.	1.00
A-4722-B	Contact Finger Assembly (Right Arm Cut Off)	.40	A-5103	Plunger Assy.	.80
A-4723	Flipper Assembly	.55	B-5104	Kicker Assy.	5.00
B-4724	Roll Tilt Assembly	2.80	B-5149	Actuating Arm Assy.	1.25
B-4729R	Plumb Bob Tilt Assy.	1.00	B-5150	Slug Rejector Frame Assy.	3.00
A-4735	Stationary Target Assembly	1.35	B-5151	Slug Rejector Mounting Assy.	10.00
A-4735B	Target Switch Assy. (Double Make)	1.60	A-5154	Armature Flap Assy.	.20
A-4741	Rebound Assembly	.55	A-5155	Coin Switch-Bracket & Wire Assy.	4.50
A-4744	Bumper Switch Blade	.26	C-5161	Batter Unit Assy.	15.00
A-4744-1	Target Switch Blade	.26	C-5161-1	Batter Unit Assy.	15.00
A-4744-2	R.O. Button Switch Blade	.26	C-5161-2	Batter Unit Assy.	15.00
A-4744-3	R.O. Button Switch Blade	.26	C-5161-3	Batter Unit Assy.	15.00
A-4754	Jet Bumper Ring Assembly	.66	C-5161-4	Batter Unit Assembly	15.00
B-4756	Ball Eject Assembly	5.00	C-5161-64	Batter Unit Assy.	15.00
B-4759	Ball Eject Assembly	5.00	B-5163	Flipper & Coil Assembly	5.00
A-4760	Knocker Mounting Assy. (Old Type)	.80	D-5164	Ball Deflector Cover Assembly (red)	5.40
A-4761	Knocker Assembly (Old Type)	4.50	A-5222	Shooter Rod Mounting Plate Assy.	.90
D-4762	100 Step Unit Frame	5.00	A-5229	Shooter Coil Armature Assy.	.80
C-4775	Ball Track Assembly	8.00	A-5230	Shooter Coil Assy.	3.50
A-4779	Cardboard Catcher Assembly (Diamond Panel)	.47	B-5232	Mounting Plate Assy.	1.90
A-4779-A	Cardboard Umpire Assembly (Diamond Panel)	.47	A-5233-A	Arch Hole Liner	1.00
A-4779-B	Cardboard Batter Assembly (Diamond Panel)	.47	B-5247	Ball Shooter Assy.	4.00
A-4779C	Cardboard Pitcher Assembly (Diamond Panel)	.47	B-5248	M Type Armature Assy.	.50
A-4779-D	Cardboard 1st Baseman Assy. (Diamond Panel)	.47	B-5249	Relay Frame Assy.	.60
A-4779-E	Cardboard 2nd Baseman Assy. (Diamond Panel)	.47	B-5250	M Relay Assy.	2.75
A-4779-F	Cardboard Shortstop Assembly (Diamond Panel)	.47	B-5257	Ball Lift Assy.	5.00
A-4779-G	Cardboard 3rd Baseman Assy. (Diamond Panel)	.47	A-5264	Shooter Rod & Knob Assy.	1.80
A-4783	Jet Bumper Switch Assy.	1.10	A-5270	Rod & Knob Assembly	.95
A-4786-1	Hole Cover Assy.	.55	A-5274	Coil Bracket Assembly	.60
A-4786-2	Hole Cover Assy.	.55	A-5285	Relay Frame Assembly	.70
A-4786-3	Hole Cover Assy.	.55	A-5324	Bumper Switch Assembly	.60
A-4786-4	Hole Cover Assy.	.55	A-5325	Tilt Switch Assembly	.88
A-4786-5	Hole Cover Assy.	.55	B-5370-1	Bushing & Lug Assy. (Used on Space Glider, Vanguard, Hercules, Crusader & Titan)	.75
A-4794	Leg Hinge Assembly	.60	B-5370-2	Bushing & Lug Assembly (Used on Crossfire)	1.00
D-4798	100 Step Unit Complete	25.00	B-5370-3	Bushing & Lug Assembly (Used on Safari)	1.25
A-4799	Tilt Switch Assy.	.88	B-5370-5	Bushing & Lug Assembly (Used on Polar Hunt)	1.75
A-4817	Ball Gate Assembly	.65	B-5371-1	Yoke & Channel Assy. Complete (Bouncing Ball Gun Games)	5.95
A-4834	Stand Up Switch Assy.	.55	B-5371-2	Yoke & Channel Assy. Complete (Crossfire)	6.20
C-4886	Contact Plate Disc. Assy.	10.00	B-5371-3	Yoke & Channel Assy. Complete (Safari)	6.45
A-4932	Coil Stop	.50	B-5371-4	Yoke & Channel Assy. Complete (Polar Hunt)	6.95
B-4938	Latch Relay Assy.	6.50	A-5372	Yoke Assembly	4.75
A-4939	Latch Relay Bracket Assy.	.50	A-5379	Bracket & Plate Assembly	1.00
A-4940	Latch Relay Armature Assy.	.60	C-5384	Trigger Housing & Tube Assy.	45.00
A-4954-A	Release Arm Assy.	1.05	A-5385	Single Motor Cam Assembly	.90
A-4959	Ball Release Plunger Assy.	.70	A-5387	Bell Solenoid Plunger	.66
A-4962	Flipper Pawl Assy.	.56	B-5391	Bell & Bracket Assembly	1.40
A-4962-1-L	Flipper Pawl Assembly (left)	.56	B-5392	3 3/8" Bell Assembly	4.50
A-4962-1-R	Flipper Pawl Assembly (right)	.56	B-5393	Coil & Bracket Assembly	3.00
A-4984-1	Driven Arm Assembly	1.80	A-5396	Armature Assembly	1.00
A-5003-1	Contact Disc. Assy.	.85	A-5397	Coil Stop Assembly	1.00
A-5041	Cam Follower	.15	A-5413	Escutcheon Plate Assembly	.50
A-5041-A	Cam Follower	.15	A-5414	Throttle Arm Assembly	12.50
A-5041-B	Cam Follower	.15	E-5420	Man Running Unit Assy. Complete (Specify Game)	30.00

E-5420-A	Man Running Unit Assy. Complete Mounted on Diamond Panel - Specify Game	44.00	A-5620	Brake Mounting Bracket	1.00
D-5421	Man Run. Unit Main Frame Assy.	7.00	A-5621	Brake Lever Assembly	1.20
A-5422	Man Running Base Switch Assy	.70	A-5624	Brake Assembly	1.20
A-5422-1	Man Running Run Switch Assy.	.70	B-5625	Bat Handle Lever Assembly	6.00
B-5423	Bracket Mounting Assembly	.60	A-5627	Motor Stop Dog	.55
D-5431	Bat Handle Assy. Comp. (1957 B.B.)	15.00	A-5628-1	Cam Return Stop Assembly	.90
A-5450	Magnet Core Assembly (coin lockout)	.60	C-5632	Bottom Arch	6.00
A-5489	Coin Return Receptacle	.60	C-5632-A	Bottom Arch	6.00
C-5490-1	Metal Door (Single Chute)	4.50	C-5634	Base Plate Assembly	1.80
C-5490-2	Metal Door (Twin Chute)	4.75	A-5636	Ball Lift Plate Assembly	1.25
A-5491	Drive Pawl Assembly	.50	B-5637	Contact Disc Assembly	2.50
B-5492-1	Drive Arm Assembly	1.25	A-5638	Contact Finger Assy.	1.45
B-5492-3	Drive Arm Assembly	1.30	B-5645	"Z" Relay Assembly	2.95
A-5493	Rear Leg Hinge Assembly	.30	A-5652	Kicker Crank Assy.	1.00
A-5494-1	Crank Arm Assembly	.80	A-5653	Kicker Mounting Bracket Assy.	.50
B-5495	Reset Arm Assembly (Specify Number of Relays)	.80	A-5654-1	Ball Eject Cam Assy.	1.00
B-5496	Coin Slide (Old Style)	1.00	A-5654-4	Ball Eject Cam Assy.	1.00
B-5499	Coil Mounting Assembly	1.00	A-5661	Push Rod Assy.	.80
A-5501	Plunger Assembly	.90	A-5661-1	Push Rod and Knob Assembly	.80
A-5505	Drive Pawl Assembly	.50	A-5662	Pusher End Assembly	.65
C-5507	Relay Bank Assembly (Write for Price)	.50	B-5663	Ball Lift Pusher Assy.	2.40
A-5520	Drive Pawl Assembly	1.20	A-5663-1	Ball Lift Pusher Assembly	2.20
A-5523	Drive Arm Assembly	.40	A-5664	Push Rod Guide Assy.	.75
A-5524	Lock Arm Assembly	1.50	A-5668	Brake Relay	4.00
A-5525	Reset Arm Assembly	.40	A-5668-1	Armature Flap Assembly	.50
A-5526	Lock Arm Assembly	1.00	C-5669	Cash Box	4.00
B-5532	Mounting Plate Assembly	1.70	C-5669-1	Cash Box Assembly 4 1/2" deep	4.40
A-5535	Drive Arm and Pawl Assembly	1.75	A-5671-A	Brake Relay Assy.	5.00
A-5536-A	Drive Arm and Pawl Assembly	1.75	A-5671-B	Brake Relay Assy.	5.15
A-5536-B	Drive Arm and Pawl Assembly	1.70	A-5675	Target Hole-Ball Kicker Assy.	3.20
A-5536-C	Drive Arm and Pawl Assembly	1.75	A-5675-1	Ball Kicker Extension Armature	.60
A-5536-D	Solenoid Crank Assembly	.60	C-5676	Ball Lift Assy.	3.50
A-5558	Bowler Mannikin Assy. (Complete)	20.00	B-5678	Collector Assy. (Compl.)	3.50
A-5564	Shaft and Gear Assembly	5.00	B-5678-1	Collector Ring #1	.22
A-5565	Mannikin Arm and Gear Assy.	5.00	B-5678-2	Collector Ring #2	.22
A-5571	Armature and Link Assembly	1.10	B-5678-3	Collector Ring #3	.22
A-5574	Adjustment Clip	.30	D-5687	Cabinet Ball Trough Assembly (complete) (specify game)	7.36
B-5579	New Knocker Assembly	4.50	B-5678-4	Collector Ring #4	.22
A-5581	Drive Crank Assembly	.90	B-5678-5	Collector Ring #5	.22
A-5583	Drive Pawl Assembly	.30	C-5679	Scanning Wiper & Collector Assy.	7.50
A-5585	Directional Handle Assy. (left side)	3.00	B-5679-1	Scanning Wiper & Blades Only	3.00
A-5587	Cam Assembly	1.00	C-5694	50 Step Unit (Resetting)	20.00
A-5588	Bumper Roller Assembly	1.50	A-5703	Ball Flap Assy.	1.00
A-5589	Cam Link Assembly	1.00	A-5703R	Pitcher Ball Flap Assembly	1.00
E-5590	Disappearing Jet Bumper	25.00	A-5703-64	Ball Flap Assy.	1.00
A-5591	Cam Lock Arm Assembly	.60	B-5707	Ball Track Plate Assembly	3.00
A-5591-1	Cam Lock Arm Assembly	.60	A-5709	Ball Track Plate Assembly	3.00
C-5592	Cash Box Cover	1.50	A-5718	Curve Magnet Coil Brk't.	1.50
B-5593-A-1	Mounting Plate with Disc Mounting Posts	5.00	A-5719	Ball Release Lever Assy.	1.00
B-5593-A-3	10 Step Unit Mounting Plate	4.80	A-5723	Ball Flap Assy. (Pinch Hitter)	1.00
D-5604	Pitcher Plate Assembly	3.50	A-5725	Pin Assy. (Complete)	1.40
A-5606-1	Switch Activator Assembly	.90	C-5726	Step Unit (Complete)	20.00
A-5608	Coil Mounting Bracket Assembly	1.20	C-5726-A	Ten Step Unit	20.00
A-5609	Drive Bar Assembly	1.00	A-5727	Kicker Coil Assy. (Complete)	4.00
A-5610	Motor Cam Assembly (Double)	1.30	A-5729	Ratchet Gear Assy. (Non Resetting Type)	1.15
B-5611	Index Cam Assembly	1.20	A-5729-A	Ratchet Gear Assy. (Resetting Type)	1.25
B-5612	Pitcher Arm Assembly	1.80	A-5729-B	Ratchet Gear Assy. (Replay Unit)	1.35
E-5613	Pitcher Unit Assy. (Complete)	40.00	B-5730	100 Tooth Ratchet Gear Assy.	1.60
B-5614-A-3	Armature Assembly (3-Slot)	.60	B-5732	100,000 Snowshoe Wiper Assy.	1.40
B-5614-A-4	Armature Assembly (4-Slot)	.60	B-5733	10,000 Unit Wiper Assy.	1.20
B-5614-A-5	Armature Assembly (5-Slot)	.60	A-5734-1111	E Relay Armature (4 Make)	1.65
B-5614-A-6	Armature Assembly (6-Slot)	.60	C-5735	"E" Relay Assy. Less Switches	3.00
			C-5744	Contact Disc Assembly (Specify game and unit)	4.50
			C-5745	50 Pos Step Up Unit Rigid Mt.	20.00
			A-5748	Turntable Drive Plate Assy.	.70

A-5751	Turntable Roller Assy. (Locating)	.60	B-5882	Ball Separator 90"	7.50
A-5752	Turntable Roller Assembly	.70	B-5883	Ball Separator 75"	7.00
A-5754	Drive Shaft Assembly	.80	C-5900	Contact Disc Assembly (Specify game and unit)	3.25
B-5759	Mounting Bracket & Brush Assy.	3.00	B-5901	Snowshoe Wiper Assy. less Blade & Springs (Specify Game & Unit)	2.30
B-5759-1	Mounting Bracket & Brush Assy.	3.20	B-5902	Snowshoe Wiper Assy. less Blade Wipers & Springs (Specify Game & Unit)	2.30
B-5760-3	Collector Ring Assembly	.32	B-5903	Snowshoe Wiper Assy. less Wiper Blades & Springs (Specify Game & Unit)	2.40
B-5761	Commutator Assembly	15.80	B-5905	Snowshoe Wiper Assy. less Wiper Blades & Springs (Specify Game & Unit)	2.20
A-5763	Pitcher - Arm Assembly	1.50	B-5906	Snowshoe Wiper Assy. less Wiper Blades & Springs (Specify Game & Unit)	2.55
A-5764	Index Cam Assembly	1.00	B-5907	Snowshoe Wiper Assy. less Wiper Blades & Springs (Specify Game & Unit)	2.45
A-5766	Arm Elevator Assembly	1.50	A-5909	Ratchet Gear Assembly (Specify game and unit)	1.25
A-5767	Ball Lockout Gate Assy.	1.20	C-5910	Contact Disc Assembly (Specify game and unit)	3.25
E-5770	Pitcher Unit Assembly (Official Baseball)	40.00	B-5911	Mounting Plate	4.50
E-5771	Turntable Assy. - Complete	75.00	A-5912	Idler Arm Assembly	1.30
B-5773	Ball Tube Assembly	2.25	A-5913	Carriage Assembly	3.20
A-5775	Coin Guide Assembly	1.00	A-5914	Crank Assembly	1.00
A-5775-1	Coin Slide Assembly	1.00	A-5915	Steering Crank Assembly	.50
E-5777	Horse Unit Assembly	110.00	A-5916	Hub Cover Assembly	3.50
B-5778	Knocker Mounting Assy.	.80	B-5917	Steering Wheel Assembly	32.50
B-5779	Knocker Assembly	4.50	A-5919	Drum (Roadracer)	56.00
C-5782	Playfield Trough Assembly (Darts)	10.00	A-5920	Commutator Assembly	2.50
A-5783	Horse Assembly (Specify Number on Horse)	.75	A-5921	Timer Motor Bracket	.75
B-5798	Motor Cam Assy. (Single)	.90	A-5922	Motor Plate	.60
A-5804	Trip Cam Assembly	.50	A-5923	Motor Mount	.80
A-5819	Commutator Brush Assembly - Scan Unit	.75	A-5924	Commutator Brush Assembly	.45
B-5823	Scan Unit Contact Disc. - Crusader	8.00	A-5925	Timer Motor Cam	.90
B-5823-1	Scan Unit Contact Disc. - Vanguard	8.00	A-5926	Drum-End	7.00
B-5823-2	Scan Unit Contact Disc. - Hercules	8.00	A-5927	Carriage Bracket Sub Assy.	1.00
B-5823-3	Scan Unit Contact Disc. - Titan	8.00	A-5929	Sound Box	3.50
B-5823-4	Scan Unit Cont. Disc. - Space Glider	8.00	A-5930	Bearing Holder Assembly	10.00
A-5826	Swinging Target Bracket Assy.	1.40	A-5932	Pointer Assembly	.30
A-5829	Swinging Arm	.60	A-5933-1	Car Contact Assy. (Small Point)	.20
D-5835-1	Front Moulding Assembly	9.50	A-5933-2	Car Contact Assy. (Medium Point)	.20
D-5835	Front Moulding Assembly	9.50	A-5933-3	Car Contact Assy. (Large Point)	.20
B-5839	Swinging Target Assembly	9.50	A-5934	Steering Shaft Sub Assy.	1.75
A-5842	Ball Release Assembly	3.20	D-5935	Steering Mechanism	30.00
A-5843	Pivot Arm Assembly (Ball Release)	.95	C-5936	Carriage Bracket Assembly	5.95
A-5844	Roll-Over Wire Assembly	.18	A-5937	Cash Box (Roadracer)	1.50
A-5844-1	Roll-Over Wire Assembly	.18	A-5938	Cash Box Cover (Roadracer)	.85
A-5844-2	Roll-Over Wire Assembly	.22	A-5939	Thumb Screw & Bracket Assy.	1.00
A-5844-3	Roll-Over Wire Assembly	.22	A-5940	Thumb Screw Assembly	.60
A-5844-4	Roll-Over Wire Assembly	.28	A-5941	Thumb Screw Latch Assy.	.35
A-5844-5	Roll-Over Wire Assembly	.25	B-5942	Drum Motor Unit Assembly	17.50
A-5844-6	Roll-Over Wire Assembly	.28	B-5943	Timer Motor Unit Assembly	10.50
A-5844-7	Roll-Over Wire Assembly	.25	B-5945	Front Moulding Assembly (Shelf Type Cabinet)	6.50
A-5844-8	Roll-over Wire Assembly	.30	A-5946	Gear and Shaft Assembly (Non Resetting Type)	1.60
A-5844-9	Roll-over Wire Assembly	.30	A-5947	Gear and Shaft Assembly (Resetting Type)	1.80
A-5844-10	Roll-over Wire Assembly	.22	A-5948	Gear & Shaft Assy. (Replay Unit)	1.80
A-5844-11	Roll-Over Wire Assembly	.22	A-5949	Gear & Shaft Assy. (100 Step Unit)	2.15
A-5844-12	Roll-Over Wire Assembly	.28	A-5950	100,000 Wiper Plate and Bushing	1.20
A-5844-13	Roll-Over Wire Assembly	.25	A-5951	10,000 Wiper Plate and Bushing	1.00
C-5845	Ball Gate	12.00	A-5952	Blade Assembly	.10
B-5848	Connecting Link (Ball Release)	1.10	A-5956	Lockout Coil Assembly	2.75
A-5853	Reset Pivot Bracket (Ball Release)	1.35	A-5957	Armature Link Assembly	.30
B-5856	Mounting Frame	4.20			
A-5859	Reset Arm Assembly	.60			
A-5859-A	Reset Arm Assembly	.60			
A-5860	Escape Lever Assembly	.60			
B-5863	Replay Disc Assembly	2.75			
C-5866	Replay Unit Assembly	20.50			
A-5871	E Relay Lower Make Blade & Point	.22			
A-5871-1	E Relay Lower Break Blade & Point	.22			
A-5871-2	E Relay Upper Make Blade & Point	.22			
A-5871-3	E Relay Upper Break Blade & Point	.22			
B-5872-1	Slate w/Cloth Cover (75" Pool Tbl.)	110.00			
C-5872-2	Slate w/Cloth Cover (90" Pool Tbl.)	150.00			

A-6038	Crank Hub Assembly New		A-6215	"L" Type Relay Frame	
	Swinging Target.....	\$.56		Assembly.....	.75
A-6039	Target Arm Assembly.....	.60	A-6216	"L" Type Relay Assembly.....	2.95
A-6040	Target Drive Arm Assembly.....	.40	B-6217	Drop Target Assembly.....	7.50
A-6041	Mounting Frame Swinging Target		A-6218	Drop Target Crank Assembly.....	.75
	Assembly.....	1.40	B-6219-1	Drop Target & Arm (Vagabond).....	1.50
B-6043	Swinging Target Assembly		B-6219-2	Drop Target & Arm (Big Deal).....	1.50
	(slave unit).....	6.00	B-6219-3	Drop Target & Arm (Jumpin Jacks).....	1.50
A-6044	Mounting Frame Swinging Target		B-6219-4	Drop Target & Arm (Skill Pool).....	1.50
	Assembly.....	1.40	B-6219-5	Drop Target & Arm (El Toro).....	1.50
B-6045	Swinging Target Assembly.....	14.50	B-6219-6	Drop Target & Arm (Big Daddy).....	1.50
A-6051	Coin Guide Assembly.....	.25	B-6219-7R	Drop Target & Arm (Merry Widow).....	1.50
B-6052-L	Metal Flipper Assembly.....	1.20	B-6219-7Y	Drop Target & Arm (Merry Widow).....	1.50
B-6052-R	Metal Flipper Assembly.....	1.20	A-6220	Drop Target Frame Assembly.....	1.00
B-6056	Light Box Door Assembly - (metal,		A-6221	Drop Target Armature & Link	
	Single Player).....	6.75		Assembly.....	.80
B-6057	Light Box Door Assembly - (metal,		A-6222	Interlock Relay Mounting Frame	
	Multi-Player).....	7.00		Assembly.....	.90
B-6058	Front Moulding Lock Lever		A-6223	Trip Relay Frame Assembly.....	.55
	Assembly.....	1.00	B-6225	Interlock Relay Assembly.....	6.00
B-6059	Front Moulding Lock Rail		A-6227	Reset Coil Stop Assembly.....	\$.45
	Assembly.....	1.20	B-6228	Metal Flipper Coil Assembly.....	5.50
D-6061	Front Moulding Assembly		A-6229	Ball Gate Assembly.....	.95
	(latch type).....	6.50	B-6230	Snowshoe Wiper Assembly	
A-6062	Armature and Plug Assembly.....	.50		Less Wipers and Springs	
A-6064	Jet Bumper Mounting Bracket			(Specify game and unit).....	1.00
	Assembly.....	.60	B-6231	Snowshoe Wiper Assembly	
B-6066	"J" Type Relay Frame Assembly.....	\$.60		Less Blade Wipers and Springs	
B-6067	"J" Type Relay Armature			(Specify game and unit).....	2.30
	Assembly.....	.50	B-6232	Snowshoe Wiper Assembly	
B-6068	"J" Type Relay Assembly.....	2.75		Less Blade Wipers and Springs	
B-6069	Lite Socket Strip (Friendship 7)			(Specify game and unit).....	2.30
	Assembly.....	1.50	B-6233	Snowshoe Wiper Assembly	
B-6070	Screened Front Moulding with			Less Blade Wipers and Springs	
	Hardware (Baseball) Assembly.....	14.00		(Specify game and unit).....	2.30
B-6071	Small Bell Assembly.....	4.50	B-6235	Snowshoe Wiper Assembly	
B-6072	Chime Box Assembly.....	4.50		Less Blade Wipers and Springs	
A-6075	Contact Blade with point			(Specify game and unit).....	2.30
	Assembly.....	.10	B-6236	Snowshoe Wiper Assembly	
B-6078	Front Moulding Lever and Lock			Less Wipers and Springs	
	Slide Assembly.....	3.00		(Specify game and unit).....	2.30
B-6200	Snowshoe Wiper Assembly		B-6237	Snowshoe Wiper Assembly	
	(complete) (Specify game			Less Wipers and Springs	
	and unit).....	1.20		(Specify game and unit).....	2.30
B-6201	Snowshoe Wiper Assembly		B-6240	100,000 Snowshoe Wiper	
	(complete) (Specify game			Assembly (Complete - Specify	
	and unit).....	3.20		game and unit).....	1.40
B-6202	Snowshoe Wiper Assembly		A-6262	Pivot Arm Assembly.....	1.25
	(complete) (Specify game		A-6262-1	Pivot Arm Assembly.....	1.25
	and unit).....	3.20	A-6263	Pivot Arm Assembly.....	1.25
B-6203	Snowshoe Wiper Assembly		A-6264	Reset Arm Assembly.....	.80
	(complete) (Specify game		A-6265	Reset Arm Assembly.....	.80
	and unit).....	3.20	A-6269L	Motor Cam Assembly.....	1.00
B-6205	Snowshoe Wiper Assembly		A-6269R	Motor Cam Assembly.....	1.20
	(complete) (Specify game		B-6271	Moulding Lock Slide Assy.....	.80
	and unit).....	3.20	C-6272	Home Run Pocket - Only.....	4.50
B-6206	Snowshoe Wiper Assembly		B-6275-1	Target and Bracket (Out).....	2.20
	(complete) (Specify game		B-6275-2	Target and Bracket (Single).....	2.20
	and unit).....	3.20	B-6275-3	Target and Bracket (Double).....	2.20
B-6207	Snowshoe Wiper Assembly		B-6275-4	Target and Bracket (Triple).....	2.20
	(complete) (Specify game		B-6276-1	Target and Bracket (Triple).....	2.20
	and unit).....	3.20	B-6276-2	Target and Bracket (Home Run).....	2.20
A-6213	Mercury Tilt Switch and		D-6278	Complete Target Unit.....	82.00
	Bracket Assembly.....	1.20	C-6279	Target Motor Unit.....	22.50
A-6214-3	"L" Type Relay Armature Assem. 3-Slot		C-6279-1	Target Motor Unit.....	22.50
A-6214-4	"L" Type Relay Armature		A-6280-1	Target Link Assembly.....	.56
	Assembly (4 slot).....	.60	A-6281-1	Target Link Assembly.....	.60
A-6214-5	"L" Type Relay Armature		B-6282	Moulding Bottom Plate.....	1.00
	Assembly (5 slot).....	.60			
A-6214-6	"L" Type Relay Armature				
	Assembly (6 slot).....	.60			


B-6287L	Target Linkage Unit	3.40	B-6329	"Bulls Eye" Target & Brk't.	2.20
B-6287R	Target Linkage Unit	3.20	C-6330	"Bulls Eye" Home Run Target Unit	15.00
B-6288	Home Run Pocket Assembly	5.50	A-6331	Coil Stop Assembly	.85
B-6289	Home Run Bracket and Switch	1.70	A-6332	"Bulls Eye" Reset Arm	.90
B-6289-1	Home Run Brk't. & Switch	3.00	A-6333	Plunger & Link Assy.	.90
A-6290	Coin Switch Frame	1.00	C-6334	"Bulls Eye" Home Run Pocket	4.50
B-6291	Complete Coin Switch Unit	3.00	D-6336	Target Unit (Complete Unit)	75.00
B-6291-1	Coin Switch Unit - Less Cover	2.60	A-6337	Motor Cam Assembly	1.20
B-6292	Base Plate - 10 Step Unit	2.25	A-6338	Bat Shaft Assembly	1.80
A-6293	Coil Stop Assembly	.85	A-6339	Target Reset Linkage	.90
A-6294	Contact Ring Assembly	.40	D-6340	New Motor Unit (Less Switches)	35.00
A-6295	Drive Pawl and Armature	1.00	B-6342	Latch Type Relay Unit (Less Switches)	6.50
C-6296	New 10 Step Unit (With Printed Circuit)	18.00	A-6343	Latch Type Relay Frame	1.00
C-6296A	New 10 Step Unit (Without Printed Circuit)	16.50	C-6345	Thermometer Tape & Wiper Ass'y	8.50
B-6297	Printed Circuit Assembly	1.40	A-6347	Thermometer Tape Assembly	1.80
B-6301	Playfield Lock Assembly	5.00	SW-1A	Ball Trough (Playfield Bottom)	.44
B-6302L	Latch Handle	1.25	SW-1A-1	Shake Tilt	.60
B-6302R	Latch Handle	1.25	SW-1A-2	Lane Roll-over (Single)	.44
A-6303	Pointer Assembly	1.20	SW-1A-3	Flipper Button	.55
A-6303-1	Pointer Assembly	1.25	SW-1A-5	Flipper	.44
A-6304	Miniature Post and Rubber	.26	SW-1A-6	Ball Trough (Cabinet)	.44
A-6305	Ratchet Cam and Contact Ring	.85	SW-1A-20	Roll Tilt	.20
A-6306	Kicker Armature Assembly	.80	SW-1A-22A-2	Double Break Sw. Horse Unit	.75
A-6307	Coil Mounting Assembly	1.40	SW-1A-25	Make Switch Horse Unit	.60
A-6308	Kicker and Coil Assembly	4.50	SW-1A-27	Eject Hole	.45
B-6310-58	Front Moulding with Hardware (Short-Stop)	35.00	SW-1A-34	Trigger Switch	.50
B-6310-59	Front Moulding with Hardware (Pinch-Hitter)	35.00	SW-1A-45	Roll-Over Button (Make)	.50
B-6310-60	Front Moulding with Hardware (Official Baseball)	35.00	SW-1A-47	Bat Unit Switch	\$.44
B-6310-61	Front Moulding with Hardware (Batting Champ)	35.00	SW-1A-49	Ball Gate Switch	.55
B-6310-62	Front Moulding with Hardware (World Series - Extra Inning)	35.00	SW-1A-50	Drop Target Make Switch	.44
B-6310-63	Front Moulding with Hardware (Major League - Big Inning)	35.00	SW 1A-51	Target Switch (Make)	.44
B-6310-64	Front Moulding - with Hardware "Grand Slam" "10th Inning"	35.00	SW 1A-55	Home Run Hole Switch	.44
A-6311	Short Blade With Small Contact (J-Relay)	.10	SW 1A-56	"Bulls Eye" Target Switch	.44
A-6312	Short Blade With Large Contact (J-Relay)	.12	SW 1C	Motor Cam Switch	.55
A-6313	Long Blade With Small Contact (J-Relay)	.10	SW 1C-1	Motor Cam Switch	.44
A-6314	Long Blade With Large Contact (J-Relay)	.12	SW 1CA	Motor Cam Switch	.55
A-6315	Side Lug Blade With Small Contact (J-Relay)	.10	SW 1CA-1	Motor Cam Switch	.44
A-6316	Side Lug Blade With Large Contact (J-Relay)	.12	SW 1CA-2	Motor Cam Switch	.44
A-6317	Short Blade With Small Contact (Standard)	.10	SW-1-M1	Make Switch "M" Relay	.44
A-6318	Short Blade With Large Contact (Standard)	.12	SW-1M-3	Make Switch	.44
A-6319	Long Blade With Small Contact (Standard)	.10	SW-1M-4	Coin Trip Switch (Venezuela Coin)	.44
A-6320	Long Blade With Large Contact (Standard)	.12	SW-1M-5	Coin Trip Switch	.44
A-6321L	Lite Reflector Assembly	.95	SW-1M-75	"O" Index Switch - 10 Step Unit	.44
A-6321R	Lite Reflector Assembly	.95	SW-1U	10 Step Unit Switch	.55
D-6322	Pitcher Unit Assembly	35.00	SW-1U-1	M Switch Drum Unit	.44
B-6323	Pitcher Unit Plate	3.25	SW-1U-2	M Switch Drum Unit	.44
A-6324	Pitcher Arm Assembly	.90	SW-1Z	Make Switch	.44
A-6325	Pitcher Cam Assembly	1.00	SW-1Z1	Make Switch	.44
A-6326	Curve Coil & Brk't.	5.00	SW-2A-3	Kick-Off	.45
B-6327	Home Run Bracket	1.60	SW-2A-5	Break Switch Horse Unit	.60
			SW 2CA	Motor Cam Switch	.55
			SW 2CA-1	Motor Cam Switch	.44
			SW-2M-1	Break Switch	.44
			SW-2U-8	Disappearing Bumper (Motor)	.45
			SW-2U-12	E.O.S. Switch - 10 Step Unit	.44
			SW-2Z	Break Switch	.44
			SW 3A	Replay Reset Button Switch	.55
			SW 3CA-1	Motor Cam Switch	.55
			SW-3-M1	Make Break Switch "M" Relay	.68
			SW-3U-3	Cam Switch	.50
			SW-3Z	Make Break Switch	.68
			SW-10A-5	Single Outhole	.44
			SW-10A-6	Bat Handle Switch	.55
			SW-10A-7	Anti-Cheat (Door)	.65
			SW-10A-9	Bat Unit Switch	.50
			SW-10A-11	Swinging Target Switch	.55

SW-10A-14	Target Switch	.55
SW-10C	Make Switch (Motor)	.55
SW-10C-1	Make Switch (Motor)	.55
SW-10C-2	Bat Lever Switch	.55
SW 10CA	Motor Cam Switch	.55
SW 10CA-1	Motor Cam Switch	.44
SW 10CA-2	Motor Cam Switch	.44
SW-10-M1	Make Switch "M" Relay	\$.44
SW-10U-7	Drum Unit Drive Make Switch	.44
SW-10-Z	Make Switch	.44
SW-11A-2	Lane Roll-over (Double)	.50
SW-11A-8	Switch (Horses #1 to 5) Brake Re... ..	.44
SW-11A-9	Switch (Horse #6) Brake Re... ..	.44
SW-11A-10	Kicker	.50
SW-11A-18	Home Run Hole Switch	.55
SW-11A-19	Flipper Button Switch	.60
SW 11A-20L	Target Switch (Make-Make)	.68
SW 11A-20R	Target Switch (Make-Make)	.68
SW-11C	Pitcher Cam Switch	.60
SW-11M-5	"0" and "9" Position Switch 10 Step Unit	.55
SW-12A-3	Disappearing Bumper	.85
SW-13U-1	Switch	.60
SW-20A	Roll-over Button (Break)	.50
SW-20-C	Break Switch (Motor)	.55
SW-20C-1	Break Switch (Motor)	.44
SW 20CA	Motor Cam Switch	.55
SW 20CA-1	Motor Cam Switch	.44
SW-20-M1	Break Switch "M" Relay	.44
SW-20U-1	M Switch Drum Unit	.44
SW-20-Z	Break Switch	.44
SW 30C	Motor Cam Switch	.60
SW 30C-1	Motor Cam Switch	.68
SW 30CA	Motor Cam Switch	.60
SW 30CA-1	Motor Cam Switch	.55
SW 30CA-2	Motor Cam Switch	.55
SW-30-M1	Make Break Switch "M" Relay	.68
SW-31-B	Drop Target Switch	.75
SW-221-U-1	Switch	.60


SERVICE INFORMATION

National Rejectors

700 SERIES NICKEL SLUG REJECTOR

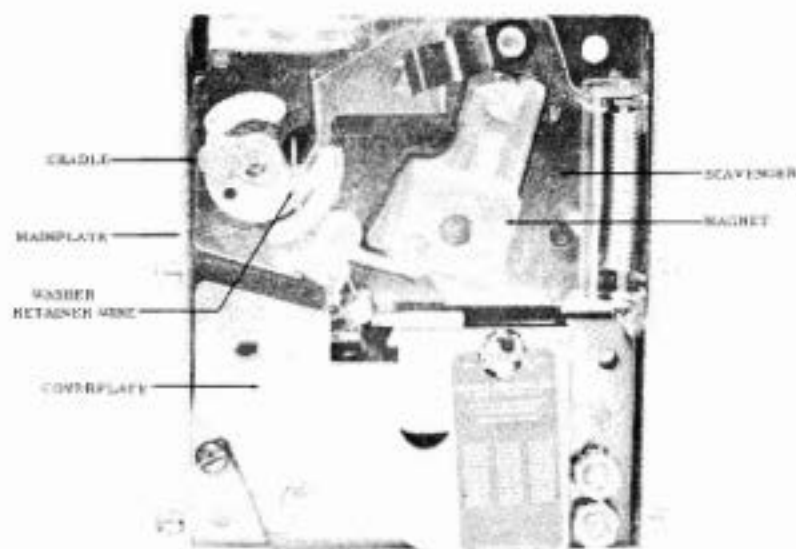

FRONT VIEW

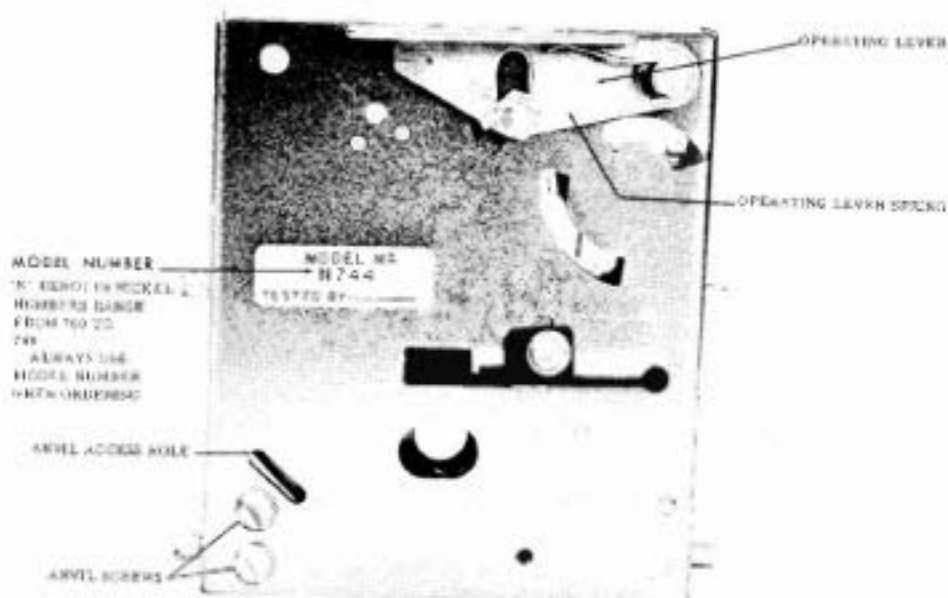

REAR VIEW

FAMILIARIZATION WITH THE ABOVE PARTS TITLES
WILL ASSIST YOU IN THE INSTRUCTIONS TO FOLLOW

For those of you, who are new to the maintenance of slug rejectors, we suggest that the following points be observed:


A slug rejector should never be oiled.

Every slug rejector has one or more permanent magnets which tend to pick up steel filings. A spare unit should, therefore, be wrapped or bagged.

In case of difficulty, first make certain that you have the proper instructions for your particular rejector and then follow the instructions step by step.

In the event of a malfunction of the slug rejector, proceed as follows:

1. Remove the rejector from your coin operated machine.
2. Open the scavenger (it hinges to the left) and inspect for cleanliness. If there is the least doubt as to its being clean, follow the cleaning procedure on the enclosed single sheet.
3. Check all screws for tightness.
4. Stand rejector upright on a level surface and insert nickels. Observe whether the nickels accept, reject or lodge in the rejector. The accept and reject chutes are as shown below:

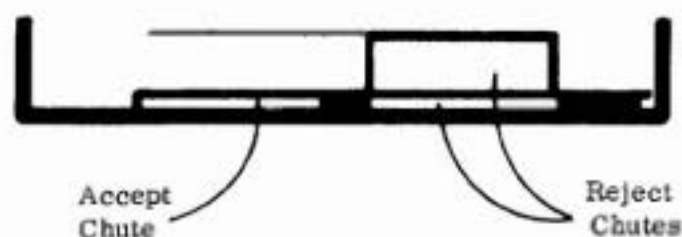

BOTTOM VIEW


5. If nickels accept during the above test, follow this procedure:
 - A. Push the operating lever down and release slowly. Retest. If nickels are now rejected, follow instructions in paragraph #6.
 - B. If nickels are accepted, replace rejector in machine. Check for mechanical binds or interference from some part of the machine. An improperly leveled machine can cause rejection of genuine nickels.

6. If nickels reject during the test:
 - A. Push the operating lever down and release slowly. If lever does not return to normal, nickels will be rejected. In this event, check for mechanical binds or weak operating lever spring.
 - B. Check magnet for steel filings. One screw removes the magnet.
 - C. Check face of anvil through anvil access hole. Dirt or lint would cause rejection.
 - D. Check anvil screws for tightness (use plenty of pressure).
7. If nickels lodge during the test:
 - A. If nickels lodge in the cradle, remove the cradle and clean the cradle pin and bushing. If they still lodge, install a new cradle.
 - B. If nickels lodge under the magnet, check for steel filings. Also, check magnet for clearance. A new nickel should pass freely between the magnet and the mainplate. If it does not, pry the magnet up slightly.
 - C. If nickels lodge any other place in the rejector, it will be necessary to observe closely to see just what is holding the coin. It will probably be a protruding screw, a bent coverplate, a bent coin or some foreign material.

In the event that the foregoing does not solve your difficulty, we suggest that the rejector be sent to the nearest National Rejectors Branch Office for repair. Parts or spare rejectors can also be obtained from this source.

EXPLODED VIEW and PARTS DESCRIPTION

700 SERIES NICKEL SLUG REJECTOR

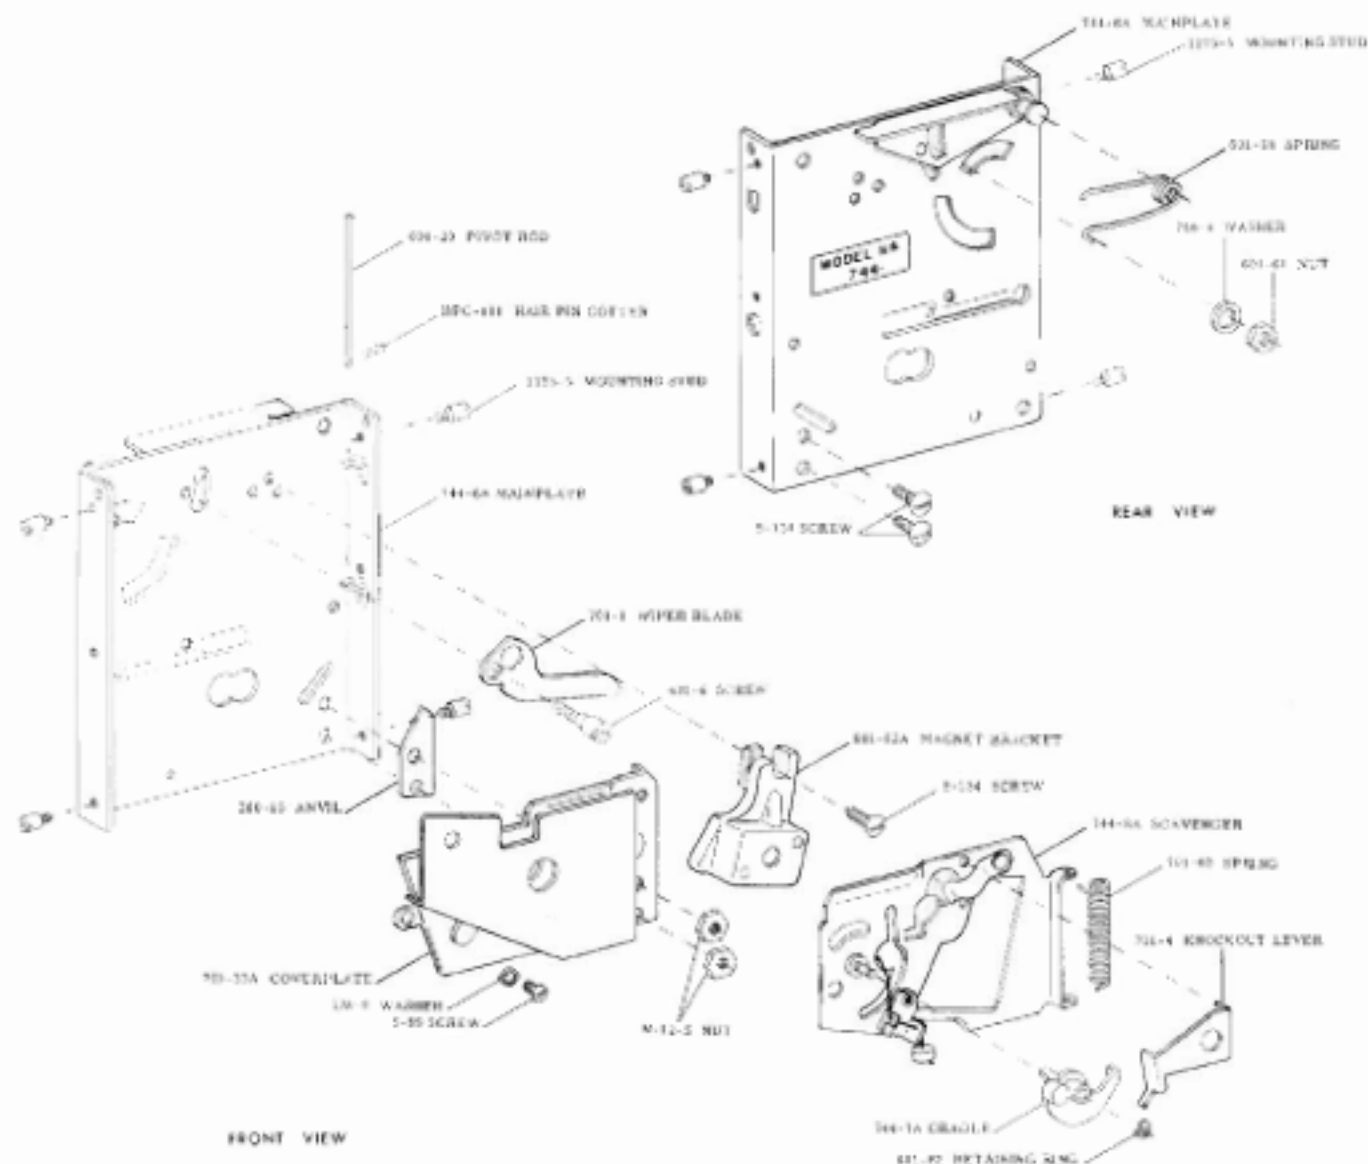

NOTE: When ordering parts, be certain to specify the part number, description, quantity and the model number of the unit.

FOR SERVICE AND SALES CONTACT THE FOLLOWING BRANCH OFFICES:



Port Washington, N.Y.


PORT WASHINGTON, L. I., N. Y., 36 Beechwood Ave. - Phone: Port Washington 7-4425-6
 DETROIT 4, MICHIGAN, 8801 Joy Road - Phone: TELEX 4-6105
 CHICAGO 39, ILLINOIS, 4907 West Fullerton Avenue - Phone: NATIONAL 3-3614
 ATLANTA 9, GEORGIA, 1209 Williams Street, N. W. - Phone: TRINITY 6-4318
 DALLAS 5, TEXAS, 4633 Insurance Lane - Phone: LAKESIDE 8-2291
 LOS ANGELES 7, CALIFORNIA, 2119 South Flower Street - Richmond 9-6367
 TORONTO, ONT., CANADA (10), 3513 Bathurst Street - Phone: RC 6611-3629

National Rejectors INC. 5100 SAN FRANCISCO AVE., ST. LOUIS 15, MO. COLFAX 1 1900


SERVICE INFORMATION

National Receptor's

700 SERIES DIME SLUG REJECTOR

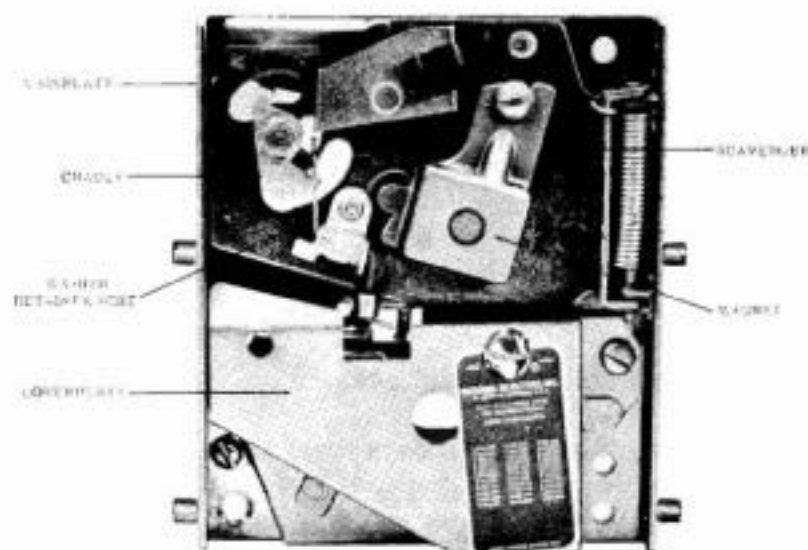

FRONT VIEW

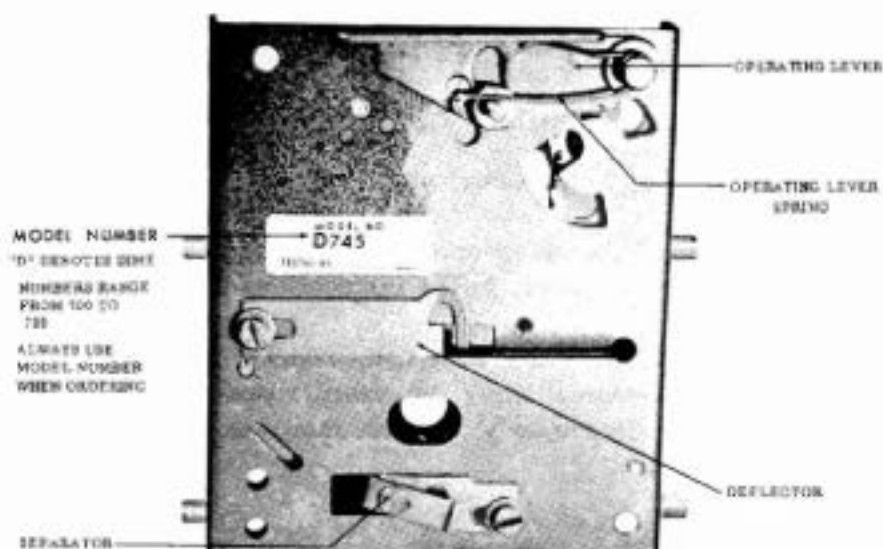

REAR VIEW

FAMILIARIZATION WITH THE ABOVE PARTS TITLES
WILL ASSIST YOU IN THE INSTRUCTIONS TO FOLLOW

For those of you, who are new to the maintenance of slug rejectors, we suggest that the following points be observed:


A slug rejector is never oiled.

Every slug rejector has one or more permanent magnets which tend to pick up steel filings. A spare unit should, therefore, be wrapped or bagged.

In case of difficulty, first make certain the you have the proper instructions for your particular rejector and then follow the instructions step by step.

In the event of a malfunction of the slug rejector, proceed as follows:

1. Remove the rejector from your coin operated machine.
2. Open the scavenger (it hinges to the left) and inspect for cleanliness. If there is the least doubt as to its being clean, follow the cleaning procedure on the enclosed single sheet.
3. Check all screws for tightness.
4. Stand rejector upright on a level surface and insert dimes. Observe to see whether dimes accept, reject or lodge in the rejector. The accept and reject chutes are as shown below:

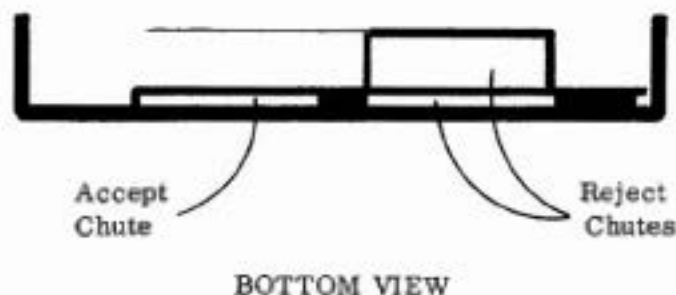


5. If dimes accept during above test, follow this procedure:
 - A. Push operating lever down and release slowly. Retest. If dimes are now rejected, follow instructions in paragraph #6.
 - B. If dimes are accepted, replace rejector in machine. Check for mechanical binds or interference from some part of the machine. An improperly leveled machine can cause rejection of genuine dimes.
6. If dimes reject during the test:
 - A. Push operating lever down and release slowly. If lever does not return to normal, dimes will be rejected. In this event, check for binds or weak operating lever spring.

- B. Check magnet for steel filings. One screw removes the magnet.
- C. Each 700 series, 10¢ rejector incorporates adjustments for rejection of slugs or spurious coins. Improper or misadjustment of the deflector or separator can result in rejection of genuine dimes. Follow the procedure below for proper setting of your rejector.
 - 1. Place rejector on level table with rear of unit facing you.
 - 2. Using a screwdriver, loosen the deflector and separator adjustment screws and move both parts to the right.
 - 3. Insert a number of dimes (use both old and new coins) and observe that some will be rejected by the separator.
 - 4. Now loosen separator adjustment screw and move separator slightly to the left. Insert dimes and observe if they are accepted or rejected. Repeat the above until all genuine dimes are accepted.
 - 5. Move deflector to left and insert dimes. You will notice that coins are rejected.
 - 6. Gradually move deflector to right until all genuine dimes are accepted.
 - 7. After completing adjustments, be sure to tighten adjustment screws.
- 7. If dimes lodge during the test:
 - A. If dimes lodge in the cradle, remove the cradle and clean the cradle pin and bushing. If they still lodge, install a new cradle.
 - B. If dimes lodge under the magnet, check for steel filings. Also, check magnet for clearance. A new dime should pass freely between the magnet and the mainplate. If it does not, pry the magnet up slightly.
 - C. If dimes lodge any other place in the rejector, it will be necessary to observe closely to see just what is holding the coin. It will probably be a protruding screw, a bent coverplate, a bent coin or some foreign material.

In the event that the foregoing does not solve your difficulty, we suggest that the rejector be sent to the nearest National Rejectors Branch Office for repair. Parts or spare rejectors can also be obtained from this source.

EXPLODED VIEW and PARTS DESCRIPTION

700 SERIES DIME SLUG REJECTOR

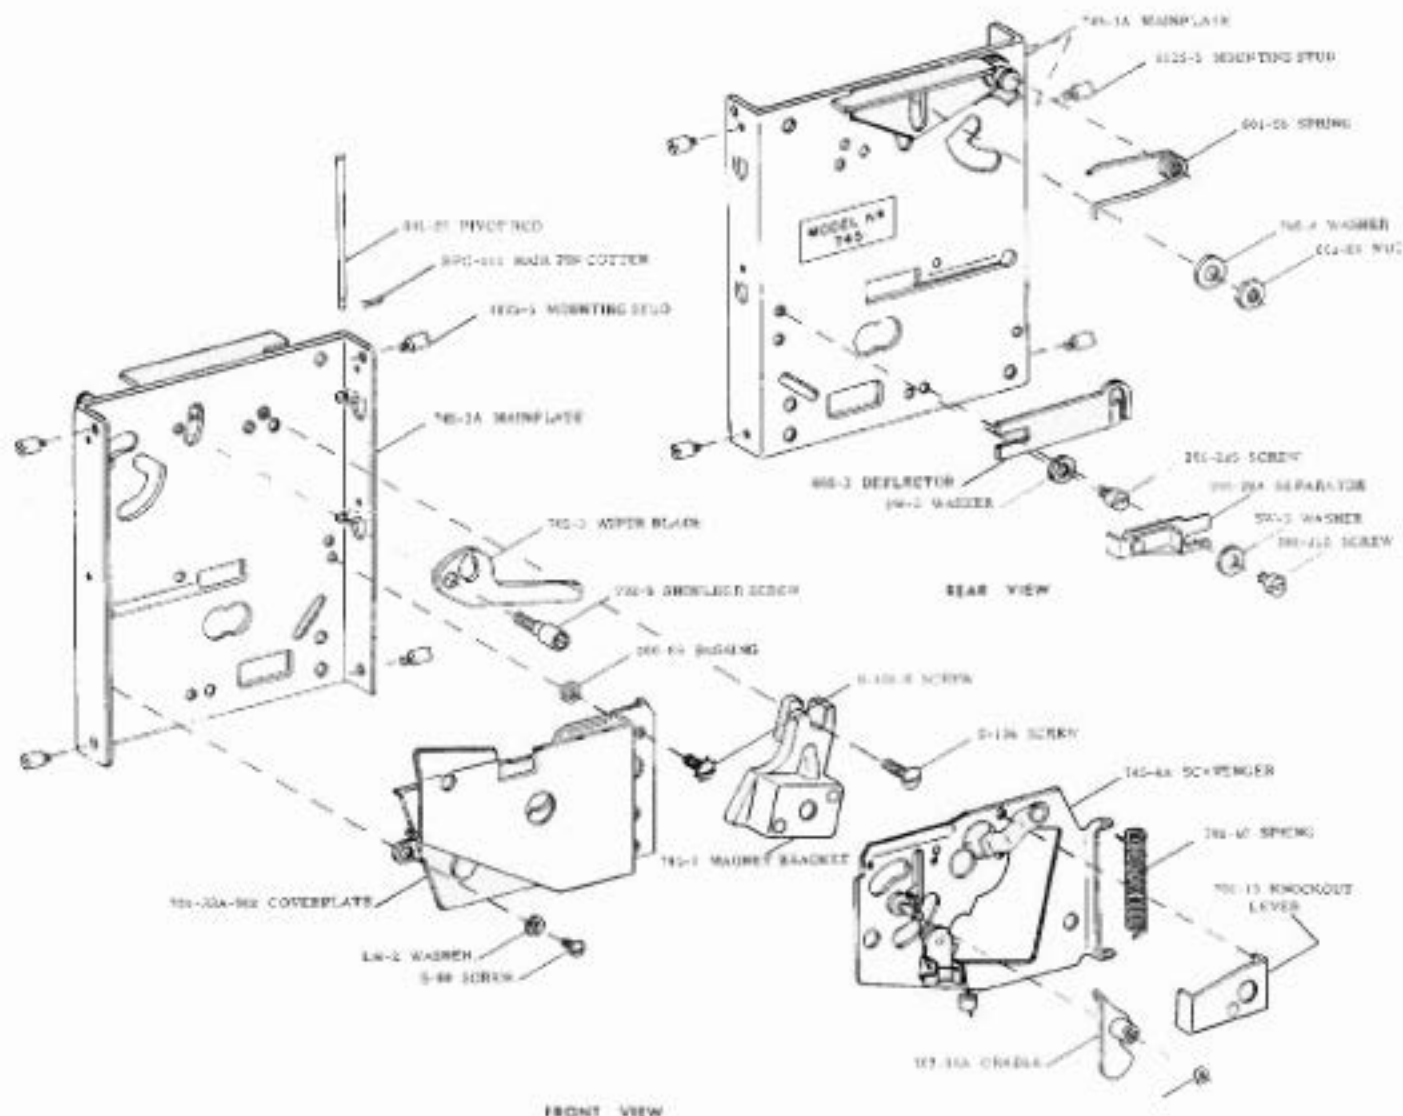

NOTE: When ordering parts, be certain to specify the part number, description, quantity and the model number of the unit.

FOR SERVICE AND SALES CONTACT THE FOLLOWING BRANCH OFFICES:



Printed in U.S.A.

PORT WASHINGTON, L.I., N.Y., 36 Beechwood Ave. - Phone: Port Washington 7-4426-6
 DETROIT 4, MICHIGAN, 8801 Joy Road - Phone: Texas 4-6295
 CHICAGO 39, ILLINOIS, 4907 West Fullerton Avenue - Phone: National 2-3614
 ATLANTA 9, GEORGIA, 1209 Williams Street, N.W. - Phone: Trinity 6-4318
 DALLAS 5, TEXAS, 4638 Insurance Lane - Phone: Lakeside 8-2291
 LOS ANGELES 7, CALIFORNIA, 2119 South Flower Street - Richmond 9-6367
 TORONTO, ONT., CANADA (10), 3513 Bathurst Street - Phone: Russell 1-5629

National Rejectors INC. 5100 SAN FRANCISCO AVE., ST. LOUIS 15, MO. COLFAX 1 1900


SERVICE INFORMATION

National Rejector's

700 SERIES QUARTER SLUG REJECTOR



FRONT VIEW

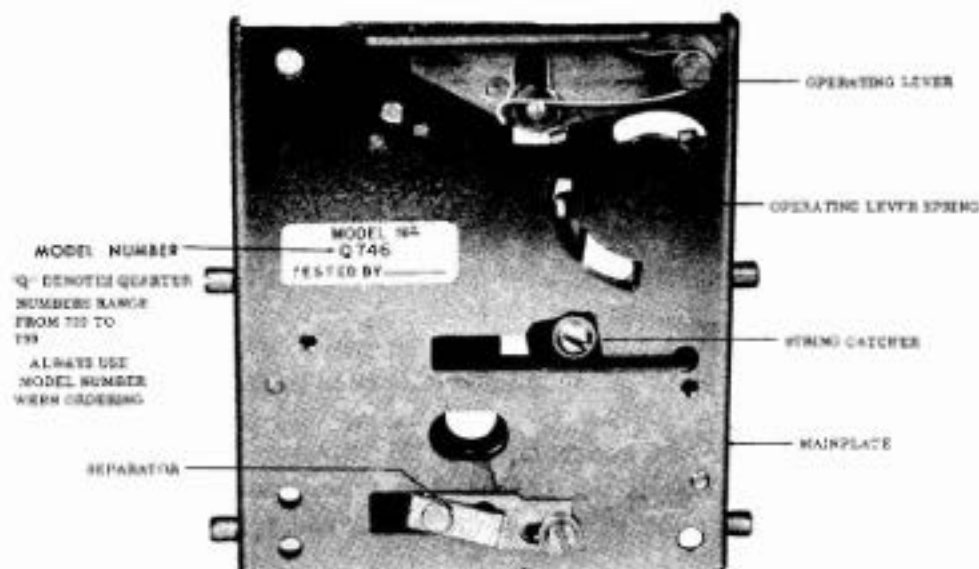

REAR VIEW

FAMILIARIZATION WITH THE ABOVE PARTS TITLES
WILL ASSIST YOU IN THE INSTRUCTIONS TO FOLLOW

For those of you, who are new to the maintenance of the slug rejectors, we suggest that the following points be observed:


A slug rejector is never oiled.

Every slug rejector has one or more permanent magnets which tend to pick up steel filings. A spare unit should, therefore, be wrapped or bagged.

In case of difficulty, first make certain that you have the proper instructions for your particular rejector and then follow the instructions step by step.

In the event of a malfunction of the slug rejector, proceed as follows:

1. Remove the rejector from your coin operated machine.
2. Open the scavenger (it hinges to the left) and inspect for cleanliness. If there is the least doubt as to its being clean, follow the cleaning procedure on the enclosed single sheet.
3. Check all screws for tightness.
4. Stand rejector upright on level surface and insert quarters. Observe to see whether quarters accept, reject or lodge in rejector. The accept and reject chutes are as shown below:

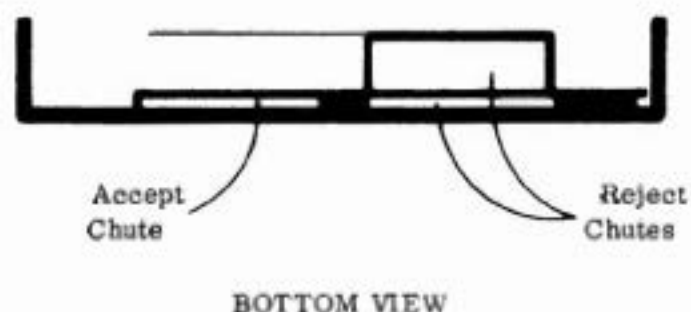


5. If quarters accept during above test, follow this procedure:
 - A. Push operating lever down and release slowly. Retest. If quarters are now rejected, follow instructions in paragraph #6.
 - B. If quarters are accepted, replace rejector in machine. Check for mechanical binds or interference from some part of the machine. An improperly leveled machine can cause rejection of genuine quarters.
6. If quarters reject during the test:
 - A. Push operating lever down and release slowly. If lever does not return to normal, quarters will be rejected. In this event, check for binds or weak operating lever spring.

- B. Check magnet for steel filings. One screw removes the magnet.
- C. Each 700 series 25¢ rejector incorporates adjustments for rejection of slugs or spurious coins. Improper or misadjustment of the deflector or separator can result in rejection of genuine quarters. Follow the procedure below for proper setting of your rejector.
 - 1. Place rejector on level table with rear of unit facing you.
 - 2. Using a screw driver loosen the deflector and separator adjustment screws and move both parts to the right.
 - 3. Insert a number of quarters (use both old and new coins) and observe that some will be rejected by the separator.
 - 4. Now loosen separator adjustment screw and move separator slightly to the left. Insert quarters and observe if they are accepted or rejected. Repeat the above until all genuine quarters are accepted.
 - 5. Move deflector to left and insert quarters. You will notice that coins are rejected.
 - 6. Gradually move deflector to right until all genuine quarters are accepted.
 - 7. After completing adjustments, be sure to tighten adjustment screws.
- 7. If quarters lodge during the test:
 - A. If quarters lodge in the cradle, remove the cradle and clean the cradle pin and bushing. If they still lodge, install a new cradle.
 - B. If quarters lodge under the magnet, check for steel filings. Also, check magnet for clearance. A new quarter should pass freely between the magnet and the mainplate. If it does not, pry the magnet up slightly.
 - C. If quarters lodge any other place in the rejector, it will be necessary to observe closely to see just what is holding the coin. It will probably be a protruding screw, a bent coverplate, a bent coin or some foreign material.

In the event that the foregoing does not solve your difficulty, we suggest that the rejector be sent to the nearest National Rejectors Branch Office for repair. Parts or spare rejectors can also be obtained from this source.

EXPLODED VIEW and PARTS DESCRIPTION 700 SERIES QUARTER SLUG REJECTOR

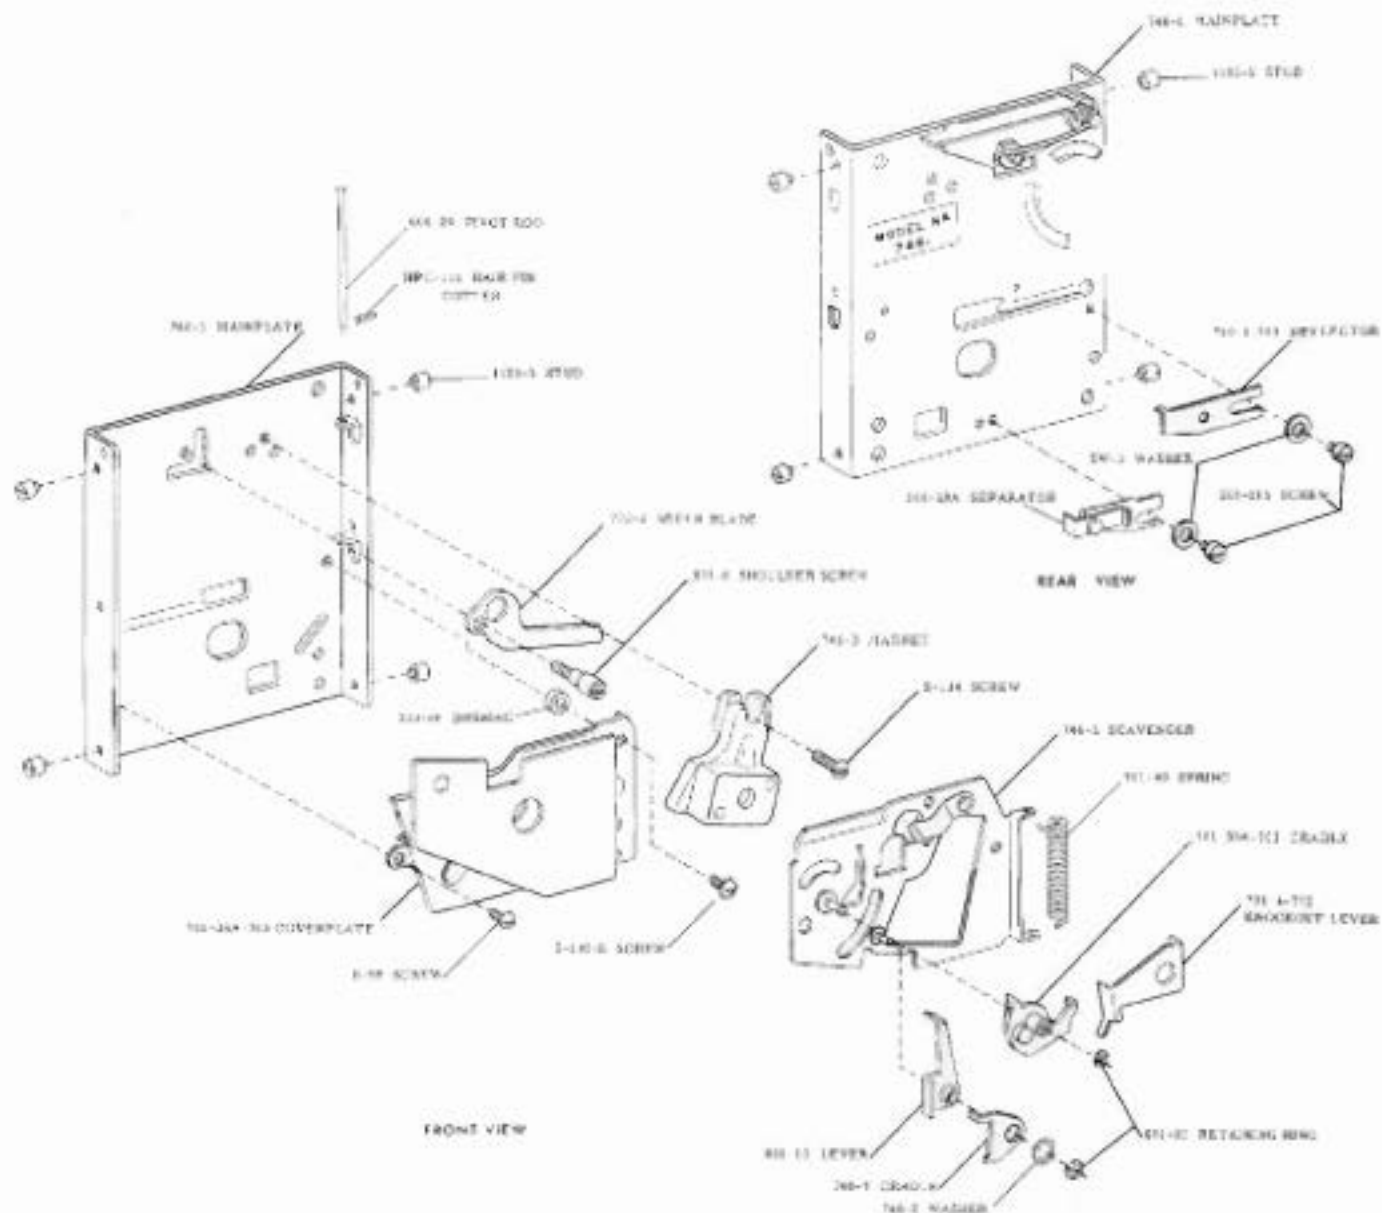

NOTE: When ordering parts, be certain to specify the part number, description, quantity and the model number of the unit.

FOR SERVICE AND SALES CONTACT THE FOLLOWING BRANCH OFFICES:




Printed in U.S.A.

PORT WASHINGTON, L.I., N.Y., 30 Beechwood Ave. - Phone: Port Washington 7-4425-6
 DETROIT 4, MICHIGAN, 8861 Joy Road - Phone: TEXAS 4-6295
 CHICAGO 39, ILLINOIS, 4907 West Fullerton Avenue - Phone: NATIONAL 2-3614
 ATLANTA 9, GEORGIA, 1209 Williams Street, N.W. - Phone: TRINITY 6-4318
 DALLAS 5, TEXAS, 4633 Insurance Lane - Phone: LAKEVIEW 8-2291
 LOS ANGELES 7, CALIFORNIA, 2119 South Flower Street - Phone: RICHMOND 9-6367
 TORONTO, ONT., CANADA (10), 3513 Bathurst Street - Phone: RUSSSELL 1-3629

National Rejectors INC. 5100 SAN FRANCISCO AVE., ST. LOUIS 15, MO. COLFAX 1 1900

COIN ACCEPTORS REPLACEMENT PARTS LIST SERIES - 50

D-52

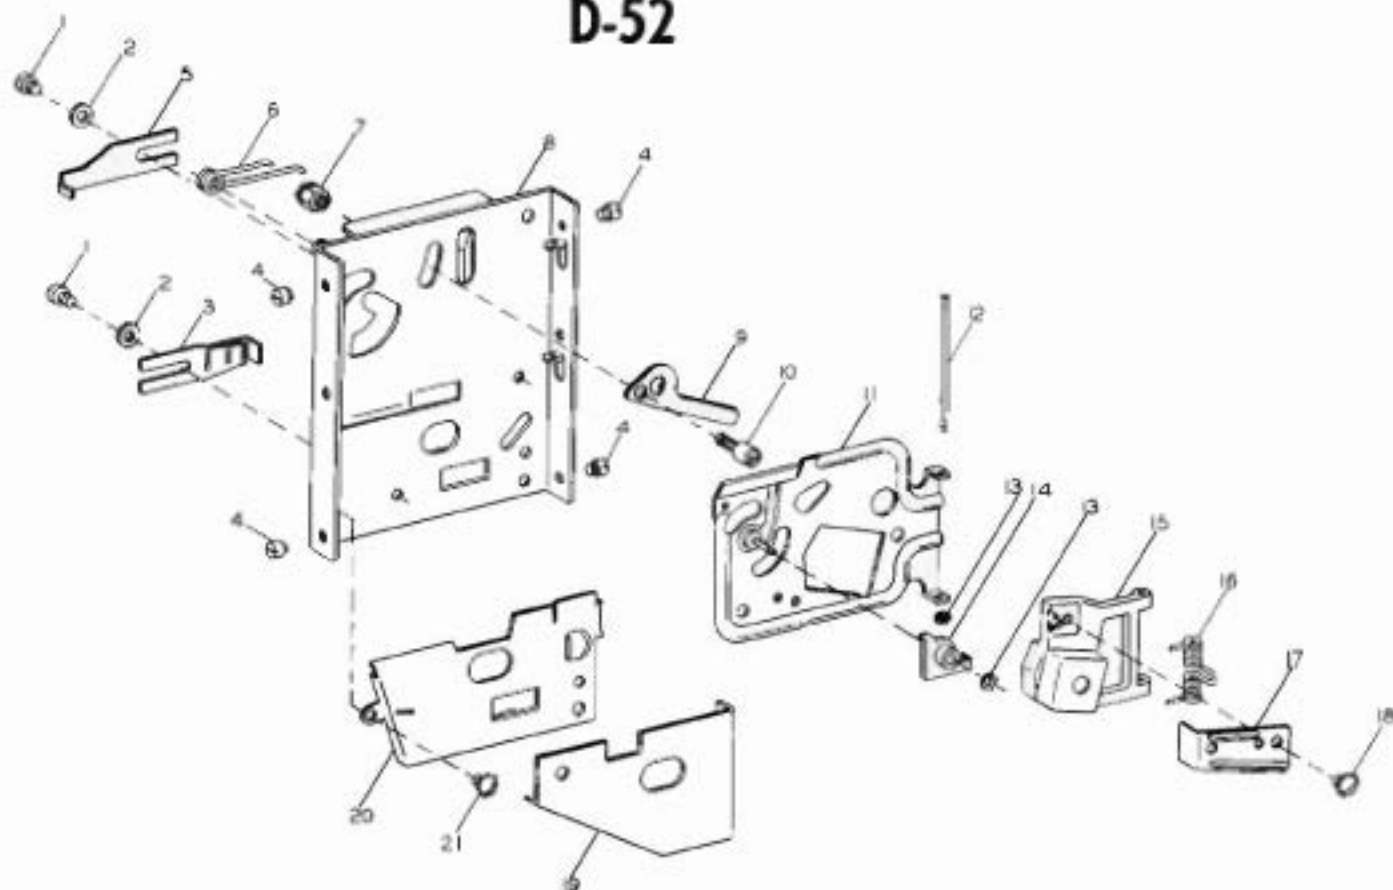

NOTE: When ordering parts be sure to specify the part number, description, quantity, and model number of unit.

INDEX NO.	PART NO.	DESCRIPTION	QUANTITY	INDEX NO.	PART NO.	DESCRIPTION	QUANTITY
1	50020	Kicker Screw	2	12	50025	Gate Pivot Pin	1
2	50030	Washer	2	13	600448	"C" Washer	2
3	5007	Separator Assembly	1	14	5030	10c Transfer Cradle Assembly	1
4	600818	Mounting Stud	4	15	50003	Magnet Gate	1
5	600729	Kicker	1	16	50027	Gate Spring	1
6	50013	Gate Lever Spring	1	17	50009	Knockout	1
7	50014	Wiper Nut	1	18	276-6-3	Screw-Thread-Cutting	1
8	5001	Main Channel Assembly	1	19	50005	Return Coverplate	1
9	50007	Wiper	1	20	5005	Coverplate Assembly	1
10	50011	Wiper Shoulder Screw	1	21	150-6-2	Screw-Sets	1
11	5002	Gate Assembly	1				

**COIN
ACCEPTORS, INC.**





1711 HEREFORD ST. • SAINT LOUIS 10, MO.

ADJUSTMENTS -

All "Series 50" Acceptors leave the factory adjusted for maximum performance. If, however, more critical adjustments are desired, or if the unit has been completely disassembled for service, the following adjustment procedure is suggested:

A. Kicker and Separator—(On Dime and Quarter Acceptors only)

1. Set the Acceptor with the back of the unit facing you in the test position.
2. Loosen the screws holding the kicker and separator and move both as far to the right as they will go. Tighten the screws.
3. Insert several coins (both old and new) and note that some are returned by striking the separator.
4. Loosen the separator screw and move the separator a slight amount to the left. Tighten the screw.

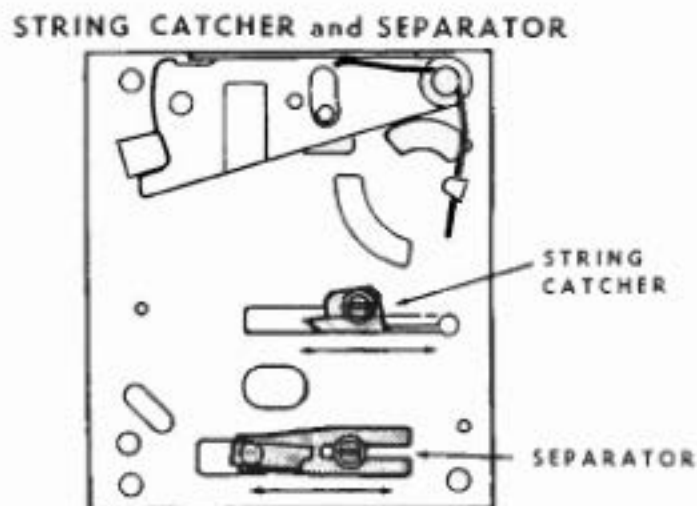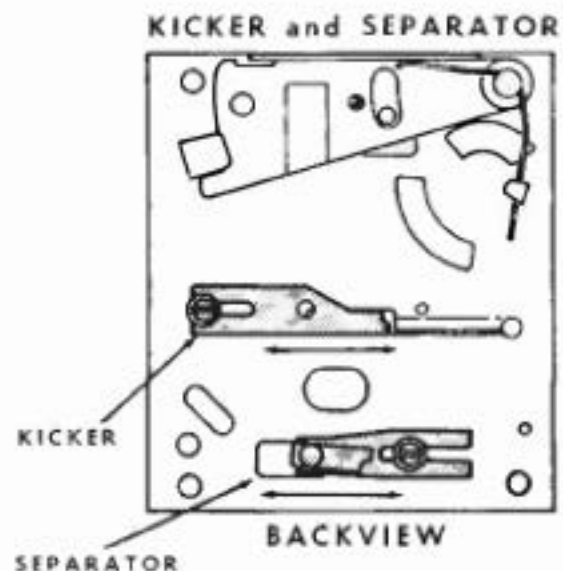

5. Insert the coins again and, if some of them are still returned, repeat Step 4 until all of the coins are accepted.
6. Loosen the kicker screw and move the kicker as far to the left as it will go. Tighten the screw.
7. Insert several coins and note that some of them are returned.
8. Loosen the kicker screw and move the kicker a slight amount to the right. Tighten the screw.
9. Insert the coins again and, if some of them are still returned, repeat Step 8 until all of the coins are accepted.
10. Be sure the screws are tight after all adjustments are made.

B. String Catcher—(Replaces the kicker in some models)

1. The "V" in the string catcher should be assembled even with the bottom of the kicker opening.
2. On Nickel and Quarter Acceptors, the string catcher is moved as far to the right as it will go.
3. On Dime Acceptors, the string catcher is moved as far to the left as it will go.

MAINTENANCE —

Depending upon the environment in which the Acceptor is used, periodic preventative maintenance should be performed.

The mainplate may be cleaned with any household cleanser. Thorough rinsing and drying are necessary to remove deposits and/or film.

Remove all filings from the magnet by guiding an ice pick, awl, or the point of a screw driver along the edges of the magnet. You will notice the filings will cling to the point of the tool.

Remove the transfer cradles and undersize levers and clean the bushings. A pipe cleaner makes a good bushing cleaner. Also clean the pivot pin. Apply powdered graphite or pencil lead sparingly to the pivot pin and bushing and reassemble.

On Nickel units make certain all foreign matter is removed from the bounce tester. Also make certain the bounce tester fastening screws are tight.

In the event the recommended adjustment and maintenance procedures do not render your "Series 60" Acceptor serviceable, check for worn or damaged parts and replace as necessary.

For service assistance or sales requirements, contact our branch office in your area.

PARTS AND SERVICES AVAILABLE IN THE FOLLOWING CITIES

ATLANTA, GEORGIA
RIVER GROVE, ILLINOIS
CINCINNATI 24, OHIO
ARLINGTON, TEXAS
HONOLULU, HAWAII
HOUSTON 6, TEXAS
LOS ANGELES 7, CALIF.
LONG ISLAND CITY, N. Y.
PHILADELPHIA
PITTSBURGH 14, PA.
BURLINGAME, CALIF.
ST. LOUIS 10, MO.
WEST HILL, ONTARIO

658 ELEVENTH ST. N.W.
8490 W. GRAND AVE.
1345 NORTH BEND
1823 WILL SCARLET RD.
2850 KAIHIKAPU ST.
2183 PORTSMOUTH AVE.
3605 S. BROADWAY
23-10 44TH DRIVE
(CONTACT NEW YORK BRANCH)
2442 EAST ST.
877 COWAN ROAD
1711 HEREFORD ST.
528 ROUGE HILL DR., WEST ROUGE.

875-8049
853-8221
542-0505
275-2164
58-7115
526-4601
232-0286
361-1451

322-4111
697-7416
664-5550
282-0597


**COIN
ACCEPTORS, INC.**



1711 HEREFORD ST. • SAINT LOUIS 10, MO.

SERIES 50 ACCEPTORS

- *Operation*
- *Adjustment*
- *Maintenance*

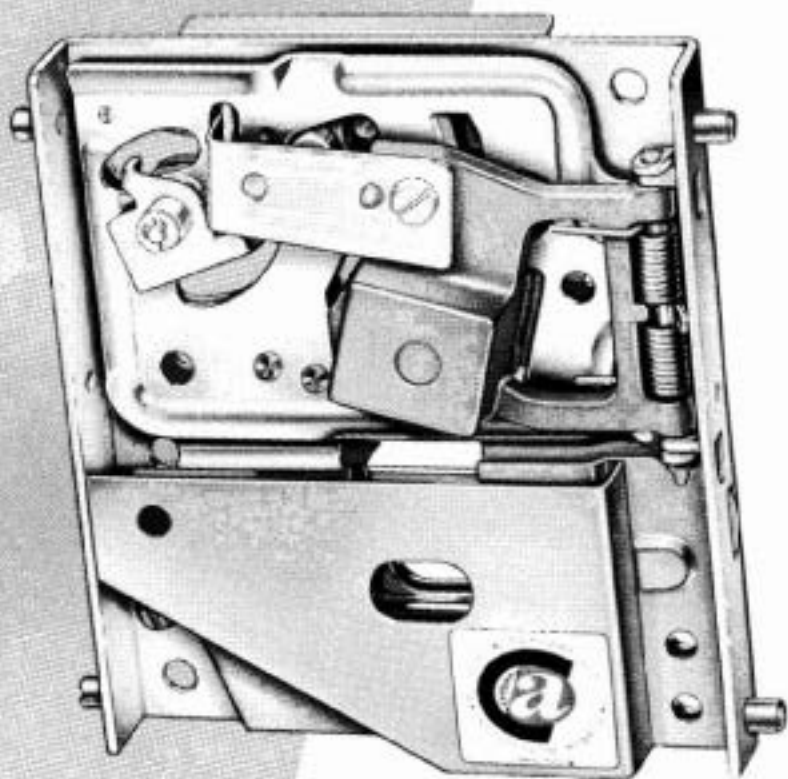

COIN
ACCEPTORS, INC.

1711 HEREFORD ST. • SAINT LOUIS 10, MO.

OPERATION —

The "Series 50" Acceptors are designed to require a minimum of maintenance and field adjustment. Detection and rejection of undesired or counterfeit coins are determined by size (both thickness and diameter), weight, metallic composition, and bounceability.

Transfer cradles are used to test the size of the coin. Undersize diameter coins will pass between the legs of the transfer cradle and will be returned. Oversize diameter coins will fail to pass between the transfer cradle and the wiper and will be returned by actuating the wiper operating lever. In the case of the quarter acceptor, an undersize lever must first be pivoted to unlock the transfer cradle. Undersize diameter "quarters" will fail to unlock the transfer cradle and will be returned by actuating the wiper operating lever. Coins that are oversize in thickness will fail to pass between the magnet gate and the main channel and will have to be dislodged and returned by actuating the wiper operating lever.

Transfer cradles are also used to test the weight of the coin. Underweight coins will fail to overcome the transfer cradle counterweight and will be returned by actuating the wiper operating lever.

A magnet is used to test the metallic composition of the coin. Highly magnetic coins, such as steel or iron, will be retained by the magnet and will be returned by actuating the wiper operating lever. Coins having comparatively high magnetic properties, such as copper, will be slowed down by the magnet and will drop off the end of the rail short of the "accept" entrance and be returned. Coins having little or no magnetic properties, such as brass or zinc, will pass through the magnetic field so fast that they will "overshoot" the "accept" entrance and be returned.



In the case of the Nickel Acceptor, a bounce tester is used to test the bounceability of the coin. Due to its magnetic properties, a genuine nickel passes quickly through the magnetic field and drops off the end of the rail in an arc that causes it to hit the bounce tester which, because of the coin's elasticity, "bounces" it into the "accept" entrance. A counterfeit coin passing through the magnetic field at the same speed as a genuine nickel will not have the same elasticity and so will not have the same "bounce" as a genuine nickel and will miss the "accept" entrance and be returned.