




1971-72 PARTS CATALOG

VOLUME I

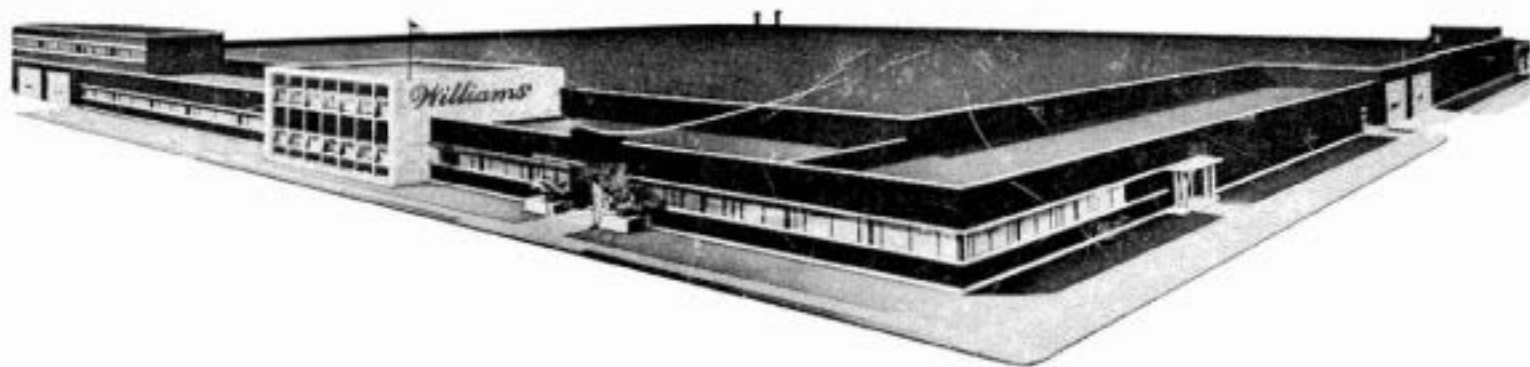

ELECTRONICS, INC.

SUBSIDIARY OF THE SEEBURG CORPORATION

3401 N. California Ave.
(312) 267-2240

Chicago, Ill. 60618, U.S.A.
Cable Address: Wilcoin

THIS CATALOG INCLUDES

ONLY

WILLIAMS

AND

UNITED

PARTS IN CURRENT PRODUCTION.

FOR PARTS NOT IN CURRENT PRODUCTION, REFER

TO 1969 CATALOG AND ADD 25% TO

PRICES SHOWN

Dear Operator:

Your "WILLIAMS" game is a sound investment that will earn more money if, you keep your "WILLIAMS" game.

"Factory Fresh"

**KEEP PLAYFIELD CLEAN AND REPLACE
BURNED OUT LIGHT BULBS IMMEDIATELY**

NOTE:

THE FOLLOWING PAGE
HAS A LISTING OF CORRECTIONS
IN THE PARTS SECTION.
PLEASE CHECK BEFORE ORDERING.

GAMES PRODUCED — ORDER OF PRODUCTION

Name	Production Date	Name	Production Date
PIN GAMES		(BOWLER & SHUFFLE TYPE)	
SPACE PILOT	11/68	TANGO	1/66
CABARET	1/69	AMAZON	2/66
SPOOKS GUN	2/69	BLAZER	5/66
MISS "O"	2/69	ENCORE	9/66
FAST BALL	3/69	AZTEC	9/66
POST TIME	4/69	ALTAIR	2/67
SUSPENSE	5/69	CORONADO	7/67
SMART SET	6/69	ORION	10/67
PHANTOM GUN	8/69	ALPHA	2/68
PADDOCK	9/69	PEGASUS	7/68
GRIDIRON	10/69	DELTA	10/68
EXPO	10/69	CENTURY	4/69
SET UP	12/69	GAMMA	4/69
SEVEN UP	12/69	BETA	10/69
GAY 90's	1/70	CENTENNIAL	10/69
4 ACES	3/70	EPSILON	3/70
HIT & RUN	3/70	EL GRANDE	7/70
ROCK N' ROLL	4/70	LAGUNA	7/70
JIVE TIME	4/70	PALOS VERDE	10/70
ACES & KINGS	6/70	CIMARRON	12/70
BONANZA GUN	6/70		
RINGER	7/70		
MINI BOWL	9/70		
STRIKE ZONE	9/70		
STRAIGHT FLUSH	10/70		
3 JOKERS	10/70		
DIPSY DOODLE	12/70		

ALPHABETICAL INDEX OF GAMES

Type of Game:	Page
ARCADE GAMES	114 thru 129
BASEBALL GAMES	58 thru 76
BOWLING ALLEYS	99 thru 113
FLIPPER GAMES	1 thru 57
GUN GAMES	77 thru 90
HORSE GAMES	91 thru 98
SHUFFLE ALLEYS	99 thru 113

REVISIONS

CHECK HERE FOR CORRECT PAGE AND
PART NUMBERS IN BACK OF CATALOG

Part No.	Description	Page	New Page	Price
1A-877	Horse Slide Bar	7	97	.38
1A-4237	Flip-Over Tapping Plate	46	48	.66
1B-4726-1	Cash Box Cover - from last 50 Aztecs on (was 1B-4276)	113	113	1.24
1A-4607	Ball Shooter Button	58,59,61	58,59,91,123	1.24
1A-4624-2	Target	51	57	.20
1A-4647	Target Trim Plate	123	No Page	.08
1A-4661	Link Plunger	8	No Page	.26
1A-5155	Bracket	9,10,99,199	9,10,99,100	.92
3A-6022	Switch Blade Lifter (give size)	137	37	.02
3A-7039	Control Knob Rheostat-Baseball	44,121	121	.40
3A-7040	Plastic Bowling Pin	44,128	128	.76
3B-7191-2	Nylatron Sprocket with Roll Pin (was 3B-7192-2)	O.K.	O.K.	1.04
3A-7240	Small Playfield Post (specify color)	50	44	.12
10A-230	Spring Extension (was 1A-230)	1	1	.12
11C-388	Pin Panel (was 1C-388)	129	129	19.00
12A-6267	Snap On Cotter Key	67,104,122	147	.02
12A-6351	Spring Clip	No Page	67,104,122	.08
12A-6406	Wire Form	43	No Page	.26
14A-7855	Vertical Motor Guns, 50 Cycle Spooks, Phantom Guns	86,86	85,86	13.00
16A-8655	Press to Pitch, Fast Curve, Knuckler - Fastball	50	58	.68
B-4683-C	Bat Unit Frame (was B-4683 D)	62	62	3.78
B-4683-D	Bat Unit Main Frame (was B-4683-C)	61	61	3.94
B-5161-376	Bat Unit Complete - Gridiron (was Hit & Run)	62	62	40.00
B-6068	"J" Type Relay Assembly (less switches)	12,18	12,19	5.26
A-6223-1	Coil Mounting Frame	1,67	67	1.30
C-6493	Relay Bank Assembly (write for price)	3	13	
B-6517	Free Ball Gate Assembly	29,111	29	8.50
C-6521	Sno-Shoe Wiper Assembly (specify game and unit)	3	4	10.50
B-6559	Score Motor Bracket	112	113	2.50
A-6738	Ball Track Brake Assembly (was A-6638-1)	103	103	2.78
A-6797	S.A. Push Button Assembly (Alum.)	112	113	2.40
A-6797-C	Push Button & Switch S.A. (was A-6797)	112	113	2.42
A-6867	Coil Stop (was Coin Stop)	84,104	84,104	1.32
C-6876	Cash Box S.A. & B.A. (was C-6786)	112	113	5.54
B-6954-1	Horse #1 & Wire Assembly	97,97	95,97	2.76
A-6958	Switch Mounting Plate	58,59,89	58,59,91	1.20
C-6972	Front Molding Complete with Hardware - Hayburner (was Derby Day)	89	91	60.00
A-7263	Bell Crank & Hub	123,124	124,125	3.00
SW. 10A-21	Ball Shooter - Release Switch	89	91	.78

WHEN ORDERING PARTS

1. Refer to the catalog and order all parts by number and description, specifying quantity and name of game for which parts are being ordered.
2. Figure prices as quoted in the catalog. All prices are subject to change without notice.
3. Returned merchandise will not be accepted unless previously authorized.
4. All prices net F.O.B. our factory.

TABLE OF CONTENTS

	Page No.		Page No.
50 Step Unit (Resetting Type)	1	Selector Advance Unit	30
50 Step Unit (Non Resetting Type)	2	Backglass Binders & Advance Unit Parts	31
Replay Unit	3	Knocker Ass'y-Chime Box-Counter	32
Wiper Assemblies & Contact Discs	4	Bell Assemblies-Large & Small	33
10 Step Unit (With Printed Circuit) 4" Drums	5	Solenoid Plungers	34
10 Step Unit (Without Printed Circuit) 4" Drums	6	Coil Replacement Sleeves	35
10 Step Unit 4" Drums	7	Switch Blades	36
10 Step Unit Score Reels 3" & 4" Drums	8	Switch Tubing, Spacers & Lifters	37
10 Step Unit Parts with PC 3" Drums	9	Cam Followers & Switch Blades	38
10 Step Unit Parts without PC 3" Drum	10	Motor Unit Cam Switches	39
10 Step Unit Parts 3" Drum	11	Miscellaneous Pin Game Switches	40
Alternator Unit with 5¢ relay	12	Miscellaneous Switch & Bracket Assemblies	41
Relay Bank Assembly	13	New Rollover Assemblies	42
Motor Unit Assembly	14	Wires Forms & Assemblies	43
Drop Target Assembly	15	Miscellaneous Playfield Parts	44
Swinging Target	16	Front Door Assembly & Parts	45
"Jet" Bumper Assembly	17	Front Door Assembly & Parts	46
Interlock Relay Assemblies	18	Coin Trip Assemblies & Parts	47
"J" Type Relay & Switches	19	Coin Box-Cover & Coin Trays	48
"L" Type Relay & Switches	20	Coin Entry Plates & Coin Rejectors	49
Ball Shooter Unit-Automatic Ball Return	21	Coin Entry Plates & Coin Rejectors	50
Flipper Assembly & Tilt-Unit	22	Coin Entry Plates & Coin Rejectors	51
Flipper Unit	23	Front Moulding & Locking Parts	52
Flipper Parts	24	Disappearing Post Unit	53
Ball Eject Unit & Parts	25	Rotating Bumper Unit	54
Extended Play & Kickout Unit	26	Doodle Bug	55
Extended Play & Kickout Unit Parts	27	Random Spinner Unit	56
Ball Kicker Assembly & Ball Guide Assembly	28	Target Panel Assembly - 4 Aces	57
"Free" Ball Gate Units	29	Baseball Top Front Mldg. Fastball	58

	Page No.		Page No.
Baseball Top Front Mldg. Gridiron	59	Horse Unit Parts - Hayburner	97
Front Moulding Locking Parts Baseball	60	Target Panel Parts - Hayburner	98
Batter Unit - Hit & Run	61	10 Step 3" Drum Unit S.A.	99
Batter Unit - Gridiron	62	10 Step 3" Drum Unit S. A.	100
Pitch Unit - Fastball & Gridiron	63	10 Step 3" Drum Unit Parts	101
Pitch Unit - Hit & Run	64	Roto (Alternator) Unit S.A.	102
Man Run Unit - Fastball	65	Rollovers B. A. & S. A.	103
Miscellaneous Baseball Parts	66	New Pin Hanger & Parts	104
Ball Catcher Parts - Fastball	67	Pin Panel Parts S. A.	105
Target Assembly - Fastball	68	Ball Lift Parts B. A.	106
Target Assembly - Gridiron	69	Ball Lift Carriage	107
Timer Unit - Gridiron	70	Rubber Parts Bowler	108
Timer Unit Parts - Gridiron	71	Replacement Parts Bowler	109
Alternator Unit - Gridiron	72	Miscellaneous Parts B. A. & S. A.	110
Playfield Parts - Hit & Run	73	Flash Motor Unit	111
Base Run Motor Unit Hit & Run	74	Score & Pin Motor Parts	112
Switch Actuator Parts - Hit & Run	75	Shuffle Alley Parts	113
Miscellaneous Parts - Hit & Run	76	Tower & Space Craft Space Pilot	114
Gun Game Parts	77	Tower & Space Craft Space Pilot	115
Gun Game Parts	78	Space Pilot - Parts	116
Alternator Parts - Gun Game	79	Space Pilot - Target Post & Wires	117
Witch Target - Spooks Gun	80	Space Pilot - Handle Control	118
Phantom Target - Phantom Gun	81	Handle Control Parts	119
Slow Horse Target - Bonanza Gun	82	Space Pilot - Target Position	120
Fast Horse Target - Bonanza Gun	83	Space Pilot - Power Supply & Timer	121
Lower Target - Bonanza Gun	84	Ringer - Spin Mechanism	122
Skull Target - Spooks Gun	85	Mini-Bowl - Front Moulding	123
Spooks Target - Phantom Gun	86	Mini-Bowl - Manikin	124
Reverberator Unit - Bonanza Gun	87	Manikin Assembly Instruction	125
Screened Parts - Spooks Gun	88	Manikin - Actuator	126
Screened Parts - Phantom Gun	89	Mini-Bowl - Ball Lift	127
Screened Parts - Bonanza Gun	90	Mini-Bowl - Pin Assembly	128
Front Moulding - Hayburner	91	Mini-Bowl - Pin Reset Mechanism	129
Closing Flippers - Hayburner	92	Parts List	134-139
Ball Shooter Unit - Hayburner	93	Price List - Arranged by	
Closing Flipper Parts - Hayburner	94	Groups of Related Parts	140-149
Horse Unit - Hayburner	95	Price List - Arranged in Numerical Order	150-192
Horse Unit Parts - Hayburner	96		

GAME LUBRICATION GUIDE

Use only MBI Instrument Grease available at all Williams Electronics, Inc. distributors. Part No. 20A-8886 as indicated in chart by X.

STEP AND REPLAY UNITS.

Do not lubricate solenoid plungers!	
Drive, reset and lock arms pivot	X
Ratchet shaft	X
Ratchet teeth (metal)	X
Ratchet pawl pivots	X
Torsion springs	X
Contact disc segments and rivets	X

RELAY BANK ASSEMBLIES.

Do not lubricate solenoid plunger!	
Crank arm pivots	X
Rear leg hinge pivots	X
Reset arm lift edge	X

JET BUMPERS & DISAPPEARING JET.

Do not lubricate solenoid plungers!	
Bumper switch cup	X
Rods	X
Cam lock arm pivot	X
Bumper cam link pivots	X
Rollers	X

BALL EJECT & KICKER ASSEMBLIES.

Do not lubricate solenoid plunger!	X
Ejector or kicker pivots	X
Link	X

FLIPPER ASSEMBLIES.

Do not lubricate solenoid plunger!	
Armature link	X

BALL RELEASE ASSEMBLY.

Do not lubricate solenoid plunger!	
Fibre Link	X
Ball release lever pivot	X

ALPHABETICAL INDEX

Description	Page	Description	Page
— A —			
ARCADE GAME PARTS	114 to 129	COIN BOX & COVERS	48-113
ADVANCE UNIT & PARTS	30-31	COUNTERS, ELECTRIC	32
ARCH, BOTTOM PLAYFIELD	44	COIN REJECTORS	49-50-51
ARMATURE ASSEMBLIES, "J" RELAY	19	CONTACT DISC ASSEMBLY (10 Step Unit 3 & 4"	7-11
ARMATURE ASSEMBLIES, "L" RELAY	20	CONTACT FINGER ASSEMBLY (10 Step Unit 3 & 4"	7-11
ASH TRAYS	109	— D —	
AUTOMATIC BALL RETURN	21	DOOR ASSEMBLY	45-46-47
ALTERNATOR UNIT	12-72 79	DRIVE ARM & PAWL ASSEMBLIES (50 Step)	1-2-3
— B —		DRIVE PAWL ASSEMBLY (10 Step Unit)	7-11
BALL BOWLER	109	DROP TARGET ASSEMBLY	15
BALLS (Price Listing)	146	DROP TARGET PARTS	15
BALL EJECT ASSEMBLIES	25	DRUM SCORE REELS 3 & 4"	8-101
BALL FLAP	66	DISAPPEARING POST UNIT	53
BALL GATE ASSEMBLIES	29-44	DOODLE BUG UNIT	55
BALL GUIDE	28	— E —	
BALL KICKER ASSEMBLY	28	EJECT, BALL EJECT ASSEMBLY	25
BALL LIFT ASSEMBLY (Bowler)	106	ENTRY PLATE, COIN INSTRUCTION	49-50-51
BALL LIFT CARRIAGE	107	EXTENDED PLAY KICKOUT UNIT	26
BALL CATCHER	67	EXTENDED PLAY KICKOUT UNIT PARTS	27
BALL RELEASE ASSEMBLY	21	— F —	
BALL RETURN	21	FLASH MOTOR UNIT (B. A. & S. A.)	111
BALL SHOOTER ASSEMBLY	21	FASTENERS (Price Listings)	147
BANK, RELAY BANK ASSEMBLY	13	FINGER, CONTACT FINGER ASSEMBLY (50 Step Unit)	4
BASEBALL & FOOTBALL PLAYERS	65-68-69	FINGER, CONTACT FINGER ASSEMBLY (10 Step Unit)	7-11
BAT COILS	61	FISHPAPER BLADES	37
BAT, PLASTIC	61	FLIPPER BUTTON ASSEMBLY	22
BAT HANDLE LEVER ASSEMBLY	61-62	FLIPPER & COIL ASSEMBLY	23
BATTER UNIT ASSEMBLY	61-62	FLIPPER PLUNGER ASSEMBLY	23
BELL ASSEMBLY, LARGE	33	FRONT MOULDING	52-60
BELL ASSEMBLY, SMALL	33	FUSES (Price Listing)	146
BLADES, SWITCH	36-37-38	FLIPPER PARTS	23-24-92-94
BOWLING PIN	109	FRONT MOULDING - BASEBALL	58-59-60
BOWLING BALL	109	4 POSITION TARGET UNIT	120
BUMPER ASSEMBLY "JET"	17	FRONT DOOR & PARTS	45-46-47-48
BUMPER SWITCH ASSEMBLY	17	FOOTBALL BAT UNIT	62
BUMPER ASSEMBLY	22	FRONT MOULDING HORSE GAMES	91
BALL RETURN PARTS - BOWLER	108-109	FOOTBALL PLAYERS	69
BUMPER - ROTATING UNIT	54	— G —	
BALL SHOOTER UNIT HORSE GAME	93	GATE, BALL	29-44
BOWLING GAMES	99-113	GEARS & SHAFTS (Step Unit)	1-2-3
— C —		GLASS, PLAYFIELD (Price Listing)	140
CABINETS - BASEBALL	141	GLASS, SCREENED LITEBOX (Price Listing)	140-141-142
CABINETS - HAYBURNER	142	GLASS LOCKING BRACKETS	31
CABINETS GUN GAMES (Price Listing)	141	GUN GAME PARTS	77 to 90
CABINETS FIVE BALL (Single Player) (Price Listing)	140	— H —	
CABINETS FIVE BALL (Multi Player) (Price Listing)	140	HARDWARE, MISCELLANEOUS (Price Listing)	148-149
CABINETS, MISCELLANEOUS HARDWARE		HINGE, INSERT	103
(Price Listing)	140-141	HORSE UNIT & PARTS	95-96-97
CABINET DOOR	45-46-47	— I —	
CAM FOLLOWERS	38	INFORMATION CARDS & COVERS (B.A. & S.A.)	110
CAM RATCHET HUB - 10 STEP UNIT 3 & 4"	7-11	INSULATOR BLADES, SWITCHES	37
CARBON PLUMB BOB ASSEMBLY	22	INTERLOCK RELAY ASSEMBLY	18
CHIME BOX ASSEMBLY	32	INSTRUCTION PLATES	58-59-118
COILS (Price Listing)	175-177-178	— J —	
COIL REPLACEMENT SLEEVES	35	"J" RELAY ASSEMBLY	19
COIN CHUTES	49-50-51	"JET" BUMPER ASSEMBLY	17
COIN CENTRY PLATE	49-50-51	"JET" BUMPER SWITCH ASSEMBLY	17
COIN GUIDES	45-46-47		
COIN REJECTOR MOUNTING	46		
COIN RETURN CUP	46		
COIN SWITCH	47		
COIN SWITCH WIRE	47		
"CLOSING FLIPPER" UNIT	92-94		

ALPHABETICAL INDEX

Description	Page	Description	Page
— K —			
KEY HOOK	46	RELAY ASSEMBLY - LATCH	18
KICKER ASSEMBLY	28	RELAY ASSEMBLY "L" TYPE	20
KNOCKER ASSEMBLY	32	REPLACEMENT, COIL SLEEVES	35
— L —			
"L" TYPE RELAY ASSEMBLY	20	REPLAY UNIT	3
LATCH, RELAY ASSEMBLY	18	RESET ARM ASSEMBLY	1-2-3
LEGS, METAL (Price Listing)	140-141-142	RESISTORS (Price Listing)	146
LIFT, BALL LIFT ASSEMBLY (Bowler)	106	ROLLOVER SWITCH BLADES	38
LIFTER SWITCH BLADE LIFTER	37	ROLLOVER WIRE FORMS - Pin Games	21-43
LIGHT BULBS (Price Listing)	148	ROLLOVER WIRE FORMS - Bowlers & Shuffles	103
LIGHT SOCKETS (Price Listing)	148	ROLL TILT ASSEMBLY	22
LINKS, FLIPPER	23-134-135-136	RUBBER PARTS BOWLER	108
— M —			
MAGNET COIL - BASEBALL	65	RELATED PARTS (Price Listing)	140 to 149
MAN RUNNING UNIT (Baseball)	65	RIFLE & PARTS - Gun Games	77
METER, ELECTRIC	32	ROLLOVER BUTTONS	42-75
MISCELLANEOUS CABINET HARDWARE		ROTATING BUMPER UNIT	54
(Price Listing)	140-141	RANDOM SPINNER UNIT	56
MISCELLANEOUS PIN GAME SWITCHES	39-40-41-42	REVERBERATOR UNIT	87
MISCELLANEOUS HARDWARE (Price Listing)	148-149	— S —	
MOTORS (Price Listing)	143-144	SCORE UNIT REELS	8-101
MOTOR ASSEMBLY	14-74-111	SELECTOR UNIT PARTS	30
MOTOR CAM SWITCHES	39	SHAFTS - GEAR & SHAFT ASSEMBLIES	1-2-3
MOTOR - PITCHER UNIT	63-64	SHOOTER - BALL SHOOTER ASSEMBLIES	21
MOTOR - SCORING UNIT	14	SHOOTER COIL ASSEMBLY - Hayburner	93
MOTOR BALL LIFT	106-127	SNOWSHOE WIPER ASSEMBLY	4
MOULDING - CABINET	140	SOLENOID PLUNGERS	34
MOULDING - BASEBALL	141	SPACERS - SWITCH	37
MOULDING - HAYBURNER	142	SPINNER UNIT	56
— N —			
NYLON POSTS	44	SPRINGS - WIPER ASSEMBLIES	4
— P —			
PARTS LIST	134 to 139	STAND UP SWITCH ASSEMBLY	41
PAWL ASSEMBLIES	1-2-3-7-11	STEPS UNIT 10 STEP 3" & 4" DRUMS	5-6-9-10-99-100
PLASTIC BAT (Baseball)	61-62	STEP UNITS 50 STEP	1-2-3
PLASTIC PARTS (Baseball)	62-68-69-73	SWITCH ASSEMBLIES	19-20-21
PLASTIC TARGET	15-16-41-42	SWITCH BLADES	36-38
PITCHER UNITS (Baseball & Football)	63-64	SWITCH PARTS	37
PLUNGER ASSEMBLY, FLIPPER	23	SCAN DISC ASSEMBLY - Gun Games	78
PLUNGERS, SOLENOID	34	SCREENED PARTS - Gun Games	88-89-90
PRINTED CIRCUIT (10 Step Unit) (3" & 4")	7-11	SCREENED PARTS - Baseball	62-68-69-73
PRINTED CIRCUIT (50 Step Unit)	4	SWINGING TARGET	16
PIN HANGER UNITS	104	SHUFFLE ALLEY GAME PARTS	99-113
PUCKS	107	— T —	
PUCK REBOUND RUBBER	107	TARGETS - BASEBALL	68-69
PRICE LISTING (Numerical)	150 to 192	TARGET - PLASTIC	15-16-41-42
PLAYFIELD PARTS HIT & RUN	73	TARGET - DROP TARGET ASSEMBLY	15
— R —			
RATCHET GEAR & SHAFT ASSEMBLIES	1-2-3	TARGET SWITCH ASSEMBLY	41-42
RATCHET HUB & CAM (10 Step Unit)	5-6-7-9-10-11	TARGET SWITCH BLADES	38-41-42
REBOUND RUBBER ASSEMBLY	44	TARGET UNIT - BASEBALL & GRIDIRON	68-69
REEL (10 Step Unit) 3" - 4"	8-101	TILT ASSEMBLY CARBON PLUMB BOB	22
REJECTOR, MOUNTING	46	TILT-ROLL TILT ASSEMBLY	22
RELAY ASSEMBLY "J" TYPE	19	TRANSFORMER (Price Listing)	147
ROTO STEP UP UNIT	102	TUBING - SWITCH	37
RELAY BANK UNIT	13	TARGET UNITS - GUNS	80 to 86
RHEOSTAT	66	TARGET PANEL UNIT HAYBURNER	98
		TARGET PANEL "4 Aces"	57
		TIMER UNIT - GRIDIRON	70-71
		— W —	
		WIPER ASSEMBLIES	4-56-70-71-80-82-85-111-112
		WIPER BLADES	7-11-30
		WIRE FORMS	21-43-103-105
		WIPER SPRINGS	4-31-78
		— Y —	
		YOKE ASSEMBLY - GUN GAME	78


NOTES

(NEW) RESETTNG 50 STEP UNIT

C-6494

THIS NEW IMPROVED STEP UNIT AND PARTS NOW USED ON ALL GAMES.

STARTING WITH "LUCKY STRIKE" (PIN GAME), "OASIS" (BOWLER) & "PYRAMID" (SHUFFLE) ALL FOLLOWING GAMES ARE BEING MADE USING THIS TYPE UNIT.

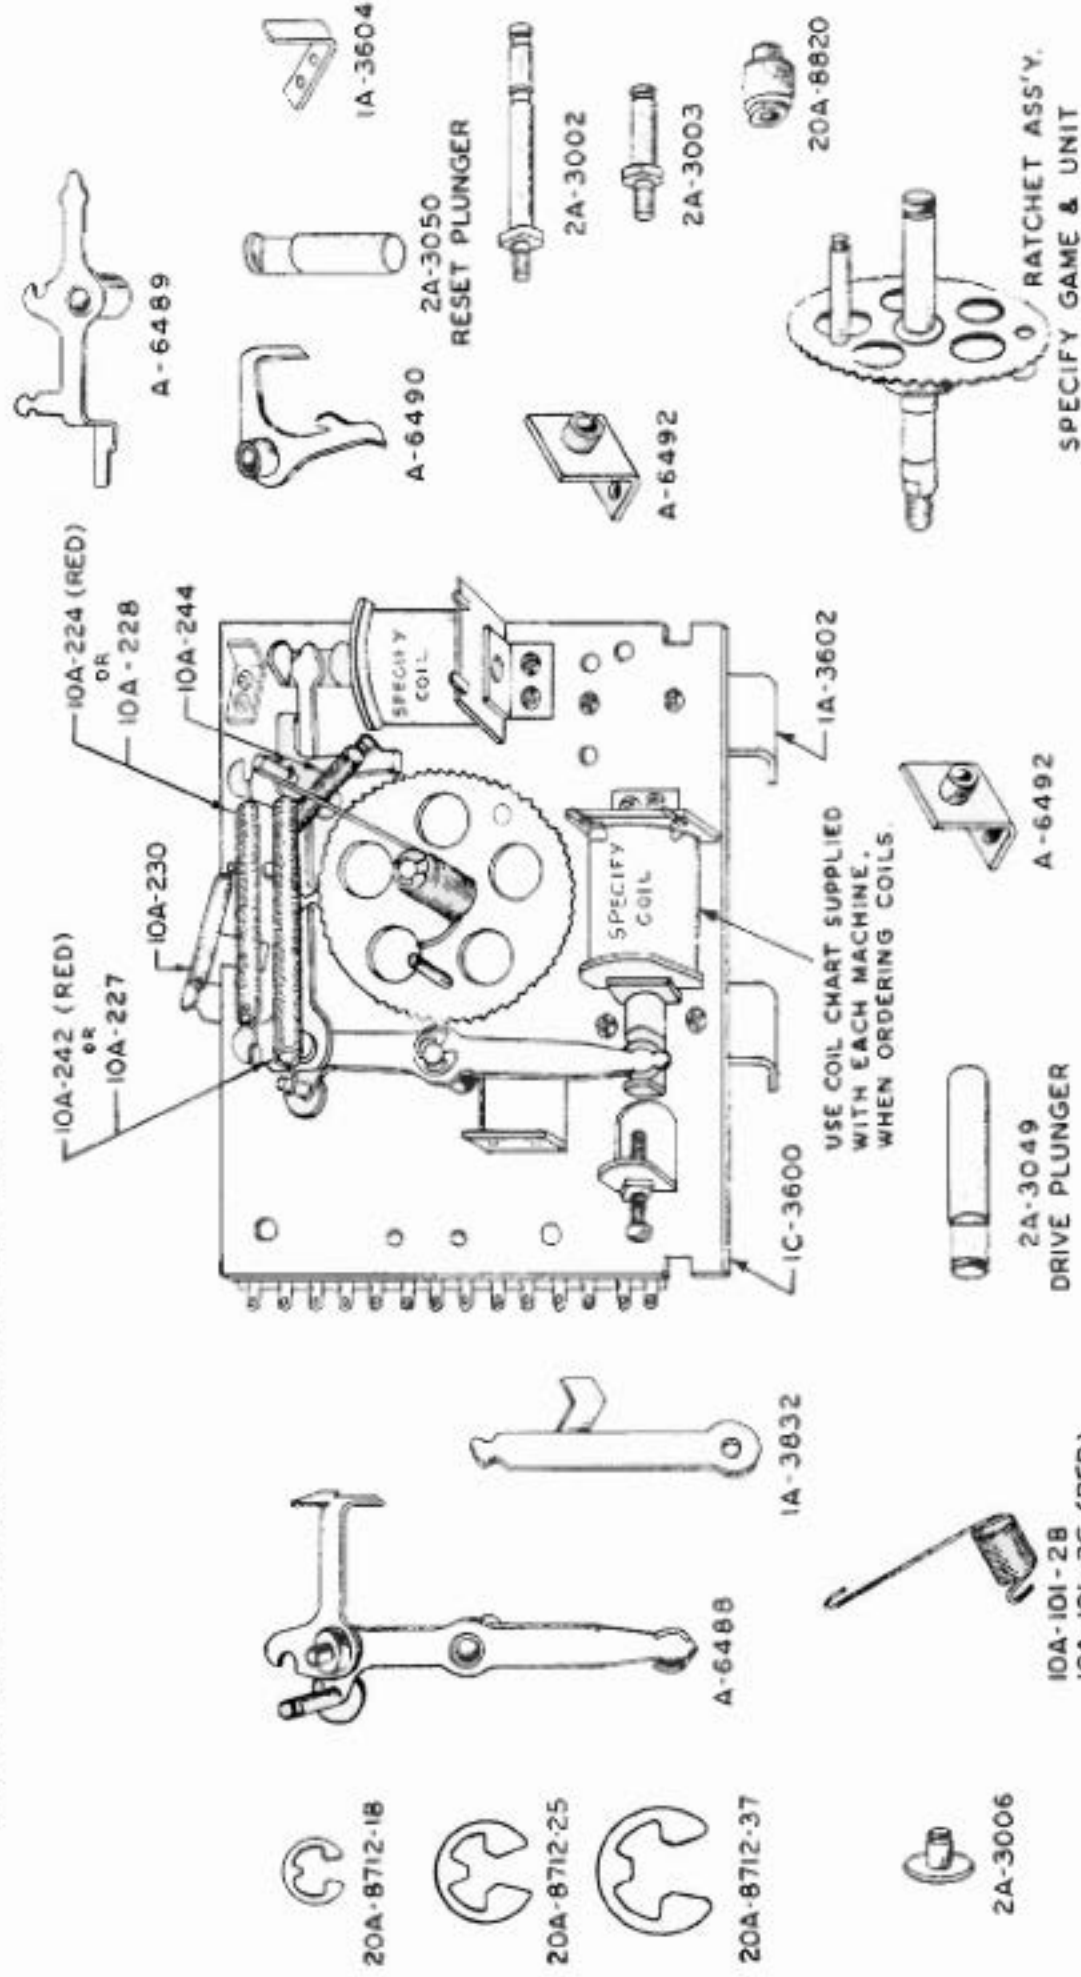

RESET COIL STOP ON STRIKE-SPARE UNITS ONLY - A-6444
WHEN ORDERING WIPER FINGERS OR CONTACT DISC - GAME & UNIT MUST BE SPECIFIED.


(NEW) NON-RESETTING 50 STEP UNIT

C-6510 WITH BELL

C-6510A WITHOUT BELL


THIS NEW IMPROVED STEP UNIT AND PARTS NOW USED ON ALL GAMES.

STARTING WITH "LUCKY STRIKE" (PIN GAME), "OASIS" (BOWLER) & "PYRAMID" (SHUFFLE) ALL FOLLOWING GAMES ARE BEING MADE USING THIS TYPE UNIT.

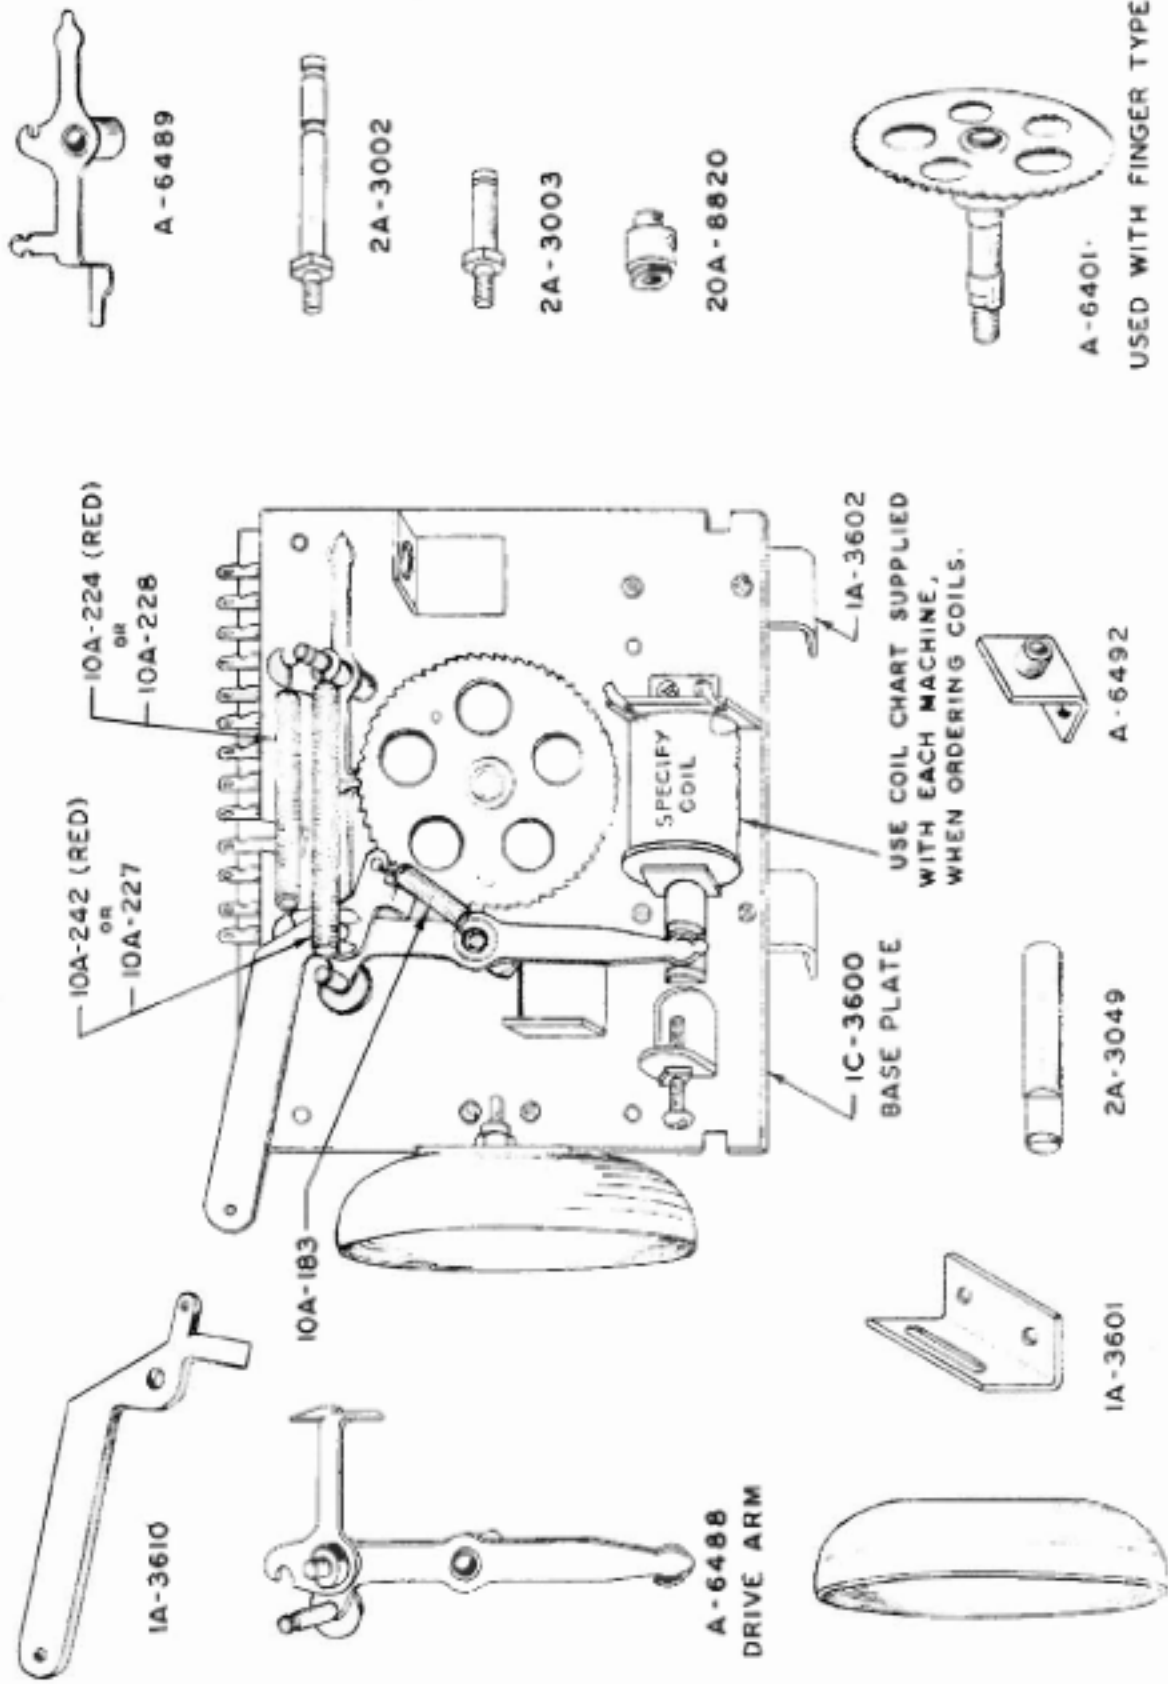


C-6495 (NEW) REPLAY UNIT


THIS NEW TYPE REPLAY UNIT FIRST USED ON "LUCKY STRIKE". ALL FOLLOWING GAMES WILL USE THIS NEW TYPE UNIT.

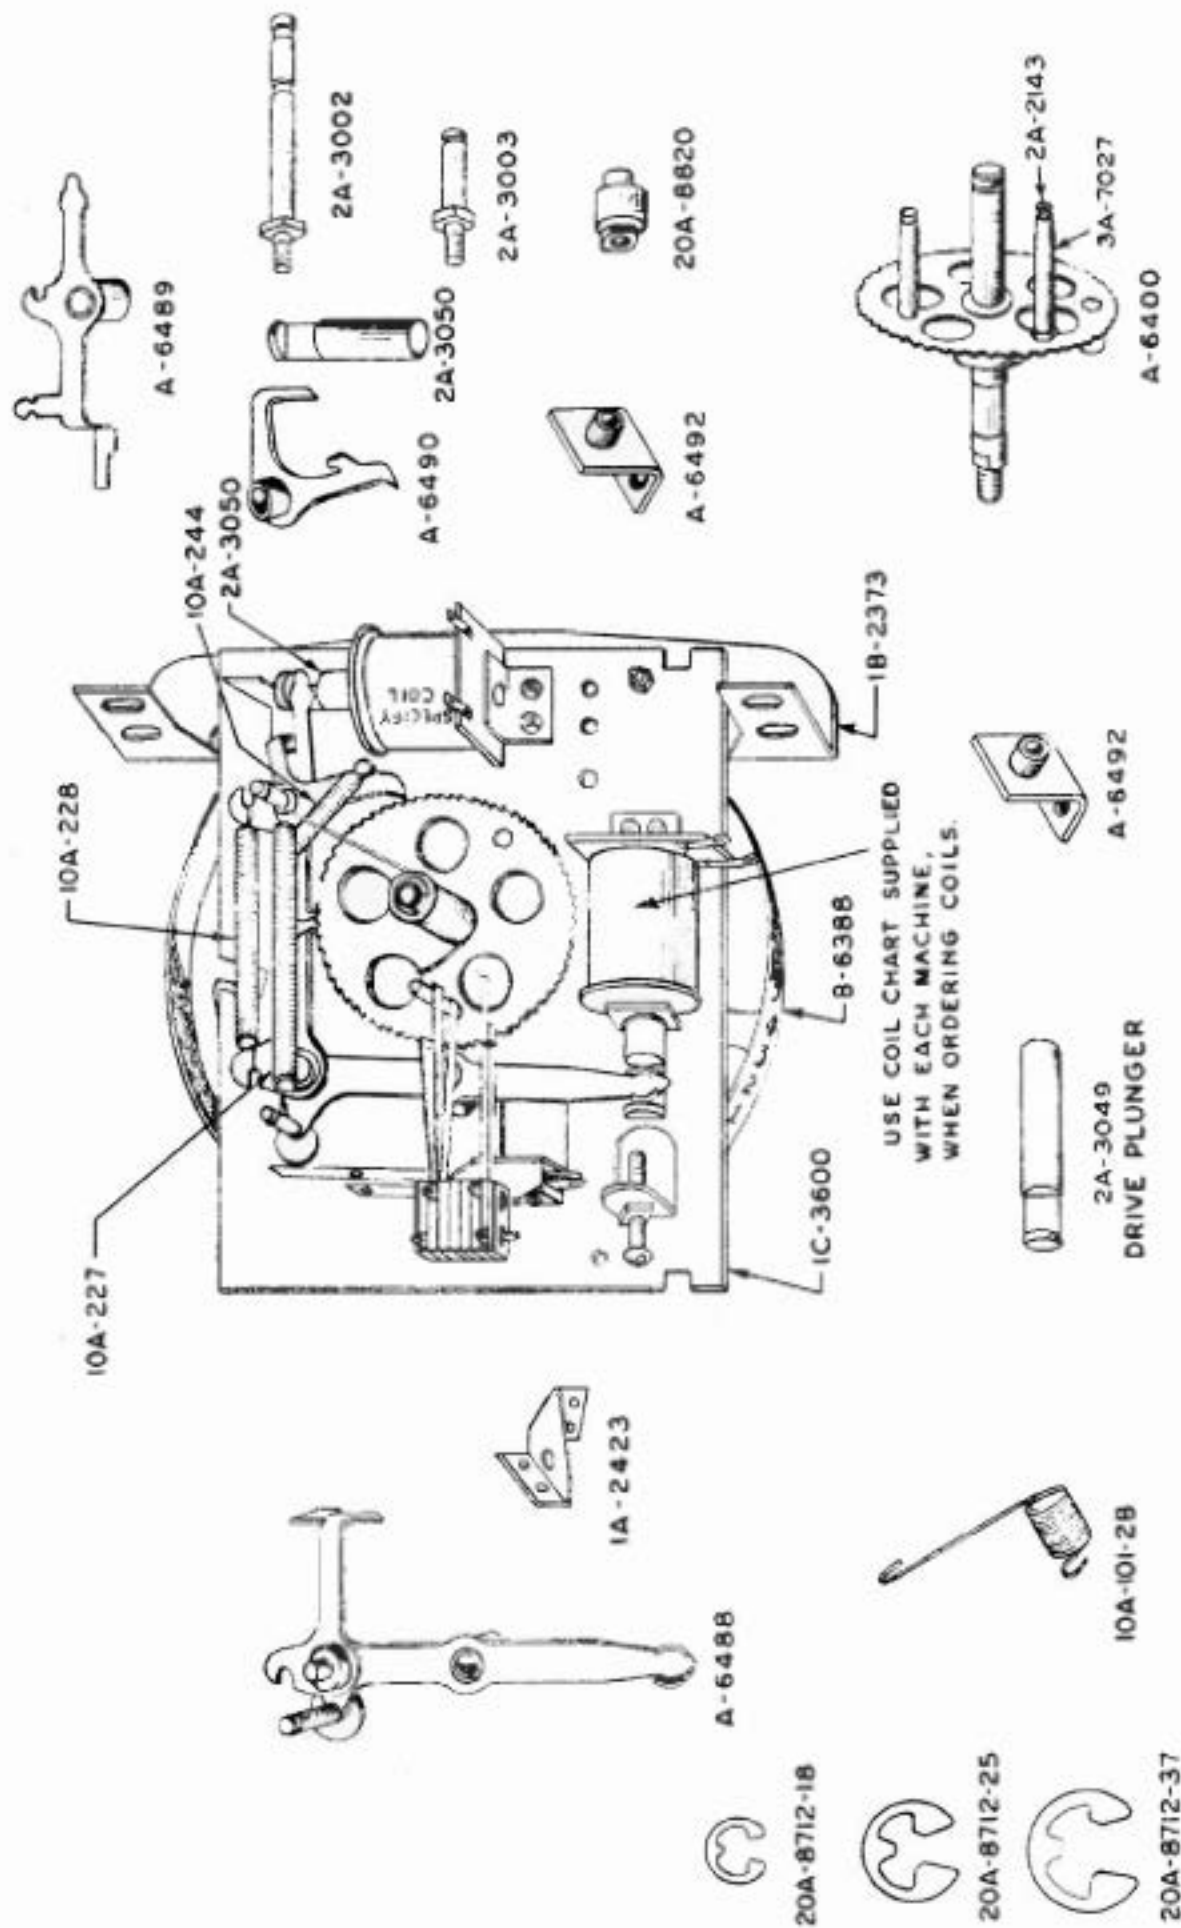


(NEW TYPE) -WIPER ASSEMBLIES

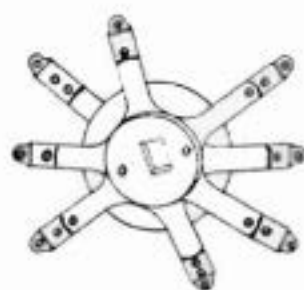

FINGER WIPERS
C-6520-

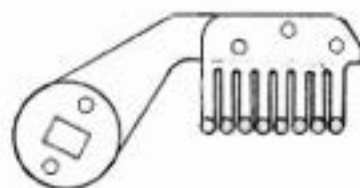


ARM TYPE WIPERS
A-6443-

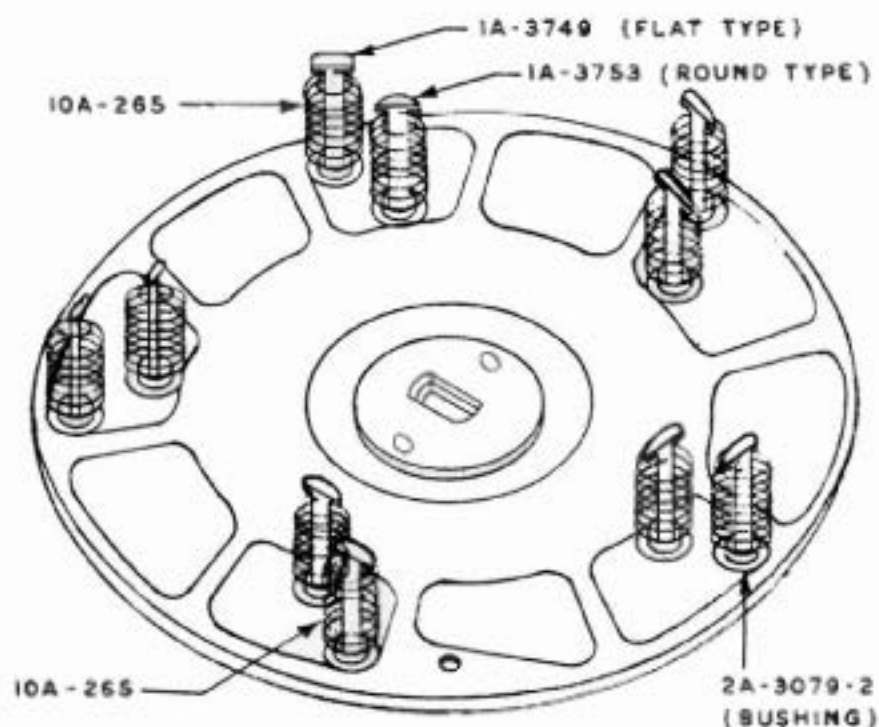


SNOWSHOE TYPE WIPERS
C-6521-

CONTACT DISC ASSEMBLIES

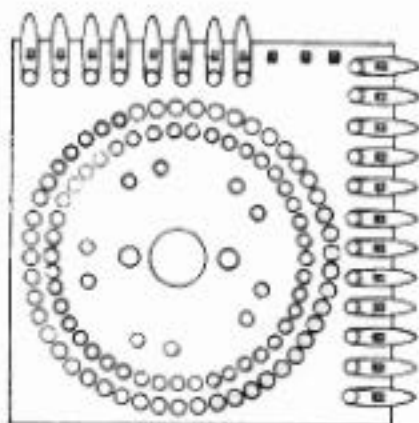

BISCUIT TYPE
C-6417-

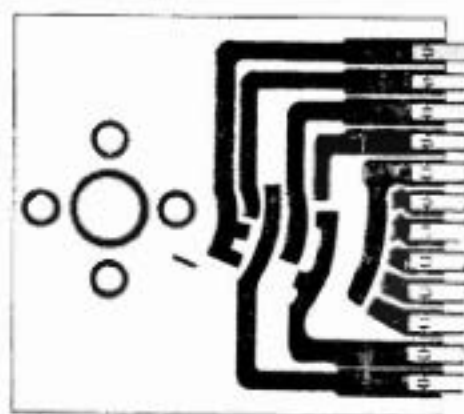


PRINTED CIRCUIT TYPE
C-6414-

BEGINNING WITH "LUCKY STRIKE" AND ON ALL BOWLERS AND SHUFFLE GAMES THE ABOVE PARTS ARE BEING USED. WHEN ORDERING BE SURE TO SPECIFY GAME AND UNIT. CHECK PARTS LIST IN BACK SECTION OF CATALOG FOR CORRECT PART NUMBER.

C-7196 (NEW) 10 STEP UNIT

FOR ALL GAMES STARTING WITH "PADDOCK" —
STARTING WITH "BETA" — ALL SHUFFLES & BOWLERS
4" DRUM UNIT

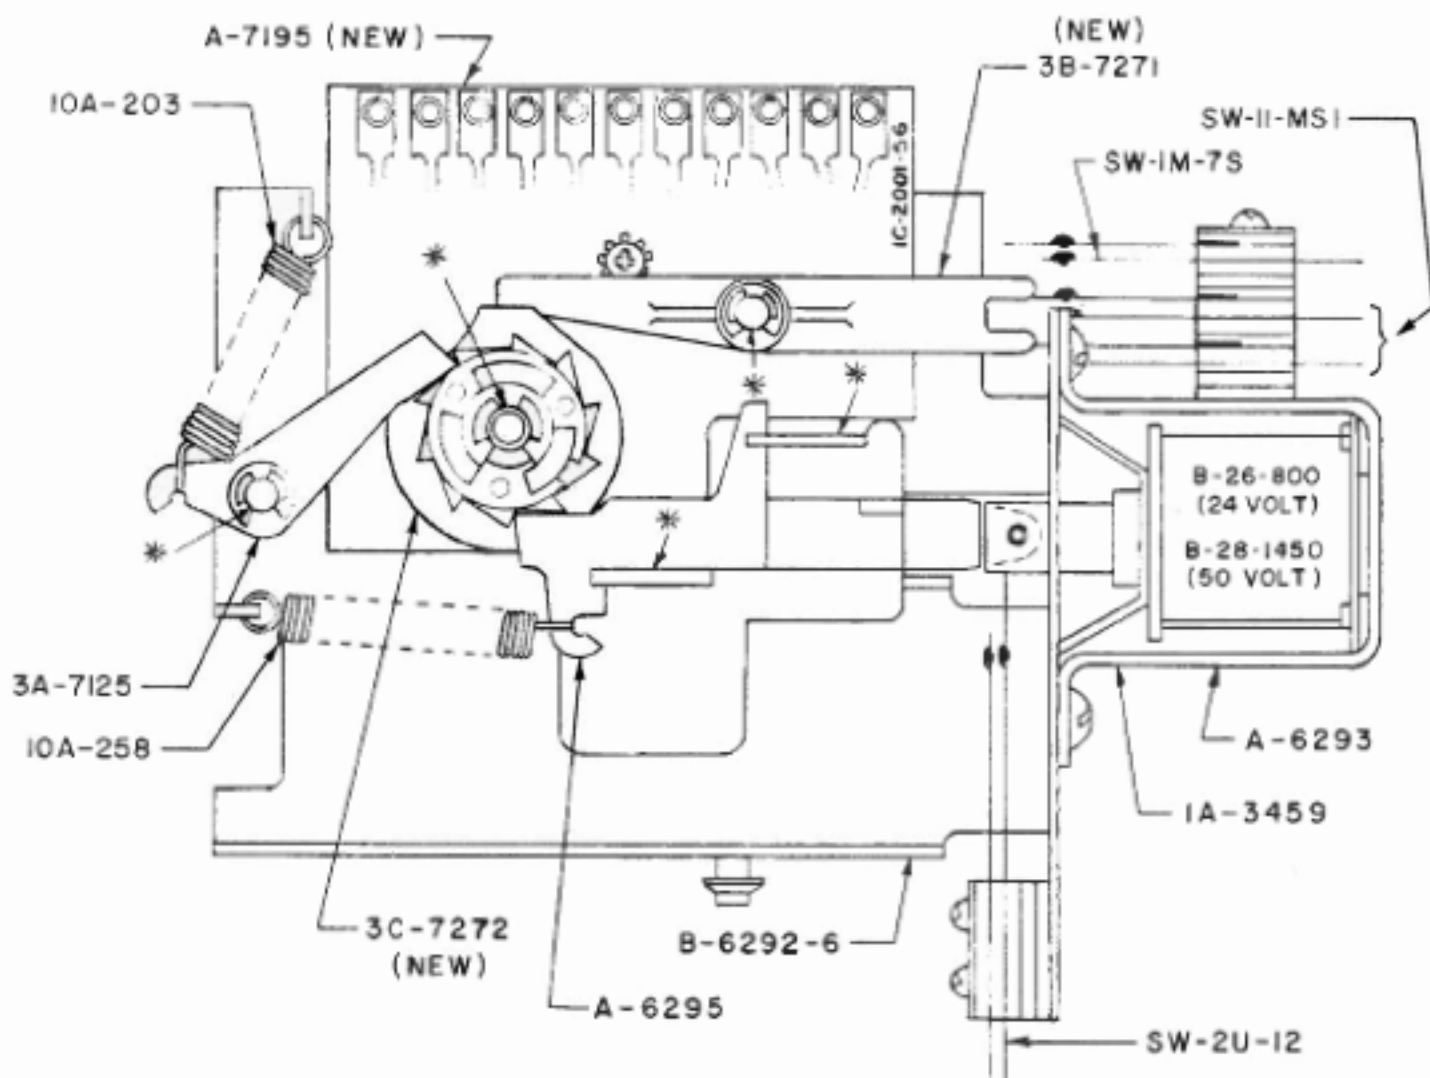

LUBRICATION :

DO NOT PUT LUBRICANT ON DRIVE ARMATURE.

PROPER LUBRICATION WILL INSURE A LONGER LASTING AND BETTER OPERATING UNIT.

POINTS TO BE LUBRICATED ARE THE THREE POSTS ON WHICH THE NYLON PARTS ROTATE, EACH TOOTH OF THE RATCHET, ALSO THE (2) DRIVE PAWL GUIDE SLOTS, INDICATED BY *.


" SERVICE SUGGESTION."

IF UNIT BECOMES SLUGGISH - DISASSEMBLE, CLEAN ALL PARTS AND REASSEMBLE, LUBRICATING ALL PARTS MARKED WITH *.

C-7196-1 (NEW) 10 STEP UNIT

(WITHOUT PRINTED CIRCUIT & WIPER RING)
FOR PIN GAMES, BOWLERS & SHUFFLES.

4" DRUM UNIT

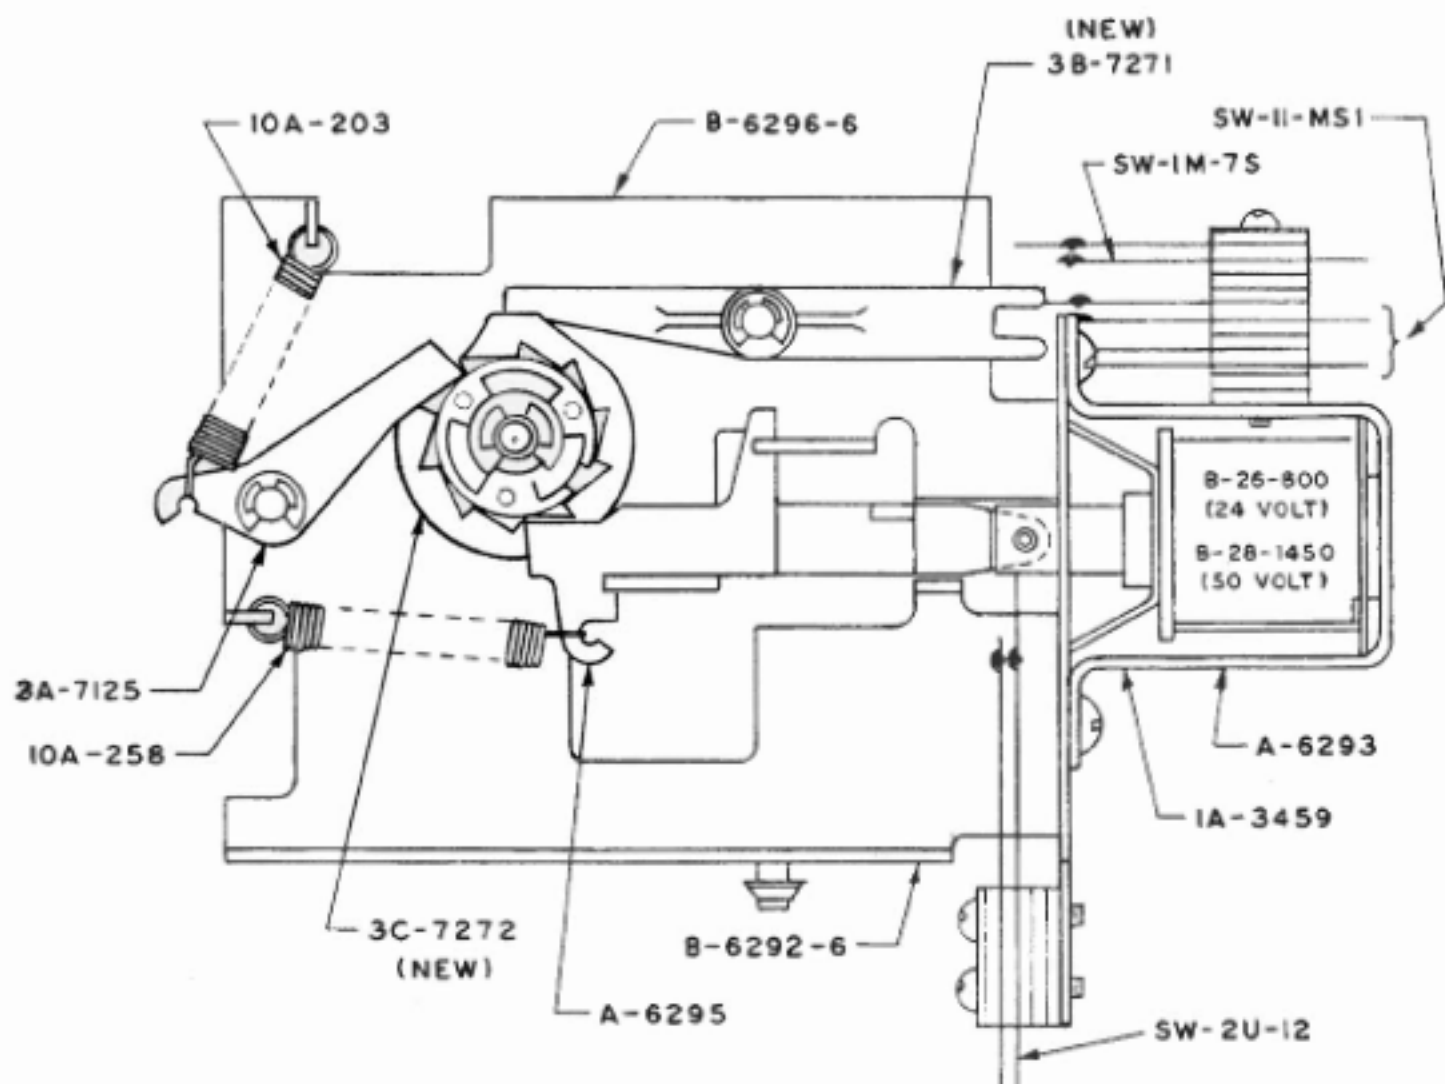


SWITCH ADJUSTMENT :

AT "O" OR INDEX POSITION ALL
3 SWITCHES ARE OPEN AS SHOWN.


AT 1ST TO 8TH POSITION 2 TOP
SWITCHES ARE CLOSED. BOTTOM
SWITCH REMAINS OPEN.

AT 9TH POSITION ALL 3
SWITCHES ARE CLOSED, AS SHOWN.

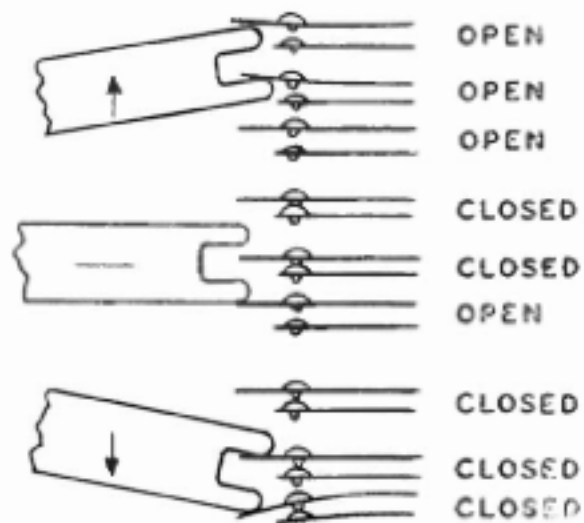


10 STEP UNIT PARTS

4" DRUM UNIT

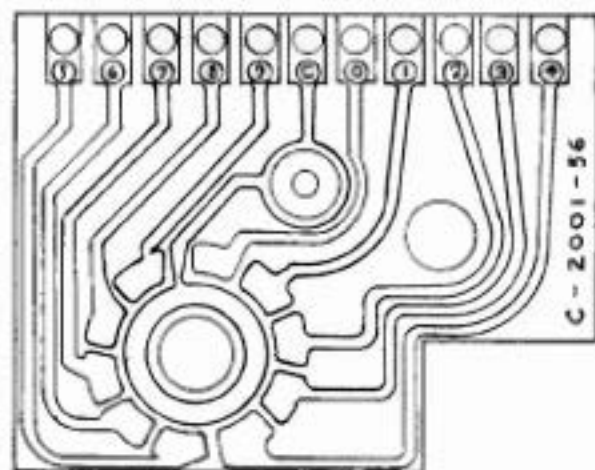


A-7195

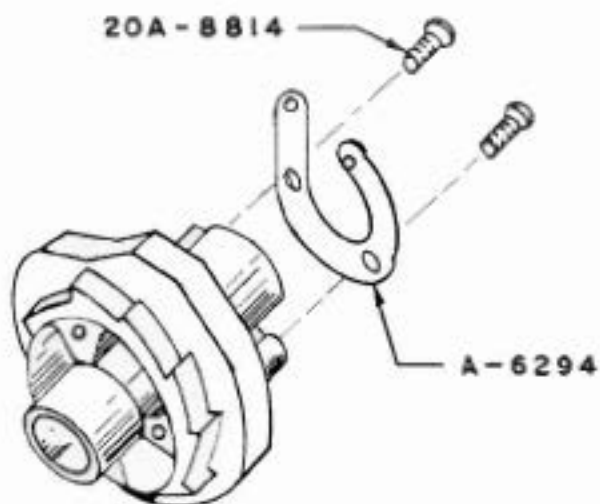

3C-7272



3B-7271
SWITCH ACTUATOR

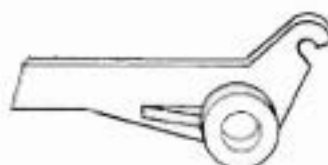


3A-7125
RATCHET STOP PAWL



A-6295
DRIVE PAWL & ARMATURE

4" SCORE DRUM REELS

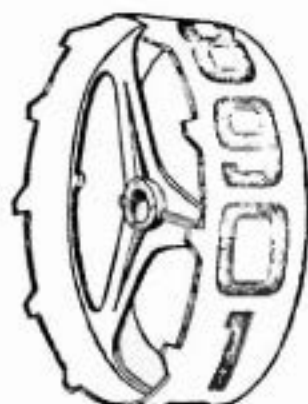

30C-7129

ALL SCORE UNITS ON
FLIPPER GAMES,
ON BOWLERS & SHUFFLES
"1-9", "TENS" & "HUNDREDS"
BOTTOM SCORE UNITS




30C-7129-1

BOWLER & SHUFFLE
FRAME UNIT



30C-7129-5

BOWLER & SHUFFLE
"THOUSANDS"
BOTTOM SCORE UNITS

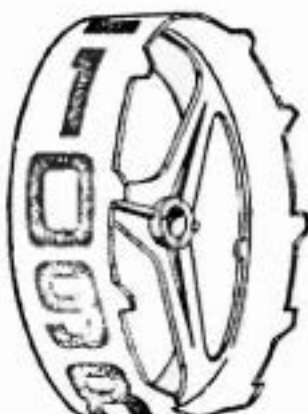

30C-7129-6

BOWLER & SHUFFLE
"1-9", "TENS" & "HUNDREDS"
TOP SCORE UNITS



30C-7129-7

BOWLER & SHUFFLE
"THOUSANDS"
TOP SCORE UNITS

3" SCORE DRUM REELS



30B-7295-1

ALL SCORE UNITS ON
FLIPPER GAMES,
ON BOWLERS & SHUFFLES
"1-9", "TENS" & "HUNDREDS"



30B-7295-2

BOWLER & SHUFFLE
FRAME UNIT




30B-7295-3

BOWLER & SHUFFLE
"THOUSANDS"

D-7251 10 STEP 3" DRUM UNIT

WITH PRINTED CIRCUIT AND CONTACT RING.

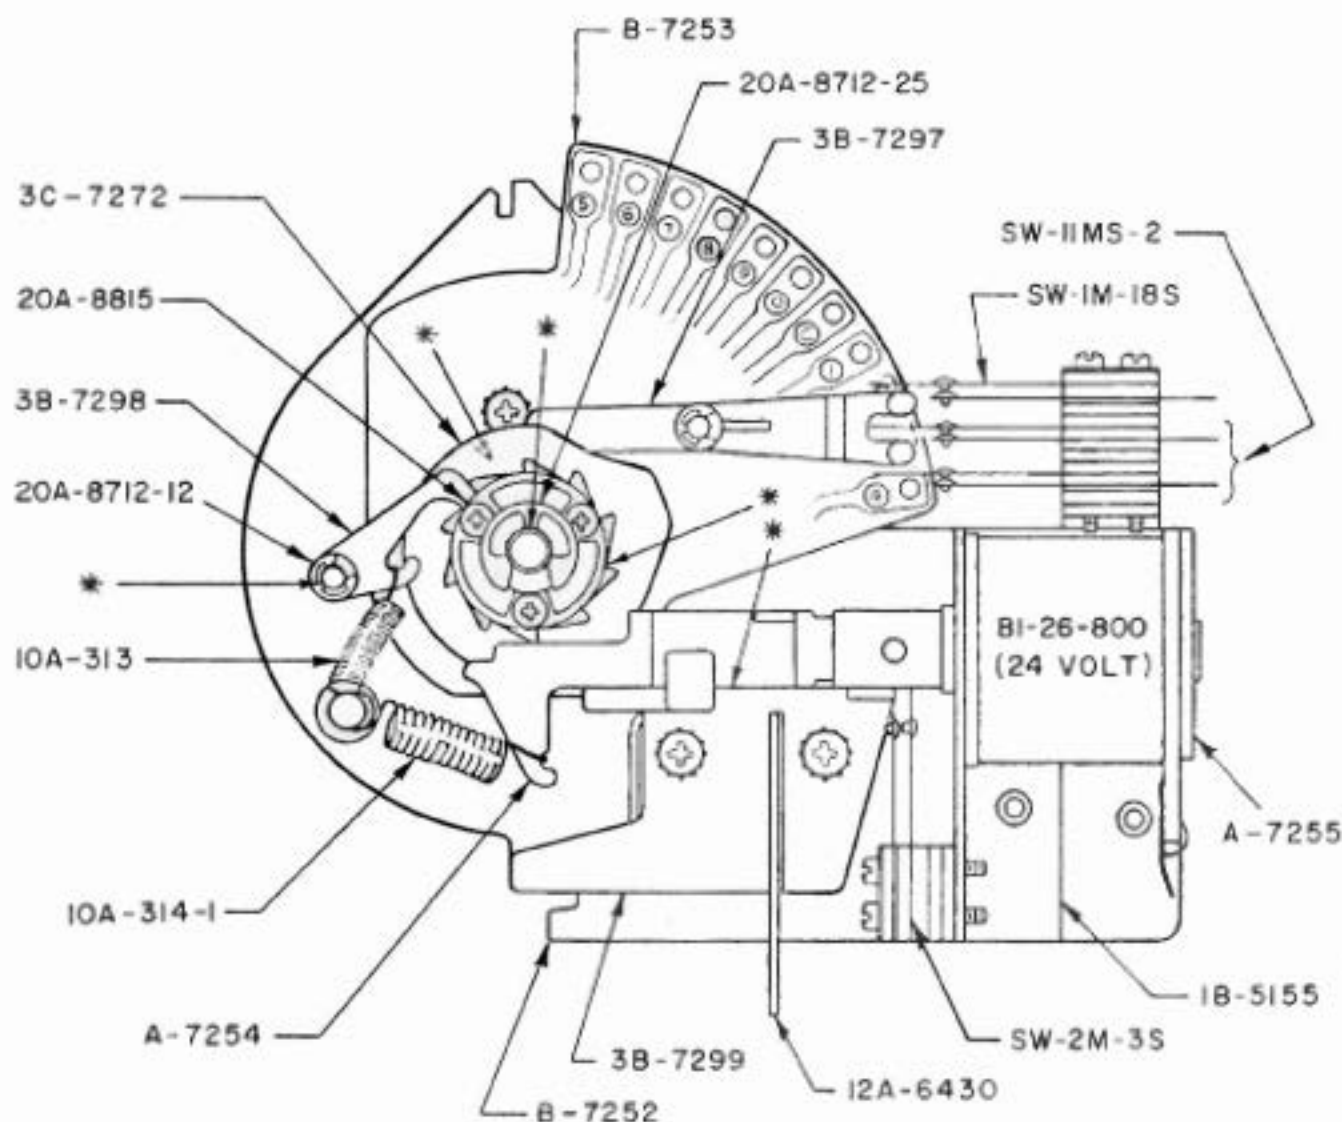

LUBRICATION :

DO NOT PUT LUBRICANT ON DRIVE ARMATURE.

PROPER LUBRICATION WILL INSURE A LONGER LASTING AND BETTER OPERATING UNIT.


POINTS TO BE LUBRICATED ARE THE THREE POSTS ON WHICH THE NYLON PARTS ROTATE, EACH TOOTH OF THE RATCHET, ALSO RATCHET CAM AND TOP OF DRIVE PAWL-BRACKET, INDICATED BY *.

" SERVICE SUGGESTION."

IF UNIT BECOMES SLUGGISH-DISASSEMBLE, CLEAN ALL PARTS AND REASSEMBLE, LUBRICATING ALL PARTS MARKED WITH *.

D-7251 10 STEP 3" DRUM UNIT

WITHOUT PRINTED CIRCUIT AND CONTACT RING.

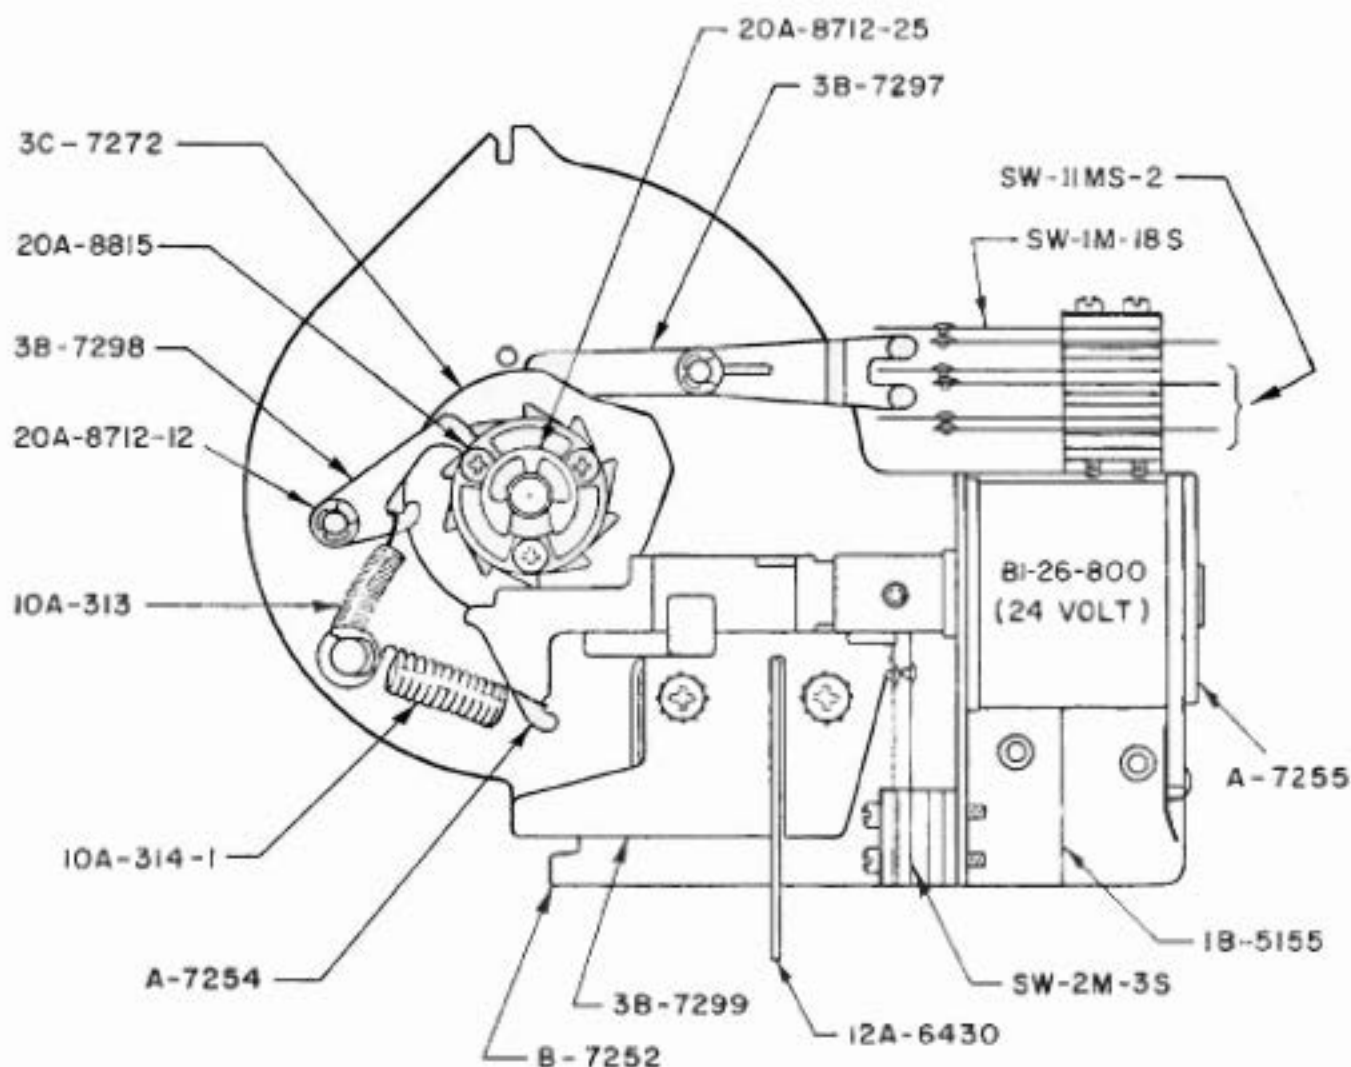


SWITCH ADJUSTMENT :


AT "O" OR INDEX POSITION ALL 3 SWITCHES ARE OPEN AS SHOWN.

AT 1ST TO 8TH POSITION 2 TOP SWITCHES ARE CLOSED. BOTTOM SWITCH REMAINS OPEN.


AT 9TH POSITION ALL 3 SWITCHES ARE CLOSED, AS SHOWN.

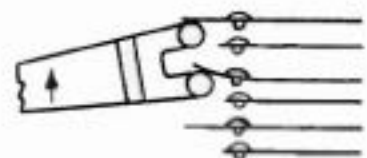

OPEN
OPEN
OPEN

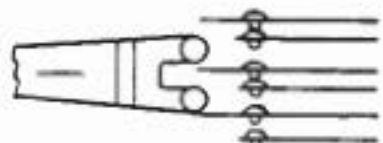


CLOSED
CLOSED
OPEN

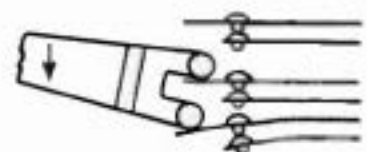

CLOSED
CLOSED
CLOSED

10 STEP UNIT PARTS


3" DRUM UNIT

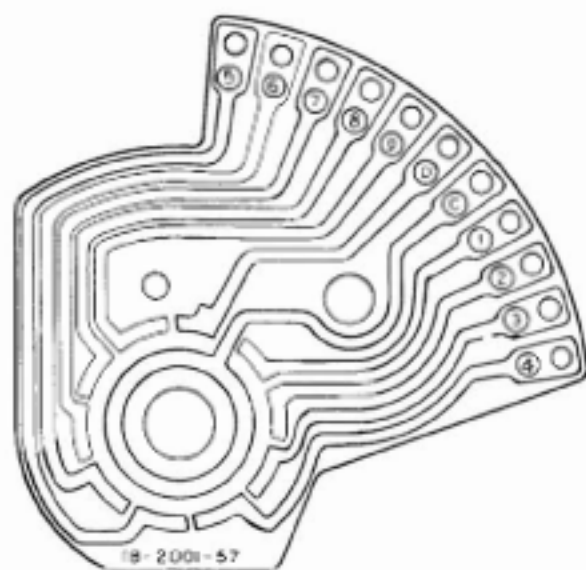

B-7253

PRINTED CIRCUIT ASSEMBLY

* LUBRICATE

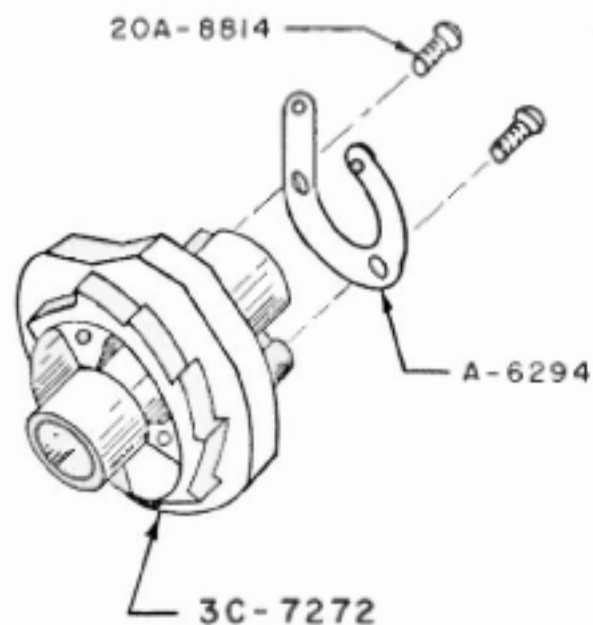


3B-7297

SWITCH ACTUATOR




3B-7298

RATCHET STOP PAWL

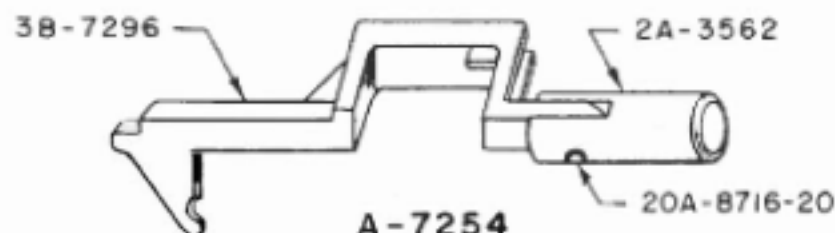

A-7254

DRIVE PAWL & ARMATURE

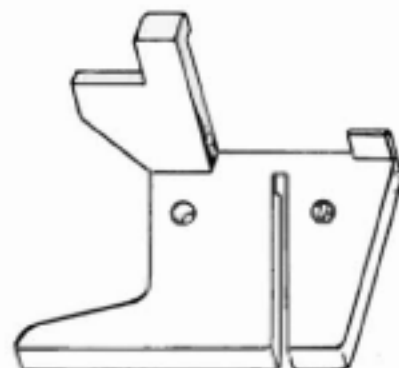



3B-7299

BRACKET-DRIVE PAWL


C-7229

ALTERNATOR UNIT WITH 5¢ RELAY


FOR "PADDOCK"

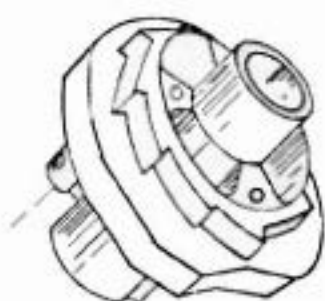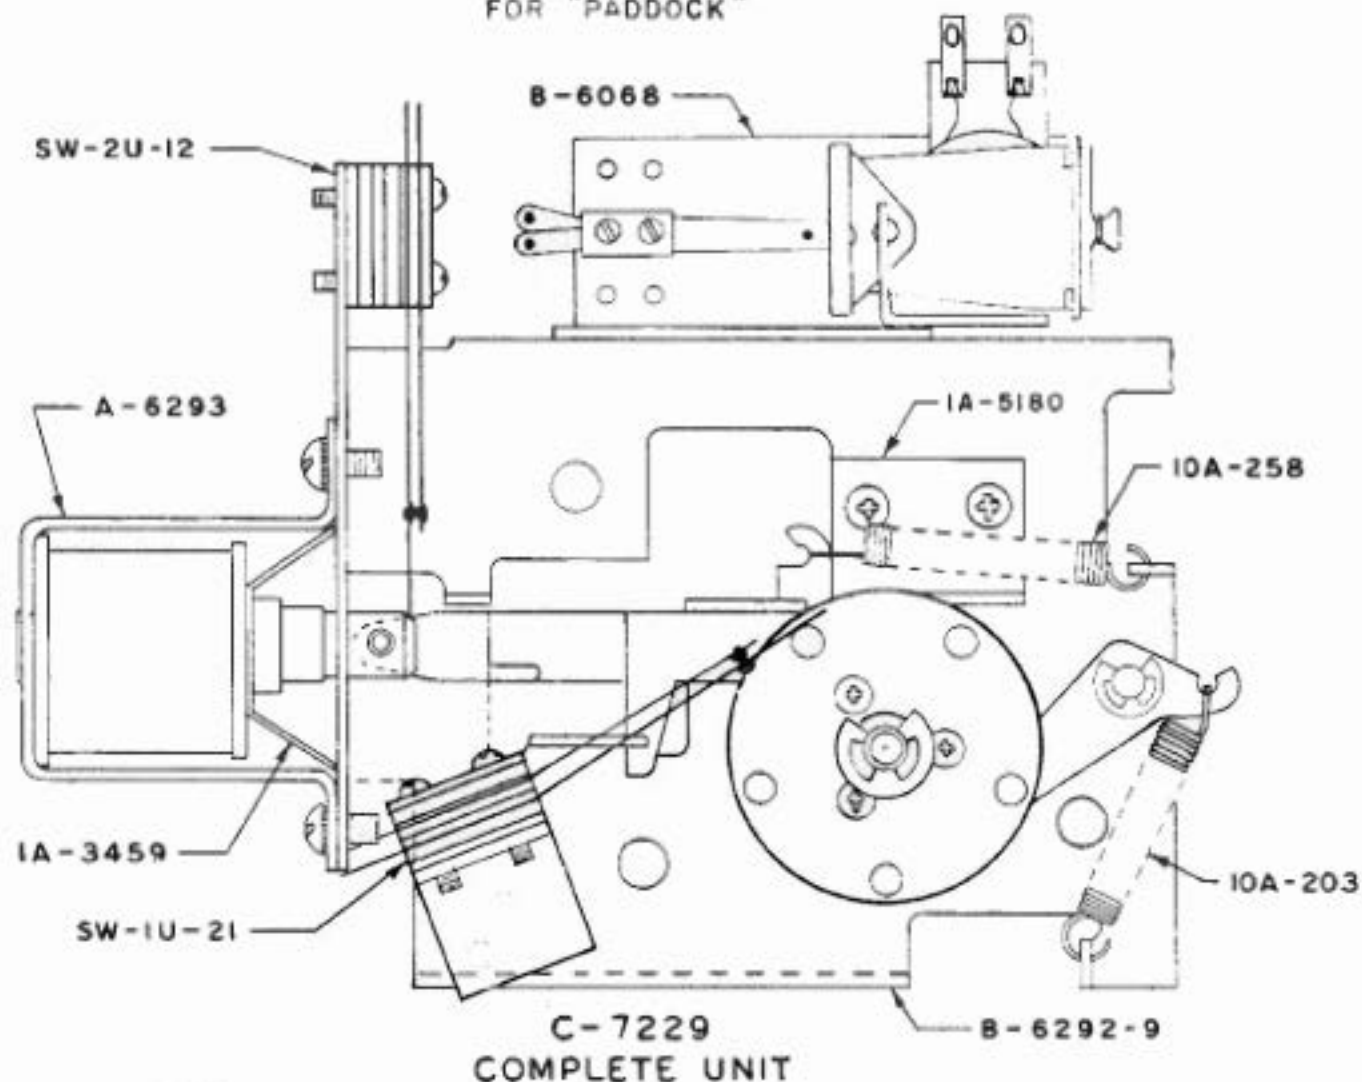


3C-7272
RATCHET & CAM

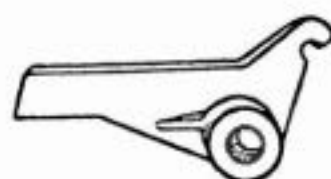

3A-7125
RATCHET STOP PAWL

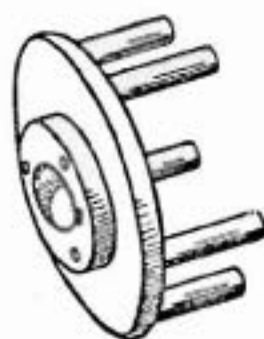


3B-7246
ALTERNATOR DISC

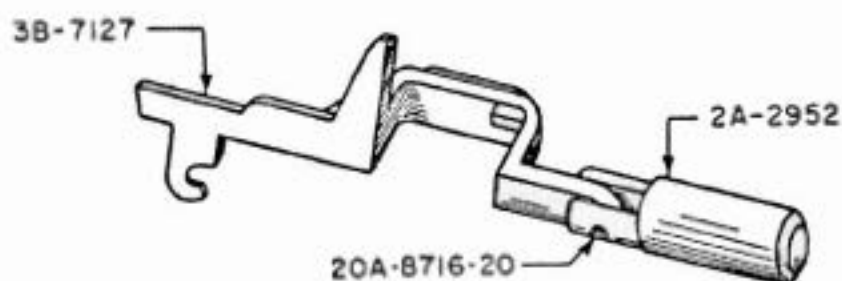

A-6295
DRIVE PAWL & ARMATURE

(NEW) RELAY BANK ASSEMBLY
D-7310

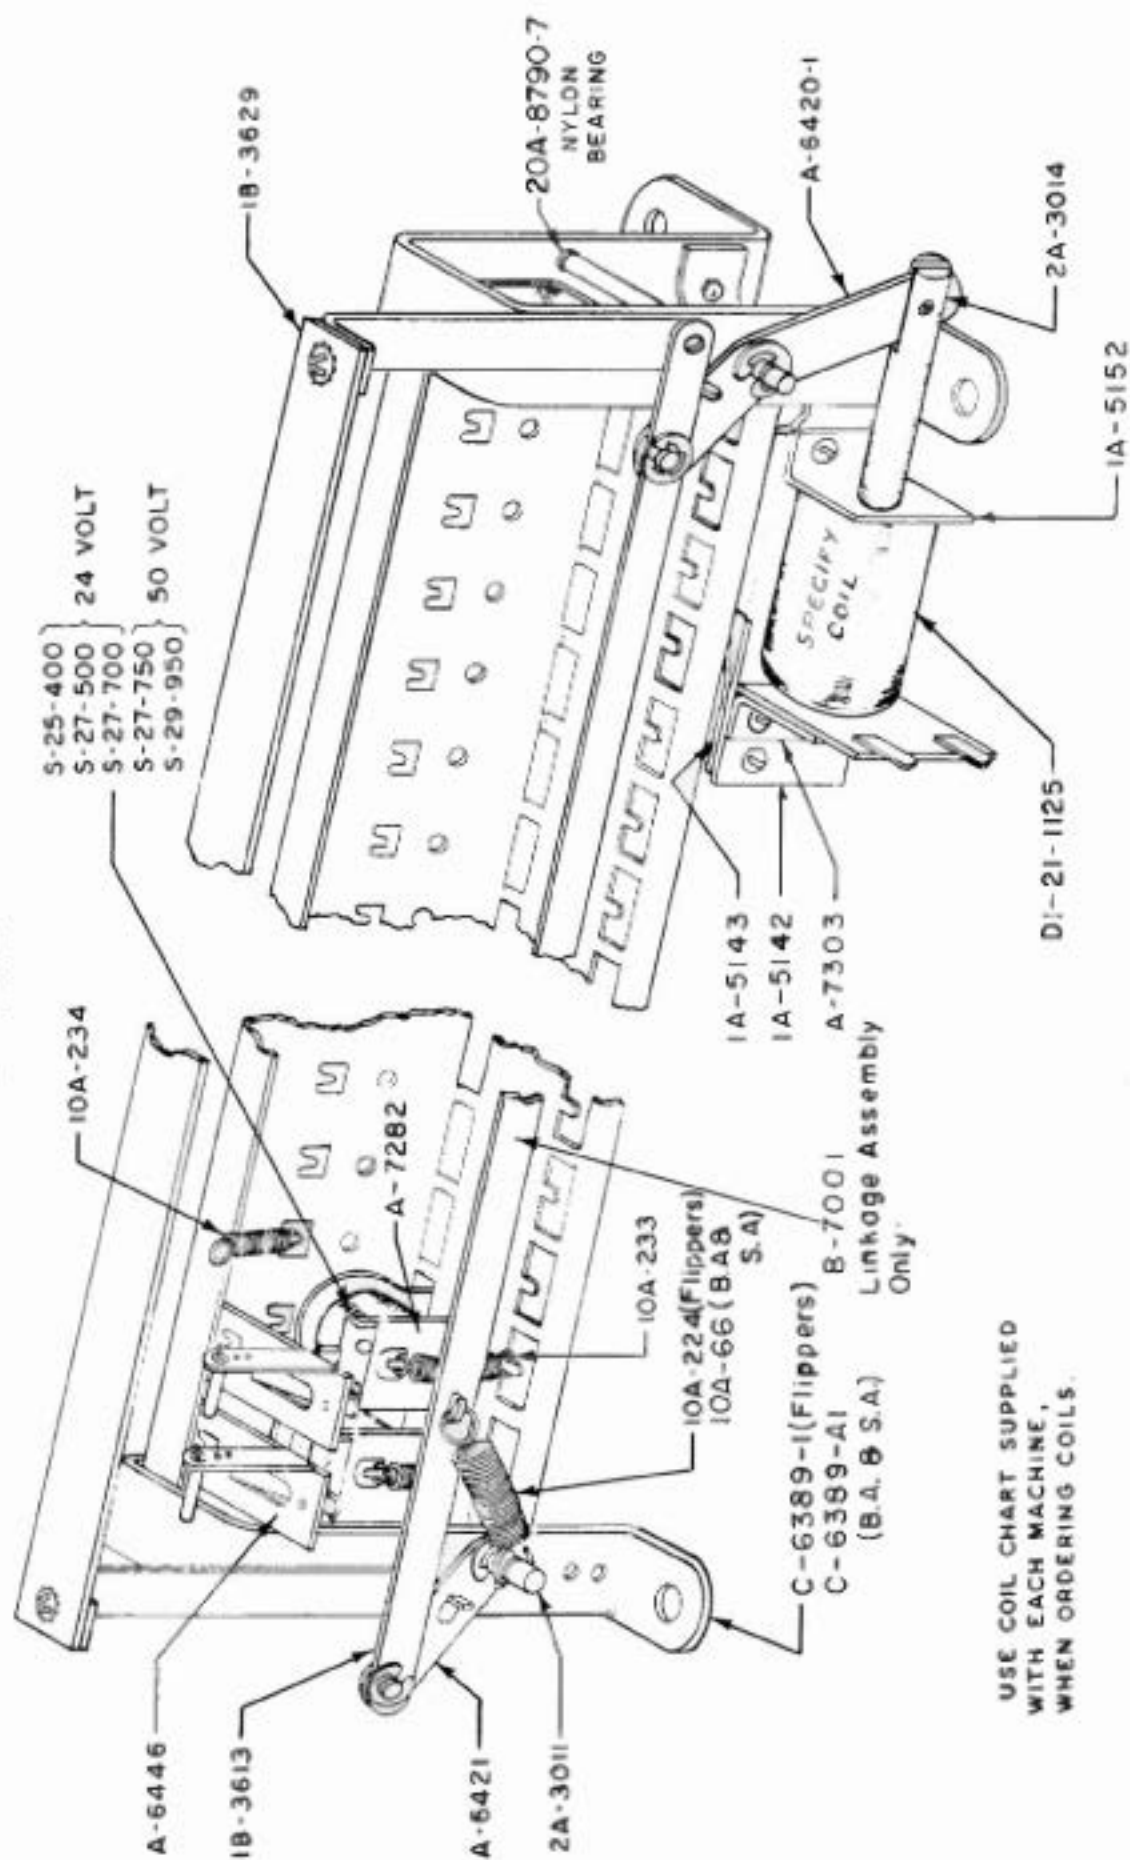


USE COIL CHART SUPPLIED
WITH EACH MACHINE,
WHEN ORDERING COILS.

THIS NEW IMPROVED RELAY BANK ASSEMBLY NOW USED ON ALL GAMES STARTING WITH "STRAIGH FLUSH" (PIN GAMES), "PALOS VERDE" (SHUFFLE). ALL GAMES FOLLOWING ARE MADE WITH THIS NEW TYPE UNIT.


D-6380 MOTOR UNIT (NYLON CAMS)

WHEN ORDERING NYLON CAMS
CHECK CAM FOR NUMBER

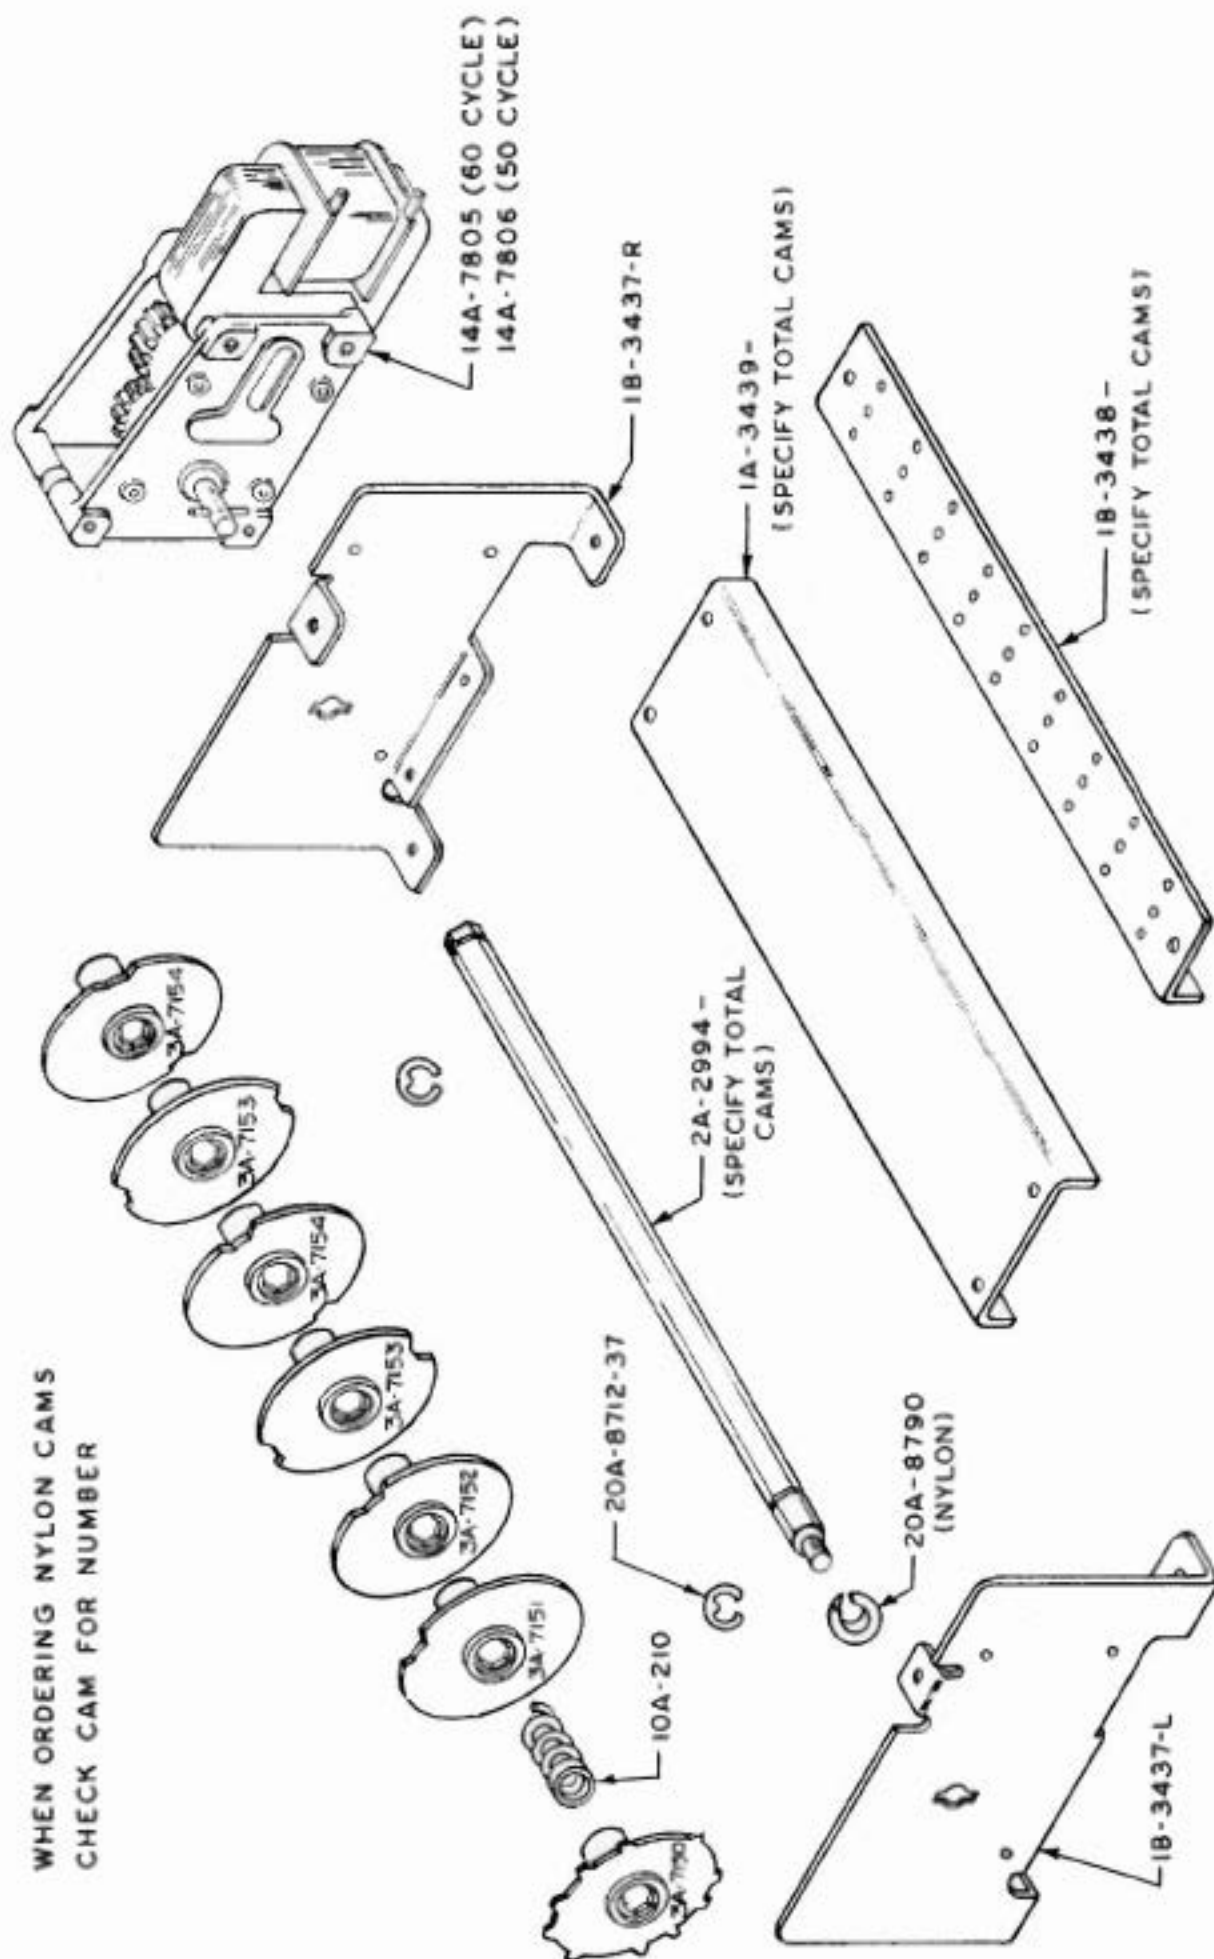


DROP TARGET ASSEMBLY

C-7090

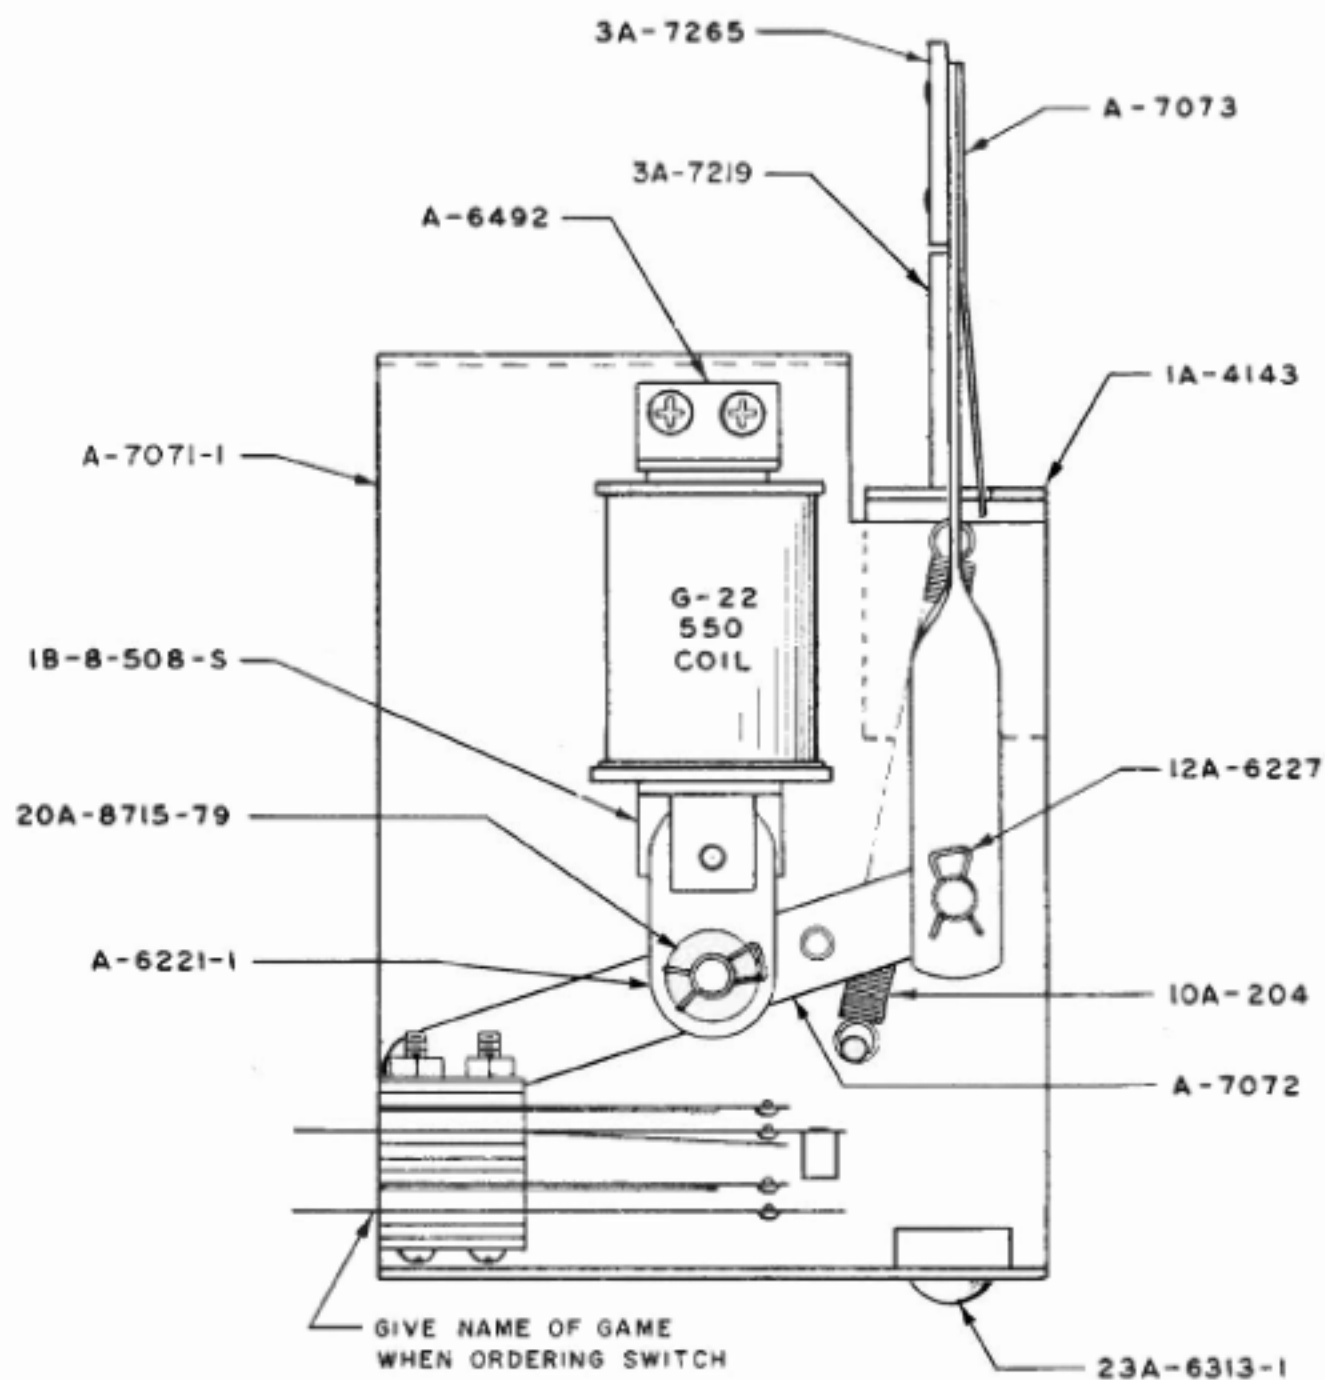

NOTE: SPECIFY DESIGN AND COLOR ON TARGET


SWINGING TARGET ASSEMBLY B-6045-1

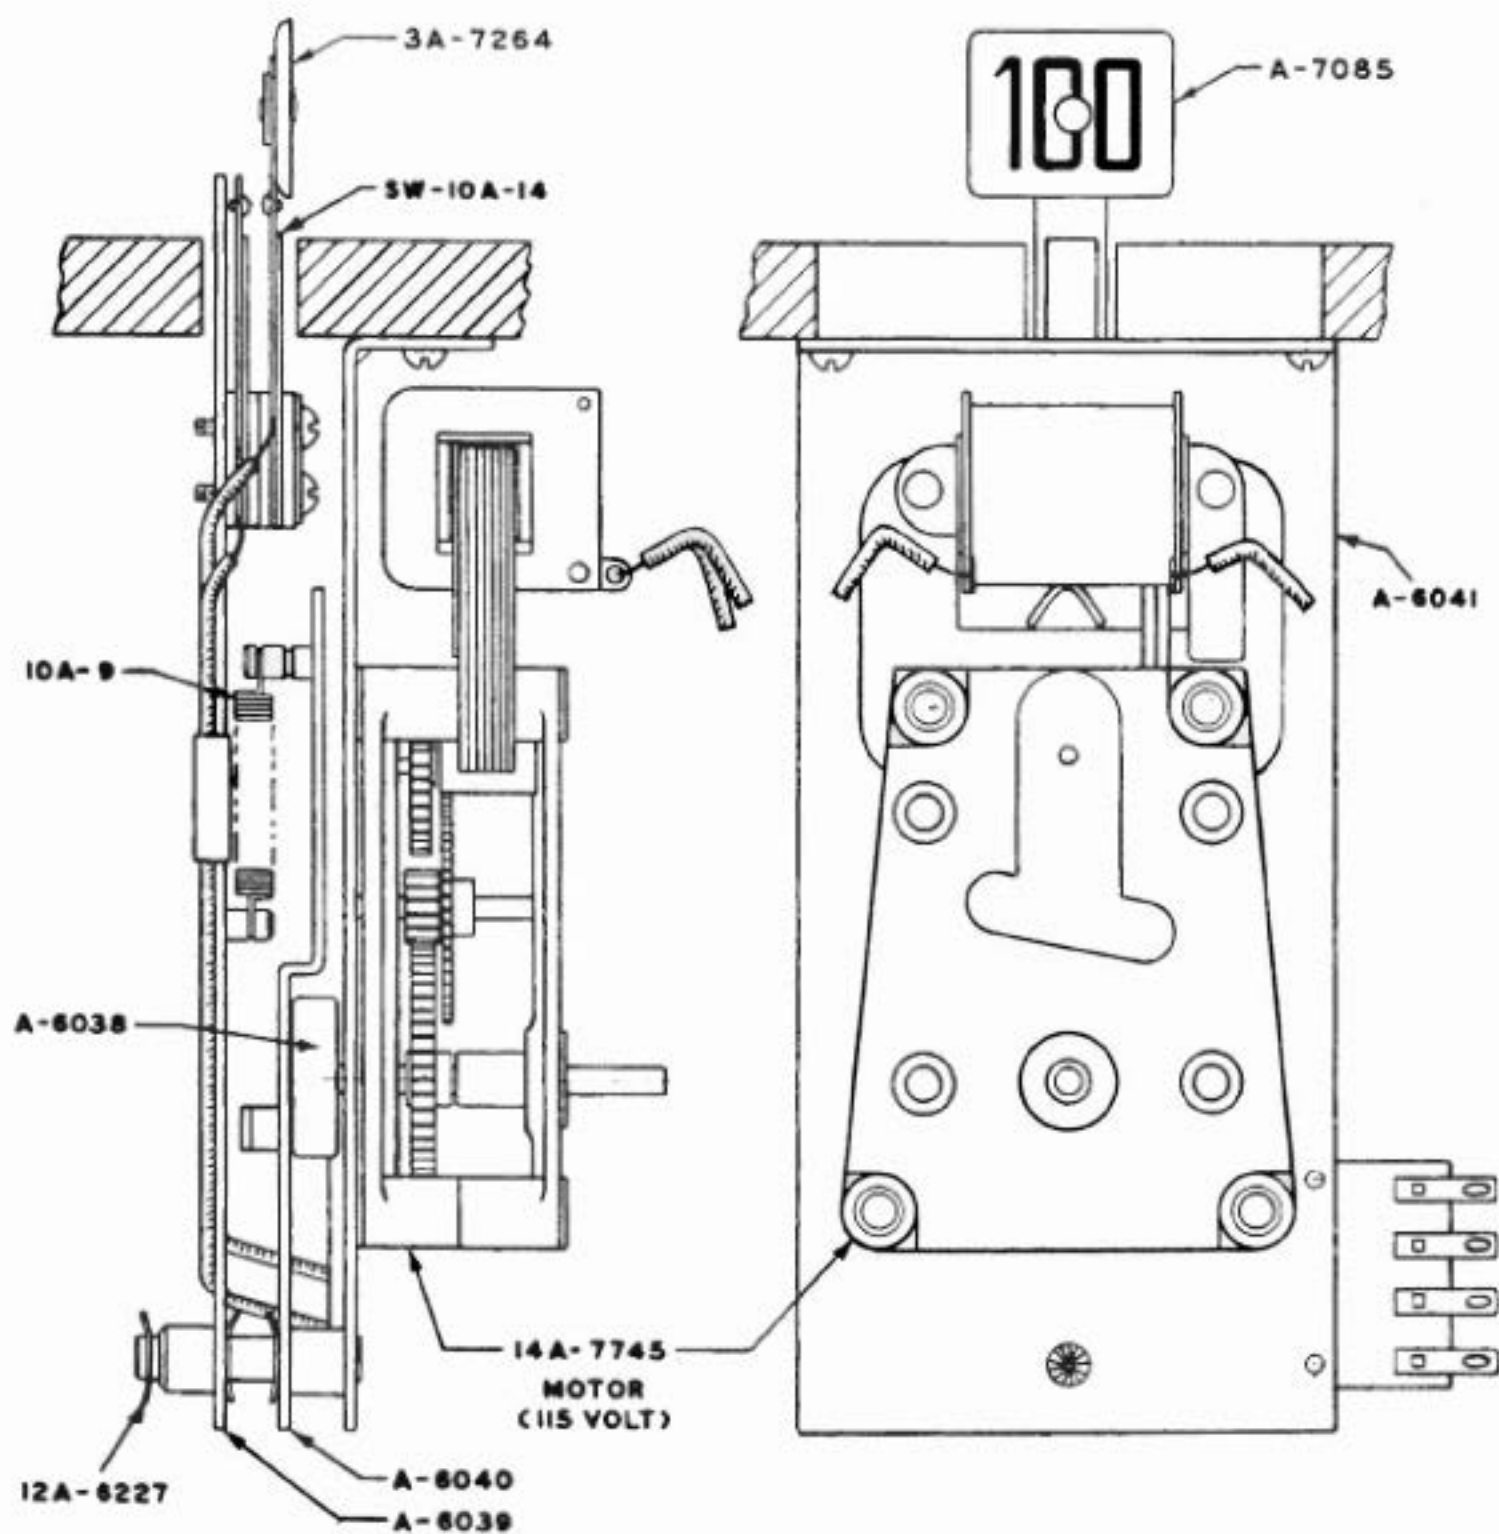

NOTE: SPECIFY DESIGN AND COLOR ON TARGET

B-6822-1 JET BUMPER ASSEMBLY


SPECIFY STAMPING AND COLOR ON ALL BUMPER CAPS

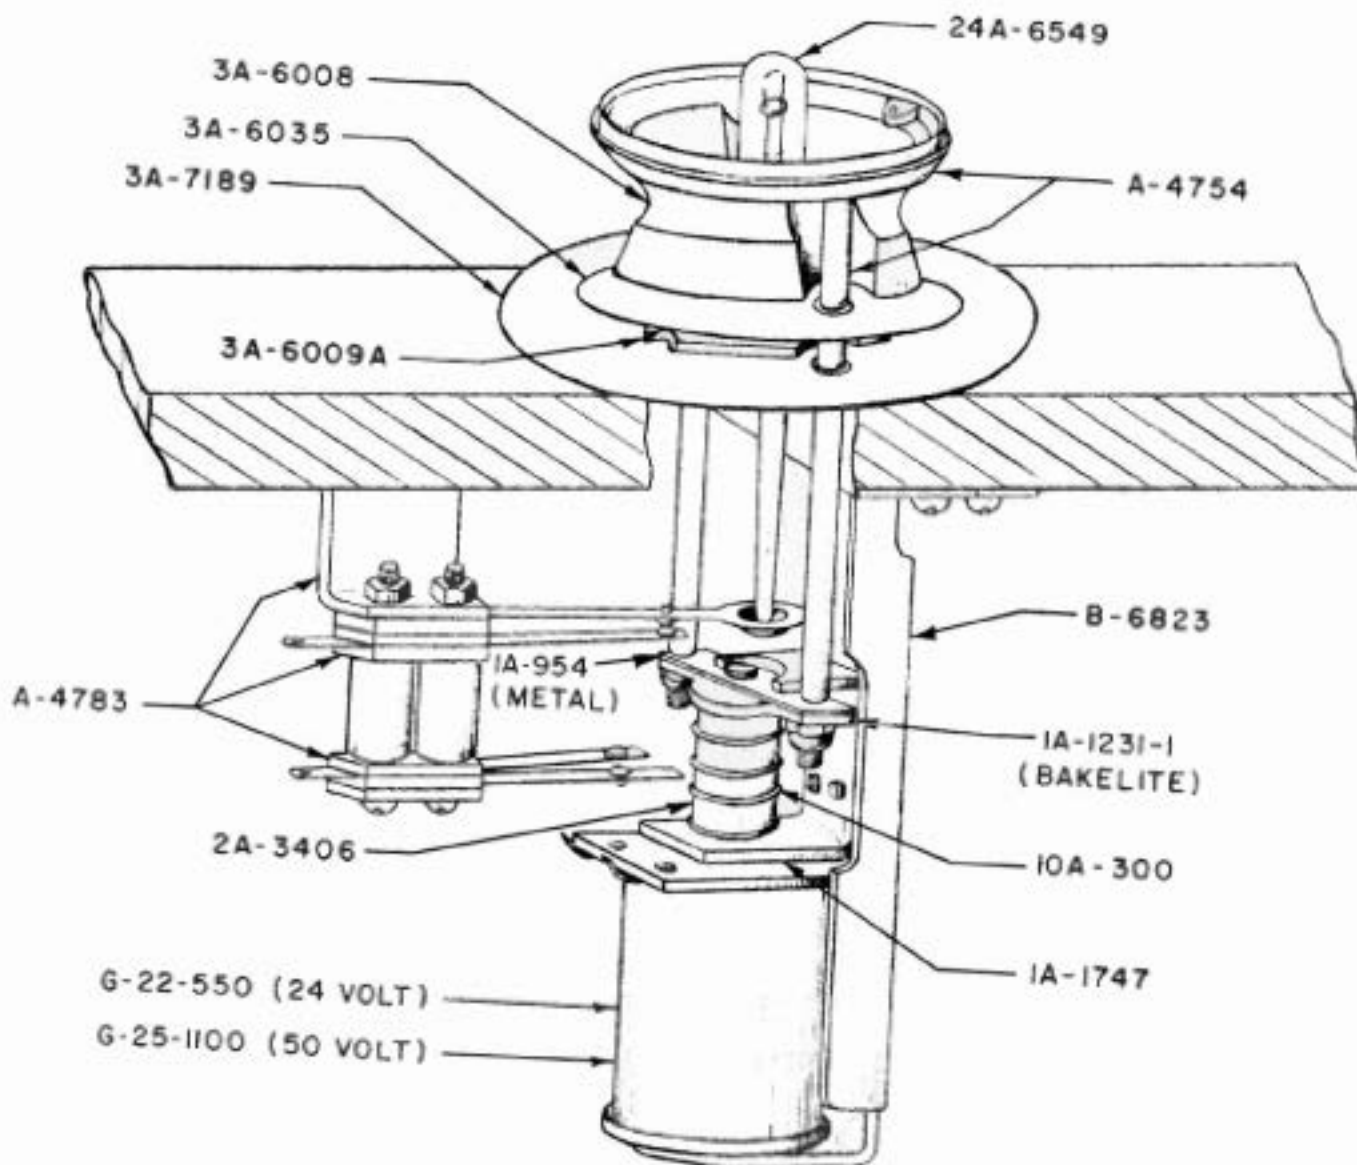

NOTE: 1A-1231-1, 2A-3406 AND 10A-300 CAN BE USED ON B-6822 ONLY WHEN ALL (3) PARTS ARE USED.


(NEW)
INTERLOCK RELAY ASSEMBLY
B-6225

WHEN ORDERING COIL
REFER TO COIL LIST
SUPPLIED WITH GAME

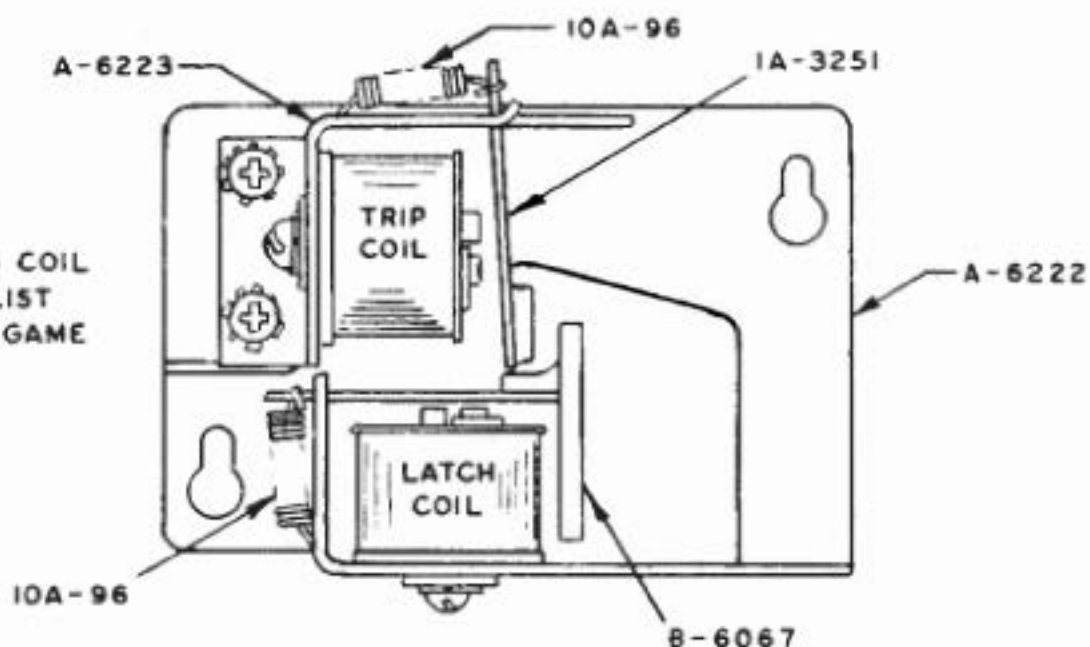


(NEW)
LATCH TYPE-RELAY UNIT
B-6342

WHEN ORDERING COIL -
REFER TO COIL LIST
SUPPLIED WITH GAME

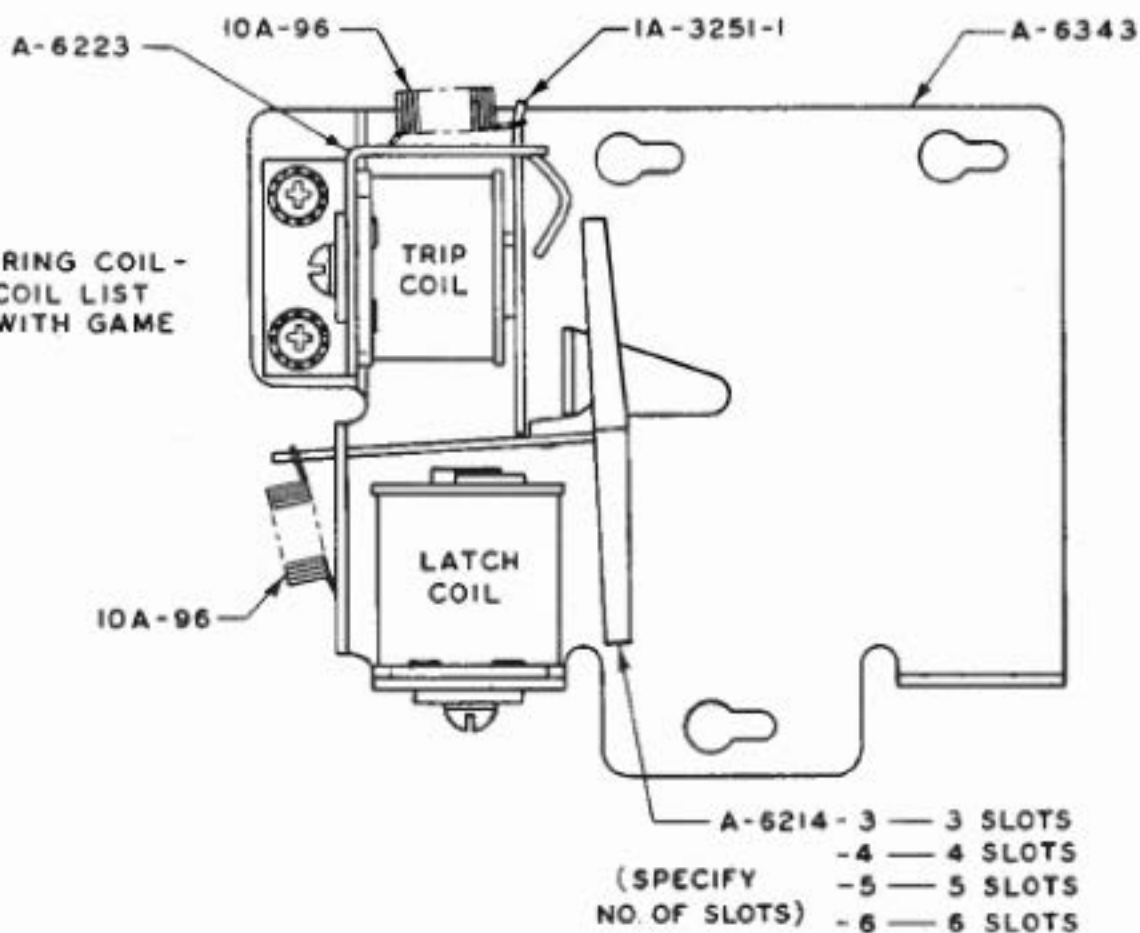


(NEW)
"J" TYPE RELAY ASSEMBLY
B-6068

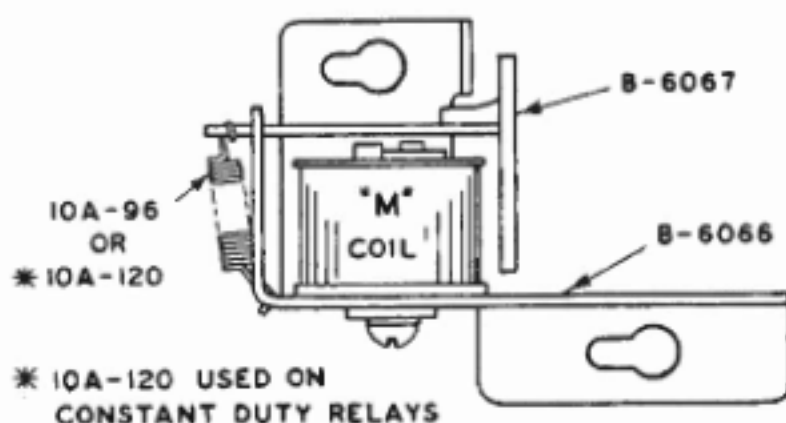

WHEN ORDERING COILS FOR ABOVE RELAY - REFER TO COIL LIST IN
 "INSTRUCTION MANUAL".

SWITCHES USED WITH "J" TYPE RELAYS




**SW. 1M-1 MAKE SWITCH
 (SMALL CONTACTS)**



**SW. 1M-3 MAKE SWITCH
 (SMALL CONTACTS)
 WITH LOCK BLADE**



**SW. 10M-1 MAKE SWITCH
 (LARGE CONTACTS)**



**SW. 2M-1 BREAK SWITCH
 (SMALL CONTACTS)**



**SW. 20M-1 BREAK SWITCH
 (LARGE CONTACTS)**




**SW. 3M-1 MAKE-BREAK SWITCH
 (SMALL CONTACTS)**



**SW. 30M-1 MAKE-BREAK SWITCH
 (LARGE CONTACTS)**

(NEW)
 "L" TYPE RELAY ASSEMBLY
 A-6216

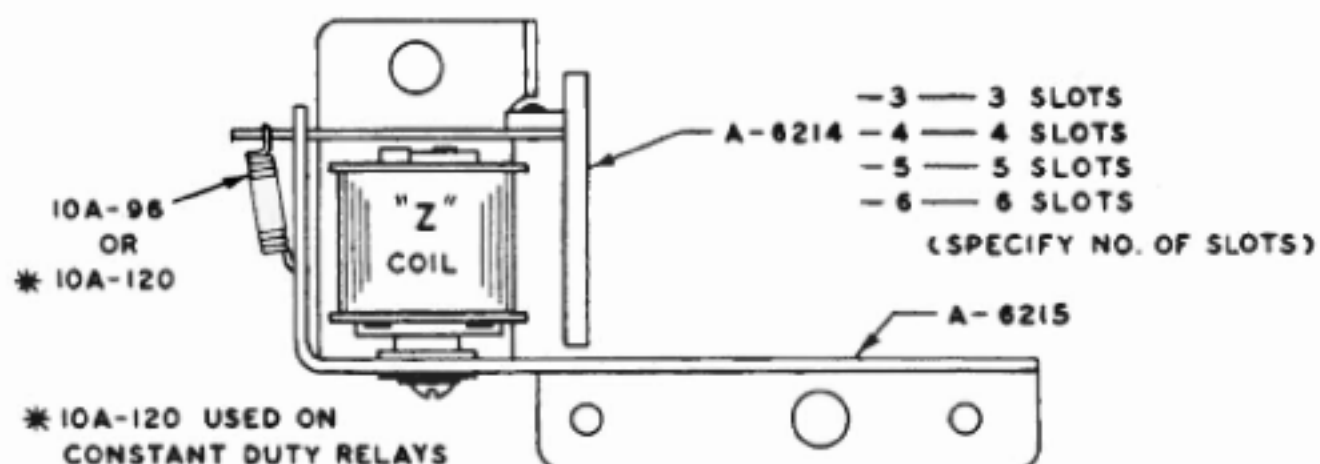

WHEN ORDERING COILS FOR ABOVE RELAY — REFER TO COIL LIST IN
 " INSTRUCTION MANUAL ".

SWITCHES USED WITH "L" TYPE RELAYS



SW. 1-Z MAKE SWITCH
 (SMALL CONTACTS)




SW. 2-Z BREAK SWITCH
 (SMALL CONTACTS)



SW. 1-Z1 MAKE SWITCH
 (SMALL CONTACTS)
 (HEAVY BLADE)



SW. 20-Z BREAK SWITCH
 (LARGE CONTACTS)




SW. 10-Z MAKE SWITCH
 (LARGE CONTACTS)




SW. 3-Z MAKE-BREAK SWITCH
 (SMALL CONTACTS)



**B-6613 NEW BALL SHOOTER ASSEMBLY
WITH NYLON SHOOTER HOUSING**

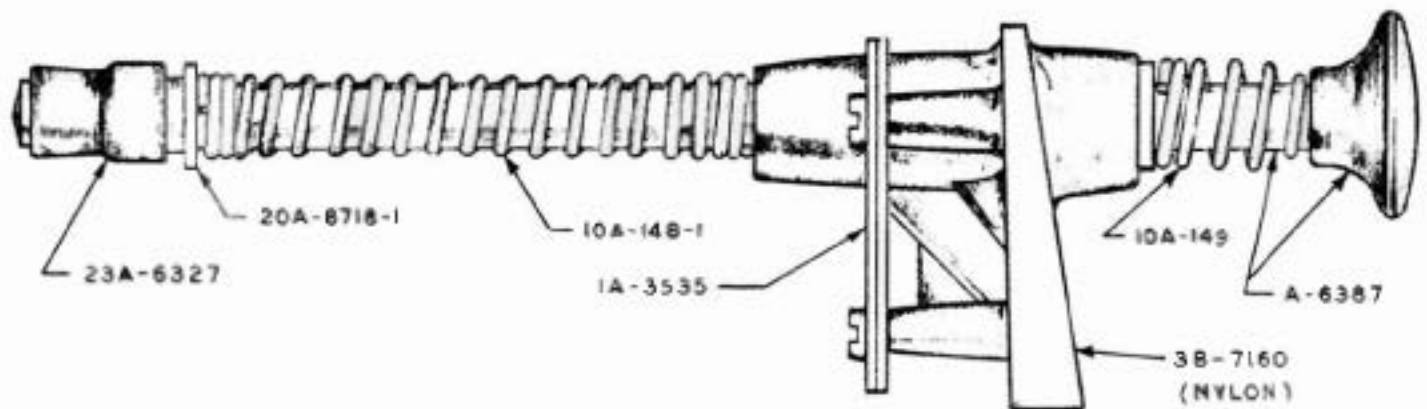


B-6890 NEW AUTOMATIC BALL RETURN ASSEMBLY

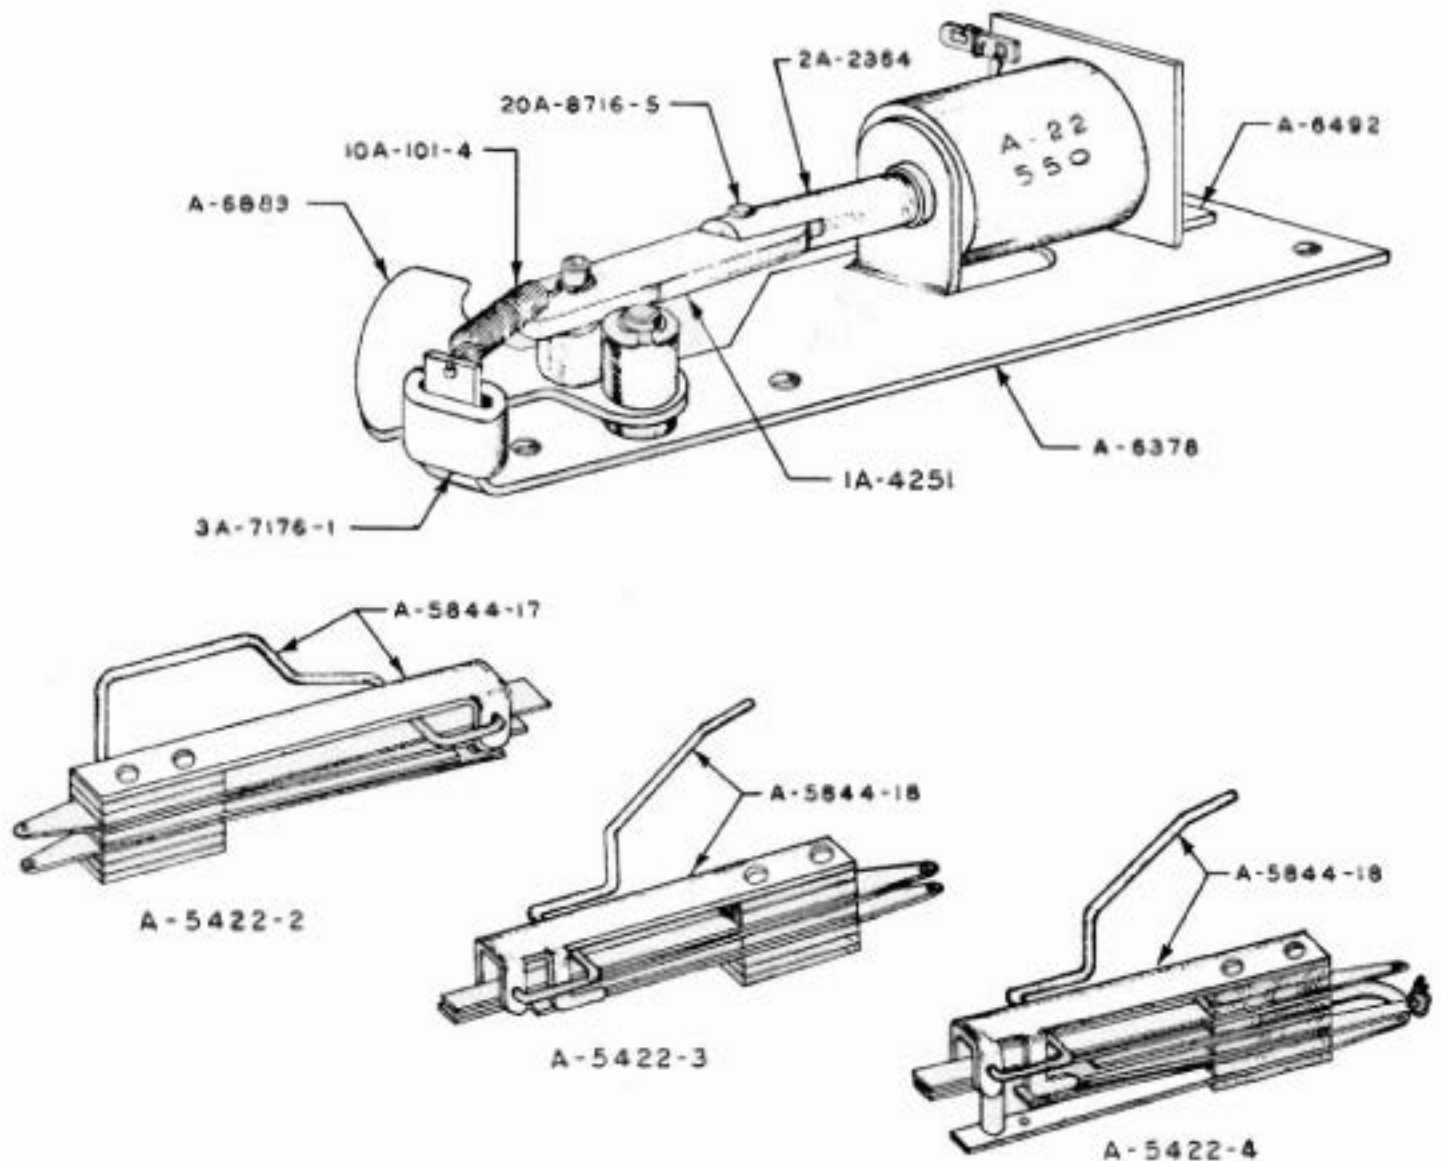

**A-5069N
FLIPPER BUTTON ASS'Y.
(NEW TYPE)**

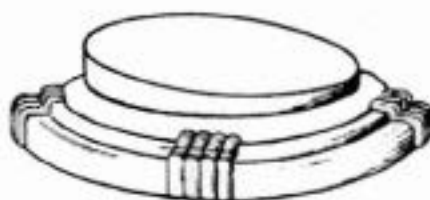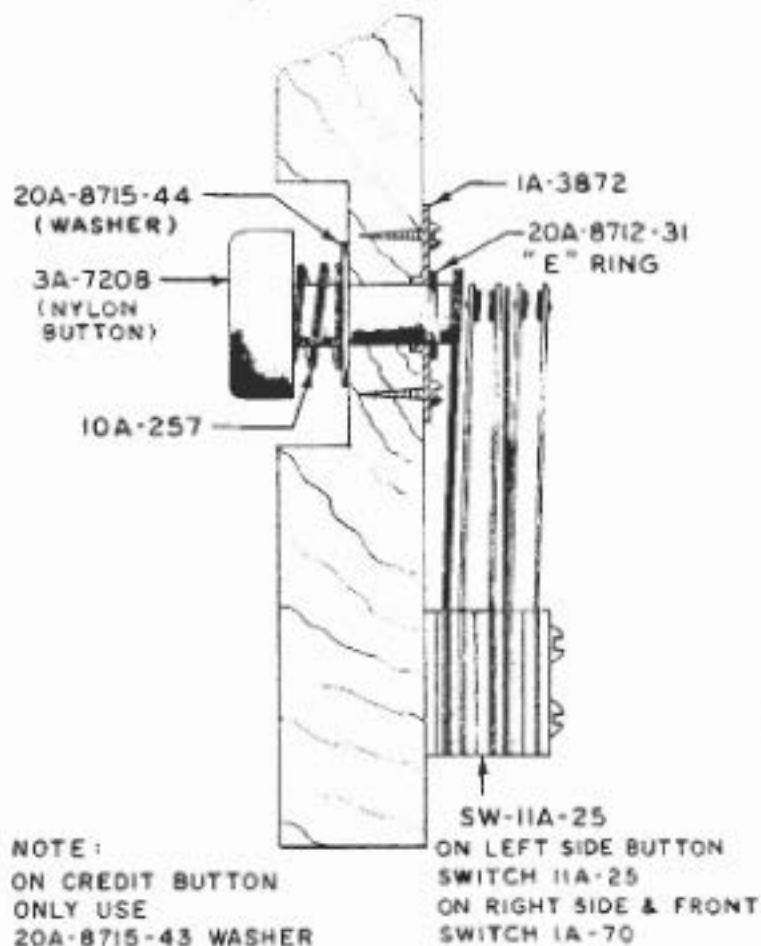


3A-7190- BUMPER CAP
WHEN ORDERING SPECIFY STAMPING
& COLOR ON CAP

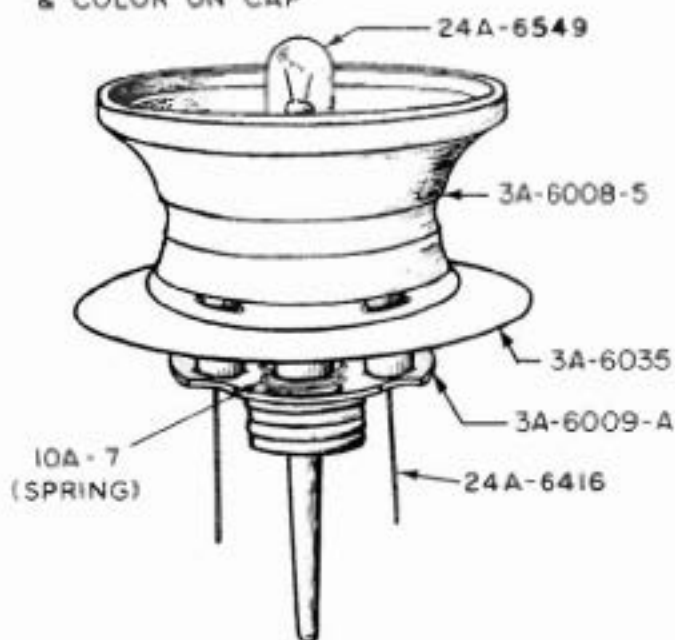


**B-7030
BUMPER ASS'Y. (LESS CAP)**


**B-4729-R
TILT BOB ASSEMBLY**

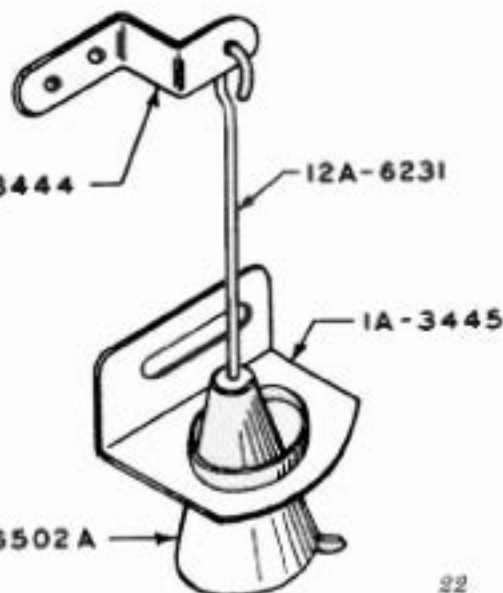


**B-6572
NEW BALL ROLL TILT ASSEMBLY**

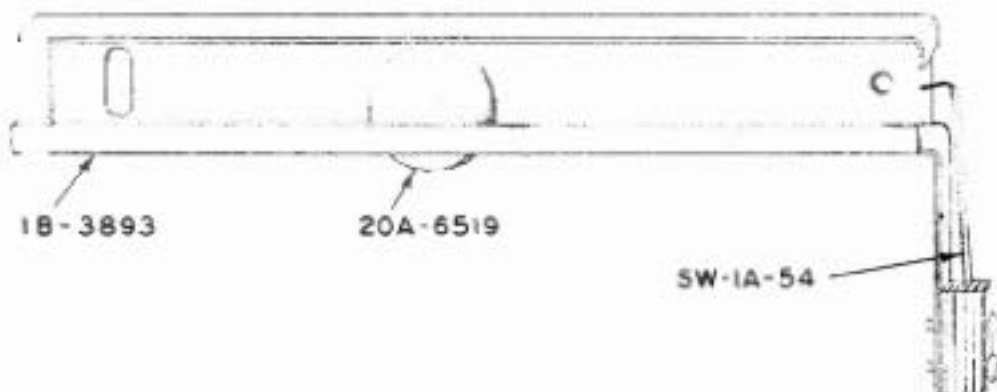

B-7060 3" FLIPPER & COIL ASSEMBLY

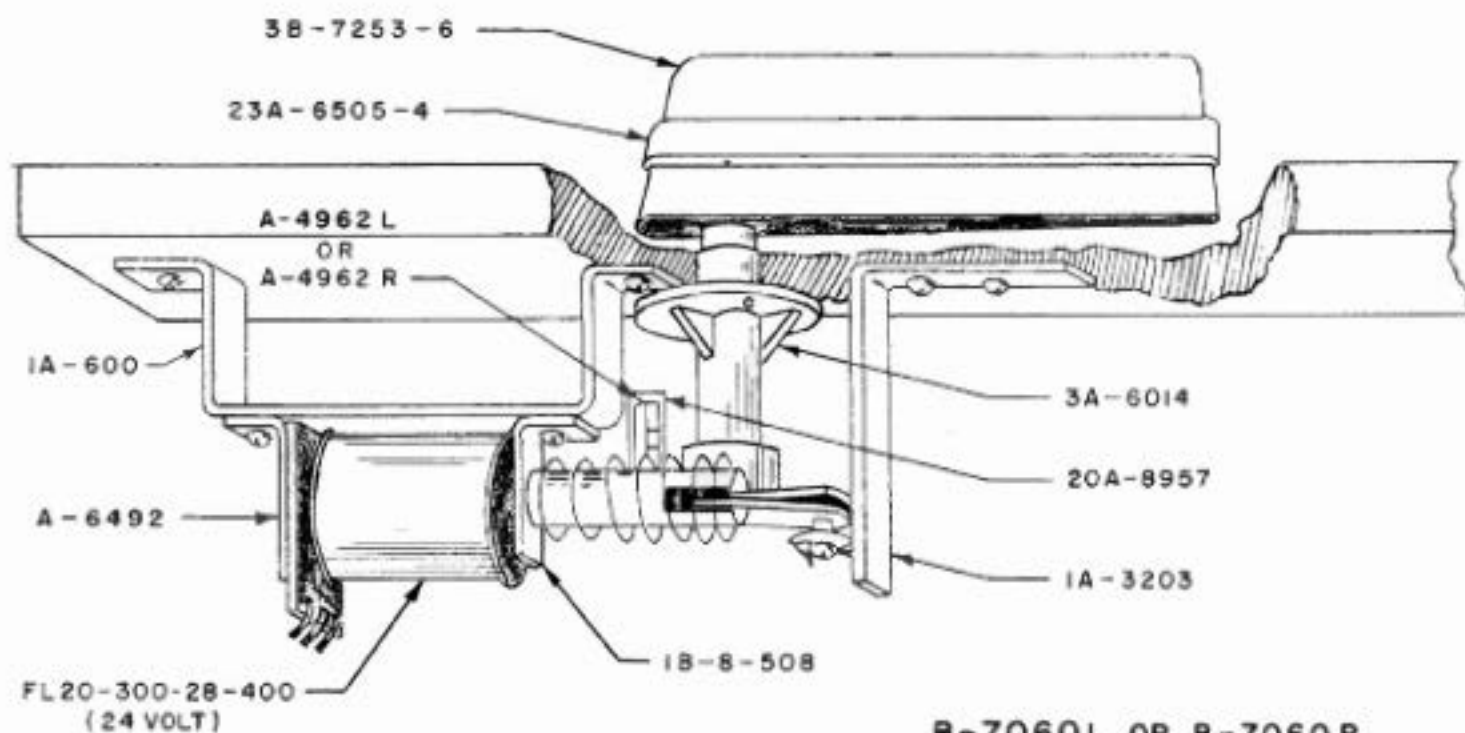


**B-7060L OR B-7060R
COMPLETE ASSEMBLY**

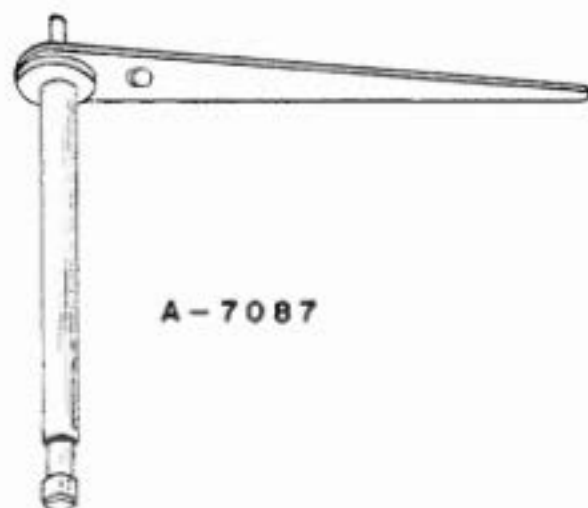

**A-4962 L
LEFT FLIPPER
PAWL**



**A-4962 R
RIGHT FLIPPER
PAWL**


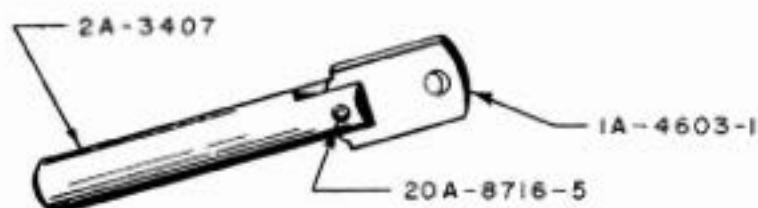


A-6939-1



10A-135


FLIPPER & SHAFT ASSEMBLIES

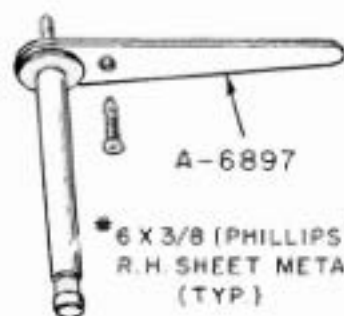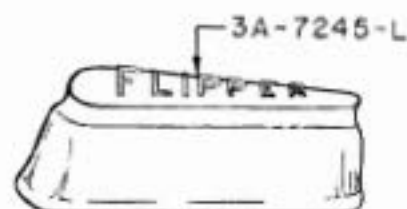

• 6 X 3/8 (PHILLIPS)
R.H. SHEET METAL SCR
(TYP)

B-7210-1



SMALL FLIPPER ASS'Y.
FOR
FLIPPER GAMES

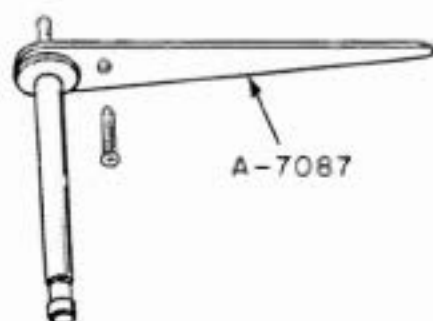

A-7087

B-7210-2



LARGE FLIPPER ASS'Y.
FOR
FLIPPER GAMES

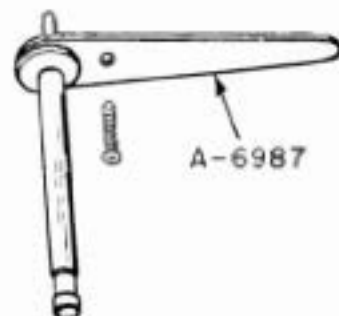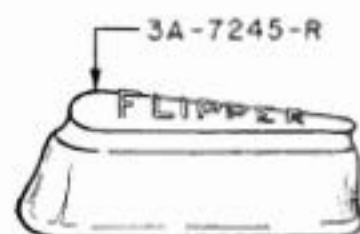

A-6987

B-7210-3



SMALL FLIPPER ASS'Y.
FOR
"CLOSING FLIPPER" UNIT
USED ON "DAFFIE", "DOOZIE",
"STUDENT PRINCE"

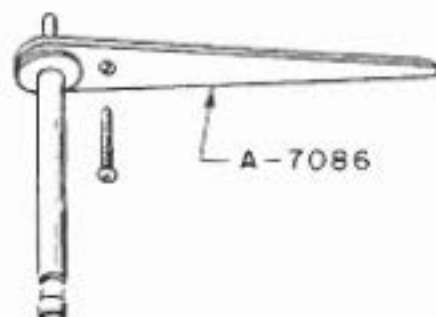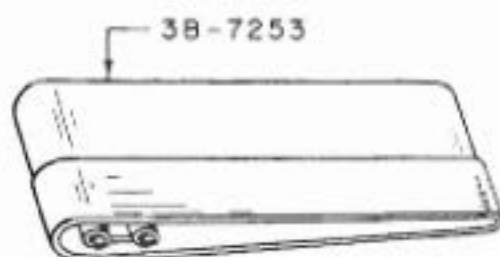

A-7086

B-7210-4

LARGE FLIPPER ASS'Y.
FOR
"CLOSING FLIPPER" UNIT
ON
"HAYBURNER"

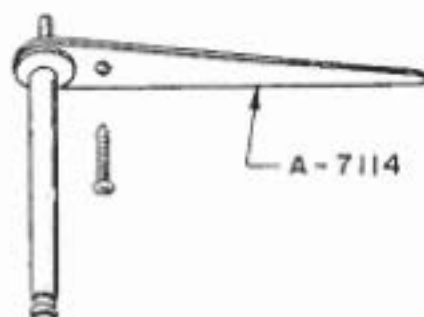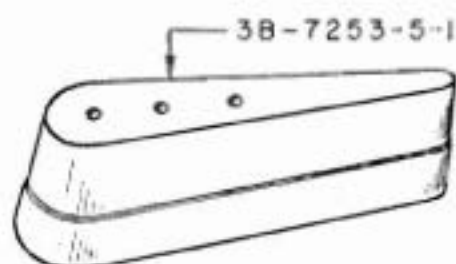


A-7114


B-7210-5

"POST TIME"
- EXTENDED PLAY UNIT -


BALL EJECT CAM UNIT

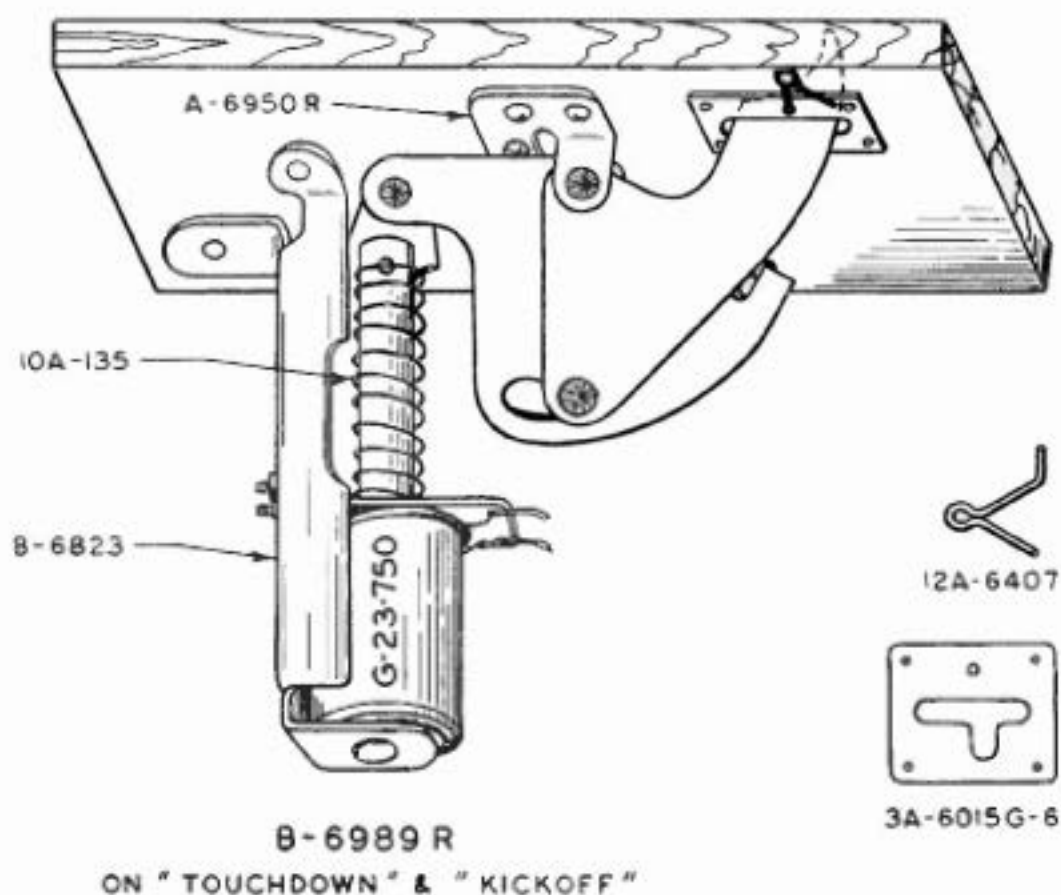

B-6989 R WHEN USED ON RIGHT SIDE OF PLAYFIELD
 B-6989 L WHEN USED ON LEFT SIDE OF PLAYFIELD

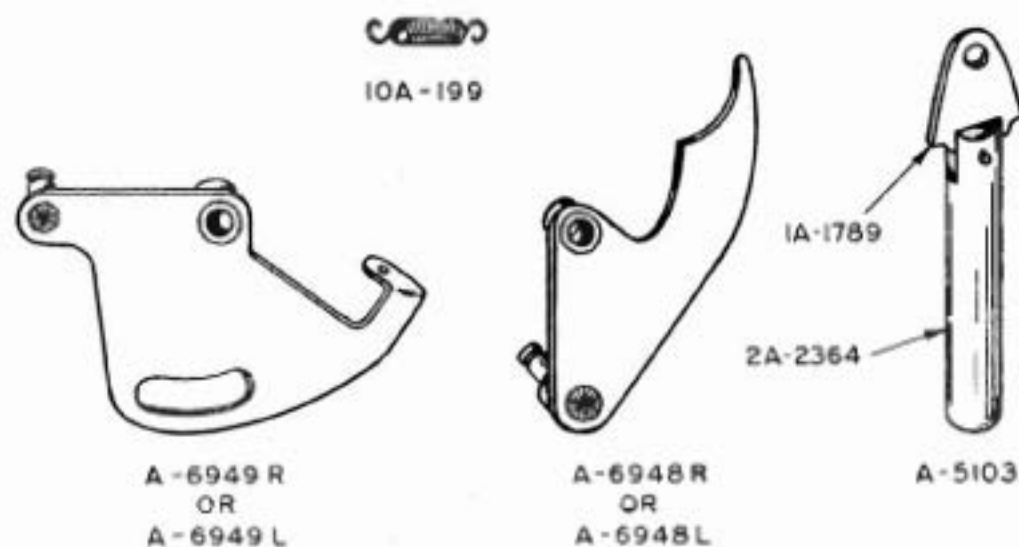

"EXTENDED PLAY" KICKOUT UNIT C-7187

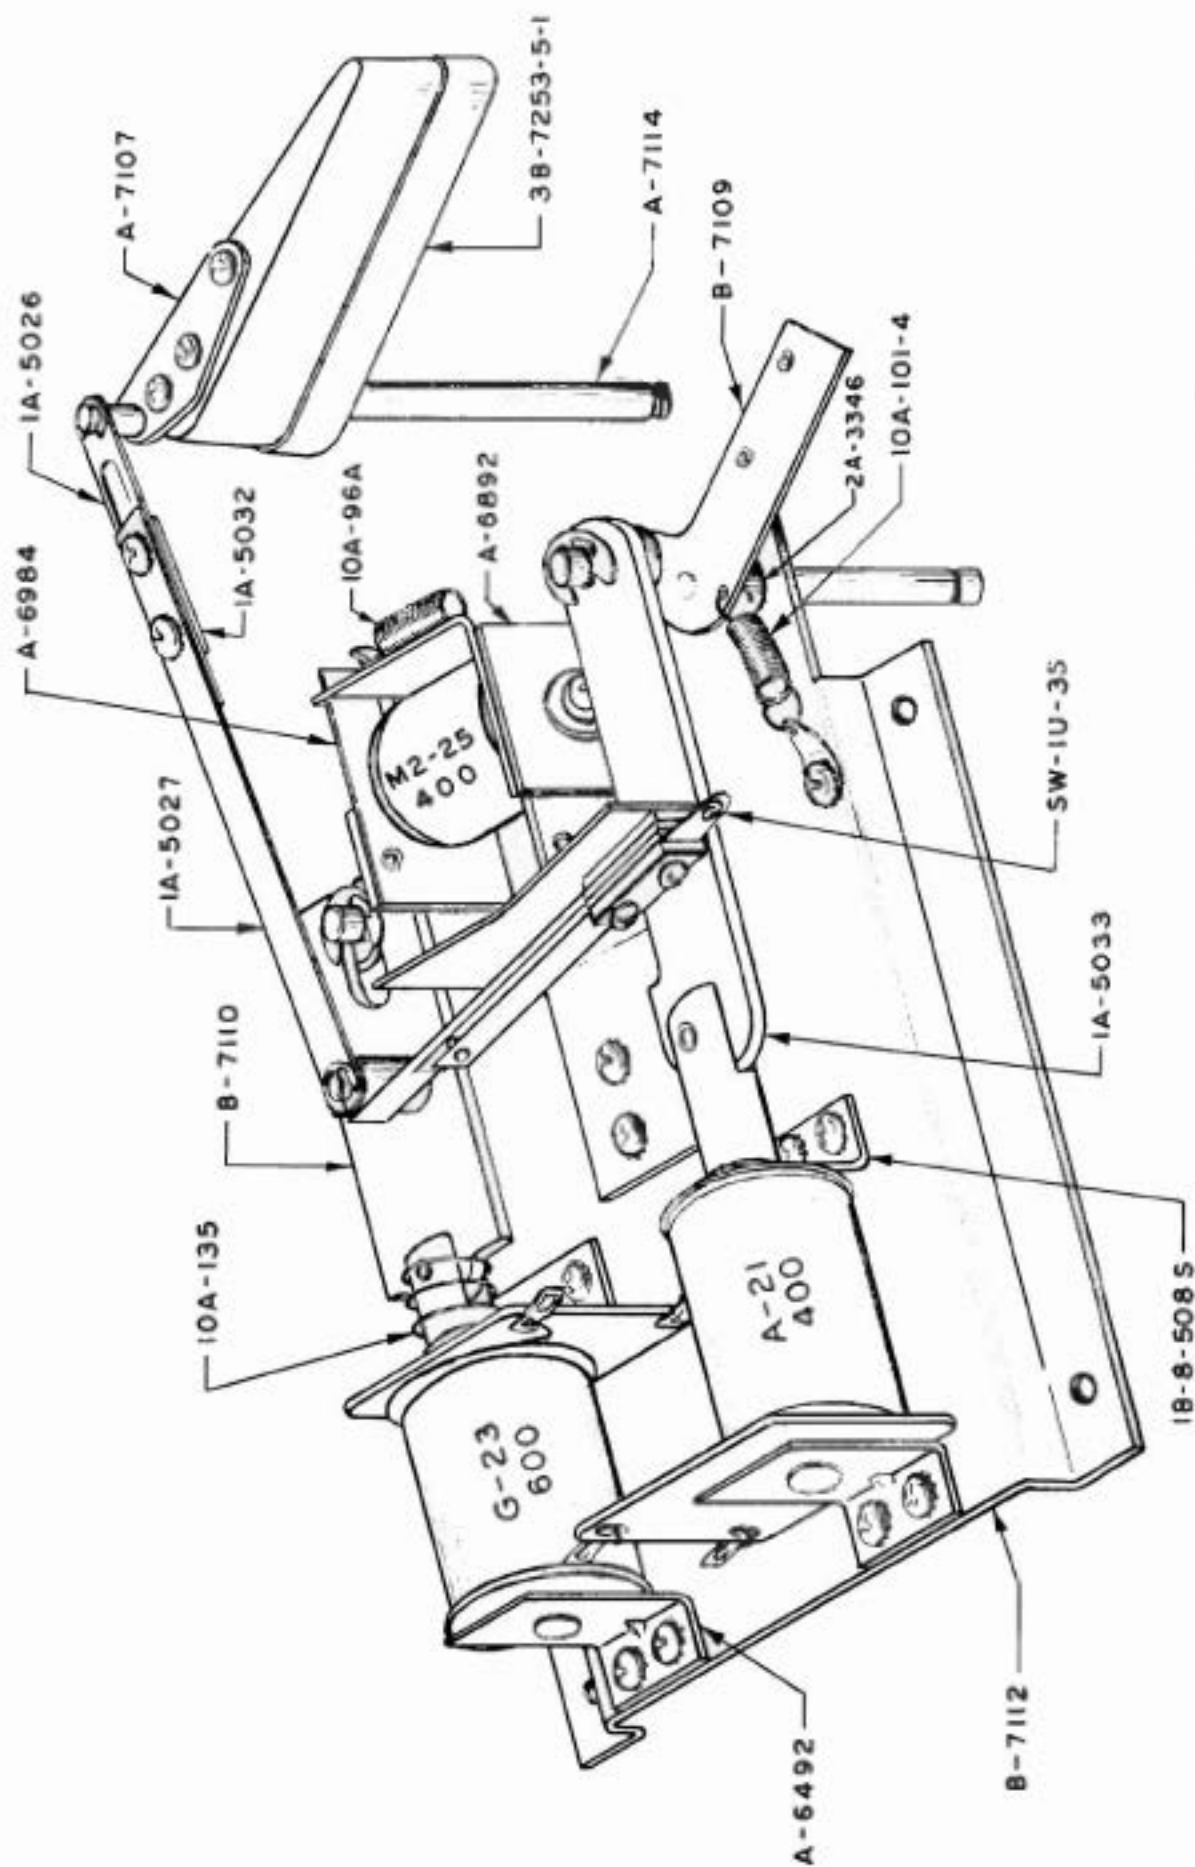


USED ON "POST TIME"


10A-135




A-7188

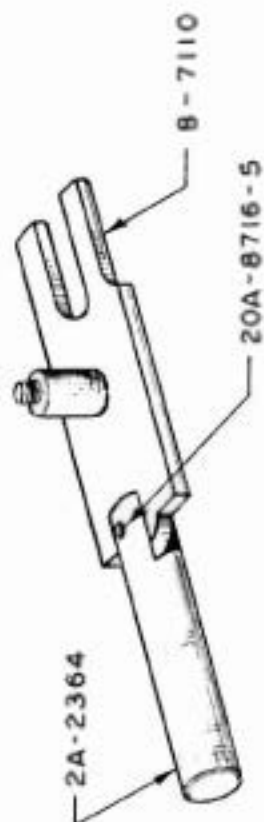


A-7189

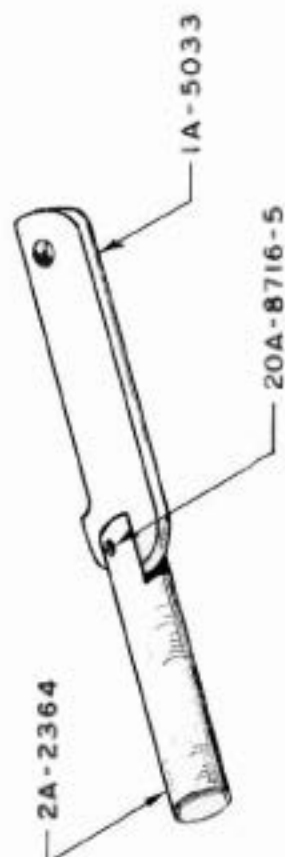


A-7107

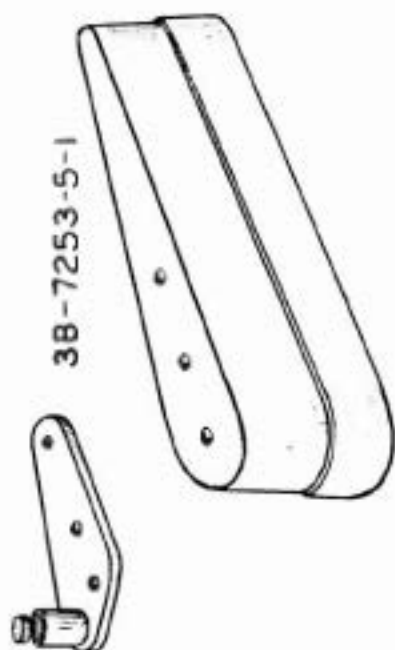


A-7114

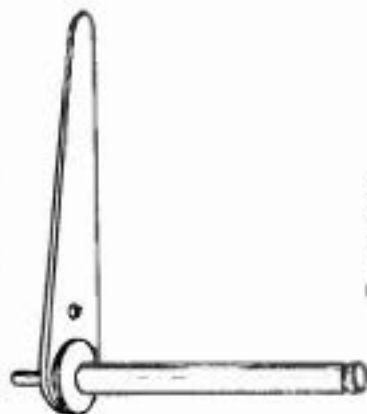


B-7109

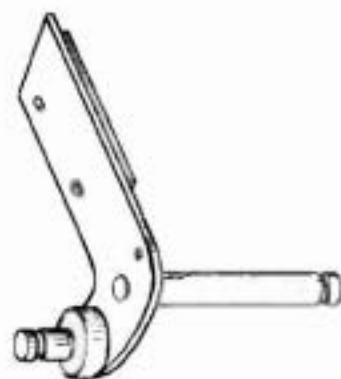


C-6977
BALL GUIDE ASSEMBLY

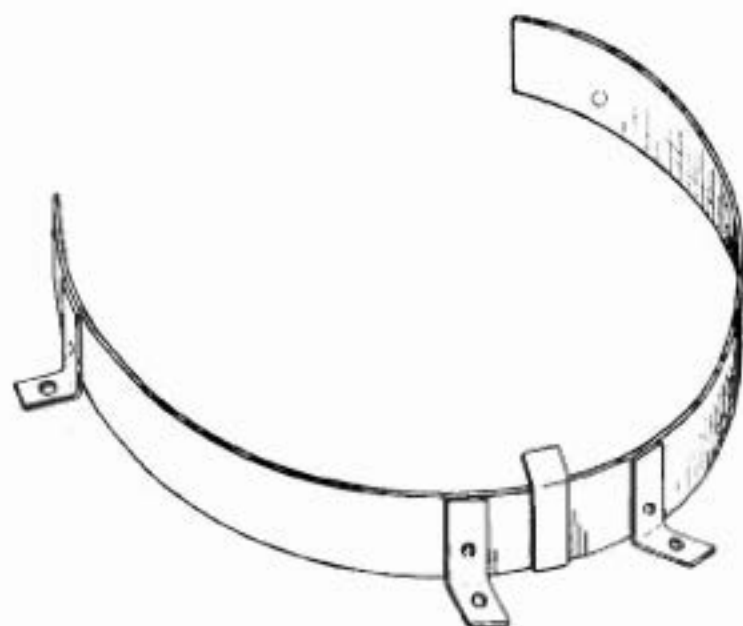


B-5104-1 BALL KICKER ASSEMBLY

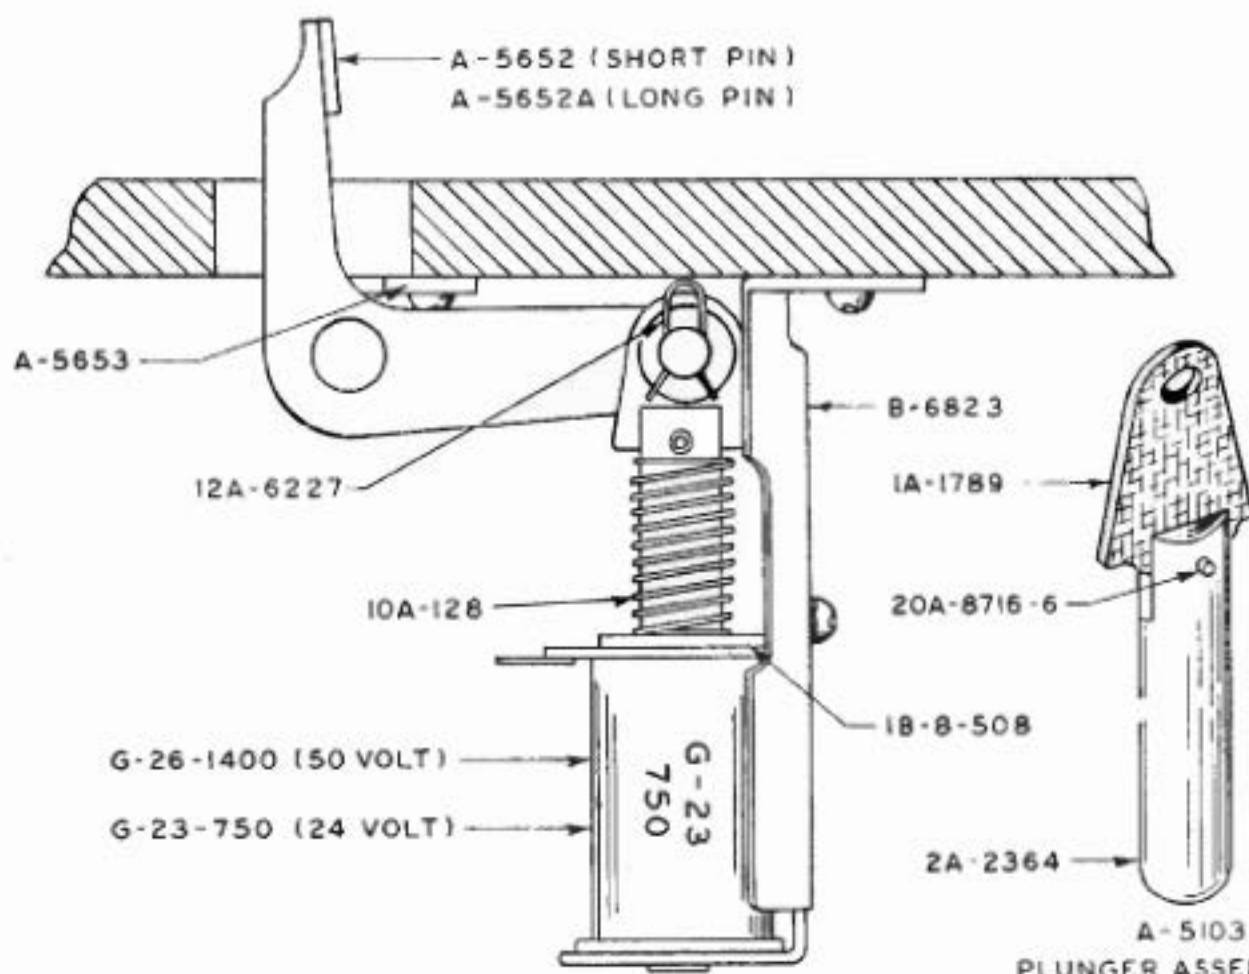


FREE BALL GATE UNITS

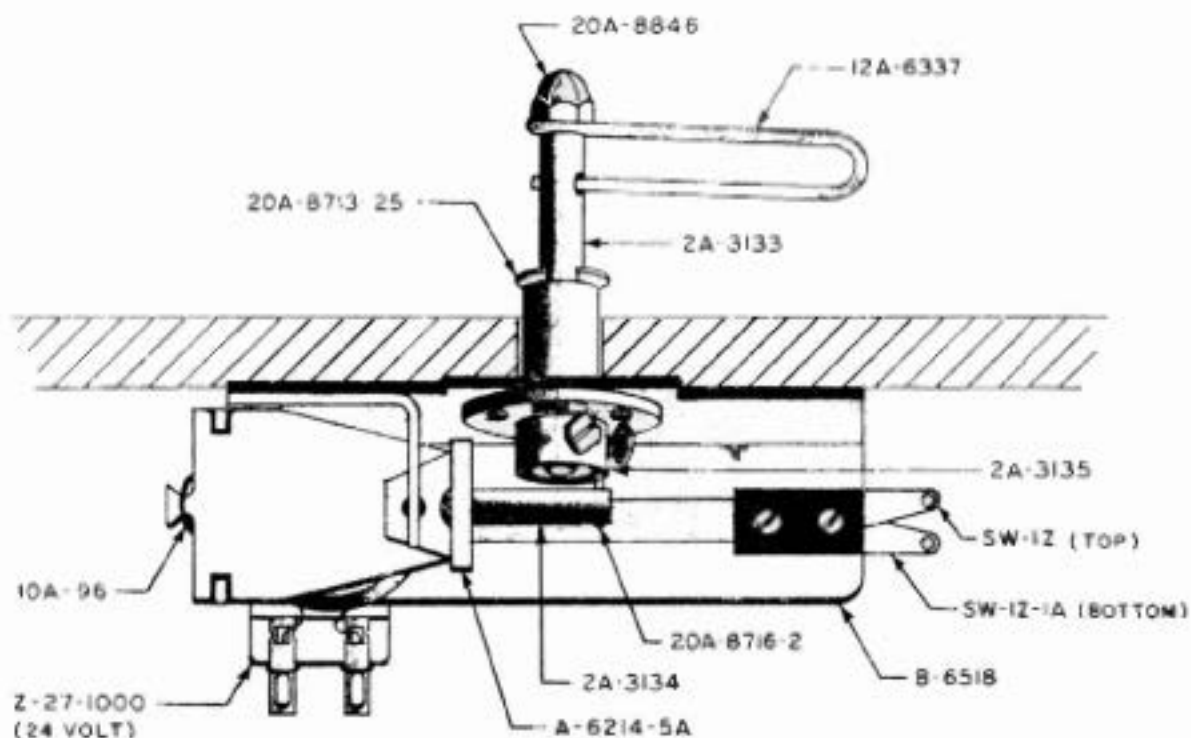


B-6517

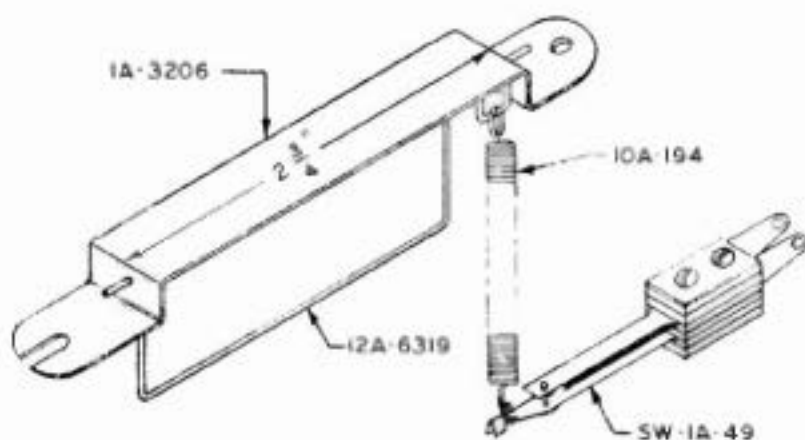



A-6229

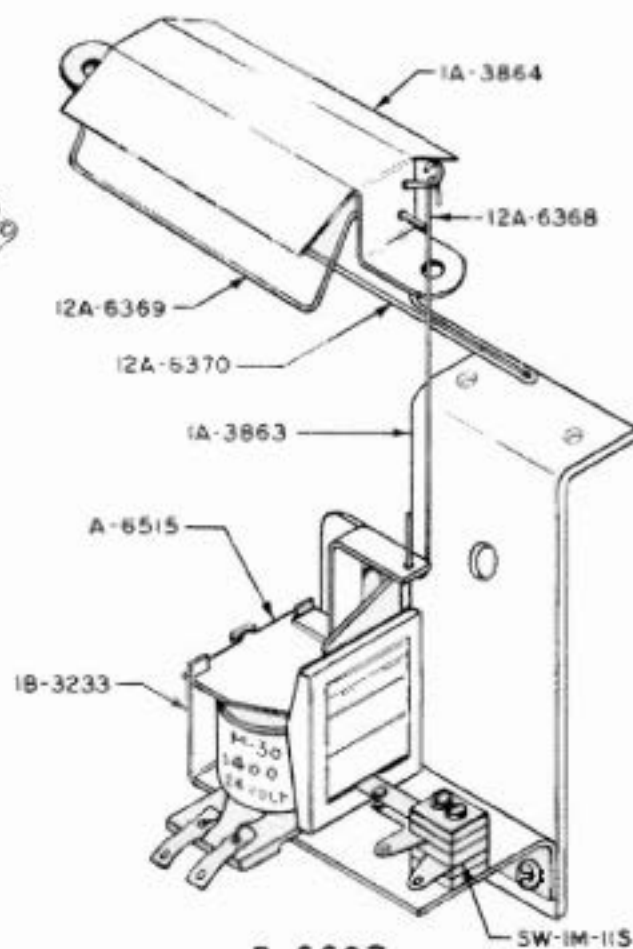

B-6607

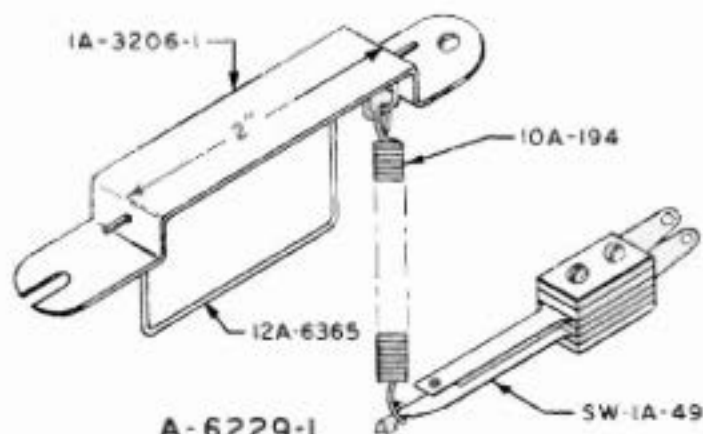


A-6229-1

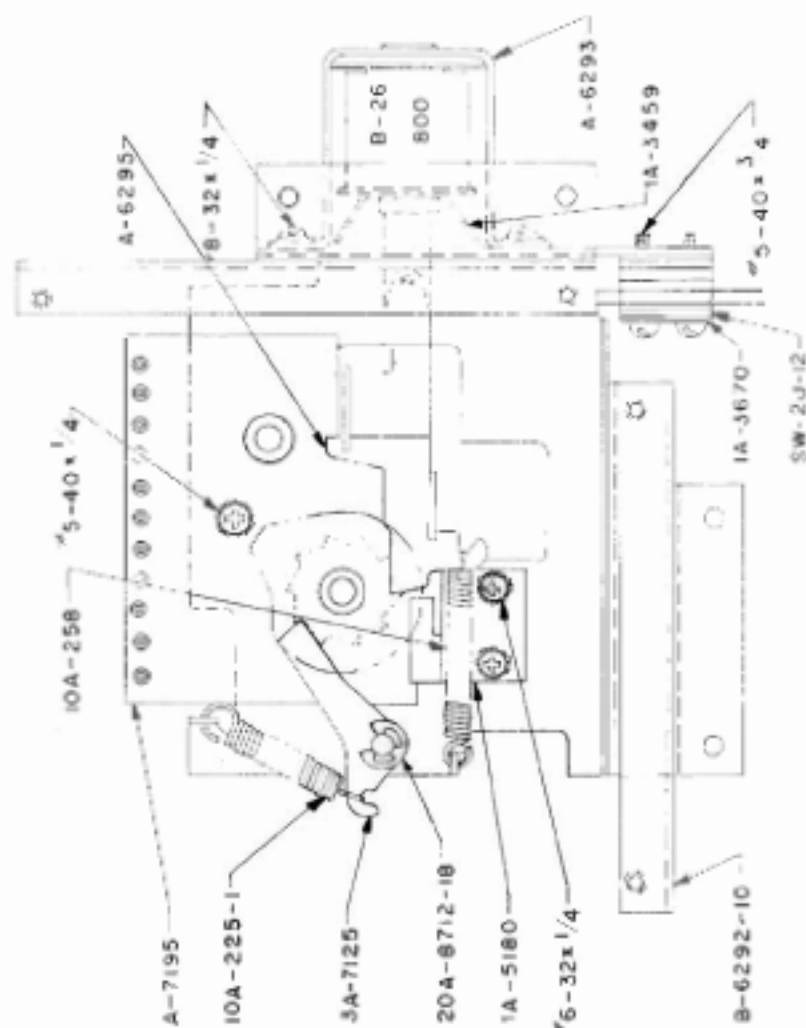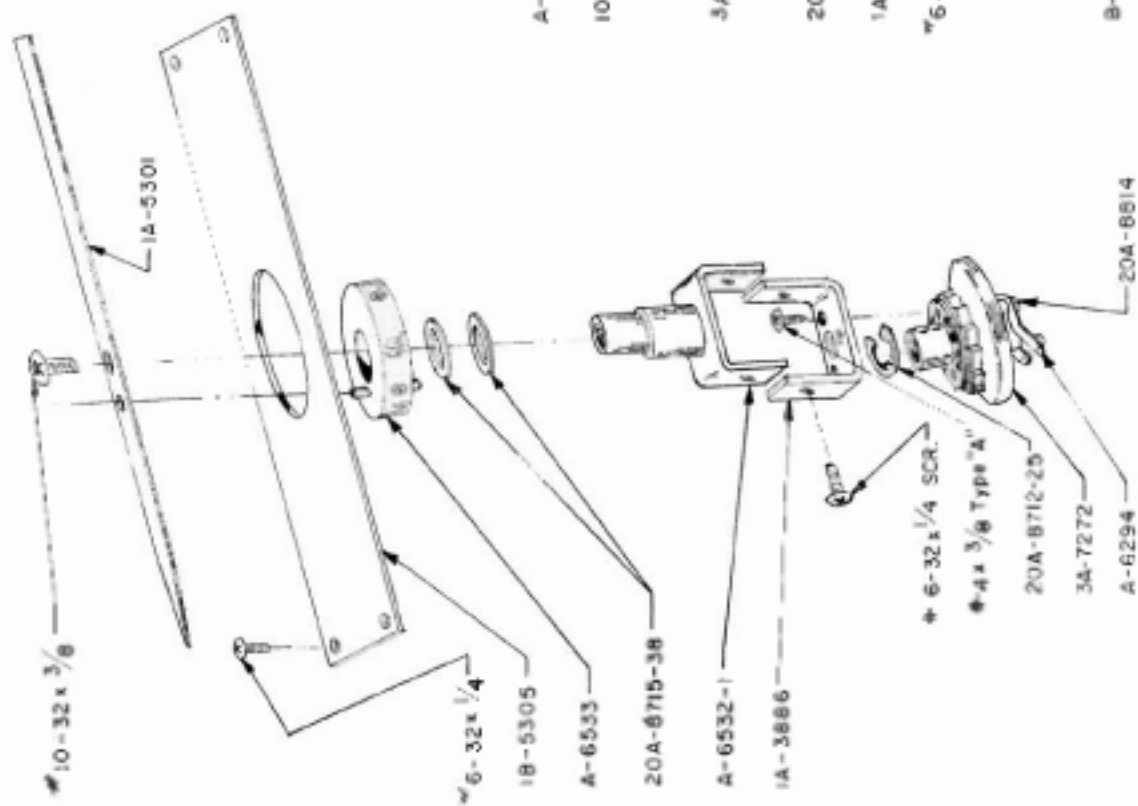

SELECTOR DISC ADVANCE UNIT

C-6534-1

ADVANCE UNIT PARTS ON "GRIDIRON"

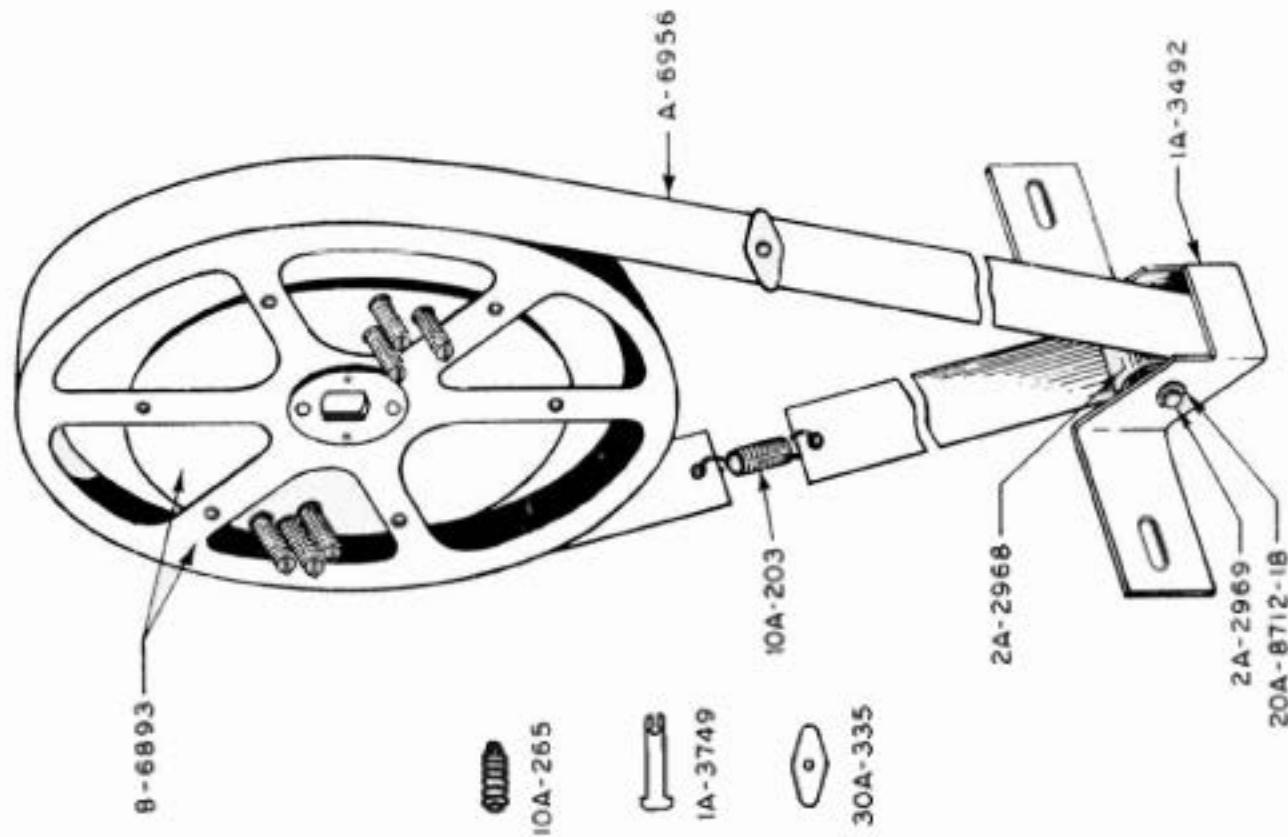

C-6957

1B-4178

BACKBOX GLASS-LOCK BRACKET




3A-7243

BACKBOX GLASS BINDER



1A-4162

BACKBOX GLASS BINDER-(BOTTOM ONLY)



3B-7135


PLAYFIELD MOUNDING GLASS




NOTE: WHEN ORDERING ANY OF ABOVE PARTS -

SEE CATALOG


B-5779 KNOCKER ASS'Y

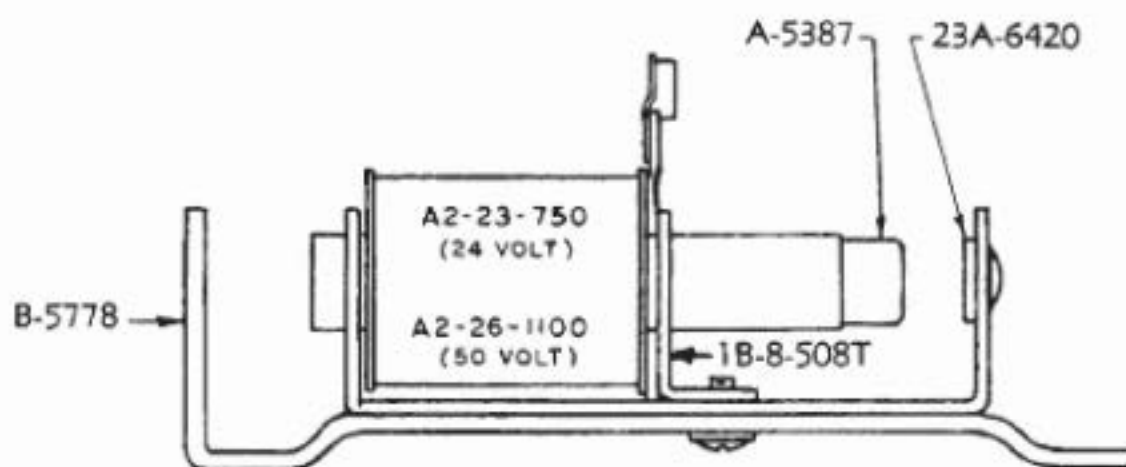


B-6598 CHIME BOX ASSEMBLY (ALL GAMES)

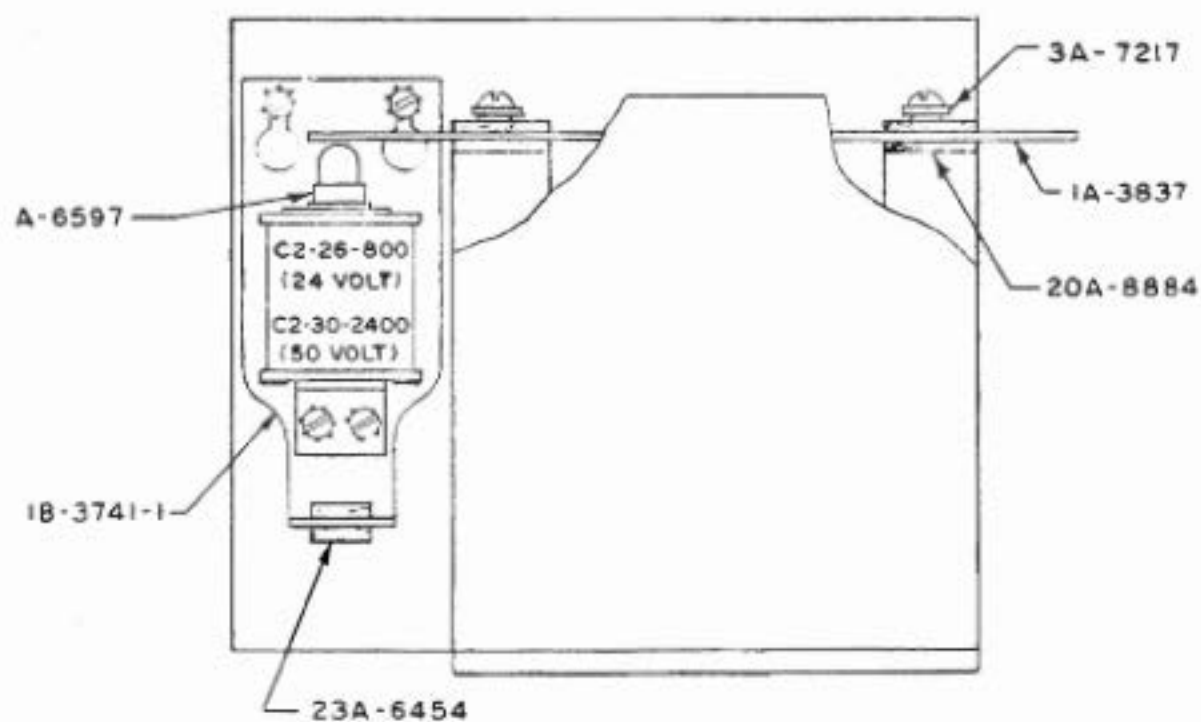

B-6396 24 VOLT - ELECTRIC COUNTER

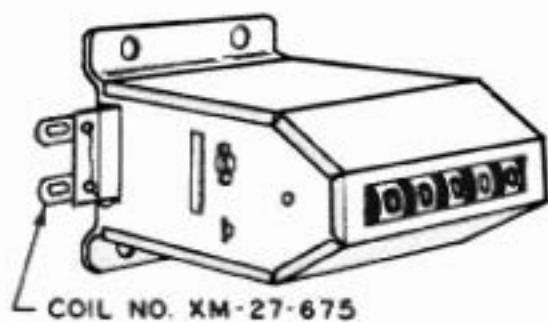

B-6486 50 VOLT - ELECTRIC COUNTER

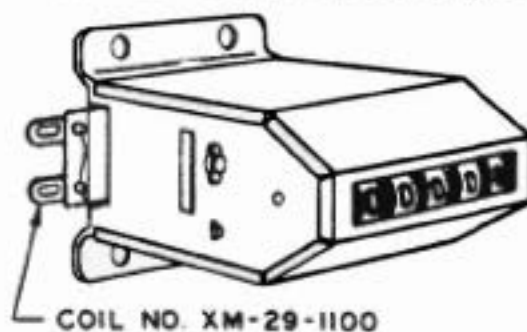


4" BELL

B-6573

SMALL BELL ASSEMBLY

FOR FLIPPER GAMES,
SHUFFLE GAMES & BOWLERS.

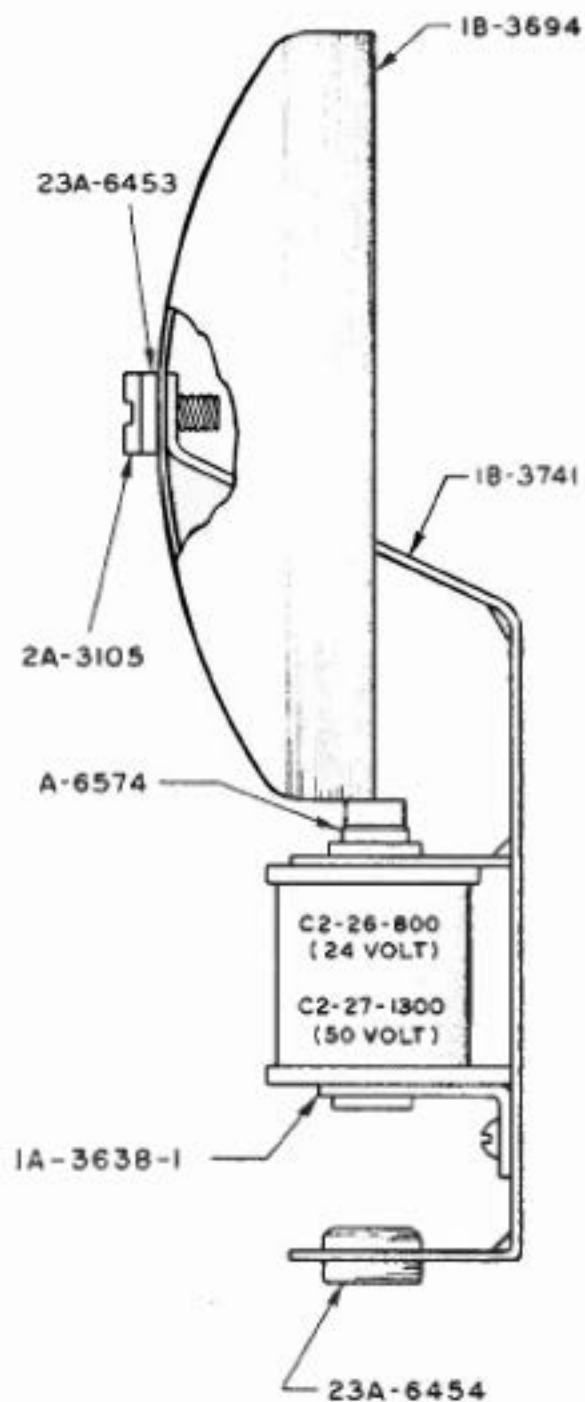


LARGE BELL

IB-1178




LARGE BELL (5") UNIT


B-7050

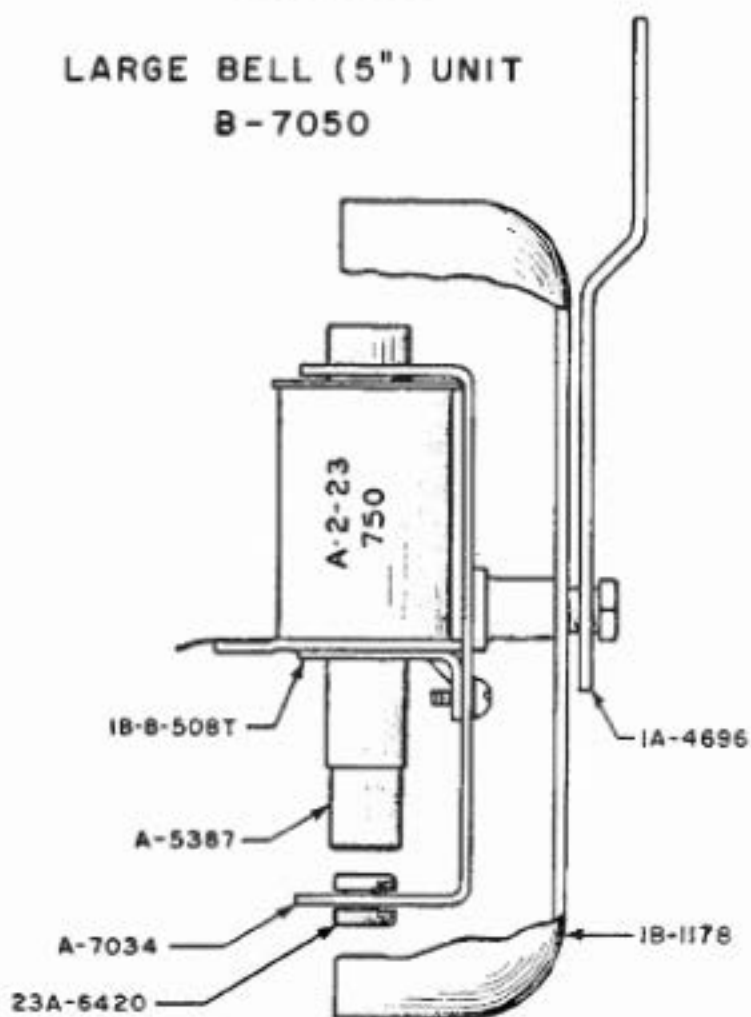


SOLENOID PLUNGERS




BALL EJECT & KICKERS




MAN RUNNING UNIT




10 STEP SCORE UNITS




RELAY BANK RESET




50 STEP UNITS
(DRIVE)




50 STEP UNITS
(RESET)




DOUBLE ACTION
FLIPPERS




JET BUMPERS
(NEW TYPE)




5" BELL & KNOCKER

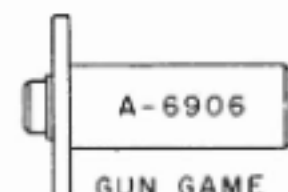

GUN GAME
(LOWER TARGET)




SMALL BELL




CHIME BOX


COIL REPLACEMENT SLEEVES

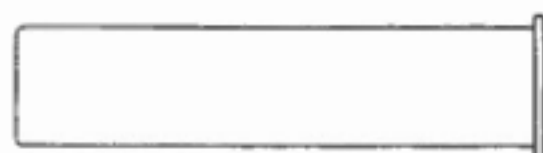


2A-3561

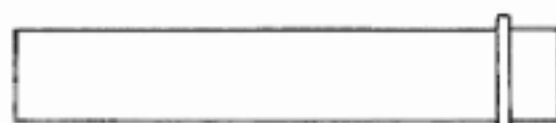


3A-7067-1

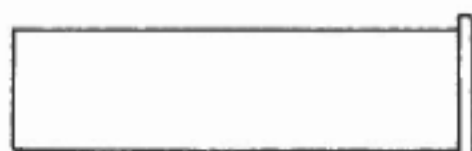


2A-2168
(ALUMINUM)



3A-7066-1

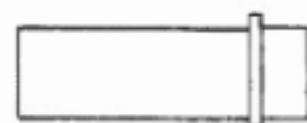

3A-7067-2

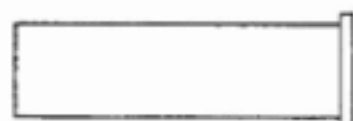

2A-2167-4
(ALUMINUM)

COIL SLEEVE REPLACEMENT CHART


24 VOLT COILS

COIL NO.	SLEEVE
A 21-550	2 A-2167-4
A 22-550	2 A-2167-4
A 23-600	2 A-2167-4
A 23-650	2 A-2167-4
A 26-1350	2 A-2167-4
A1 23-750	3 A-7067-1
A2 23-750	3 A-7067-1
B 26-800	3 A-7066-1
C2 26-800	3 A-7067-2
FL 21-28	3 A-7066-2
G 22-550	2 A-2167-4
G 23-600	2 A-2167-4
G 23-650	2 A-2167-4
G 23-750	2 A-2167-4
G 24-750	2 A-2167-4
G 24-850	2 A-2167-4
D1 20-900	2 A-2167-4
	2 A-3561


50 VOLT COILS

COIL NO.	SLEEVE
A 24-975	2 A-2167-4
A 25-900	2 A-2167-4
A 25-1000	2 A-2167-4
A 26-1100	2 A-2167-4
A 26-1200	2 A-2167-4
A2 26-1100	3 A-7067-1
A2 26-1350	3 A-7067-1
A3 25-950	3 A-7067-1
B 27-1100	3 A-7066-1
B 28-1450	3 A-7066-1
B 29-1600	3 A-7066-1
C 27-1300	3 A-7067-2
C 30-2400	3 A-7067-2
D 22-1150 (110 V.)	2 A-2168
D 24-1150 (110 V.)	2 A-2168
D 24-1400 (110 V.)	2 A-2168
D 24-1600 (110 V.)	2 A-2168
FL 25-31	3 A-7066-2
FL 26-950/250	2 A-2167-4
G 25-1100	2 A-2167-4
G1 25-1100	2 A-2167-4
G 26-1400	2 A-2167-4
	2 A-2167-4


SWITCH BLADES




6A-15-10
SHORT BLADE FOR
J & M RELAY SWITCH




A-6311
SHORT BLADE WITH
SMALL CONTACT # 5A-6541A




A-6312
SHORT BLADE WITH
LARGE CONTACT # 5A-6198



6A-16-8
LONG BLADE FOR
J & M RELAY SWITCH




A-6313
LONG BLADE WITH
SMALL CONTACT # 5A-6541A



A-6314
LONG BLADE WITH
LARGE CONTACT # 5A-6198



6A-25-8
LONG BLADE (SIDE LUG)
FOR J & M RELAY SWITCH



A-6315
SIDE LUG BLADE WITH
SMALL CONTACT # 5A-6541A



A-6316
SIDE LUG BLADE WITH
LARGE CONTACT # 5A-6198




6A-1-14
STANDARD SHORT BLADE




A-6317
SHORT BLADE WITH
SMALL CONTACT # 5A-6541A




A-6318
SHORT BLADE WITH
LARGE CONTACT # 5A-7603



6A-2A-10
STANDARD LONG BLADE



A-6319
LONG BLADE WITH
SMALL CONTACT # 5A-6541A



A-6320
LONG BLADE WITH
LARGE CONTACT # 5A-7603


SWITCH COVER PLATE




IA-2048




IA-3670

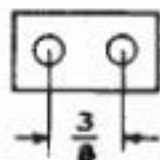

STEEL
IA-15

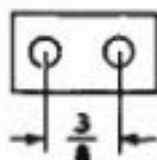

ALUMINUM
IA-916 RA

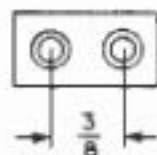

STEEL
IA-5260
(USED ON RELAY BANK)





SWITCH BLADE LIFTER



LENGTH	NO.
1/16	3A-6022-2
3/32	3A-6022-3
1/8	3A-6022-4
5/32	3A-6022-5
3/16	3A-6022-6
7/32	3A-6022-7
1/4	3A-6022-8
9/32	3A-6022-9
5/16	3A-6022-10
11/32	3A-6022-11
3/8	3A-6022-12

SWITCH SPACERS BAKELITE

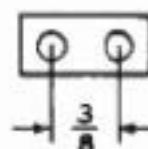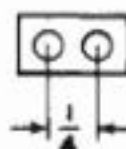

IA-2005-8

IA-916-5



THICKNESS	NO.
1/64	IA-2005-4
1/32	IA-2005-2
1/16	IA-2005-1
3/32	IA-2005-3
1/16	IA-2005-8


THICKNESS	NO.
3/32	IA-916-H
1/16	IA-916-R
1/64	IA-916-Q
1/32	IA-916-T
1/16	IA-916-S



SWITCH TUBING
3A-7006
FOR "M" RELAY SWITCHES
SPECIFY LENGTH



SWITCH TUBING
3A-7007
SPECIFY LENGTH




6A-14




6A-14B


CAM FOLLOWERS

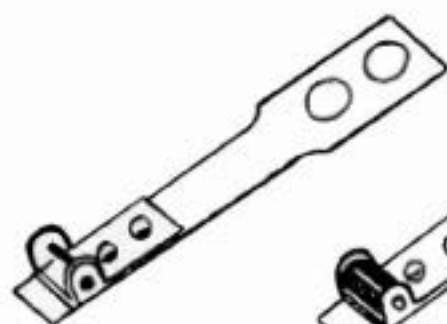


A-4608

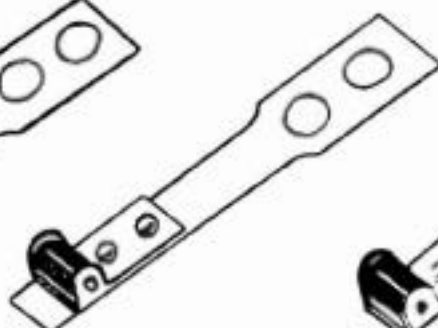

A-4608A

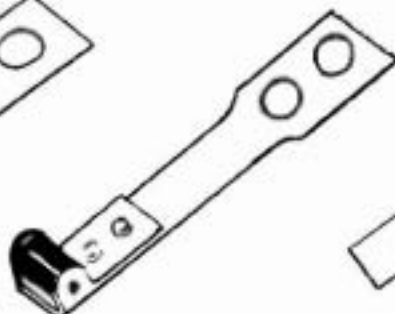


A-4608B

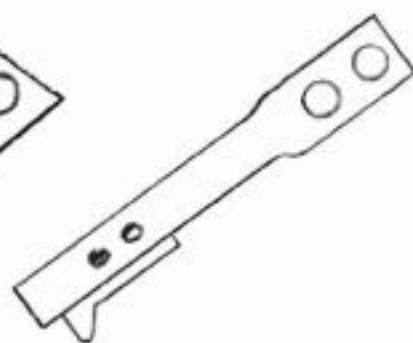


A-6367

SWITCH BLADES

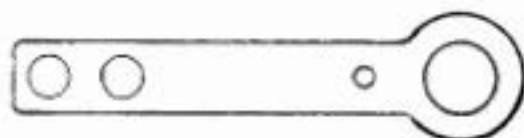


A-4744

BUMPER SWITCH BLADE

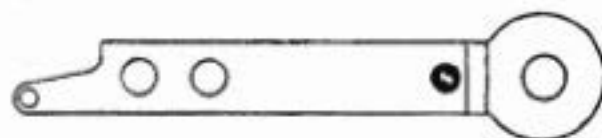


A-4744-2

R.O. BUTTON SWITCH BLADE

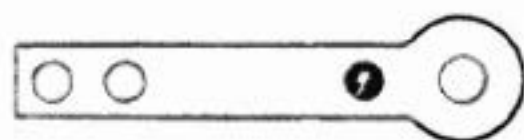

A-4744-4

TARGET SWITCH BLADE
(RIVET TYPE TARGET)

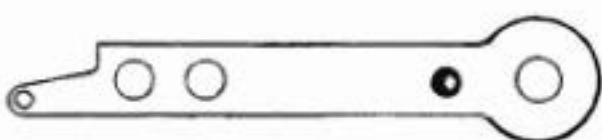

A-4744-1








TARGET SWITCH BLADE
(SPEED NUT TYPE TARGET)



6A-8L

PIN RESET SWITCH BLADE
(USED ON MINI-BOWL)


MOTOR UNIT SWITCHES (NEW STYLE UNIT)

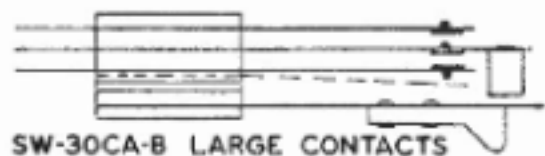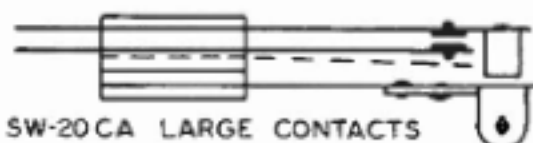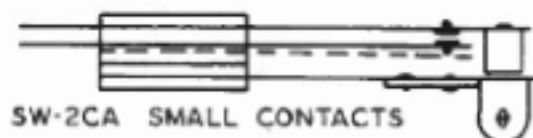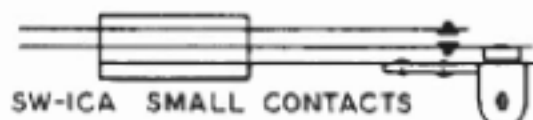

MISCELLANEOUS PIN GAME SWITCHES



SW-1A-2
ROLL OVER WIRE
SINGLE MAKE SW.



SW-1A-45-1
ROLL OVER BUTTON
SINGLE MAKE SW.



SW-1A-2S
ROLL OVER WIRE
SINGLE MAKE SW.
(SIDE LUGS)



SW-20A
ROLL OVER BUTTON
SINGLE BREAK SW.



SW-11A-2
ROLL OVER WIRE
DOUBLE MAKE SW.




SW-10A-17
TARGET SW.
SINGLE MAKE SW.



SW-10A-2S
PLAYFIELD STAND-UP SW.
MAKE SW.



SW-10A-17S
TARGET SW.
SINGLE MAKE SW.
(SIDE LUGS)



SW-1010A-7
PLAYFIELD STAND-UP SW.
MAKE-MAKE SW.




SW-1010A-6
TARGET SW.
DOUBLE MAKE SW.




SW-1A-70
FLIPPER BUTTON SW.
(RIGHT SIDE)
ALSO REPLAY RESET SW.
(FRONT OF CABINET)




SW-11A-2S
FLIPPER BUTTON SW.
(LEFT SIDE)

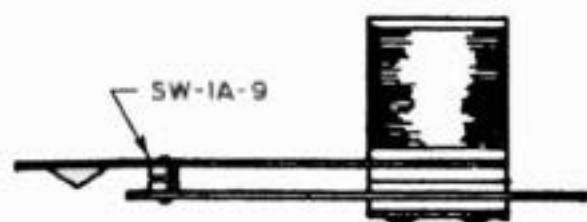


A-5324 BUMPER SWITCH ASSEMBLY

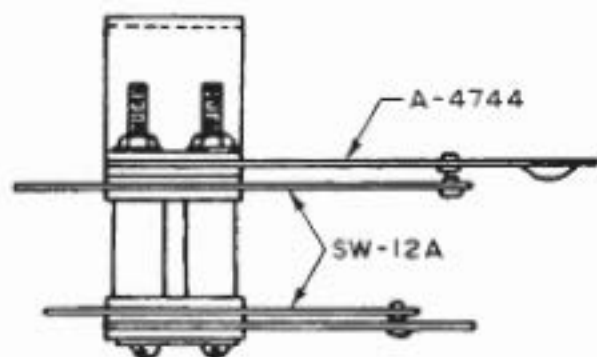

A-4783 JET BUMPER SWITCH ASSEMBLY

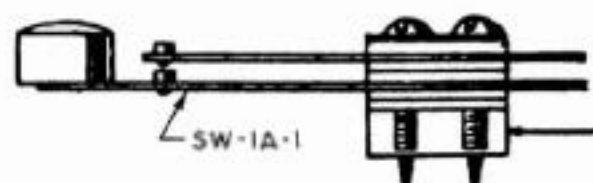


A-5325 TILT SWITCH ASSEMBLY

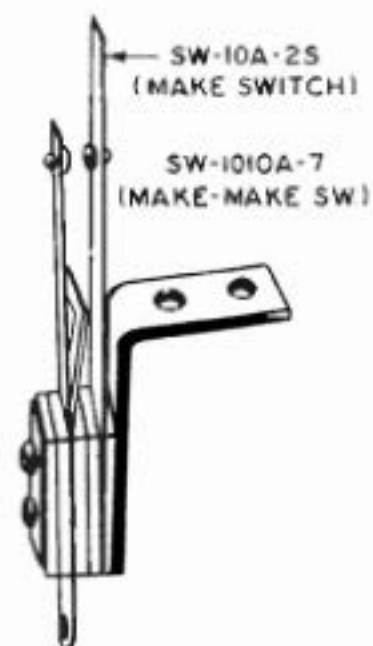


**A-4834
STAND-UP SWITCH
ASS'Y**


TARGET SWITCH ASSEMBLIES (WITH RIVETED TARGETS)

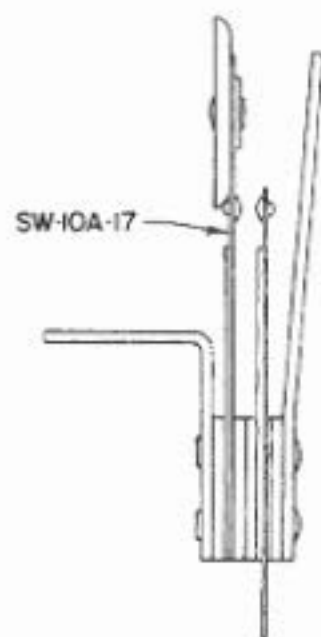

**A-6848
(SINGLE MAKE SWITCH)**

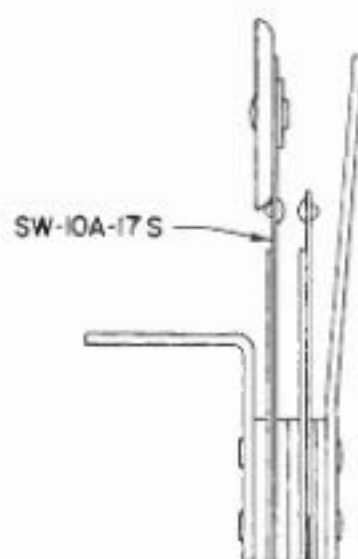


**A-6848-S
(SINGLE MAKE SWITCH)**

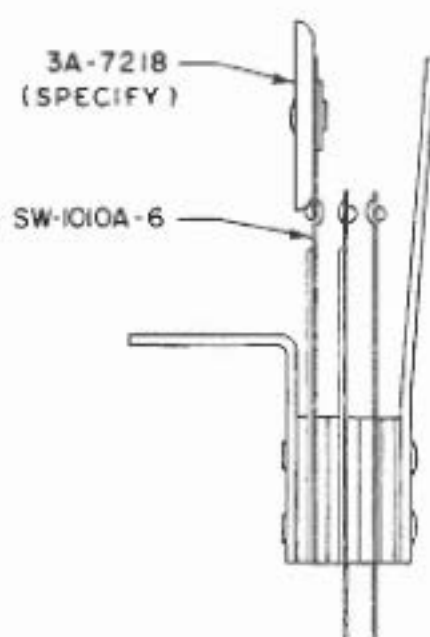


**A-6849
(DOUBLE MAKE SWITCH)**

NEW ROLLOVER ASSEMBLIES

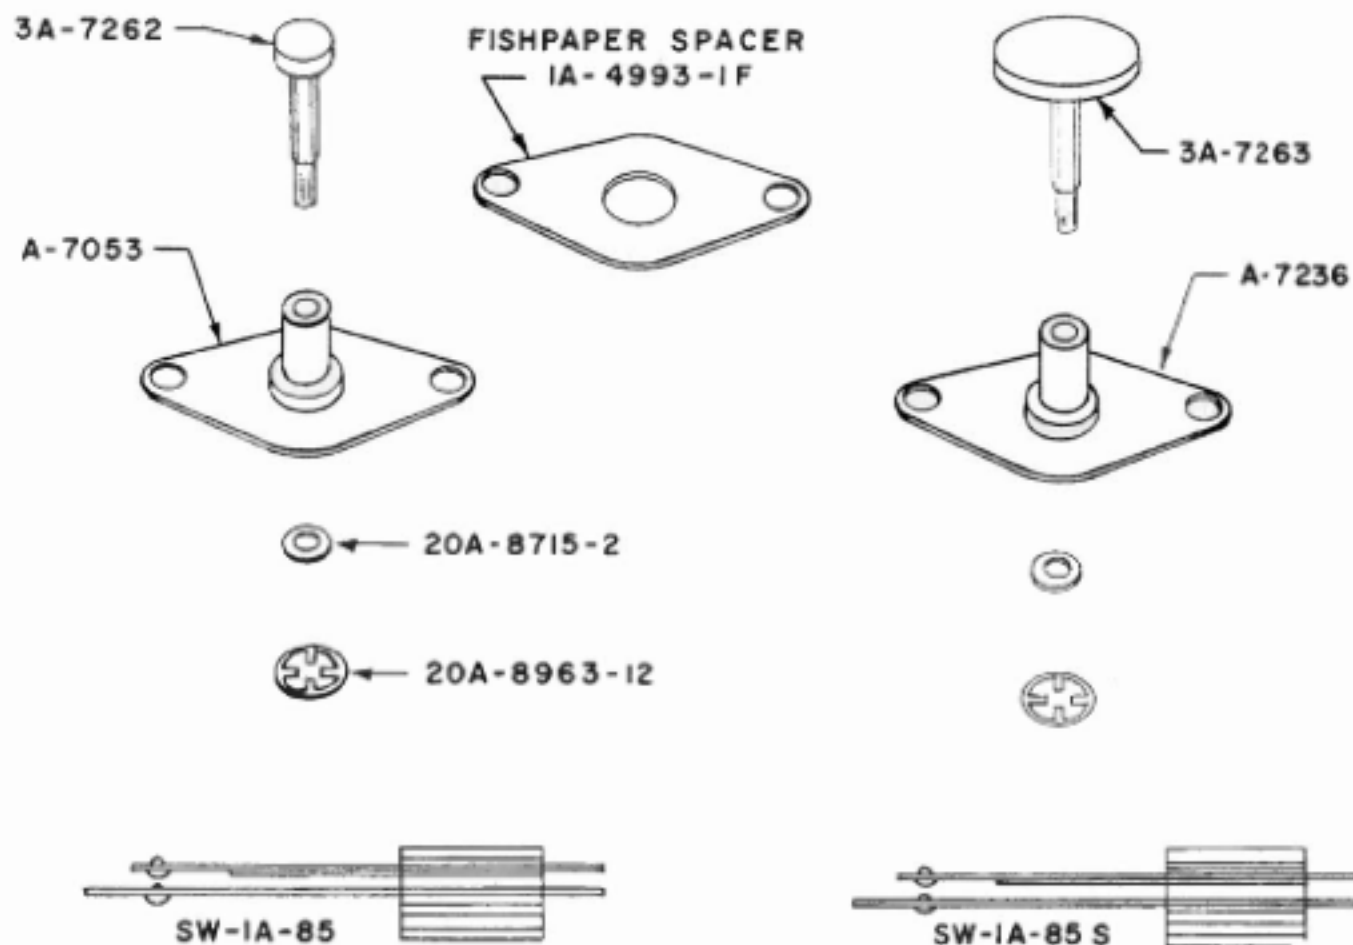

TARGET SWITCH ASSEMBLIES (WITH RIVETED SQUARE TARGETS)

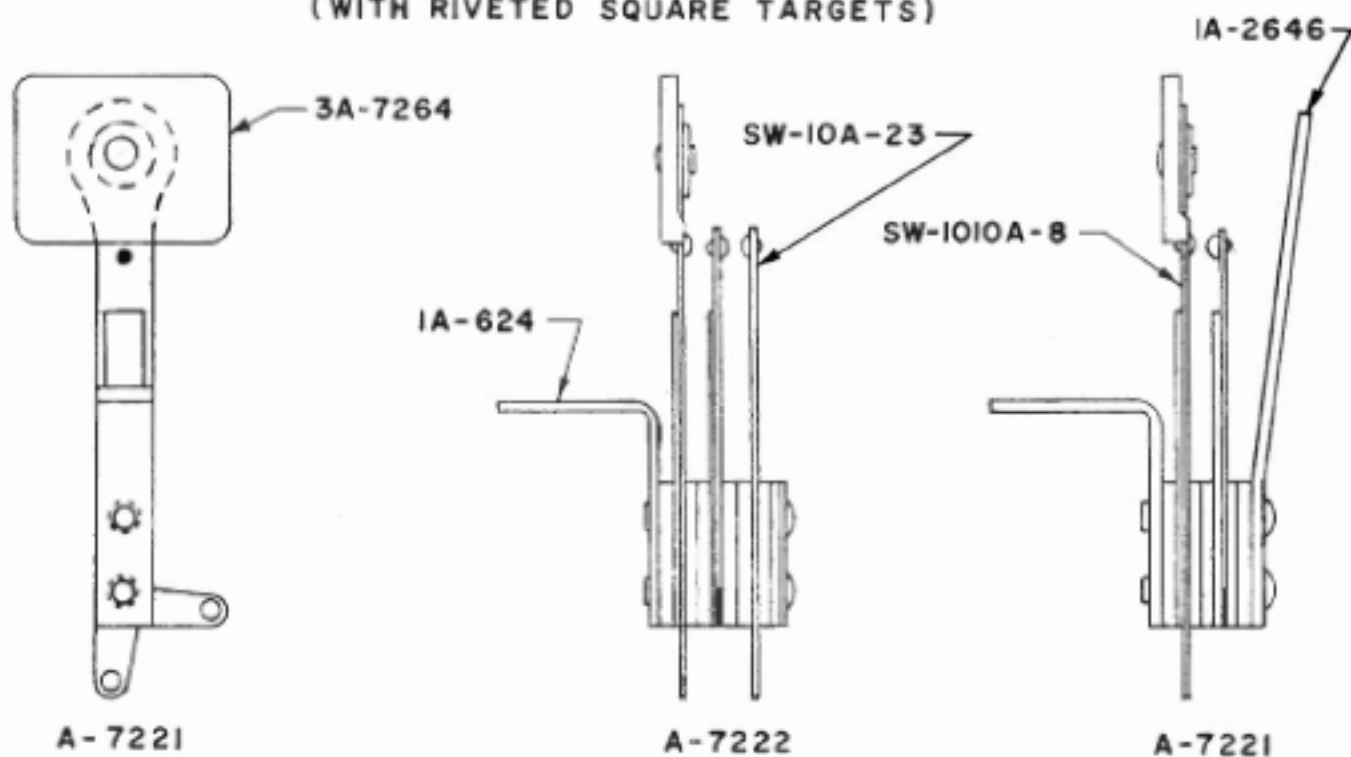


WIRE FORMS



A-5844




A-5844-1

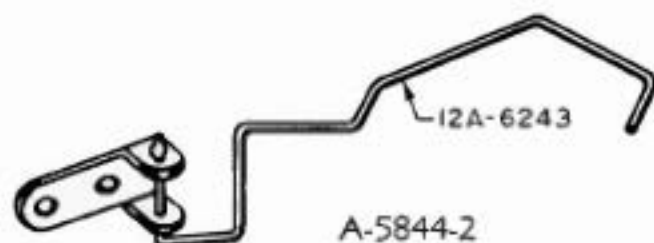

A-5844-2




A-5844-3

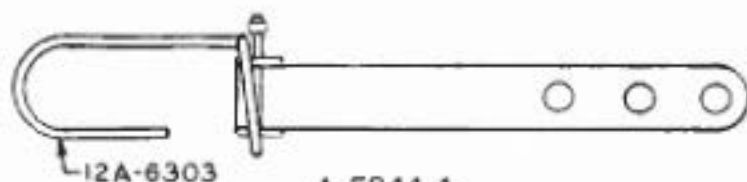


A-5844-4




A-5844-5

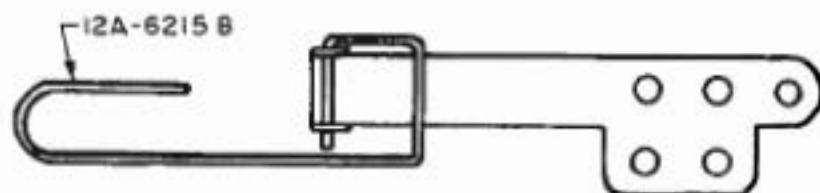


A-5844-6

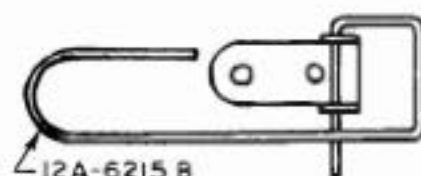

A-5844-7

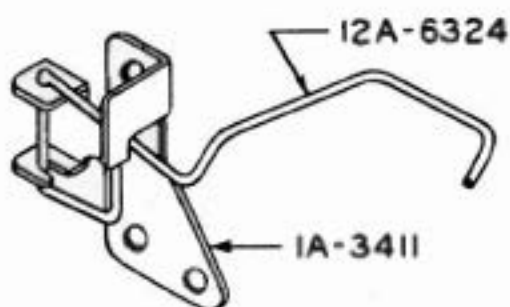


A - 5844 - 8

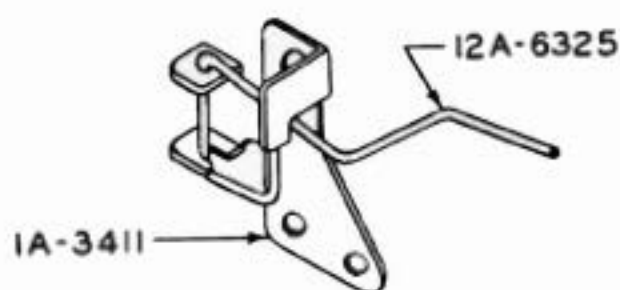


A - 5844 - 9



A-5844-10

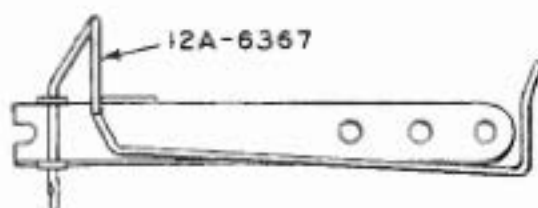

A-5844-11

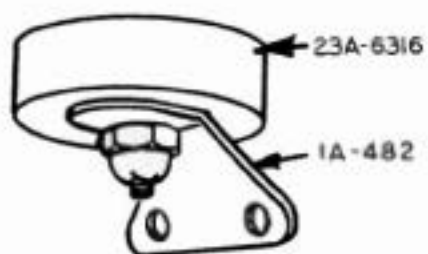

A-4741
REBOUND ASSEMBLY



A-4817 L (LEFT SIDE)
A-4817 R (RIGHT SIDE)
BALL GATE ASSEMBLY

NYLON POSTS




3A-6001



3A-7239




3A-7240

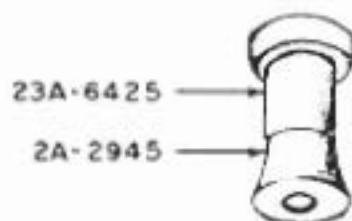

A-6304
MINI-POST & BUMPER


PLAYFIELD BOTTOM ARCH

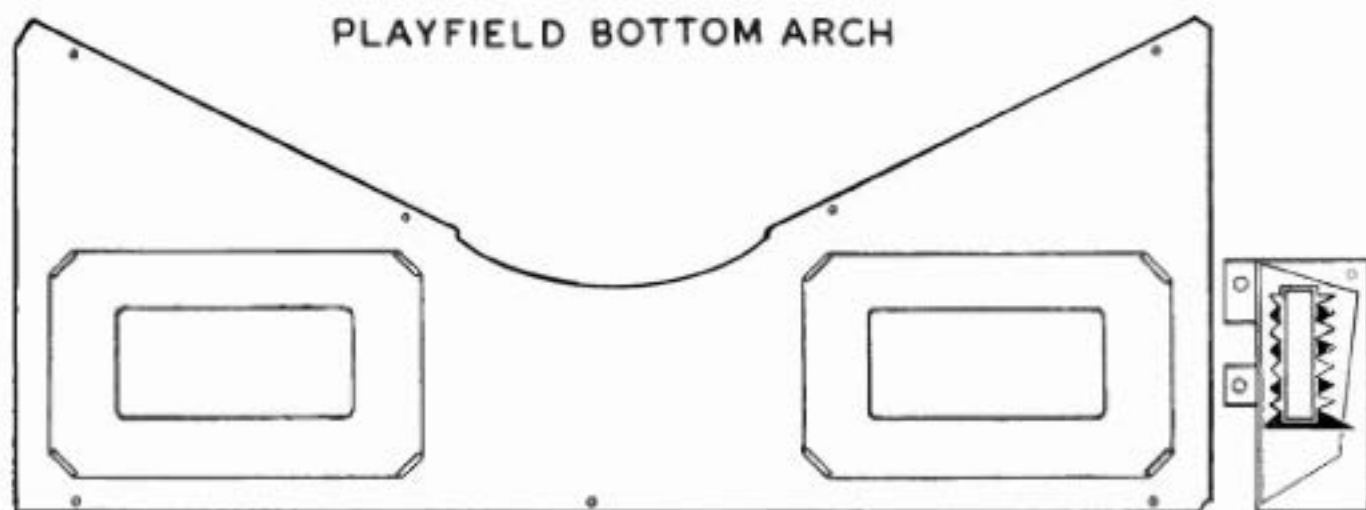


30D-3572
USED ON "ALPINE CLUB"
& ALL FOLLOWING PIN GAMES

30B-3573
(SHOOTER GAUGE)


FRONT DOOR & PARTS (FRONT)

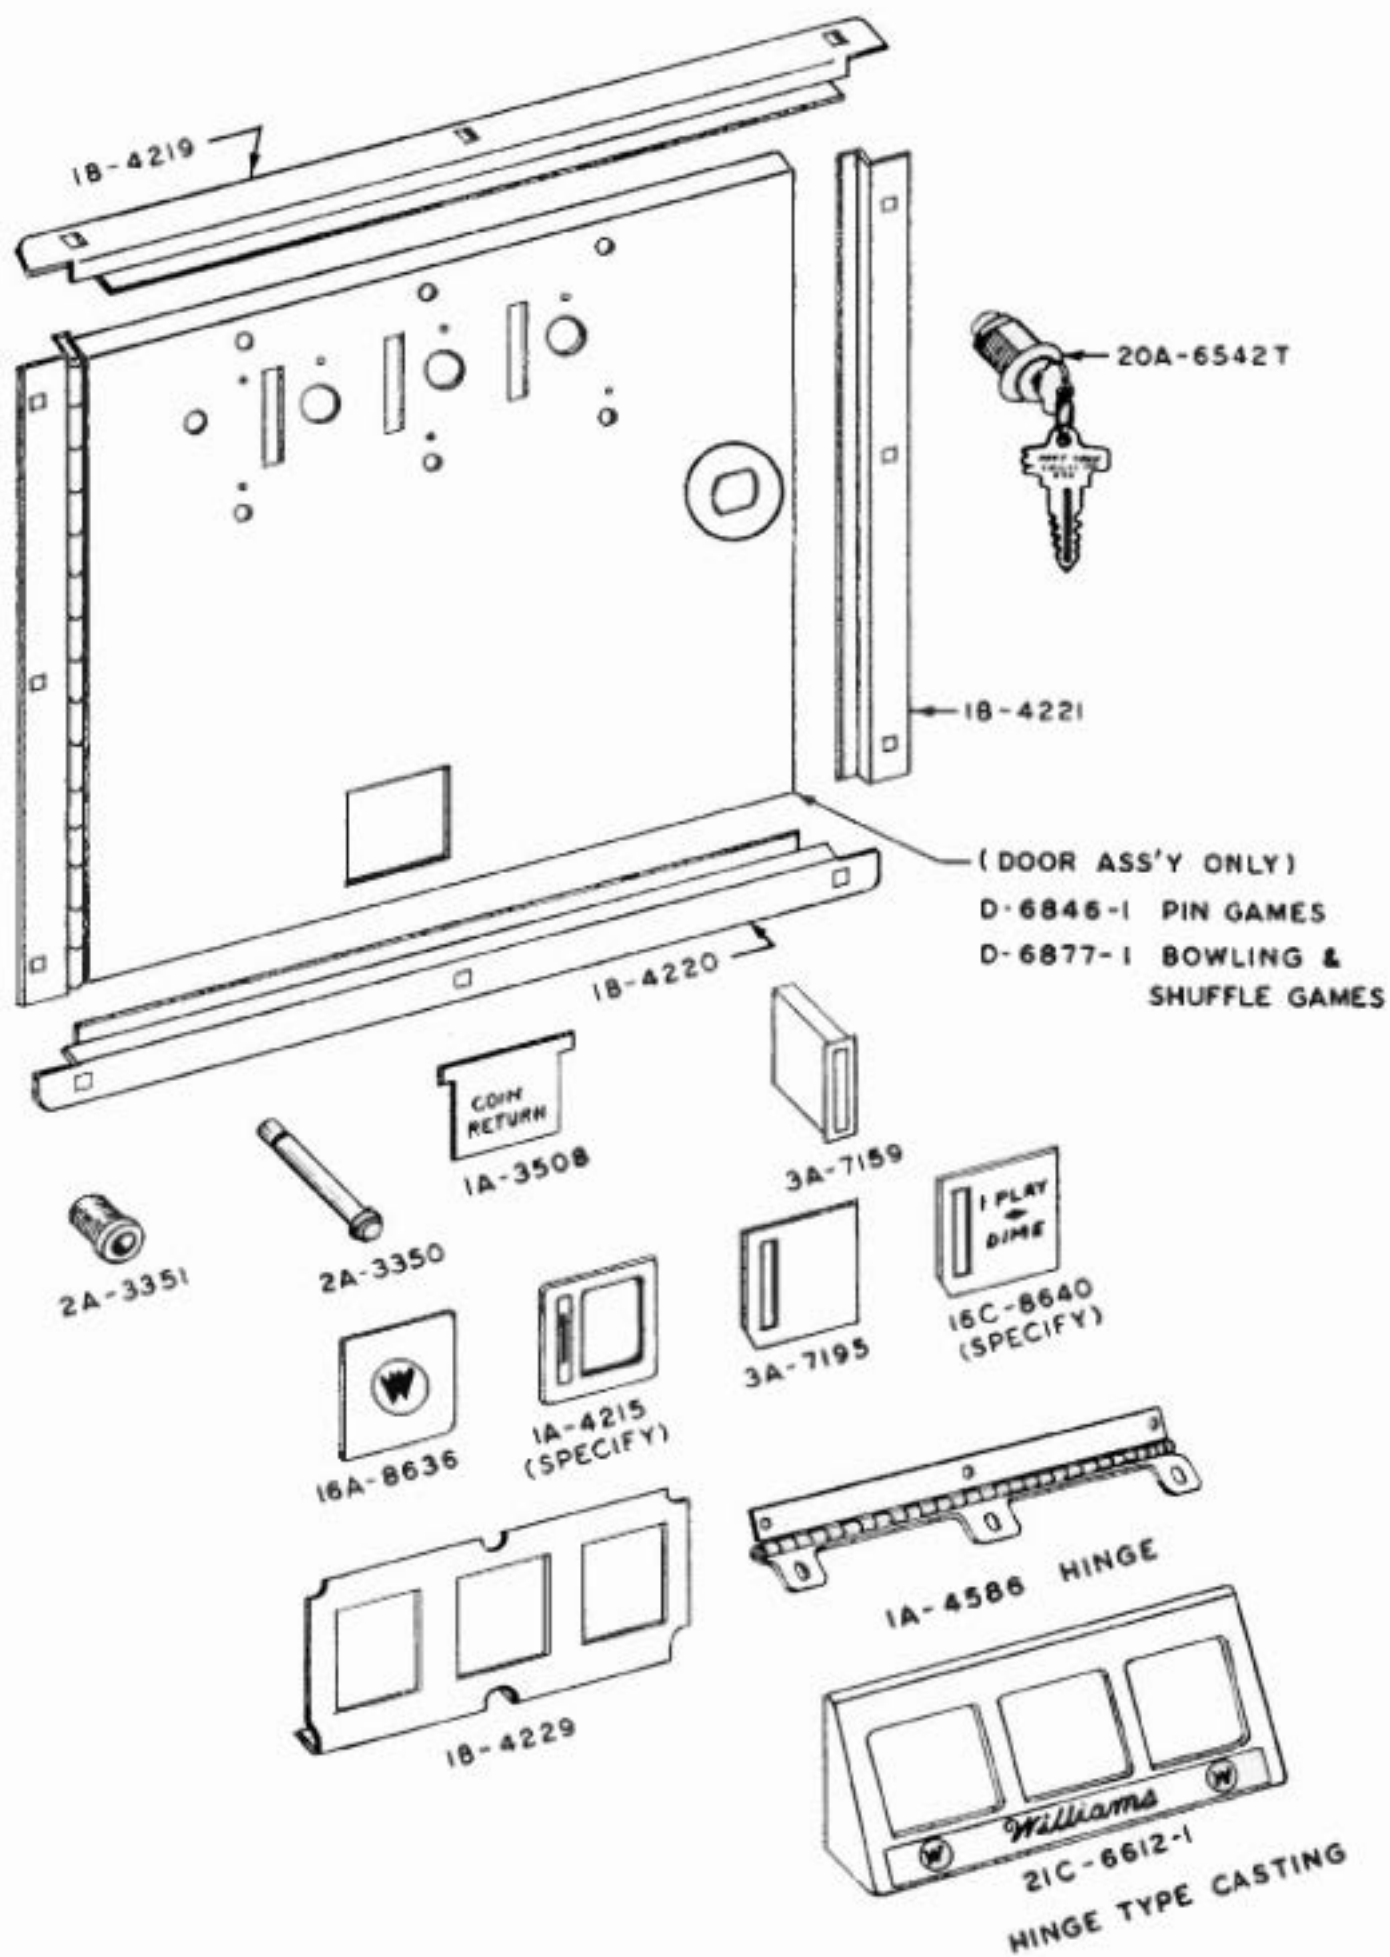


FRONT DOOR & PARTS (BACK SIDE)

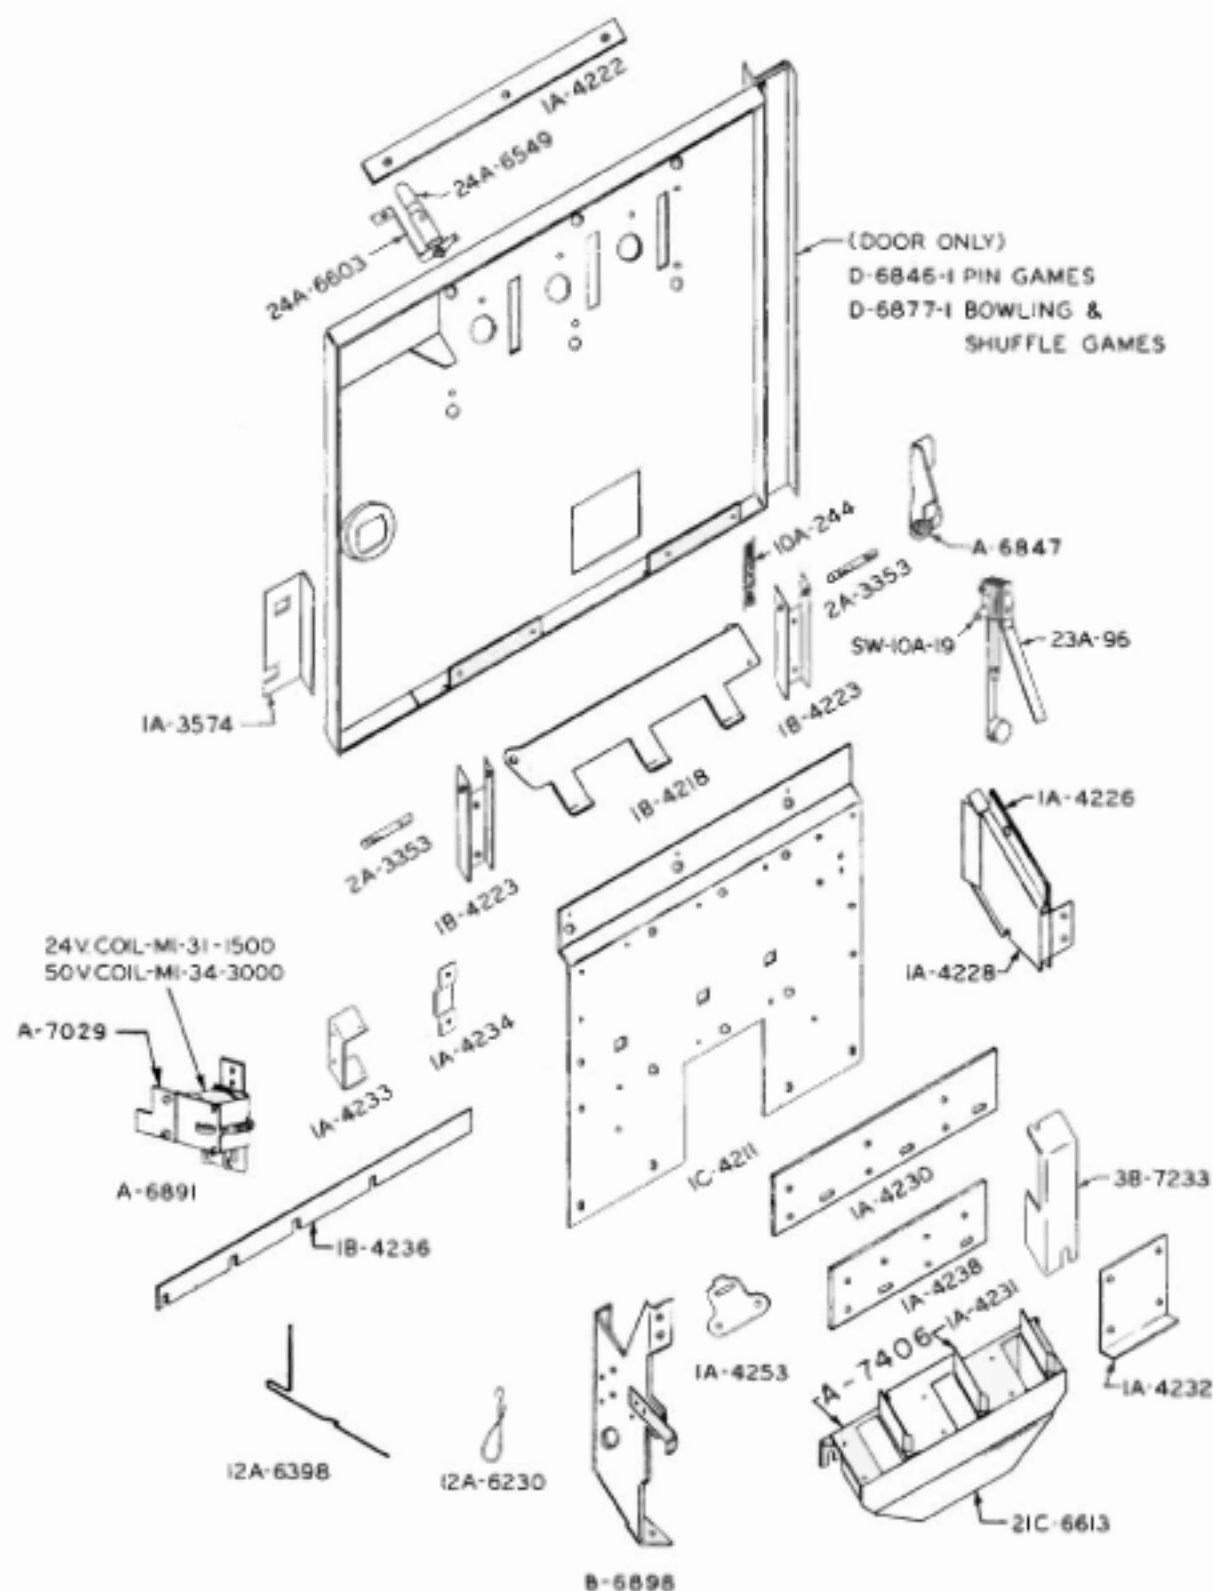


COIN TRIP ASSEMBLIES & PARTS

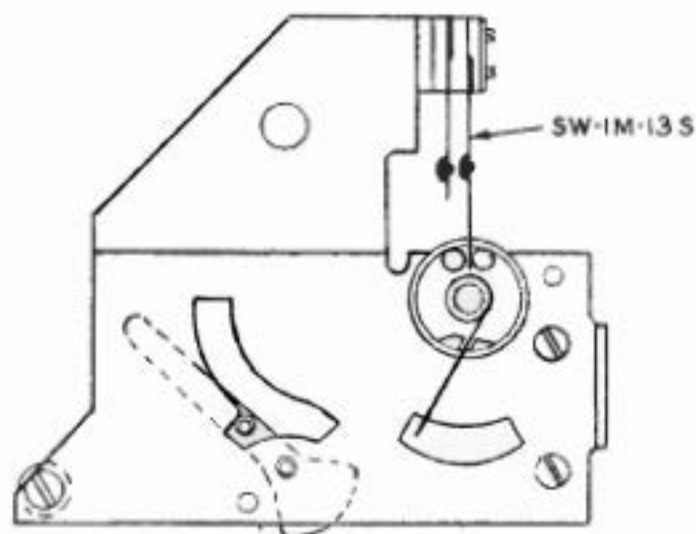


B-6852 COIN TRIP & SWITCH ASS'Y.
(WITH FLIP-OVER LEVER)

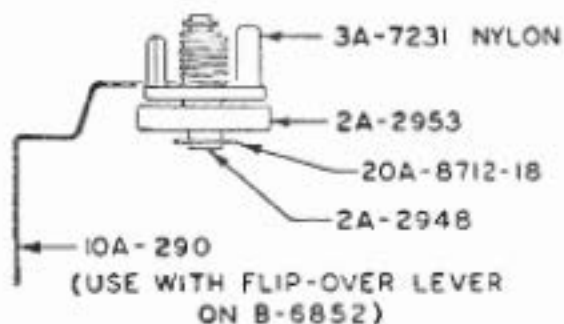


A-7015

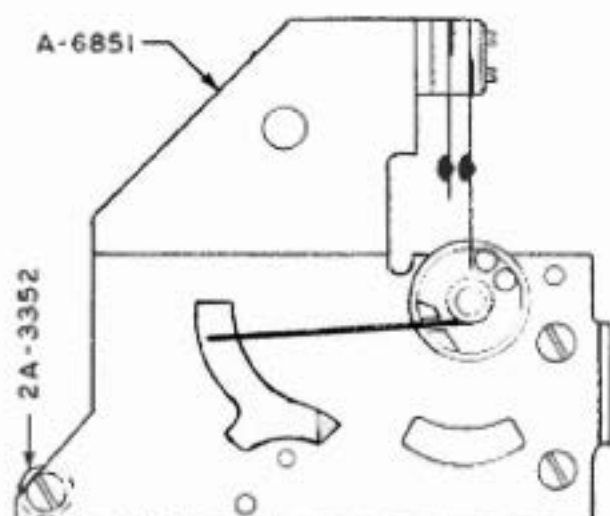


B-6853 COIN TRIP & SWITCH ASS'Y.
(WITHOUT FLIP-OVER LEVER)

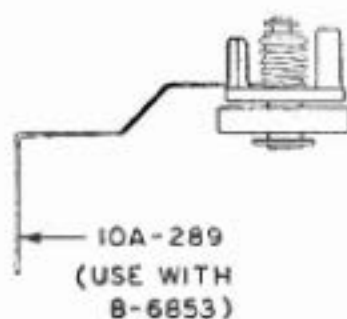

A-7016

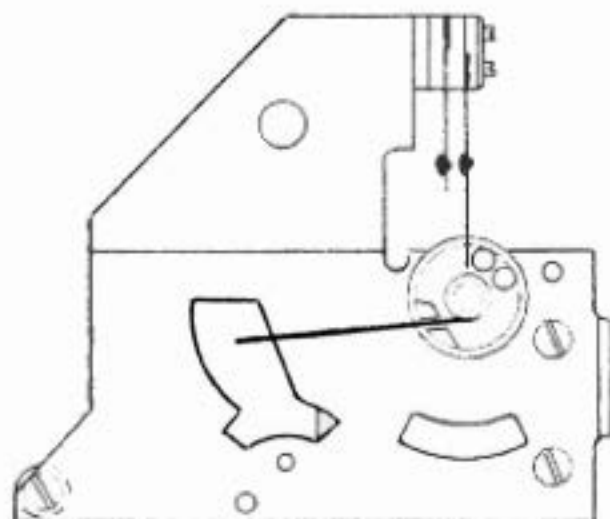


B-6853 L COIN TRIP & SWITCH ASS'Y.
(USE ONLY WITH LARGE COINS)





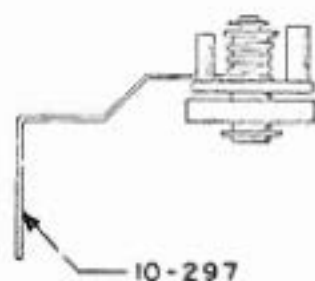


A-7017

COIN TRIP PARTS

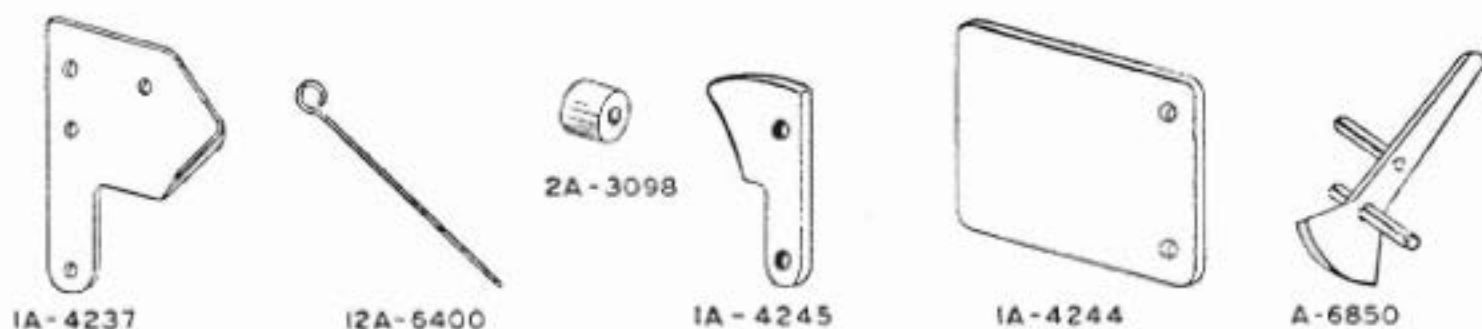

COIN BOX, COVER AND COIN TRAYS

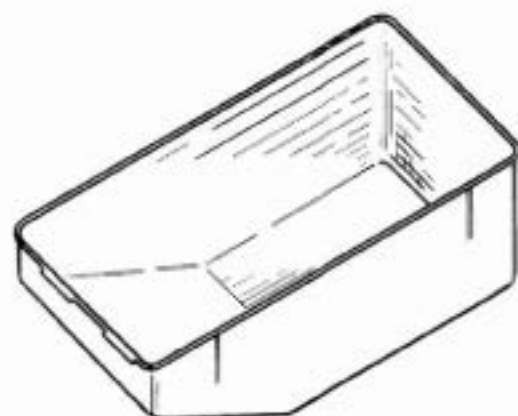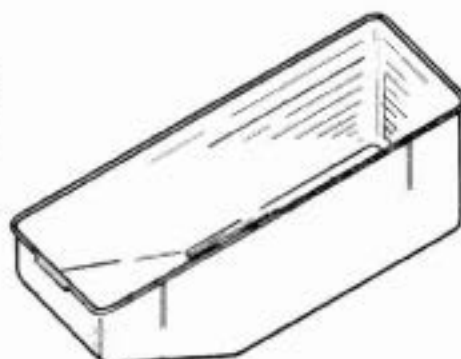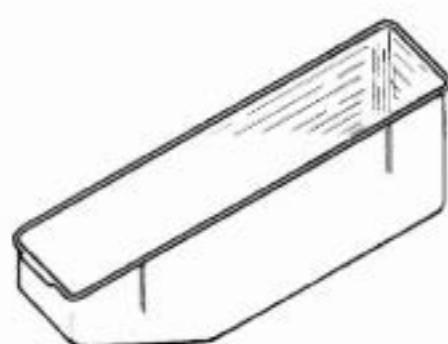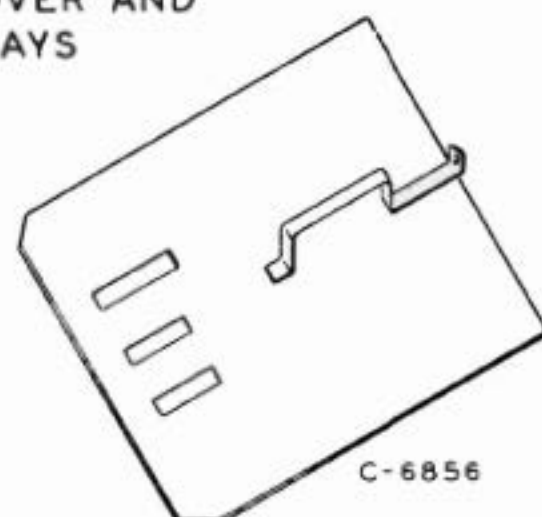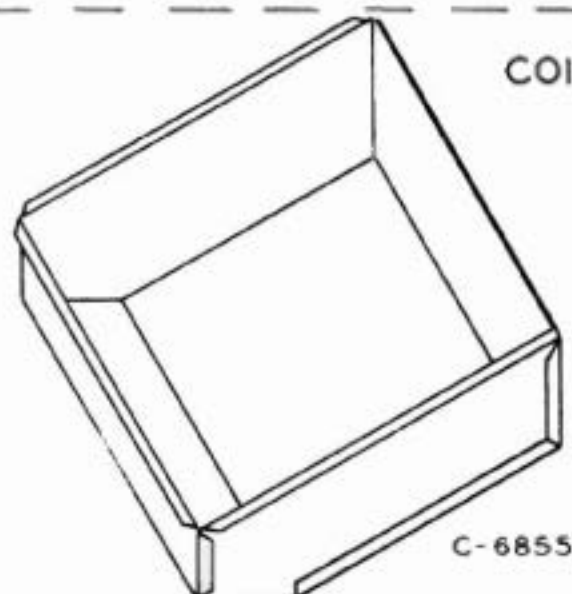

ON GAMES WITH 2 CHUTES USE (2) 3C-7291.
ON GAMES WITH 3 CHUTES USE (1) 3C-7293 AND (2) 3C-7292.

COIN ENTRY PLATES & COIN REJECTORS



16C-8640-5







ENTRY PLATE PART NUMBER	ENTRY PLATE MARKING	COUNTRY	COIN REJECTOR PART NUMBER
16 C 8640-1	1 PLAY 5¢	U.S.A.	9 C 8801
16 C 8640-2	2 PLAYS DIME	U.S.A.	9 C 8802
16 C 8640-3	5 PLAYS QUARTER	U.S.A.	9 C 8803
16 C 8640-4	1 PLAY 2 NICKELS	U.S.A.	9 C 8801
16 C 8640-5	1 PLAY DIME	U.S.A.	9 C 8802
16 C 8640-6	3 PLAYS QUARTER	U.S.A.	9 C 8803
16 C 8640-7	1 SPIEL - 20 PFG 2 X 10 PFG	GERMANY	9 C 8841
16 C 8640-8	3 SPIELS - 50 PFG	GERMANY	9 C 8842
16 C 8640-9	6 SPIELS - 1 MARK	GERMANY	9 C 8843
16 C 8640-10	1 SPEL - 25 CT	HOLLAND	9 C 8838
16 C 8640-11	25 CENT	NETHERLAND, Antilles	9 C 8886
16 C 8640-12	1 PELI - 20 PENNIA	FINLAND	9 C 8832
16 C 8640-13	3 PELIA - 50 PENNIA	FINLAND	9 C 8834
16 C 8640-14	6 PELIA - 1 MARK	FINLAND	9 C 8833
16 C 8640-15	1 PARTIE - 20 ¢	SWITZERLAND	9 C 8829
16 C 8640-16	1 PARTIE - 20 ¢	FRANCE	9 C 8817
16 C 8640-17	5 PARTIES - 1 FRANC	FRANCE	9 C 8818
16 C 8640-18	1 PARTIE - 40 ¢ 2 X 20 ¢	FRANCE	9 C 8817
16 C 8640-19	3 PARTIES - 1 FRANC	FRANCE	9 C 8818
16 C 8640-20	1 PARTIE - 1 FRANC	FRANCE	9 C 8818
16 C 8640-21	1 JEU - 25 PIASTRES	LEBANON	9 C 8819
16 C 8640-22	3 JEU - 50 PIASTRES	LEBANON	9 C 8820
16 C 8640-23	1 PARTIDA - 2 PTAS - 2 X 1 PTAS	SPAIN	9 C 8813
16 C 8640-24	3 PARTIDAS - 5 PTAS	SPAIN	9 C 8814
16 C 8640-25	1 PARTIDA - 3 PTAS 3 X 1 PTAS	SPAIN	9 C 8813
16 C 8640-26	2 PARTIDAS - 5 PTAS	SPAIN	9 C 8814
16 C 8640-27	1 PARTIDA - 10 PTAS 2 X 5 PTAS	SPAIN	9 C 8814
16 C 8640-28	3 JEUX - FR5 b5	BELGIUM	9 C 8875
16 C 8640-29	1 JEU - FR5 b2 2 X 1 FRANC	BELGIUM	9 C 8839
16 C 8640-30	1 SPEL - bFR5 2 2 X 1 FRANC	BELGIUM	9 C 8839
16 C 8640-31	3 SPELEN - b FR5 5	BELGIUM	9 C 8875
16 C 8640-32	1 SPEL - 50 ORE	SWEDEN	9 C 8807
16 C 8640-33	3 SPEL - 1 KRONE	SWEDEN	9 C 8808
16 C 8640-34	1 SPEL - 2 X 25 ORE	SWEDEN	9 C 8806
16 C 8640-35	1 SPEL - 25 ORE	DENMARK	9 C 8809
16 C 8640-36	5 SPEL - 1 KRONE	DENMARK	9 C 8810
16 C 8640-37	1 SPEL - 2 KRONE 2 X 1 KRONE	DENMARK	9 C 8810
16 C 8640-38	1 JUEGO - B ⁵ .025	VENEZUELA	9 C 8823
16 C 8640-39	2 JUEGOS - B ⁵ .050	VENEZUELA	9 C 8824
16 C 8640-40	4 JUEGOS - B ⁵ 1.00	VENEZUELA	9 C 8823
16 C 8640-41	1 JUEGO - 50 CENTIMOS	VENEZUELA	9 C 8824
16 C 8640-42	1 JEU - 25 SOUS	MAURITIUS	9 C 8850
16 C 8640-43	2 JEUX - 50 SOUS	MAURITIUS	9 C 8851
16 C 8640-44	1 PLAY - 25 RUPEE	MAURITIUS	9 C 8850
16 C 8640-45	2 PLAYS - 50 RUPEES	MAURITIUS	9 C 8851
16 C 8640-46	1 PLAY - 1 TOKEN	BOLIVIA	
16 C 8640-47	1 PLAY - 25 MILS	CYPRUS	9 C 8827
16 C 8640-48	3 PLAYS - 50 MILS	CYPRUS	9 C 8828
16 C 8640-49	1 PLAY - 1/ PIECE	ENGLAND, AUSTRALIA, NEW ZEALAND	9 C 8835
16 C 8640-50	1 PLAY - 6d	ENGLAND, AUSTRALIA, NEW ZEALAND	9 C 8811
16 C 8640-51	2 PLAYS - 1/ PIECE	ENGLAND, AUSTRALIA, NEW ZEALAND	9 C 8835
	5 PLAYS - 2/ PIECE	ENGLAND, AUSTRALIA, NEW ZEALAND	9 C 8836
	4 PLAYS - 2/ PIECE	ENGLAND, AUSTRALIA, NEW ZEALAND	9 C 8836

ENTRY PLATE PART NUMBER	ENTRY PLATE MARKING	COUNTRY	COIN REJECTOR PART NUMBER
16 C 8640-52	1 PLAY - 10 ¢	AUSTRALIA	9 C 8848
16 C 8640-53	2 PLAY - 10 ¢	AUSTRALIA	9 C 8848
16 C 8640-54	4 PLAY - 20 ¢	AUSTRALIA	9 C 8849
16 C 8640-55	5 PLAY - 20 ¢	AUSTRALIA	9 C 8849
16 C 8640-56	3 PLAY - 20 ¢	AUSTRALIA	9 C 8849
16 C 8640-57	1 PARTITA - 100 LIRE	ITALY	9 C 8864
16 C 8640-58	1 PARTITA - 50 LIRE	ITALY	9 C 8864
16 C 8640-59	3 PARTITE - 100 LIRE	ITALY	9 C 8864
16 C 8640-60	1 SPILL - 50 ORE	NORWAY	9 C 8821
16 C 8640-61	2 SPILL - 1 KRONA	NORWAY	9 C 8822
16 C 8640-62	1 SPIEL - 2 SCH. 2 X 1 SCH	AUSTRIA	9 C 8812
16 C 8640-63	1 SPIEL - 5 SCH	AUSTRIA	9 C 8858
16 C 8640-64	1 PLAY - 1 DRACHMA	GREECE	9 C 8826
16 C 8640-65	1 PLAY - 20 YEN 2 X 10 YEN	JAPAN	9 C 8844
16 C 8640-66	3 PLAY - 50 YEN	JAPAN	9 C 8845
16 C 8640-67	6 PLAY - 100 YEN	JAPAN	9 C 8846
16 C 8640-68	1 PLAY - 50 YEN	JAPAN	9 C 8845
16 C 8640-69	1 PLAY - 50 STANG	THAILAND	9 C 8856
16 C 8640-70	1 GOGO - 20 ¢	SWITZERLAND	9 C 8829
16 C 8640-71	1 SPIEL - 20 RAPPEN	SWITZERLAND	9 C 8829
16 C 8640-72	2 SPIELE - 50 RAPPEN	SWITZERLAND	9 C 8830
16 C 8640-73	2 PARTIES - 50 ¢	SWITZERLAND	9 C 8830
16 C 8640-74	2 GIOCHI - 50 ¢	SWITZERLAND	9 C 8830
16 C 8640-75	4 SPIELE - 1 FRANKEN	SWITZERLAND	9 C 8831
16 C 8640-76	4 PARTIES - 1 FRANC	FRANCE, SWITZERLAND	9 C 8831
16 C 8640-77	4 GIOCHI - 1 FRANCO	SWITZERLAND	9 C 8831
16 C 8640-78	1 PLAY - IRISH 60	IRELAND	9 C 8851
16 C 8640-79	2 PLAY - IRISH 1 S	IRELAND	9 C 8854
16 C 8640-80	5 PLAY - IRISH 2 S	IRELAND	9 C 8855
16 C 8640-81	1 PLAY - 50 DINARA	YUGOSLAVIA	9 C 8857
16 C 8640-82	3 SPIELE - 5 SCHILLING	AUSTRIA	9 C 8858
16 C 8640-83	6 SPIELE - 10 SCHILLING	AUSTRIA	9 C 8859
16 C 8640-84	1 PLAY - 25 ¢	MAURITIUS	9 C 8850
16 C 8640-86	1 PLAY - 2 FORINT	HUNGARY	9 C 8861
16 C 8640-87	1 PLAY - 50 MILLIMES	TUNISIA	9 C 8862
16 C 8640-88	1 PLAY - 5 ESCUDO	PORTUGAL	9 C 8862
16 C 8640-89	2 PARTITE - 100 LIRE	ITALY	9 C 8864
16 C 8640-90	1 PARTIE - 50 FRANCHI	TUNISIA	9 C 8862
16 C 8640-91	3 PARTIES - 100 FRANCHI	TUNISIA	9 C 8865
16 C 8640-92	2 PLAYS - 10 ESCUDOS	PORTUGAL	9 C 8866
16 C 8640-93	1 PLAY - 1 FORINT	HUNGARY	9 C 8867
16 C 8640-94	2 PLAYS - 2 FORINT	HUNGARY	9 C 8861
16 C 8640-95	2 PARTIES - 100 FRANCHI	TUNISIA	9 C 8865
16 C 8640-96	2 PLAYS - 1 DINARA	YUGOSLAVIA	9 C 8868
16 C 8640-97	HERJETON ICIN 1 OYUN	TURKEY	9 C 8872
16 C 8640-98	HERJETON ICIN 2 OYUN	TURKEY	9 C 8873
16 C 8640-99	1 PLAY - 100 MILS	CYPRUS	9 C 8870
16 C 8640-100	2 PLAYS - QUARTER	U.S.A.	9 C 8803
16 C 8640-101	1 SPEL - 1 KRONA	SWEDEN	9 C 8808
16 C 8640-102	1 SPEL - 2 KRONA 2 X 1 KRONA	SWEDEN	9 C 9909
16 C 8640-103	1 PLAY - 1/2 RUPEE	PAKISTAN	9 C 8874
16 C 8640-104	2 PARTIES - 1/2 FRANC	FRANCE	9 C 8871
16 C 8640-105	1 PARTIE - 1/2 FRANC	FRANCE	9 C 8871
16 C 8640-106	1 SPEL - 5 IRS 5	BELGIUM	9 C 8875
16 C 8640-107	1 PELI - 50 PENNIA	FINLAND	9 C 8834
16 C 8640-108	3 PELI - 1 MARK	FINLAND	9 C 8833
16 C 8640-109	1 PARTIE - 2 FRANC 2 X 1 FRANC	FRANCE	9 C 8818


ENTRY PLATE PART NUMBER	ENTRY PLATE MARKING	COUNTRY	COIN REJECTOR PART NUMBER
16 C 8640-110	5 PLAYS - 100 MILS	CYPRUS	9 C 8870
16 C 8640-111	6 PLAYS - 100 MILS	CYPRUS	9 C 8870
16 C 8640-112	1 PARTIE - 25 CFA	SENEGAL	9 C 8876
16 C 8640-113	1 SPIEL - 2 x 25 CT	HOLLAND	9 C 8878
16 C 8640-114	4 PLAYS - QUARTER	U.S.A.	9 C 8883
16 C 8640-115	1 JEU - FRS 65	BELGIUM	9 C 8875
16 C 8640-116	2 SPELEN - 6 FRS 10	BELGIUM	9 C 8879
16 C 8640-117	1 PLAY - 5 NEGWEE	ZAMBIA	9 C 8880
16 C 8640-118	2 PLAYS - 10 NEGWEE	ZAMBIA	9 C 8881
16 C 8640-119	1 PLAY - 30 YEN 3 x 10 YEN	JAPAN	9 C 8844
16 C 8640-120	2 PLAYS - 50 YEN	JAPAN	9 C 8845
16 C 8640-121	4 PLAYS - 100 YEN	JAPAN	9 C 8846
16 C 8640-122	1 JUEGO - B ² 1.00	VENEZUELA	9 C 8825
16 C 8640-123	4 SPELEN - 1 GULDEN	HOLLAND	9 C 8882
16 C 8640-124	2 PLAYS - 100 YEN	JAPAN	9 C 8846
16 C 8640-125	2011 25 POUNDS 70	ISRAEL	9 C 8883
16 C 8640-126	3 PLAYS - QUARTER (no screen)	CANADA	9 C 8893
16 C 8640-127	1 SPIEL - 2 x 25 ORE	DENMARK	9 C 8809
16 C 8640-128	2 SPIEL - 1 KRONA	DENMARK	9 C 8810
16 C 8640-129	1 SPIEL - 50 PFG	GERMANY	9 C 8842
16 C 8640-130	2 SPIELS - 1 MARK	GERMANY	9 C 8843
16 C 8640-131	2 PARTIES - 1 FRANC	FRANCE	9 C 8818
16 C 8640-132	1 PLAY - 1 FICHA	BRAZIL	9 C 8845
16 C 8640-133	1 PLAY - 2 FICHAS	BRAZIL	9 C 8845
16 C 8640-134	INTRODUCERE PRO PERSON - 1 LEU	ROMANIA	9 C 8884
16 C 8640-135	1 GAME - 5 P	ENGLAND	9 C 8835
16 C 8640-136	2 GAMES - 10 P	ENGLAND	9 C 8836
16 C 8640-137	ONE GAME 2 x 6d	ENGLAND	9 C 8811
16 C 8640-138	1 PARTIDA - 1 DURC	SPAIN	9 C 8814
16 C 8640-139	5 SPELEN - 1 GULDEN	NETHERLANDS, Antilles	9 C 8887
16 C 8640-140	3 SPIELS - 1 MARK	GERMANY	9 C 8843
16C 8640-141	1 NICKEL - 1 DIME	USA	9C 8801
16C 8640-142	(DIAMOND)	USA	9C 8802
16 C 8640-143	1 PLAY - QUARTER	USA	9 C 8803
16 C 8640-144	2 PLAYS - 5 P OR 1 SH.	ENGLAND	9 C 8835
16 C 8640-145	4 PLAYS - 10 P OR 2 SH.	ENGLAND	9 C 8836
16 C 8640-146	1 PLAY - 5 P OR 1 SH	ENGLAND	9 C 8835
16 C 8640-147	3 PLAYS - 10 P OR 2 SH.	ENGLAND	9C 8836
16 C 8640-148	5 PLAYS - 10 P OR 2 SH.	ENGLAND	9C 8836
16 C 8640-149	2 SPIELS - 50 PFG	GERMANY	9 C 8842
16 C 8640-150	4 SPIELS - 1 MARK	GERMANY	9 C 8843
16 C 8640-151	5 SPIELS - 1 MARK	GERMANY	9 C 8843
16 C 8640-152	10 SPIELS - 2 MARK	GERMANY	9 C 8888
16 C 8640-153	11 SPIELS - 2 MARK	GERMANY	9 C 8888
16 C 8640-154	12 SPIELS - 2 MARK	GERMANY	9 C 8888
16 C 8640-155	1 PARTIDA - 1 FICHA	BRAZIL	9 C 8845
16 C 8640-156	1 PARTIDA - 2 FICHAS	BRAZIL	9 C 8845
16C 8640-157	1 SPIEL - 1 MARK	GERMANY	9C-8843
16C-8640-158	1 PLAY 2 x 2 P	ENGLAND	

FRONT MOULDING & FRONT DOOR LOCKING PARTS


NEW TYPE LOCKING PARTS USED ON "ALPINE CLUB" & ALL FOLLOWING PIN GAMES

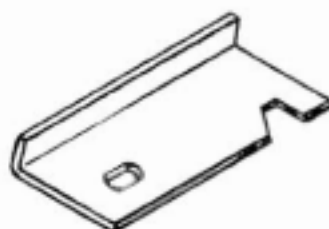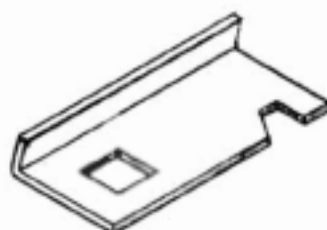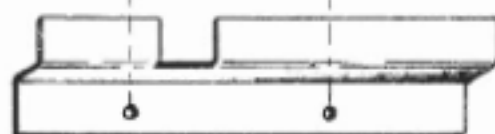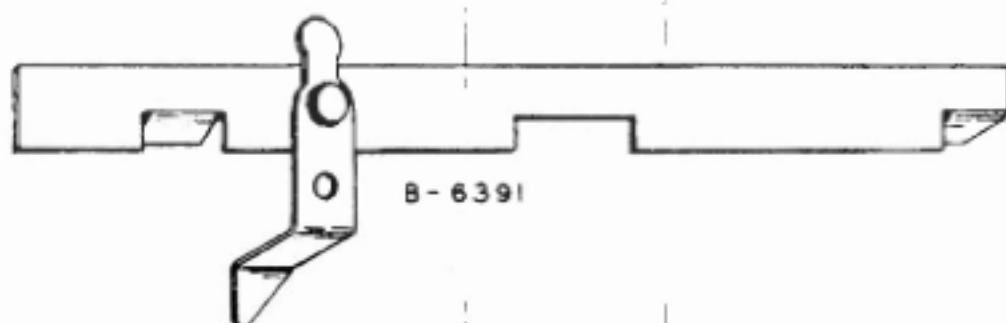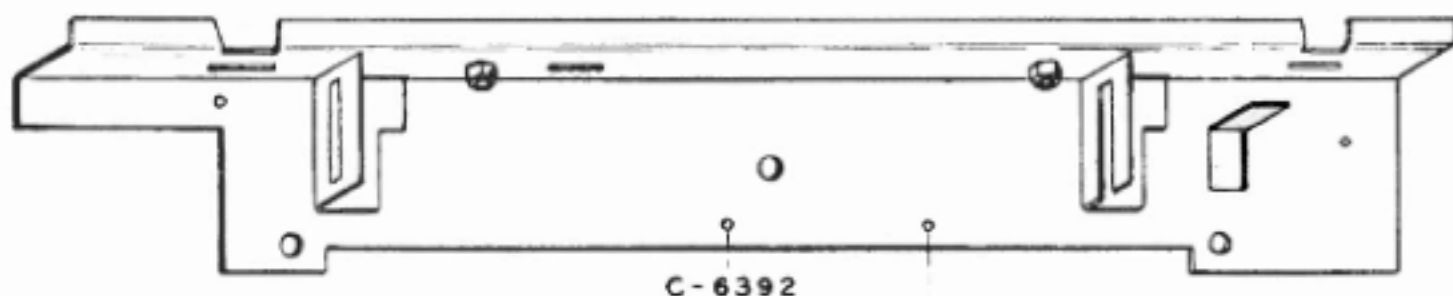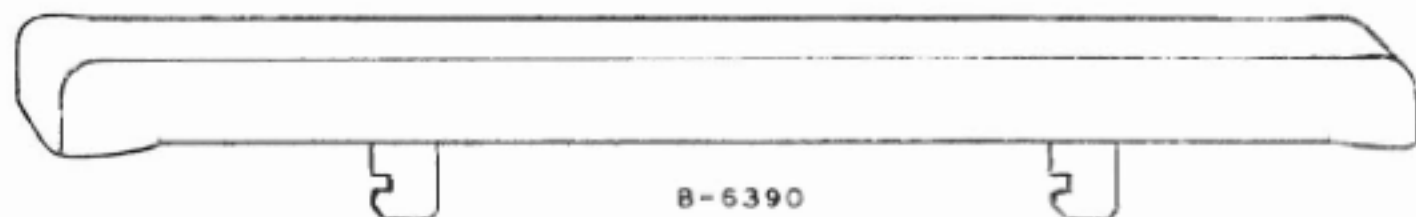



FOR USE WITH "ACE" LOCKS

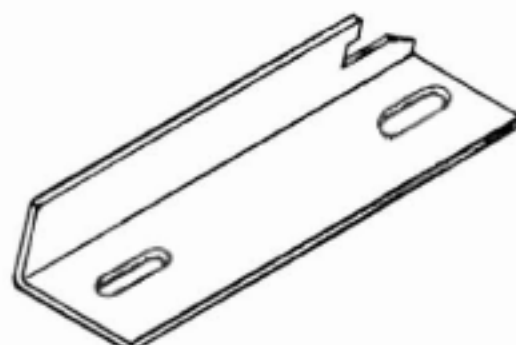

DISAPPEARING POST UNIT B-7089

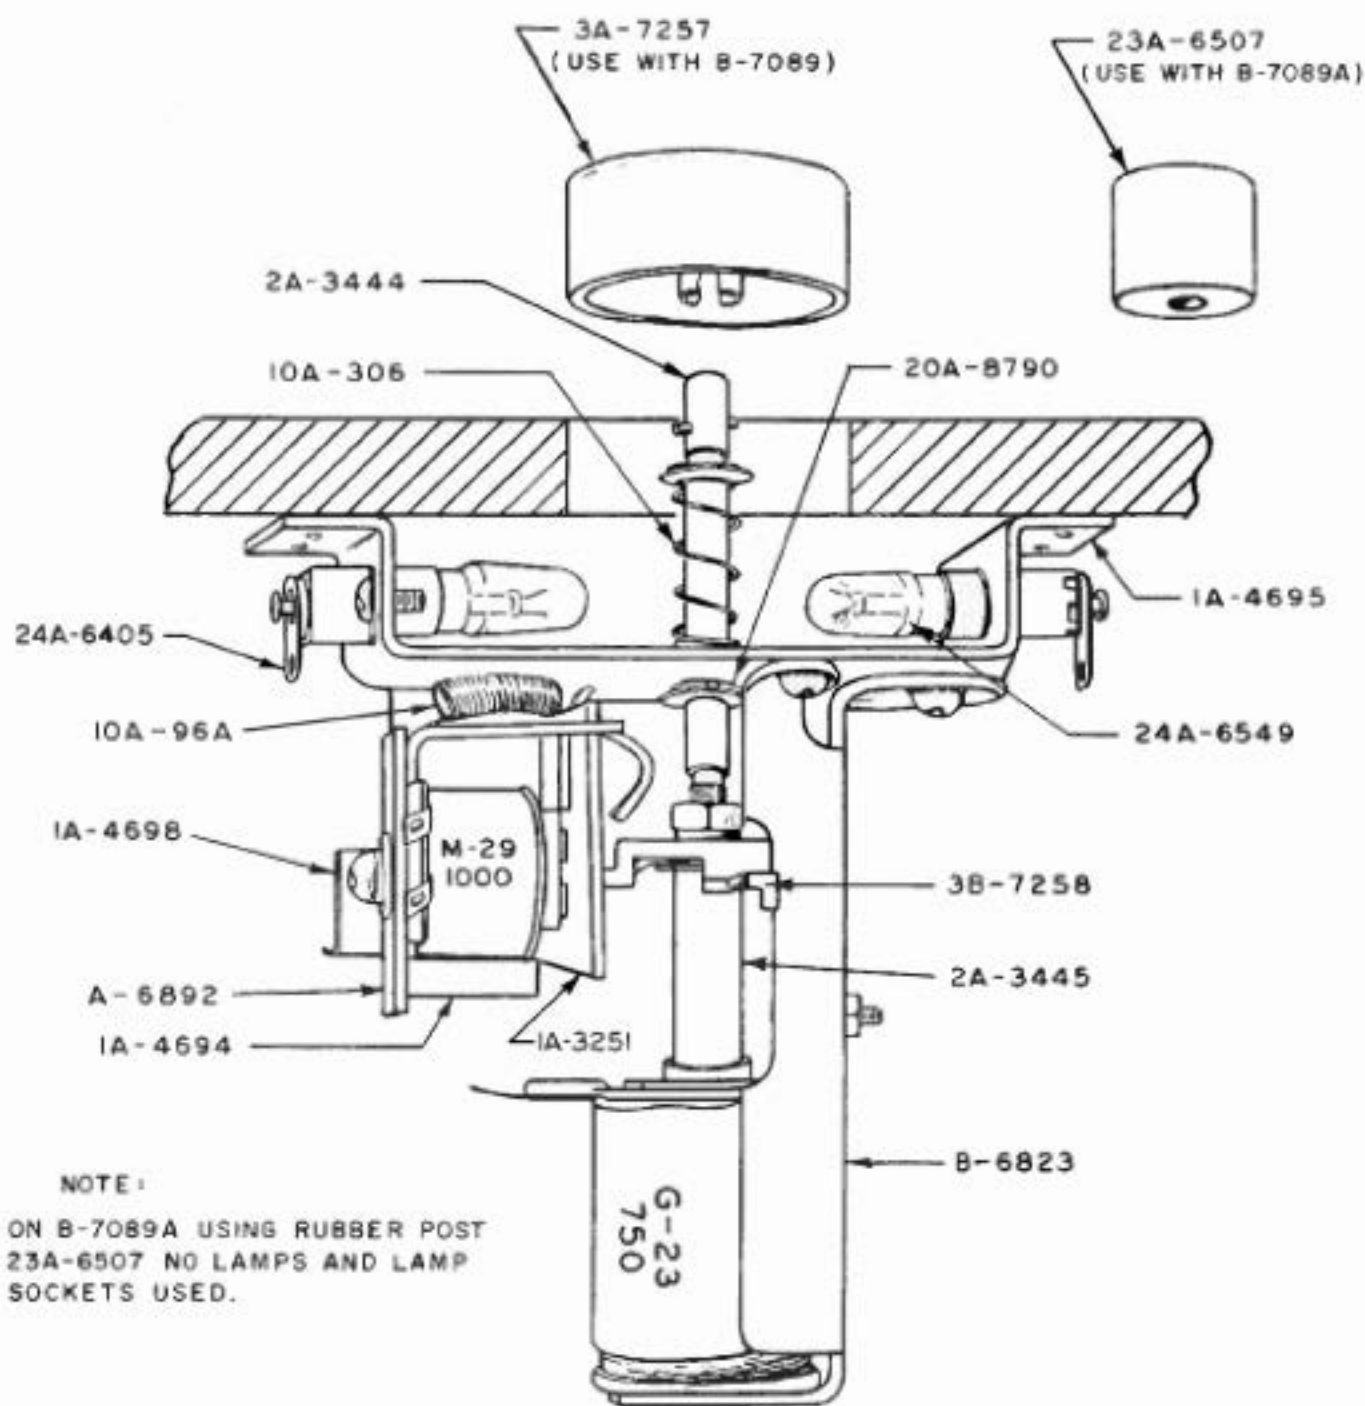


ROTATING BUMPER UNIT ASS'Y. A-7248

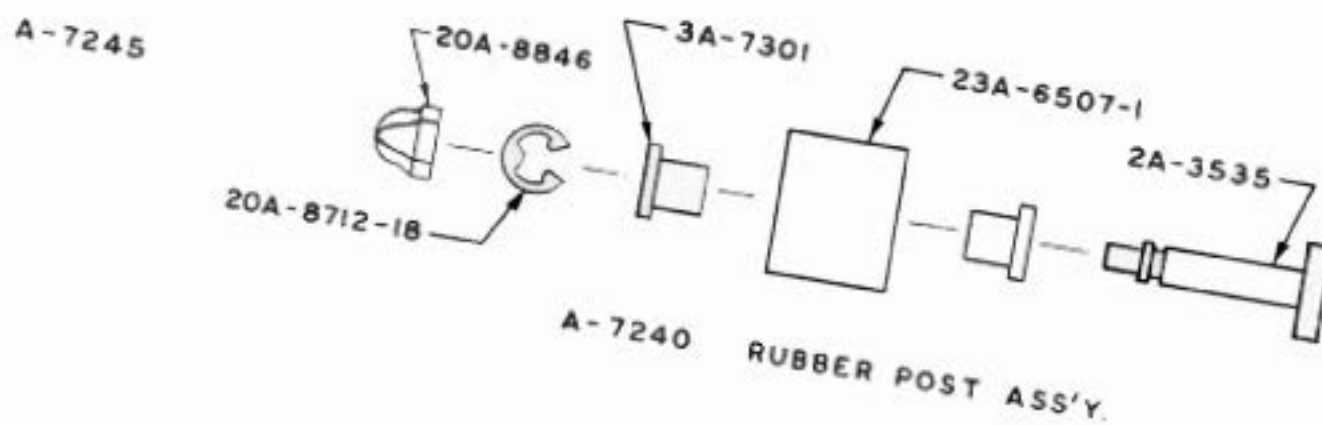
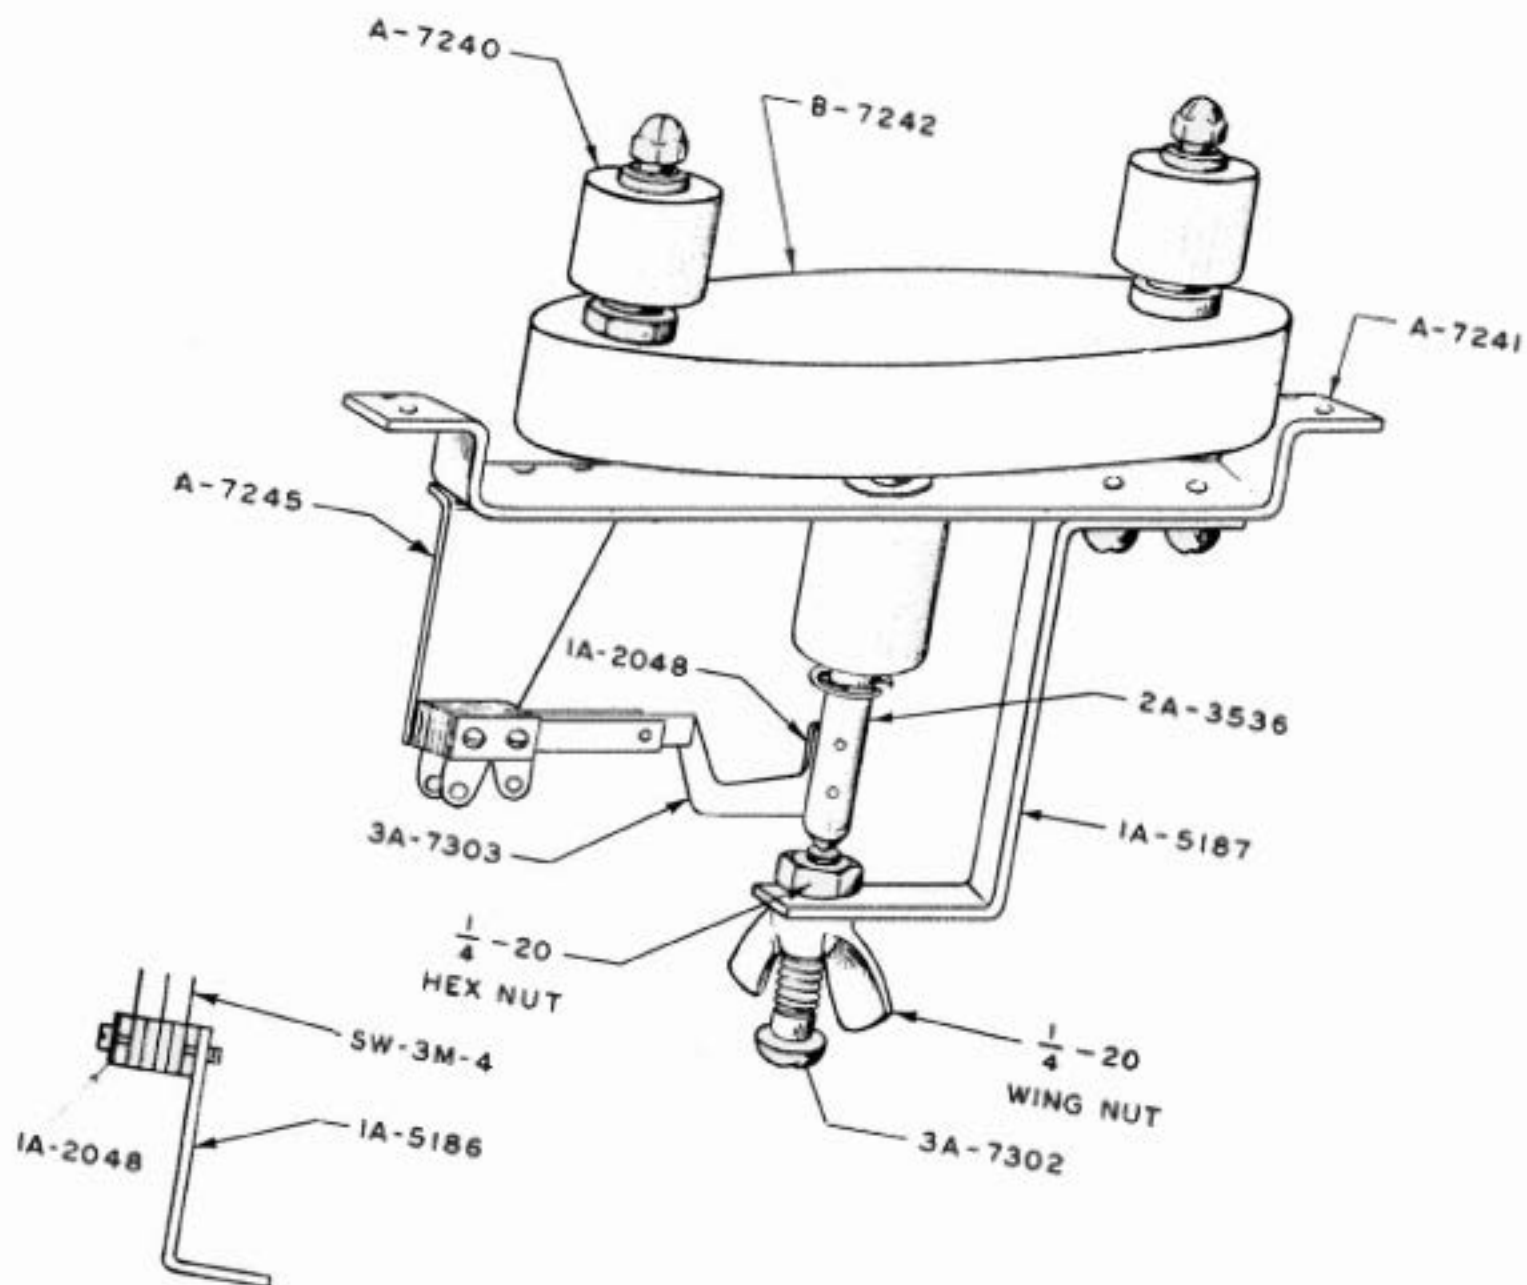


C-7284 "DOODLE BUG" ASSEMBLY

USED ON "DIPSY DOODLE" AND "DOODLE BUG".

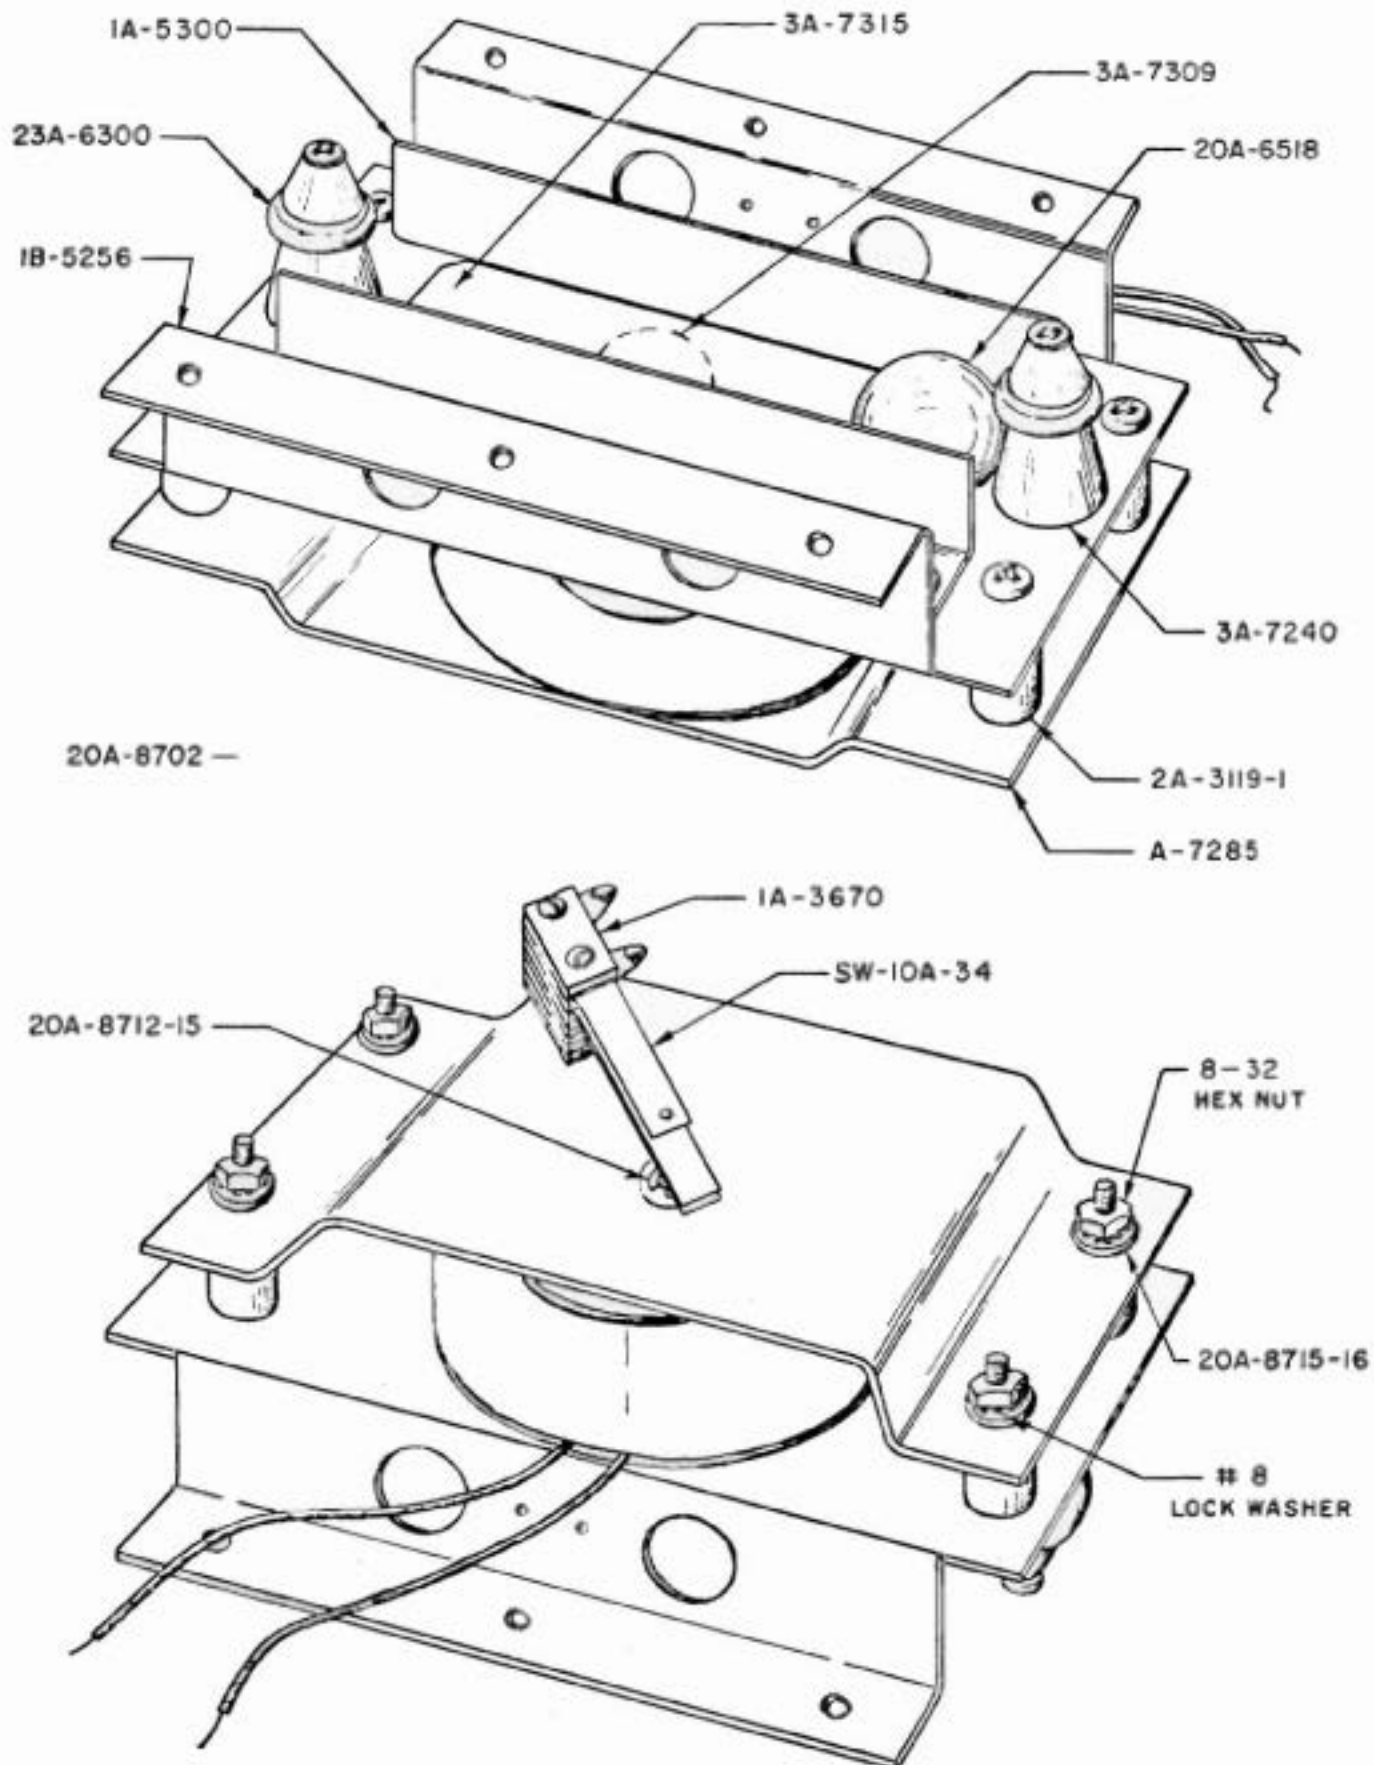


D-7179 RANDOM SPINNER UNIT

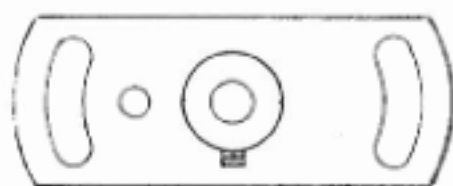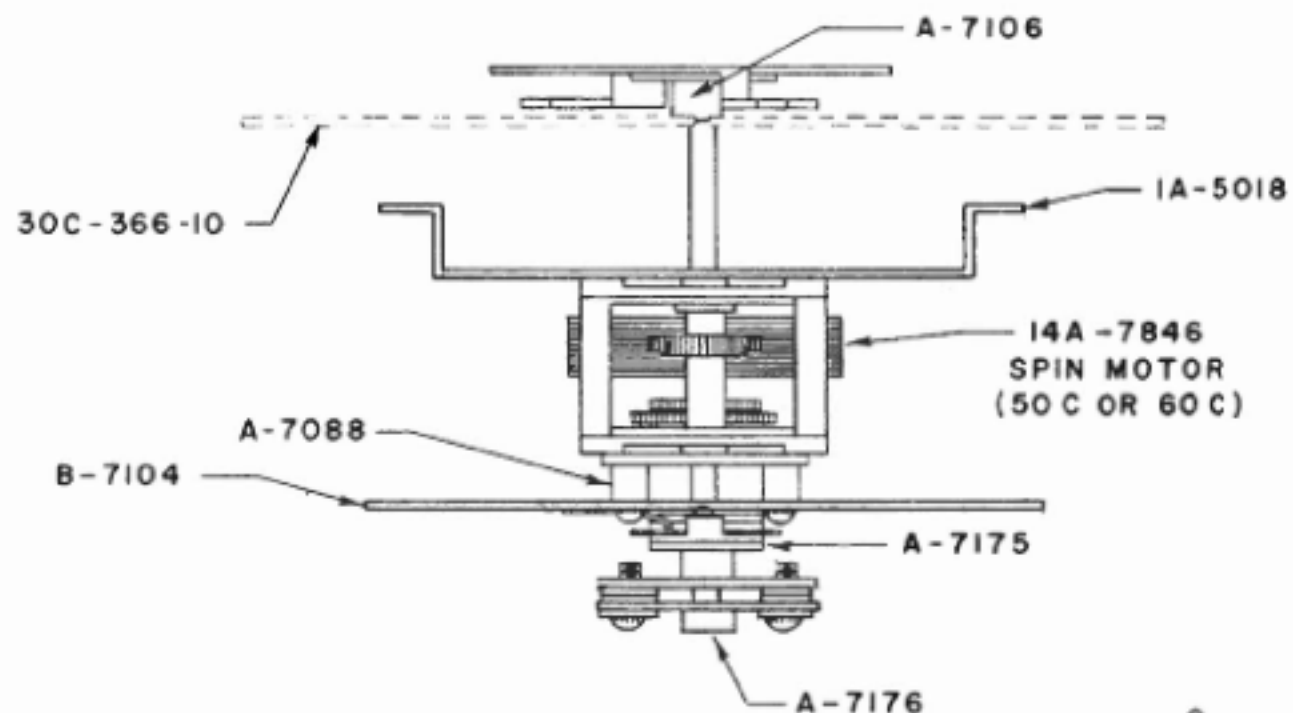


A-7176


12B-6427
RETAINER WIRE

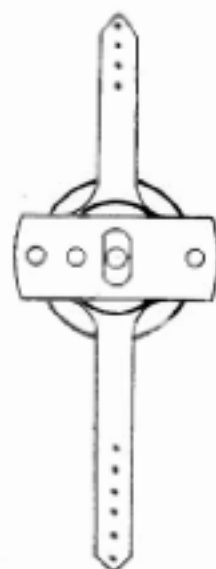

A-7175

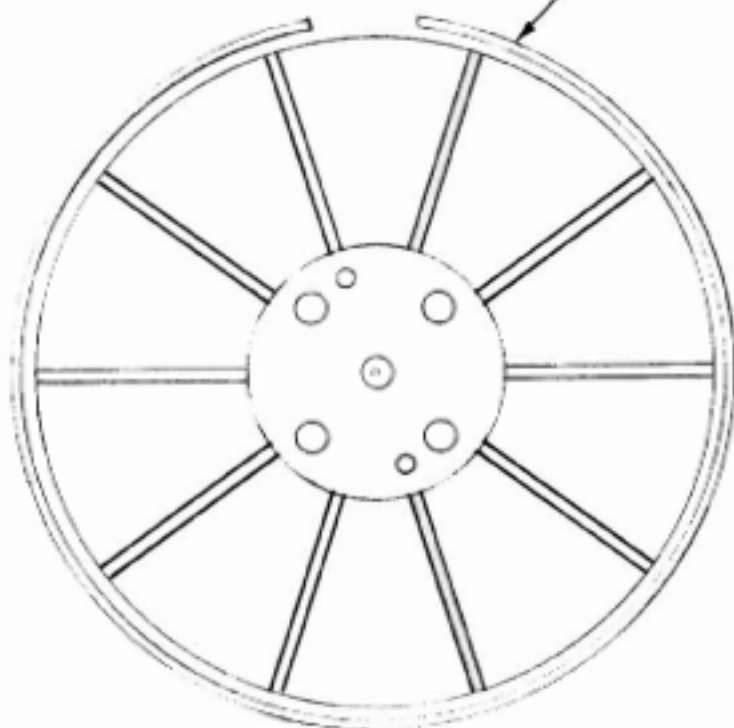


30C-366-10

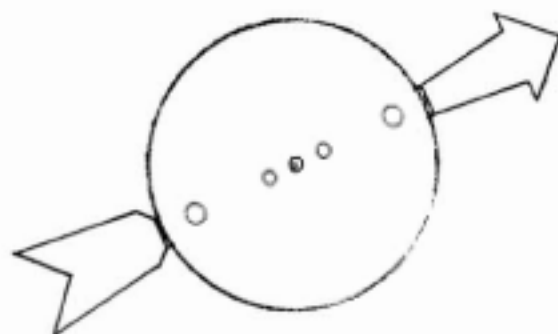


1B-5135


TARGET PANEL ASSEMBLY - "4 ACES" D-6973-2

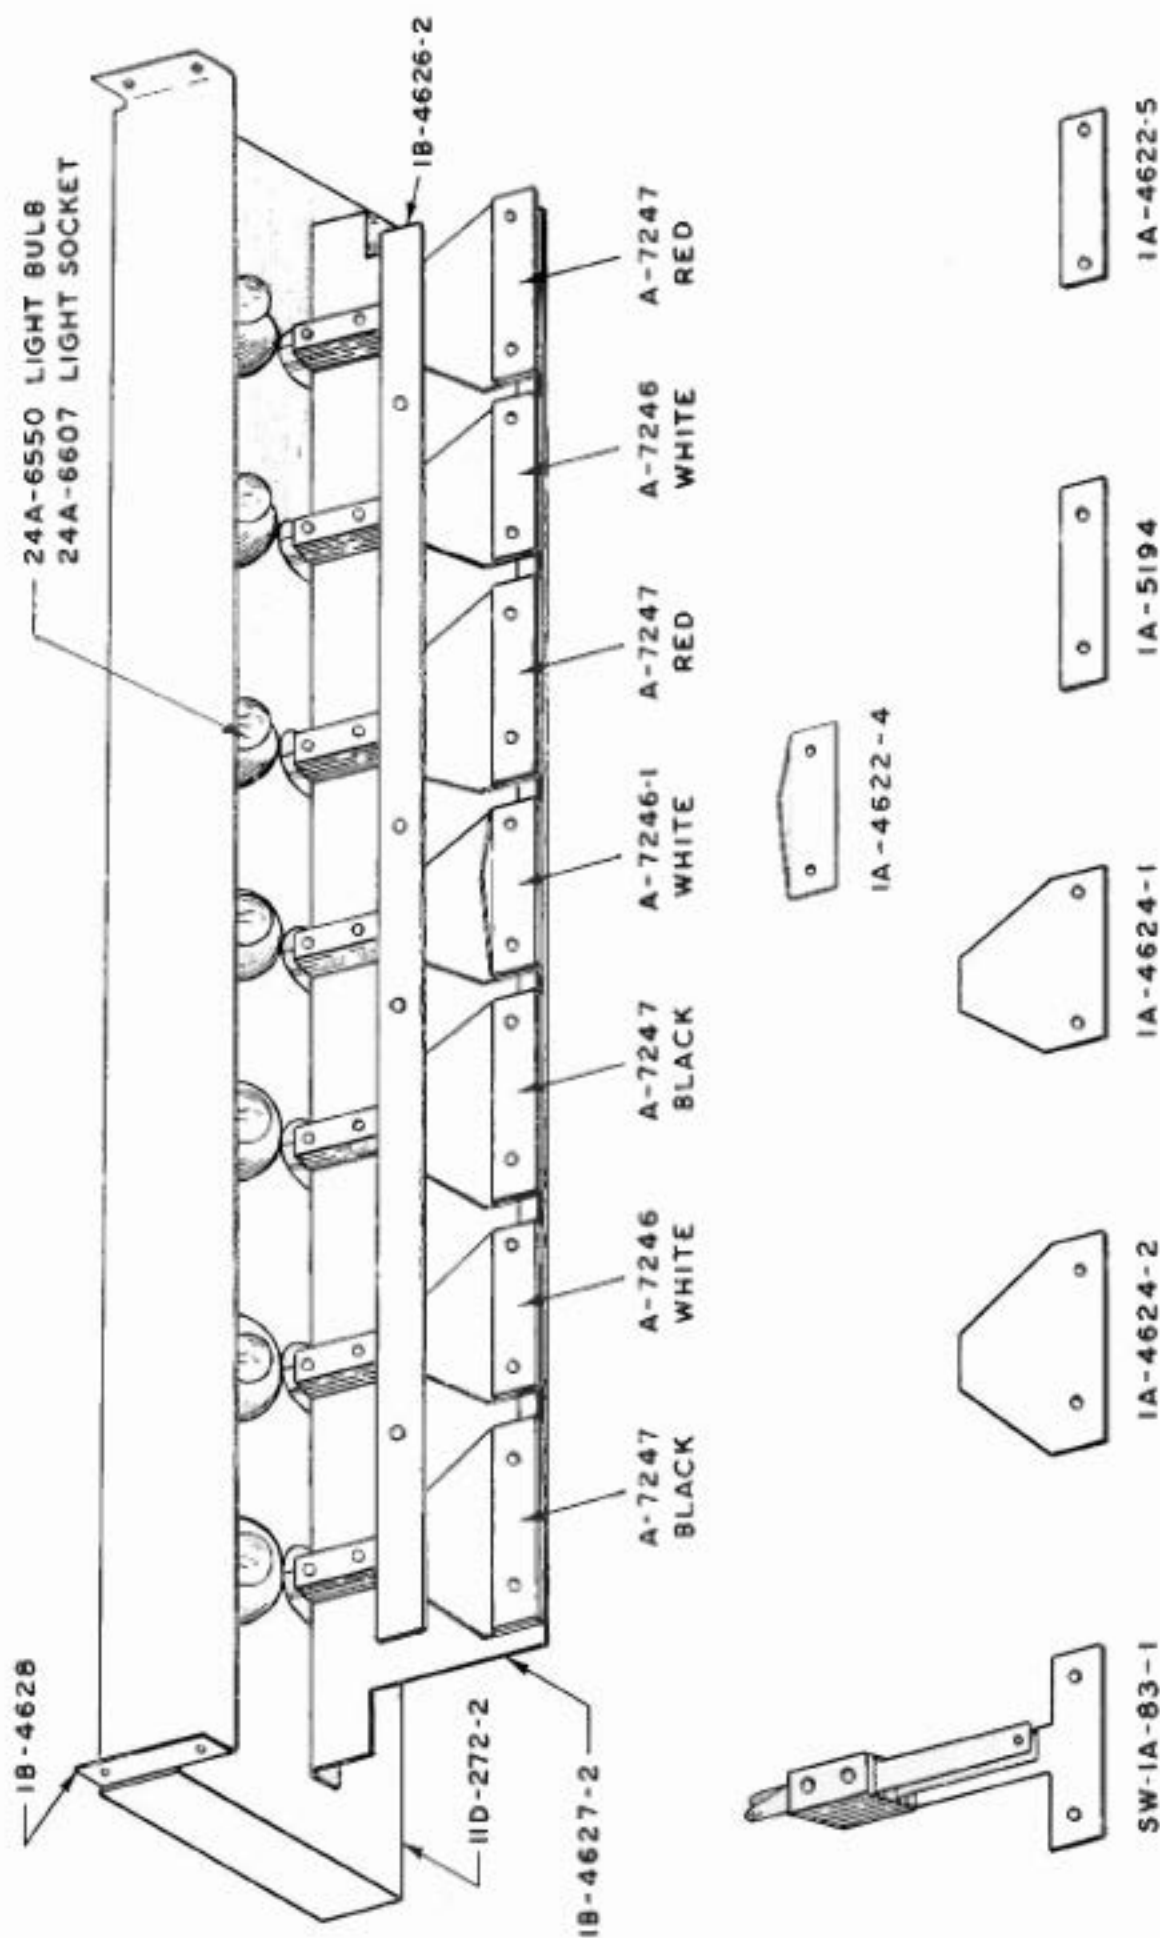


FRONT MOULDING - "FAST BALL"

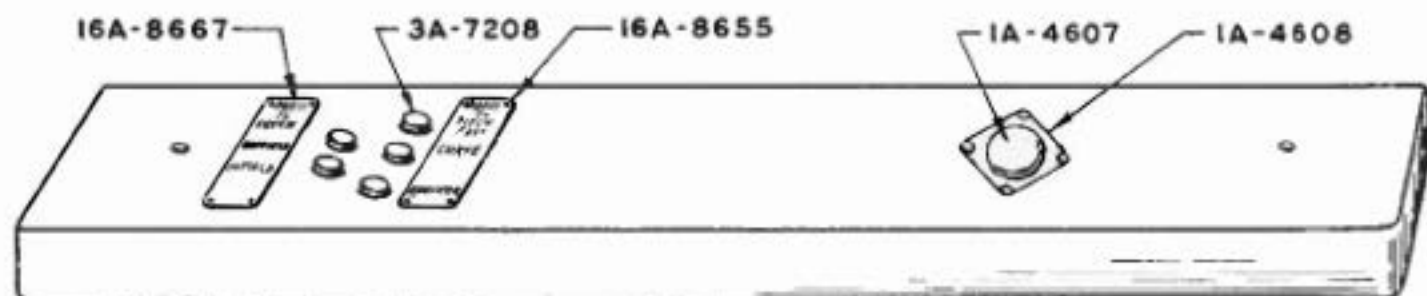


C-7167 - COMPLETE WITH ALL HARDWARE
11R-360 MOULDING (WOOD ONLY)

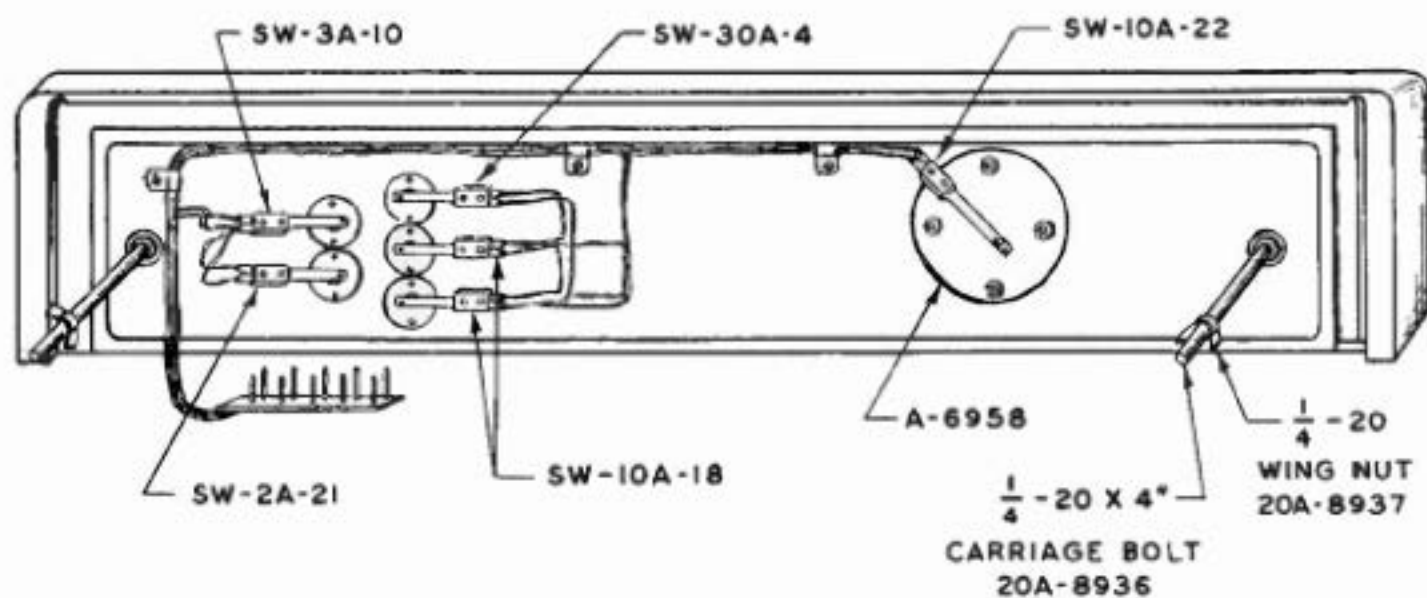


BAT PUSH BUTTON ASS'Y. B-7174

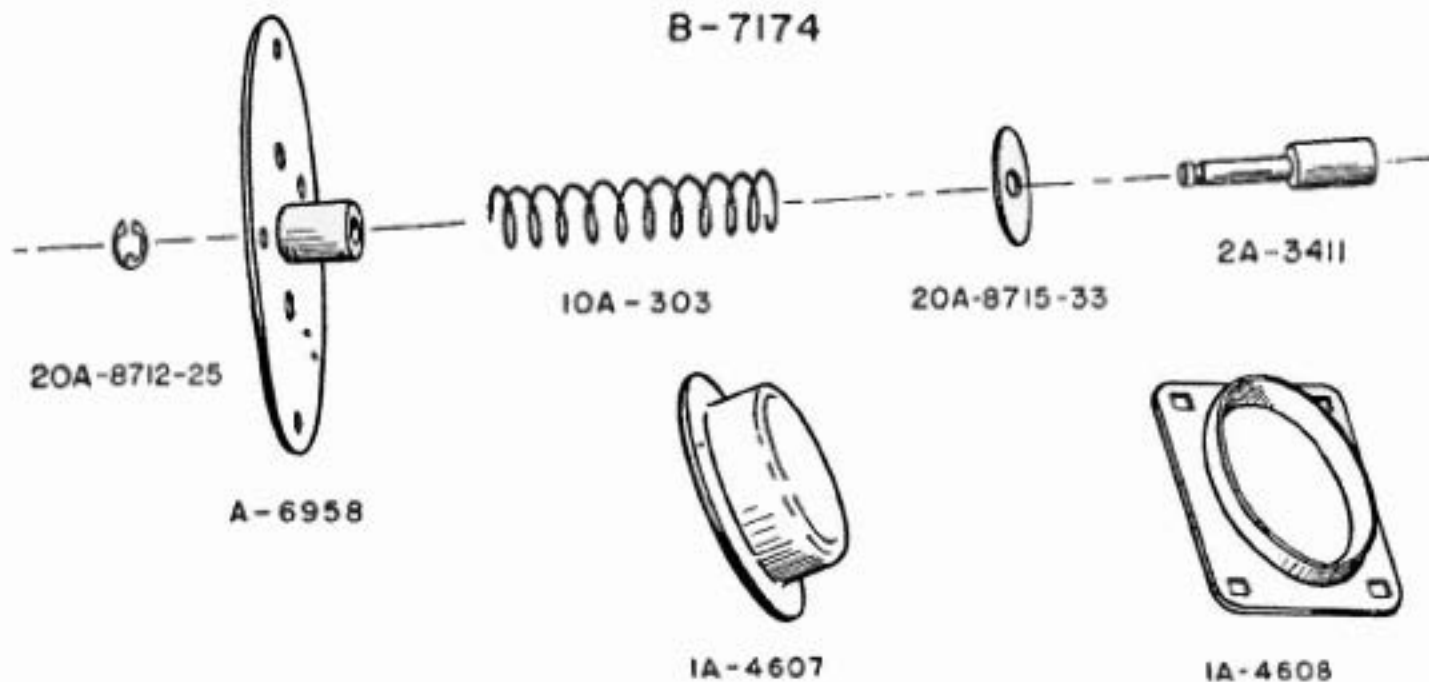


FRONT MOULDING - GRIDIRON

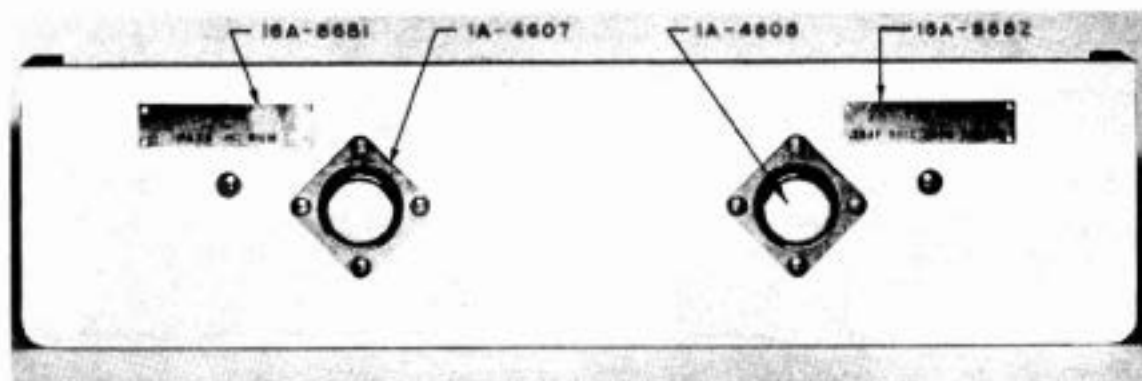


C-7244 - COMPLETE WITH ALL HARDWARE
 11R-378 - MOULDING (WOOD ONLY)

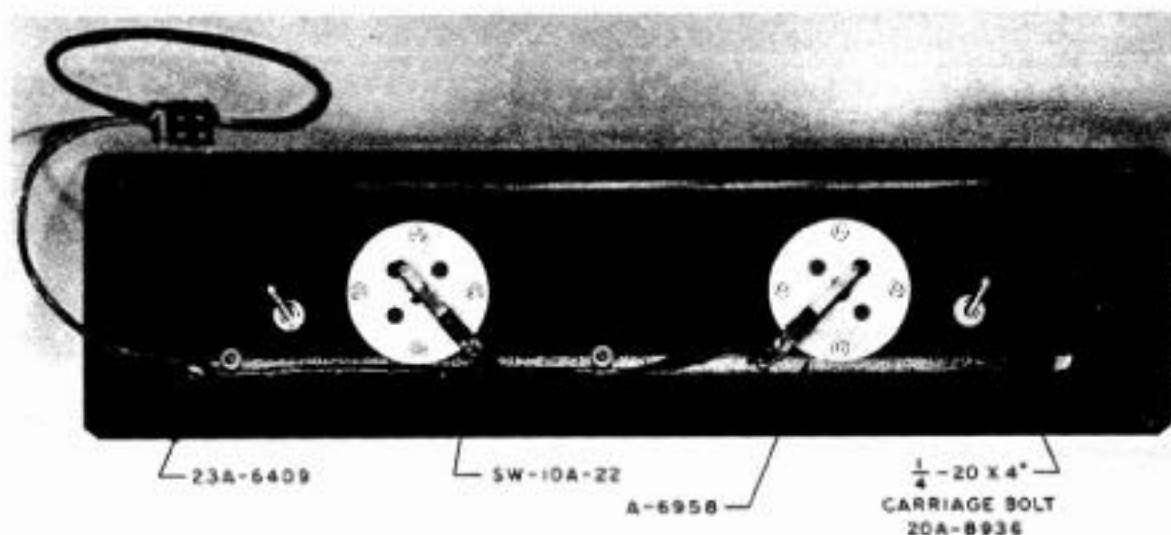


FRONT MOULDING - "HIT & RUN"

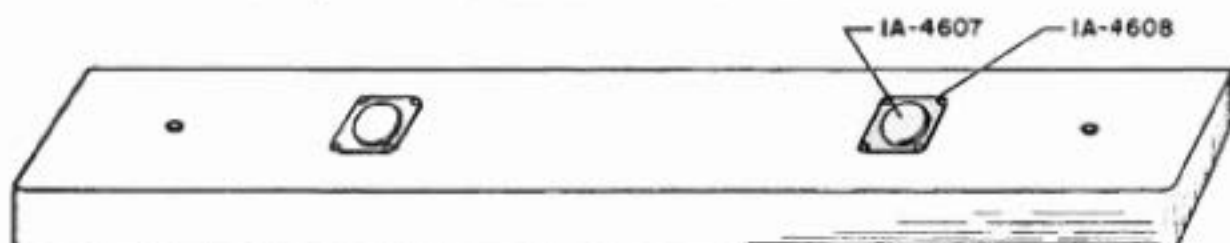


C-7278 - COMPLETE WITH ALL HARDWARE
 11R-396 MOULDING (WOOD ONLY)

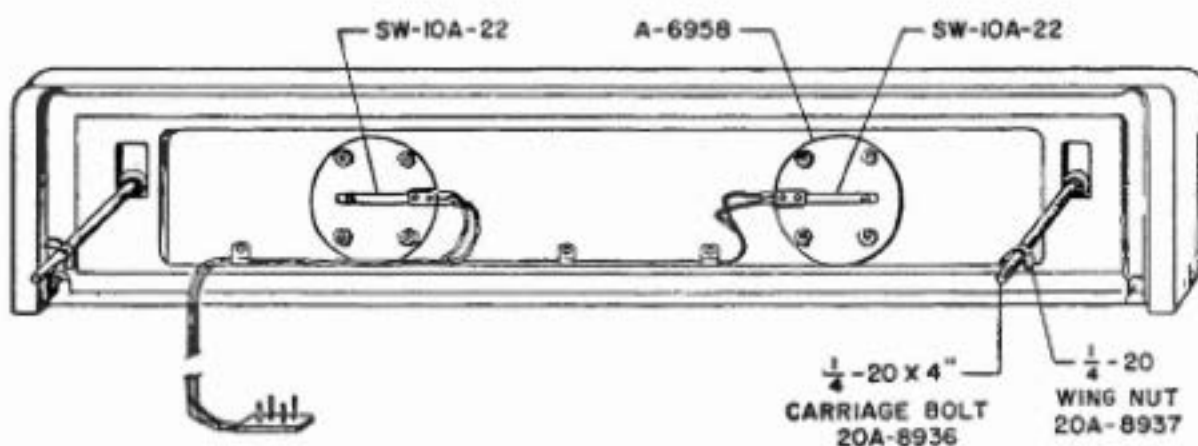

FRONT MOULDING LOCKING PARTS (ON CABINET)

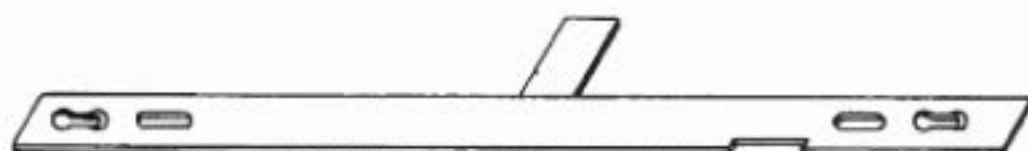

B-6271

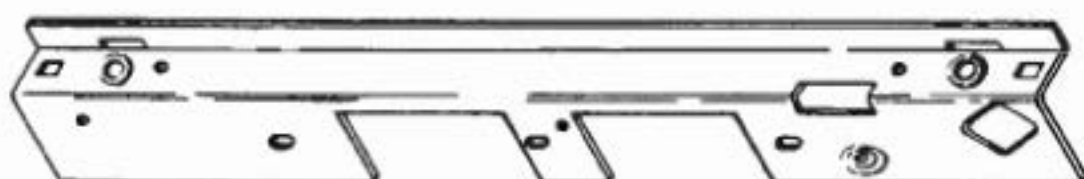


B-6059




A-6058

FRONT MOULDING LOCKING PARTS

DOUBLE PLAY, PITCH & BAT, BIG LEAGUE, BASE HIT & SCOREBOARD

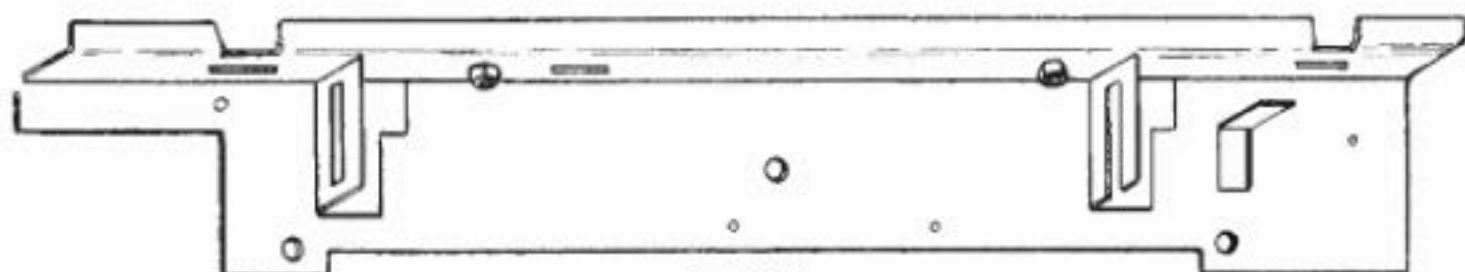

C-6392

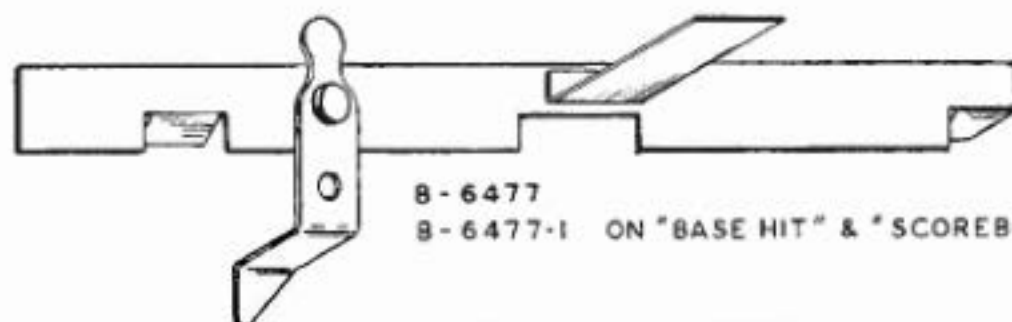


B-6477

B-6477-1 ON "BASE HIT" & "SCOREBOARD"




1A-3630

C-5161-70 COMPLETE BATTER UNIT FOR "HIT & RUN"


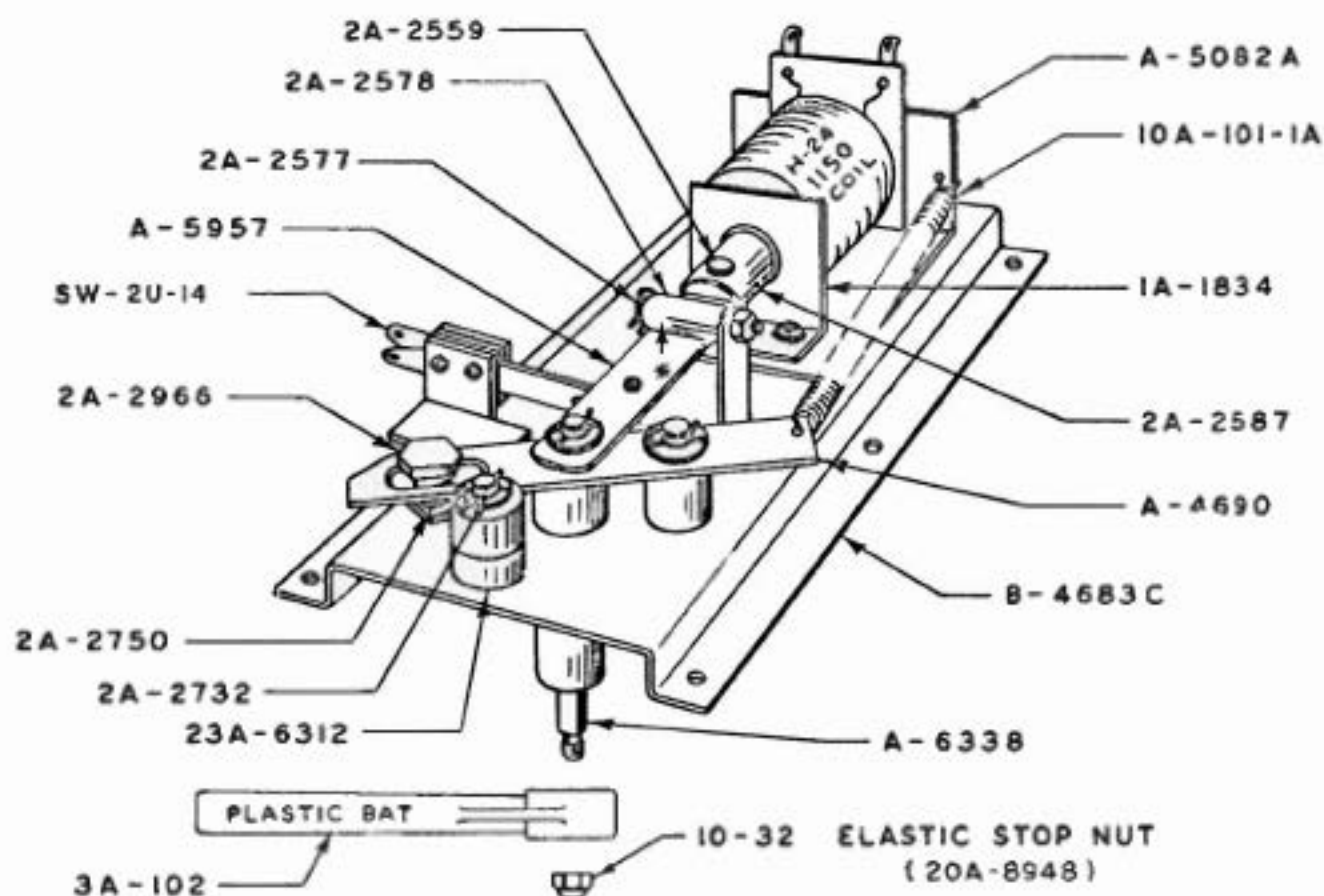


BATTER UNIT PARTS





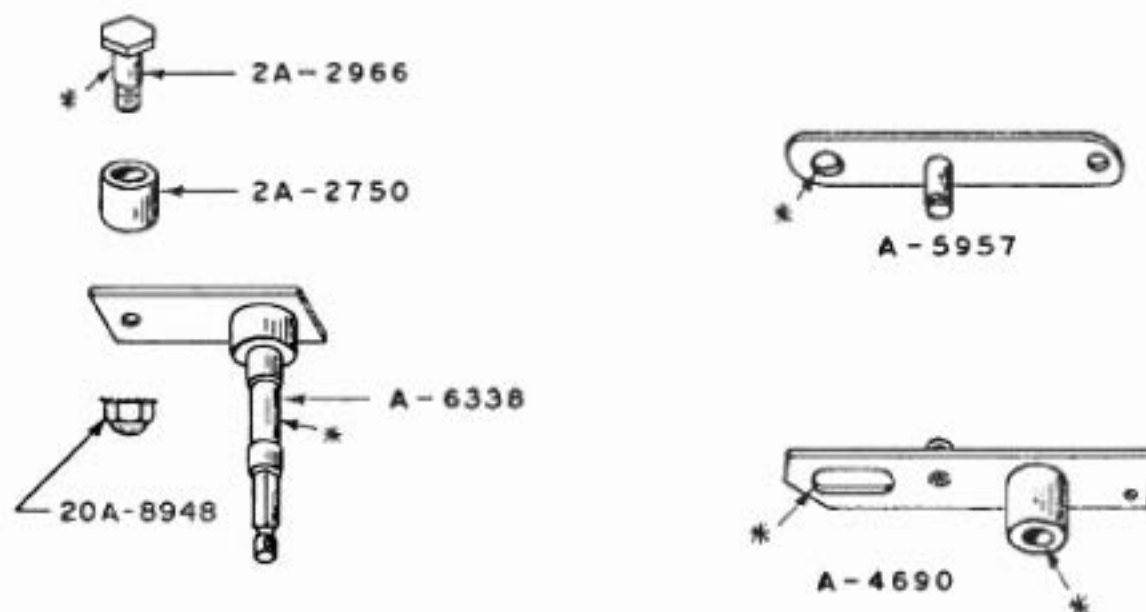


* LUBRICATE AT POINTS INDICATED

C-5161-376 COMPLETE BATTER UNIT FOR "GRIDIRON"

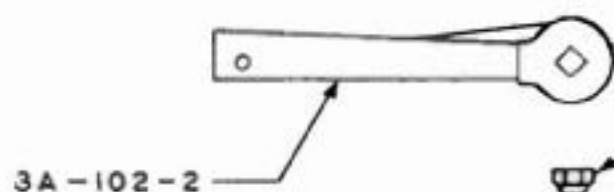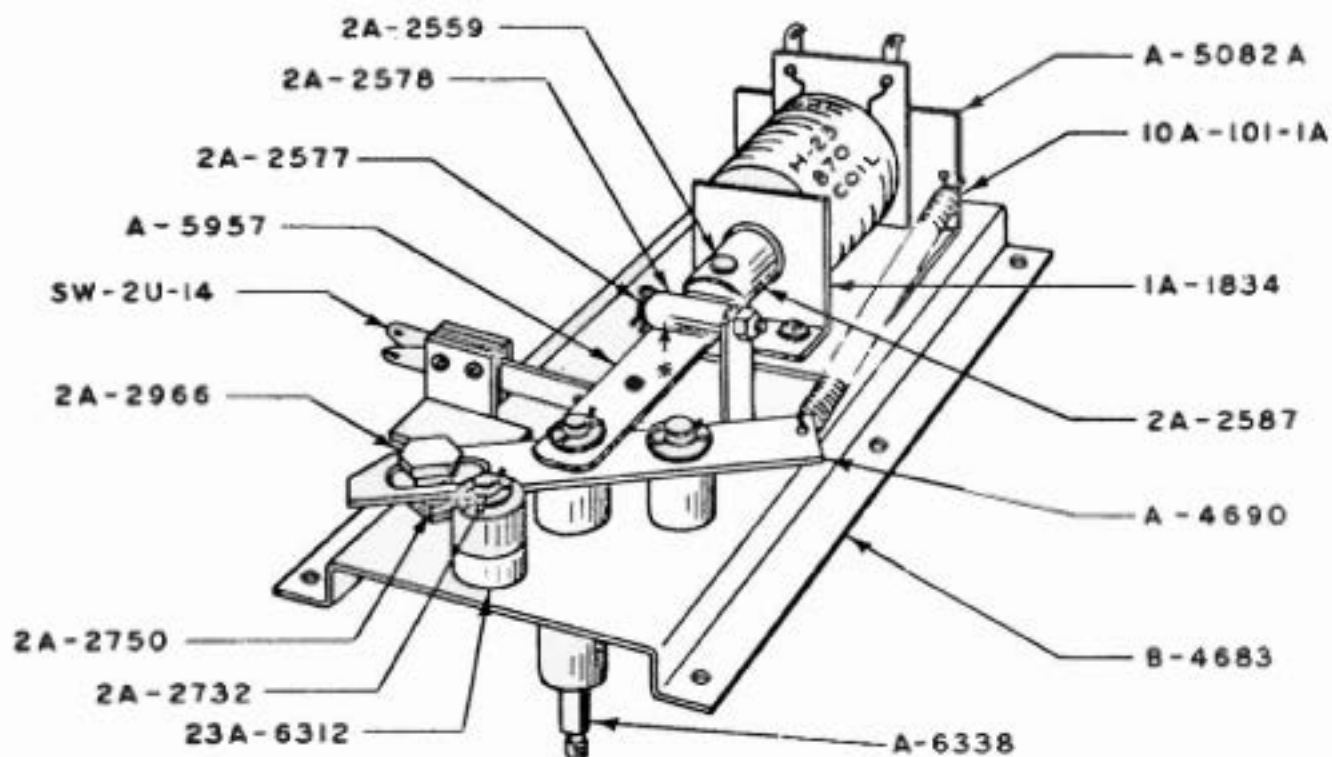


BATTER UNIT PARTS

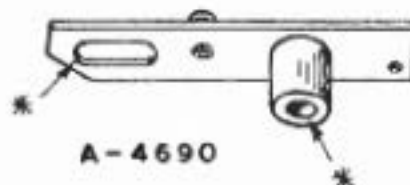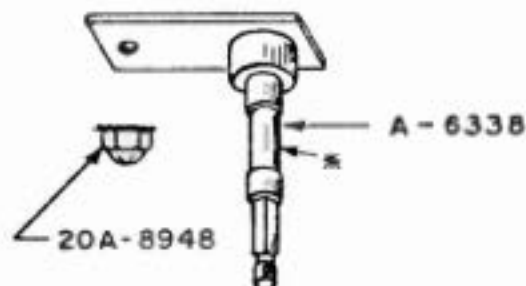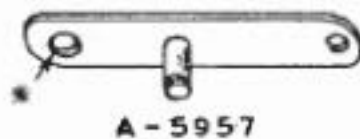


* LUBRICATE AT POINTS INDICATED

COMPLETE PITCHER UNIT D- 6322-69

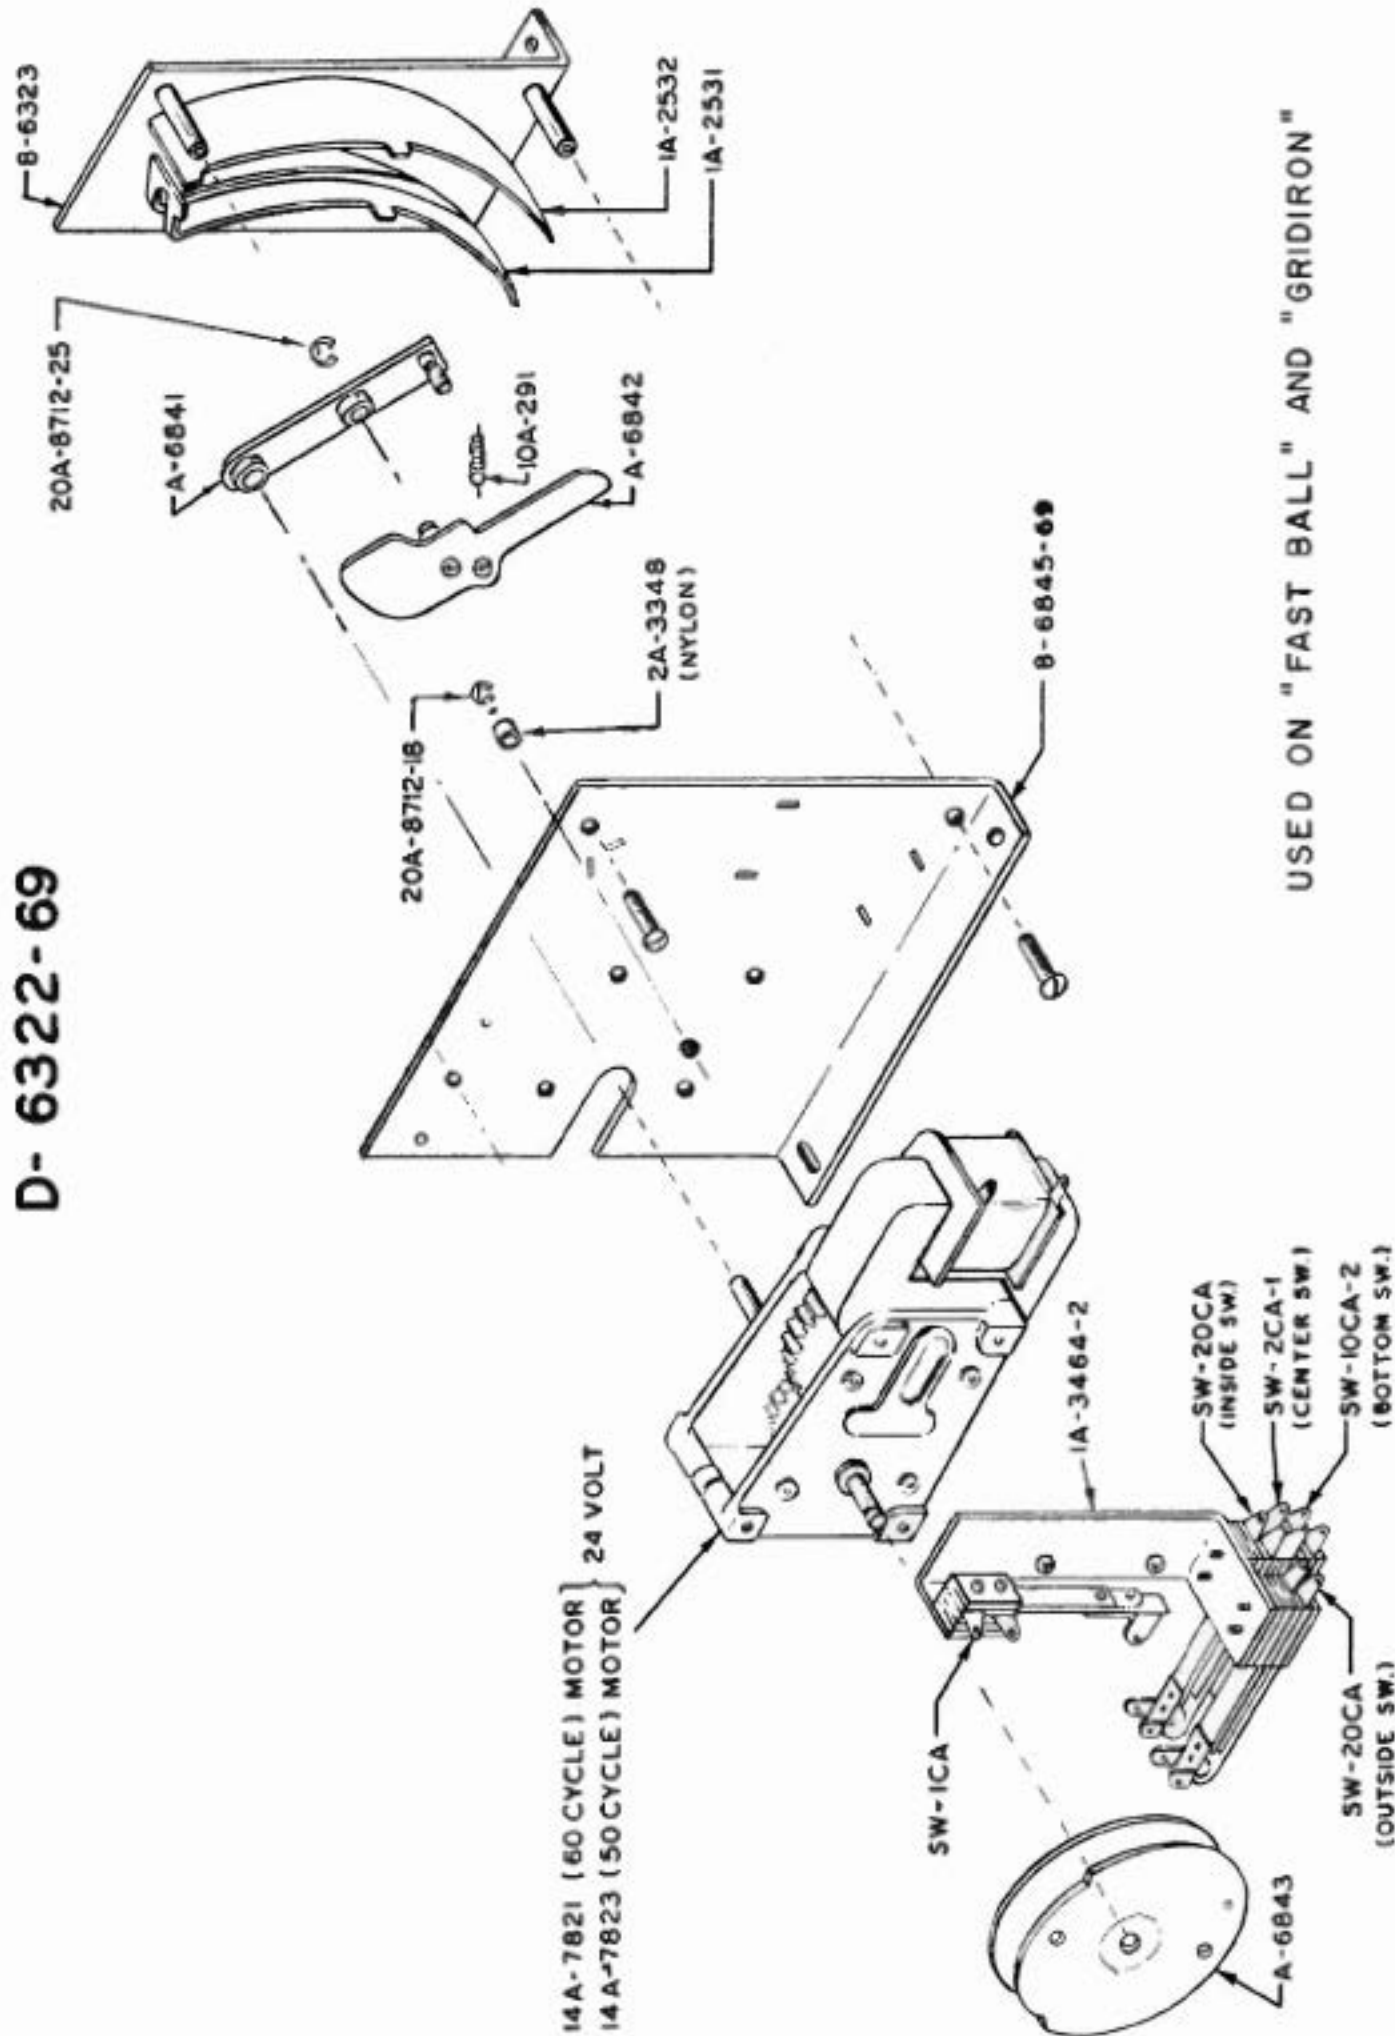



USED ON "FAST BALL" AND "GRIDIRON"

COMPLETE PITCHER UNIT D-6322-70

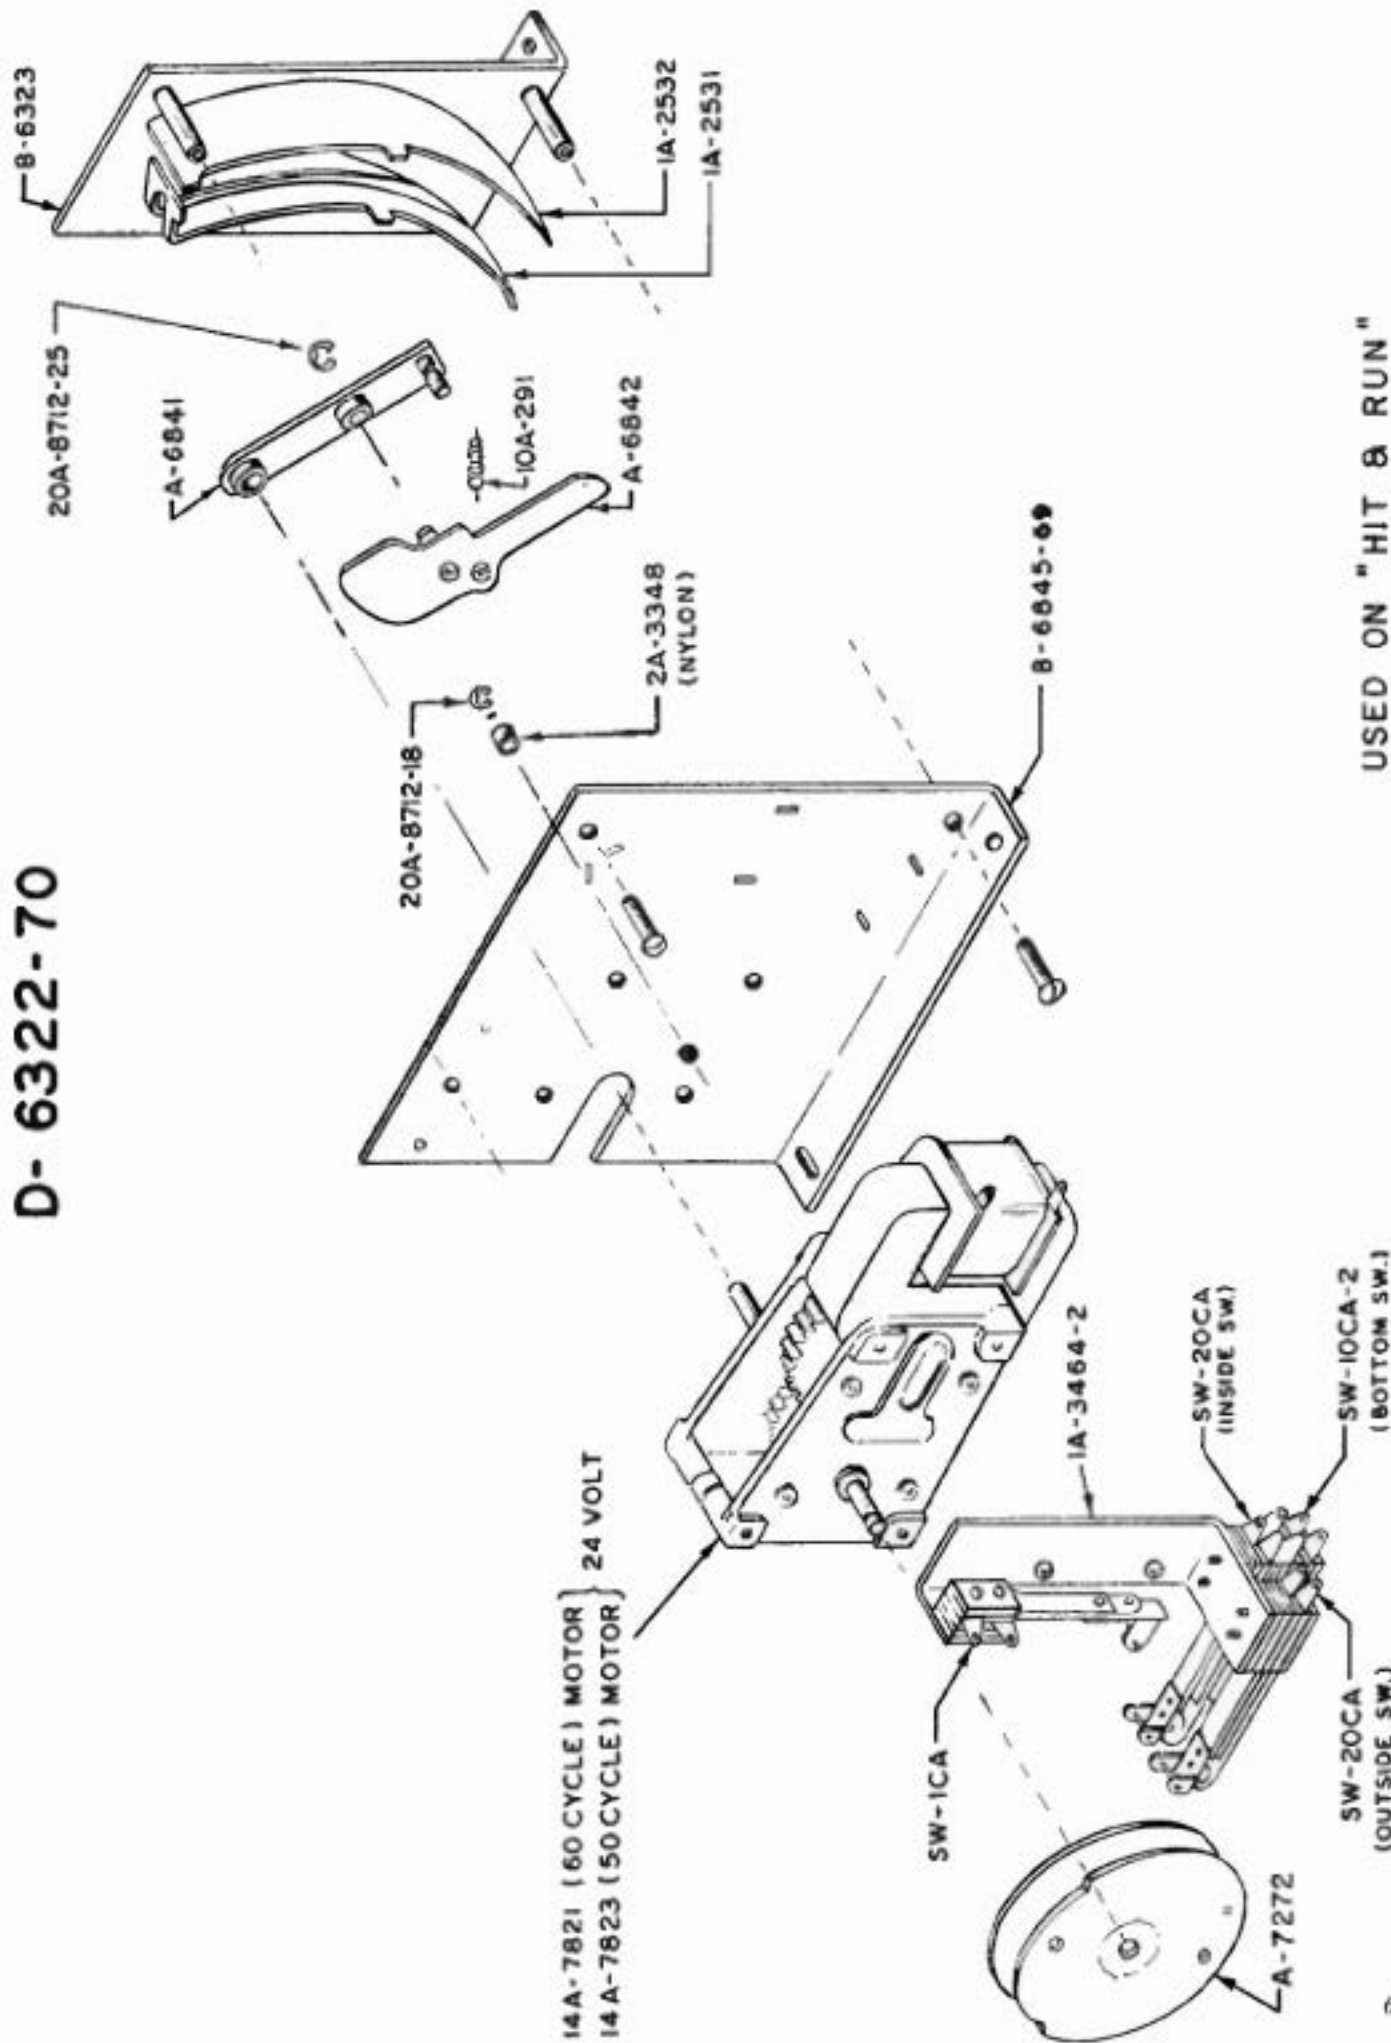


USED ON "HIT & RUN"

E-5420-69
COMPLETE MAN RUNNING UNIT
FOR "FAST BALL"

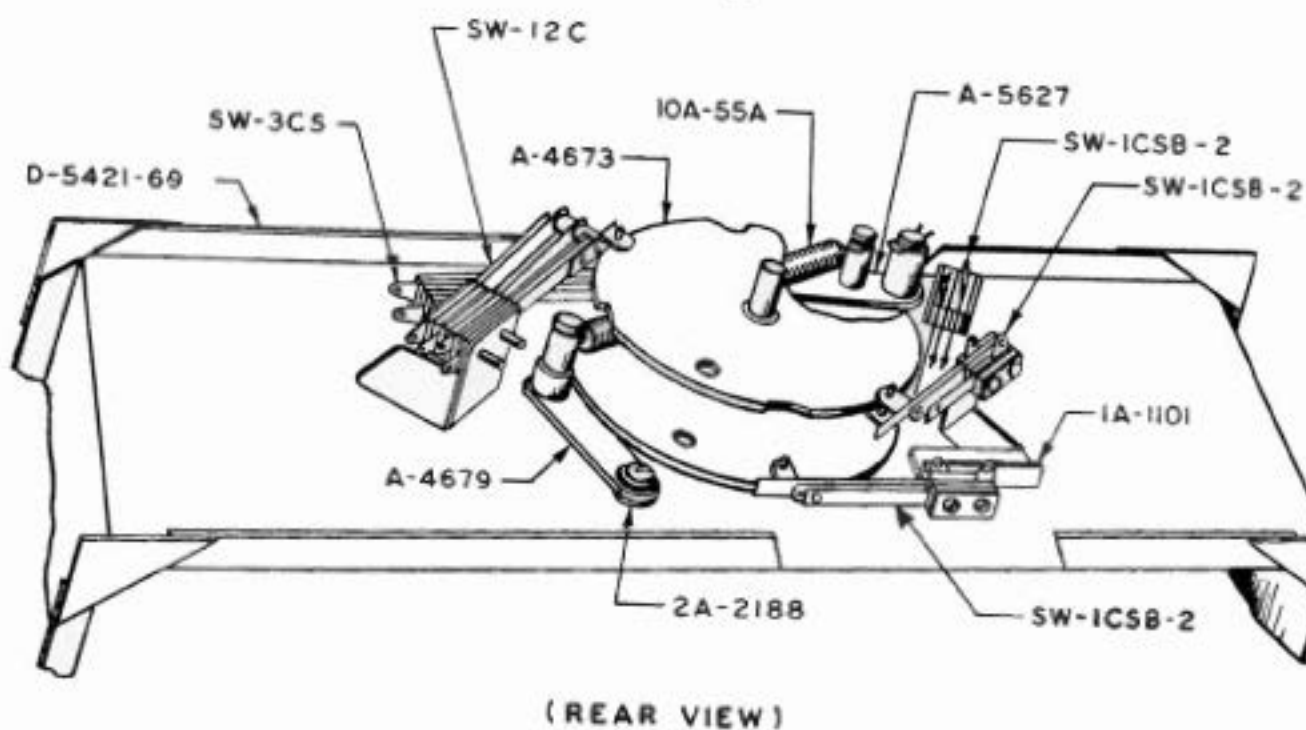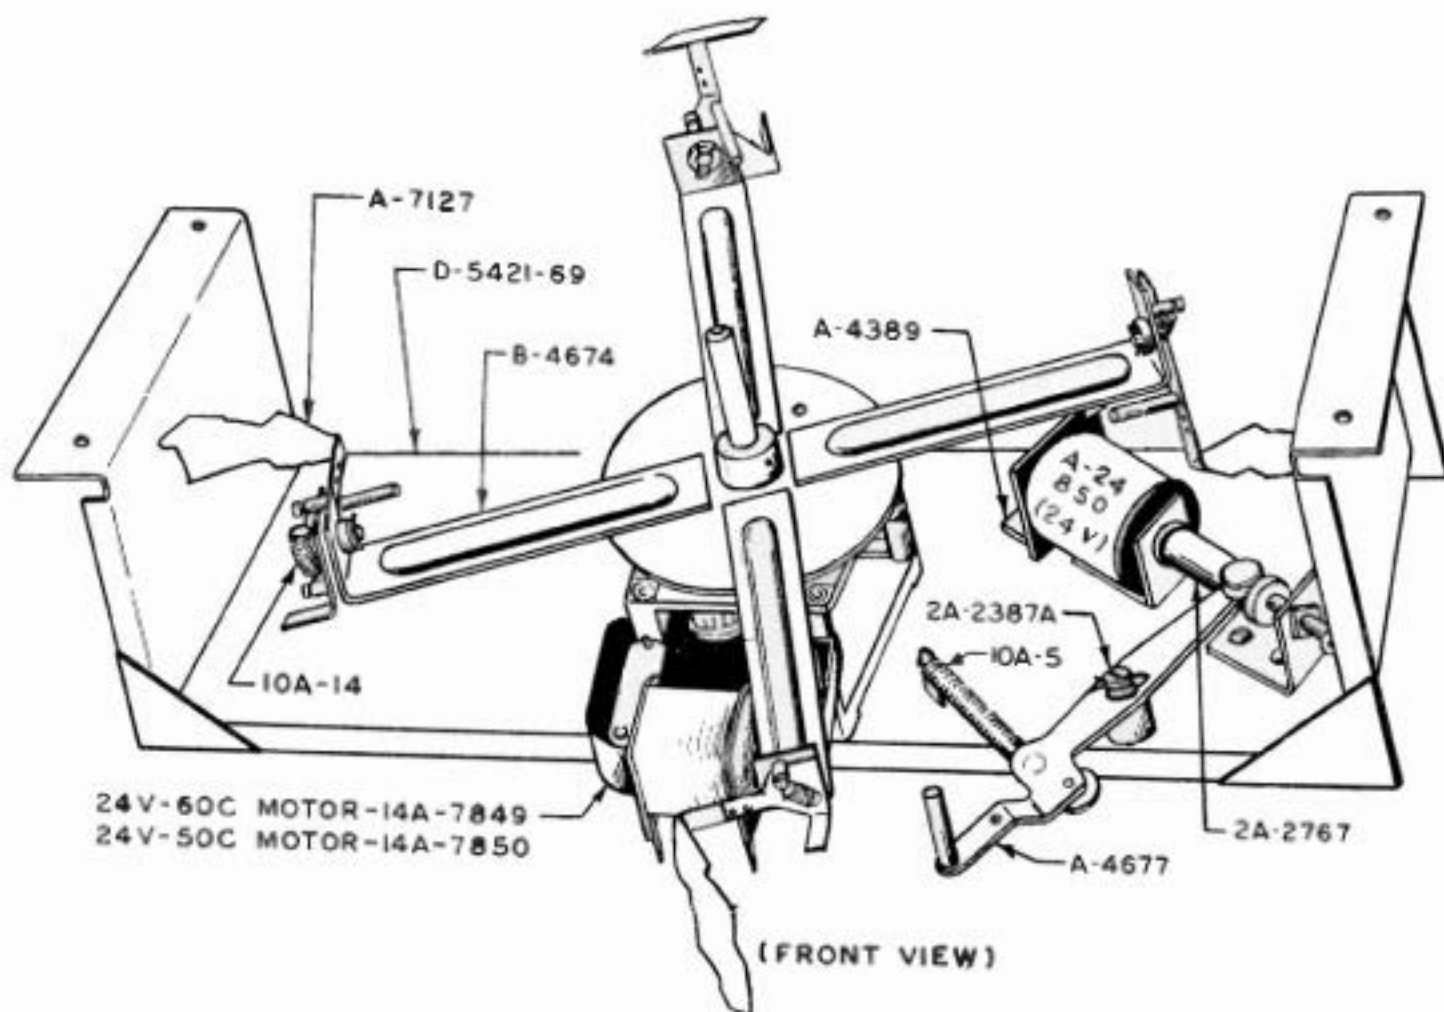

MISCELLANEOUS PARTS FOR BASEBALL

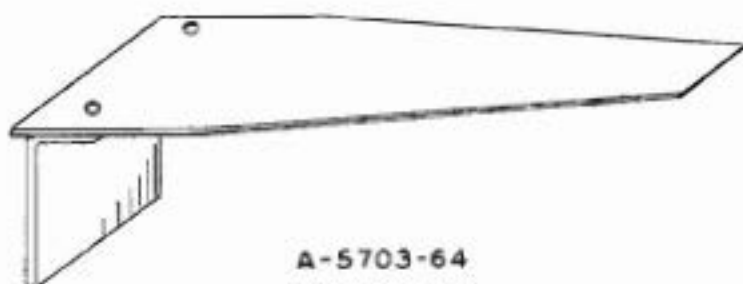


A-5703-64
BALL FLAP



10A-63
BALL GUIDE SPRING




10A-63A
BALL GUIDE SPRING

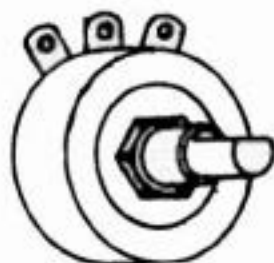


5A-6202
RHEOSTAT



20A-8702
MAGNET COIL

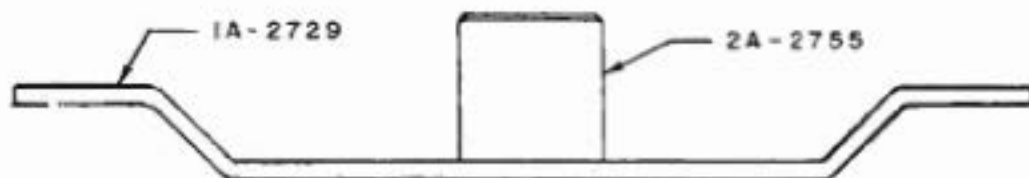

A-5718
MAGNET COIL BRACKET






(STAINLESS STEEL - SIDE ARMOR)



FAST BALL, HIT & RUN AND ---- ID-2887-370 (R) ID-2888-370 (L)

BALL CATCHER PARTS

(ON PLAYFIELD)
FOR "FAST BALL"

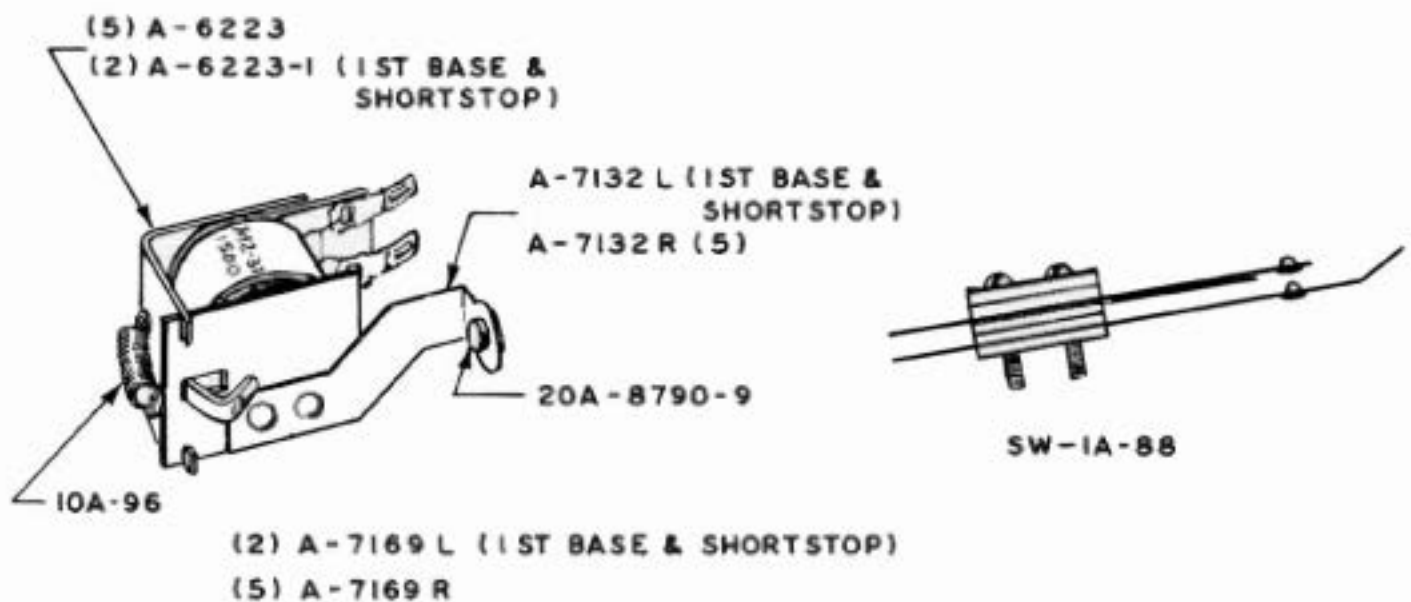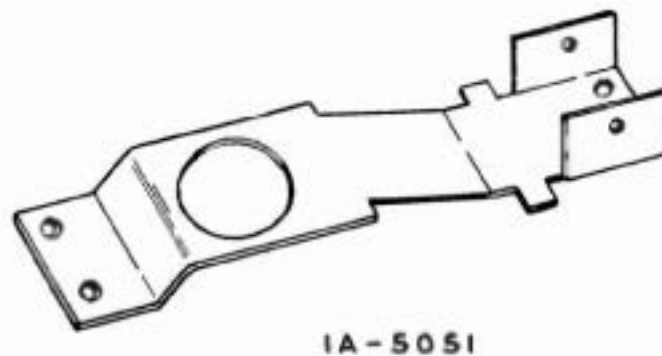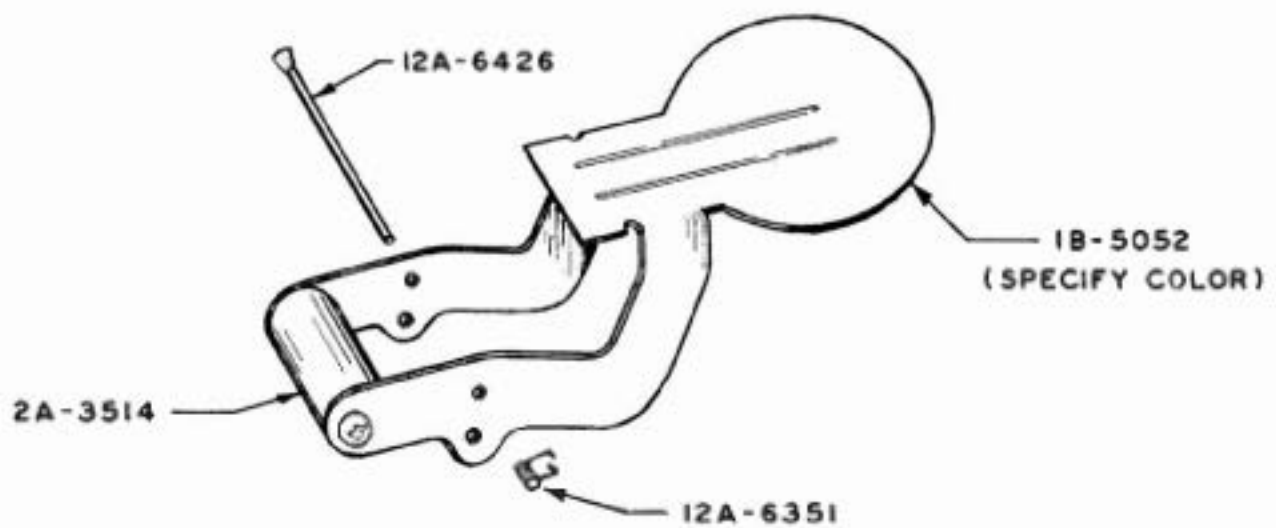


PARTS FOR "FAST BALL"

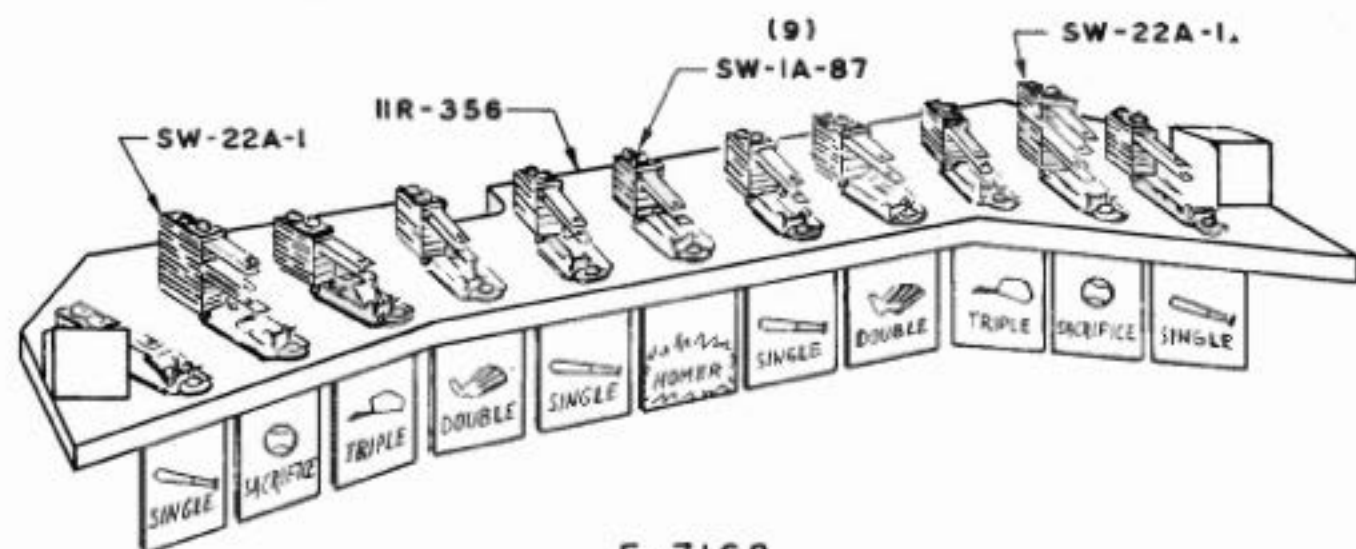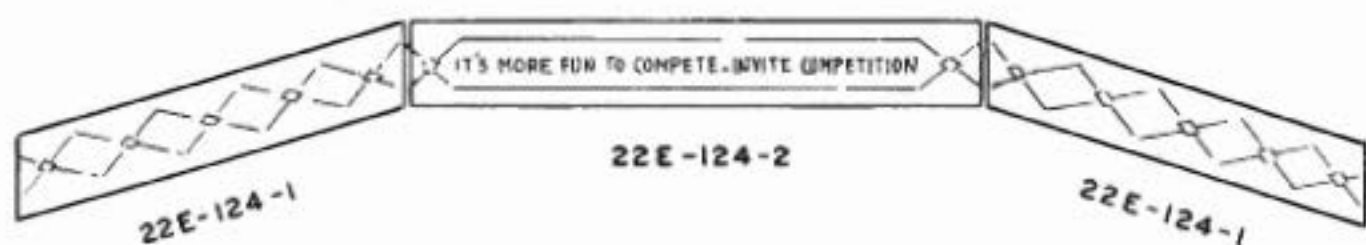

E-7168

COMPLETE TARGET UNIT AS SHOWN

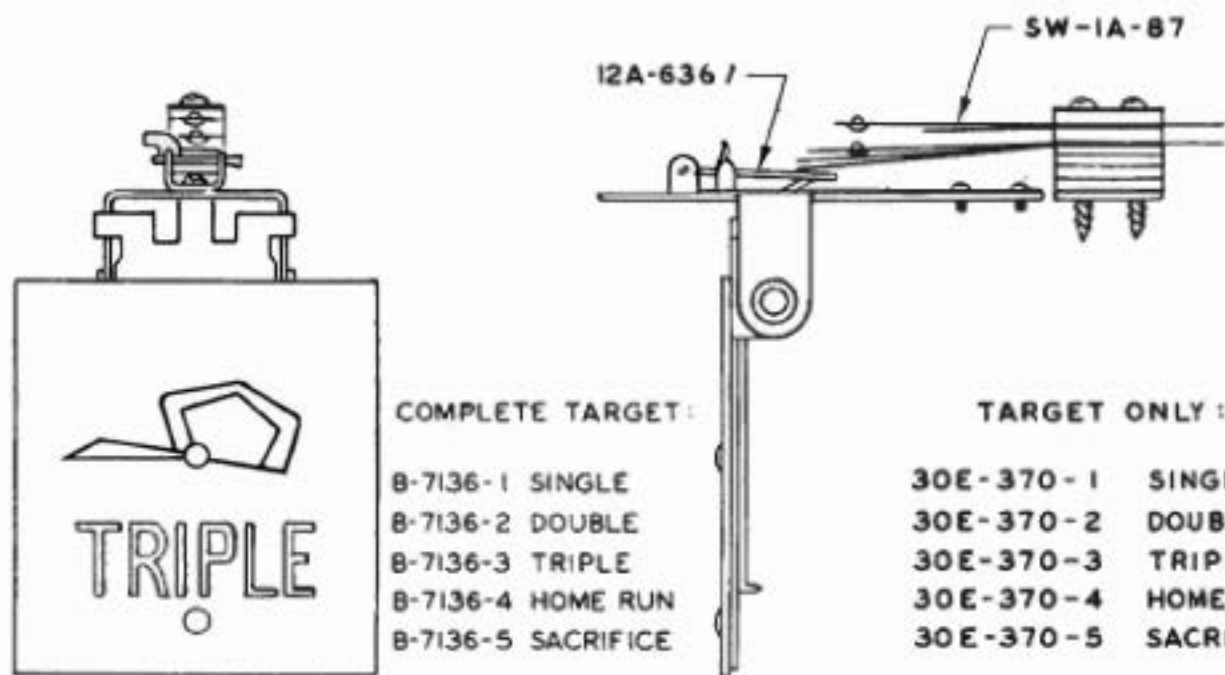

COMPLETE TARGET:


B-7136-1 SINGLE
B-7136-2 DOUBLE
B-7136-3 TRIPLE
B-7136-4 HOME RUN
B-7136-5 SACRIFICE

TARGET ONLY:

30E-370-1 SINGLE
30E-370-2 DOUBLE
30E-370-3 TRIPLE
30E-370-4 HOME RUN
30E-370-5 SACRIFICE

B-7136-3

GRIDIRON TARGET ASSEMBLIES

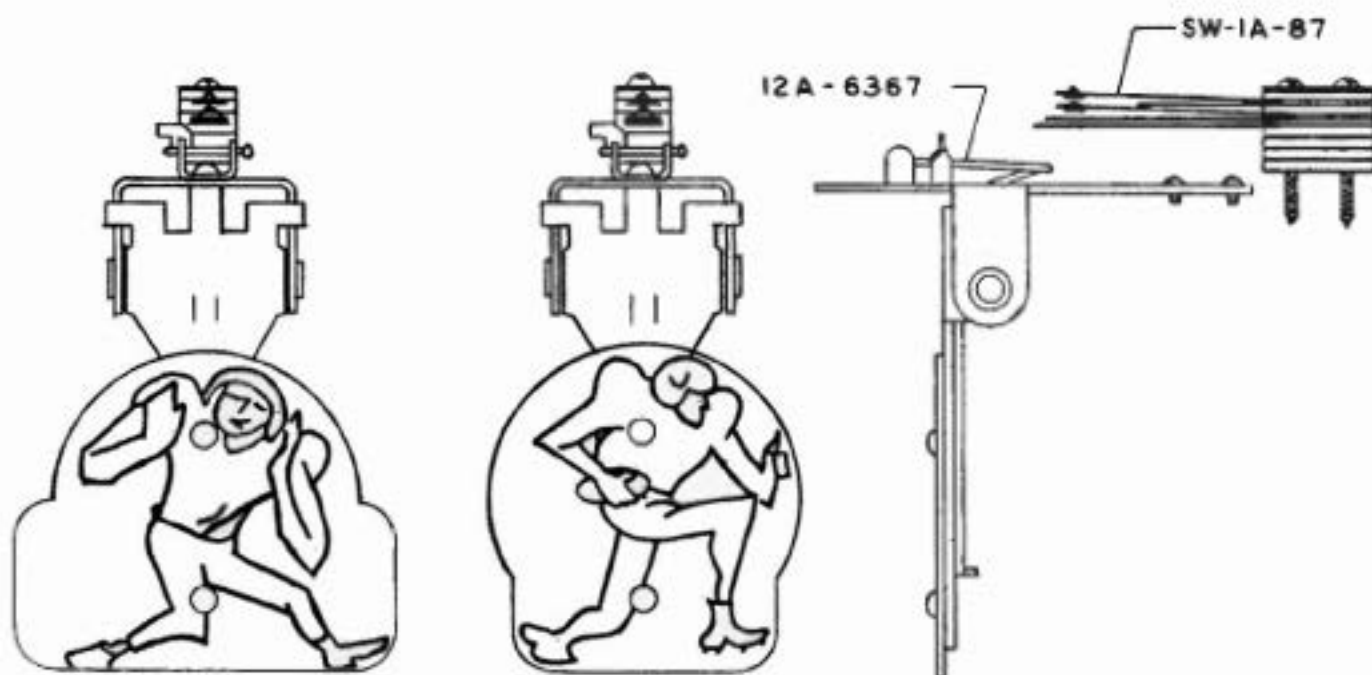

B-7243-2

B-7243-3

B-7243-4

B-7243-5

B-7243-6

B-7243-7

B-7243-1

- TARGET ONLY -

30C-376-2

30C-376-3


30C-376-4

30C-376-5

30C-376-6

30C-376-7


30C-376-1

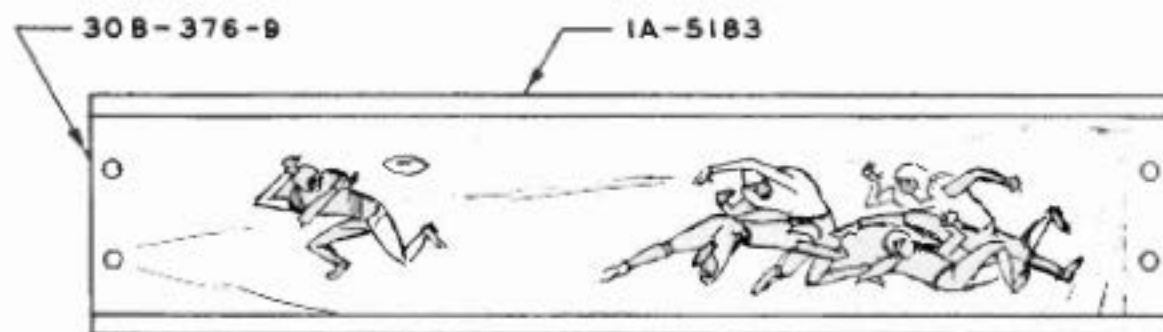


B-7233

GAME DISPLAY PLASTIC
WITH MOULDING STRIPS


C-7230 TIMER UNIT FOR "GRIDIRON"

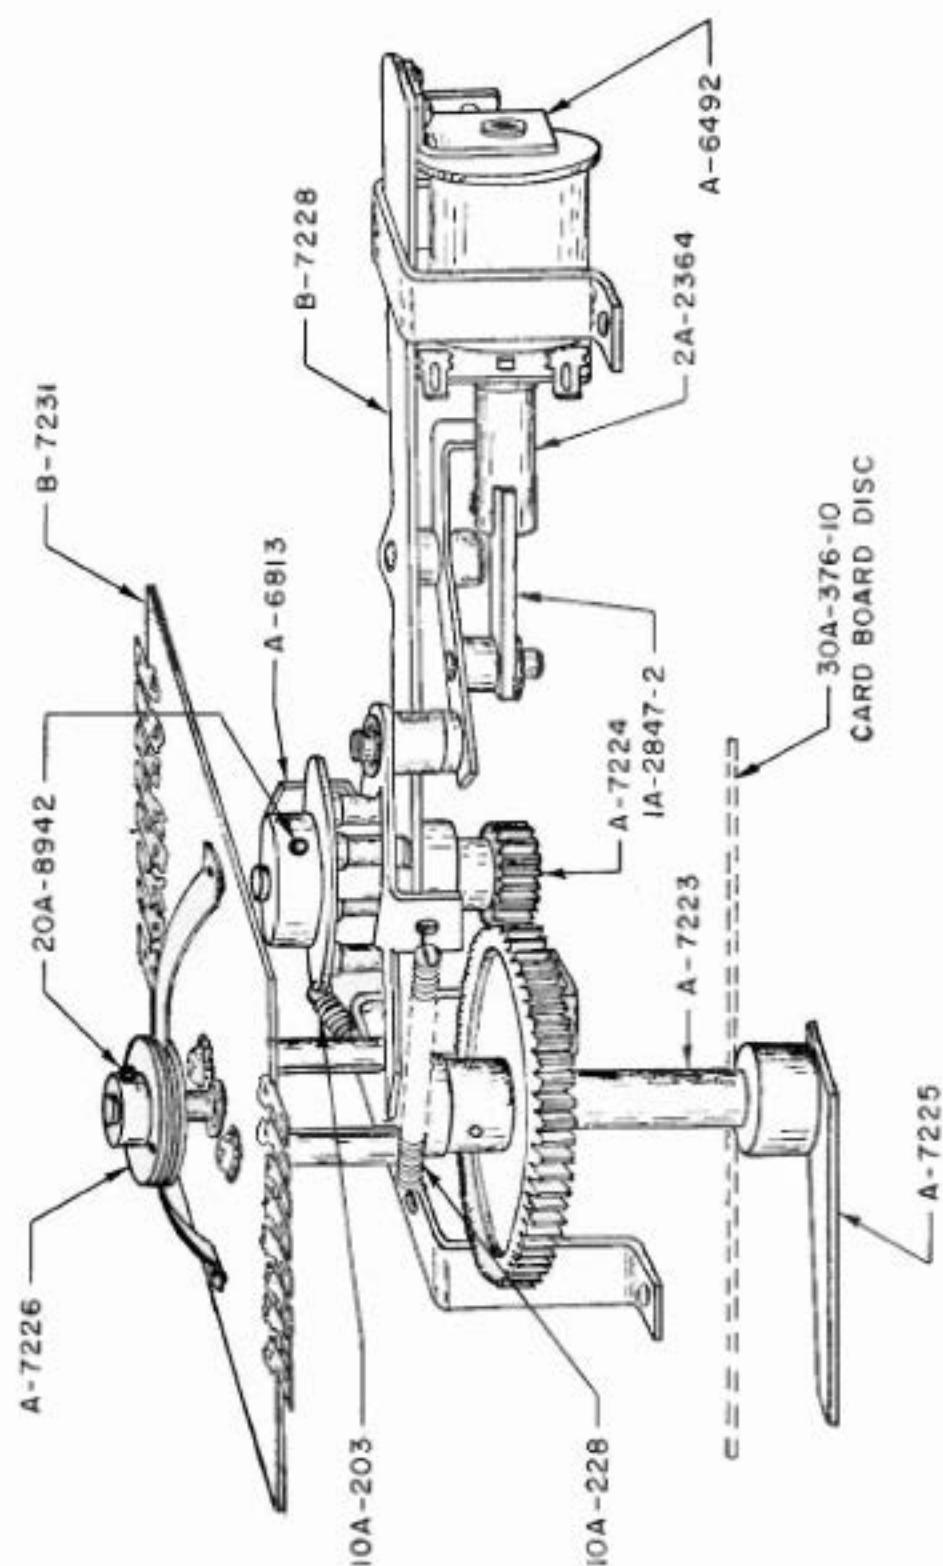

TIMER UNIT PARTS

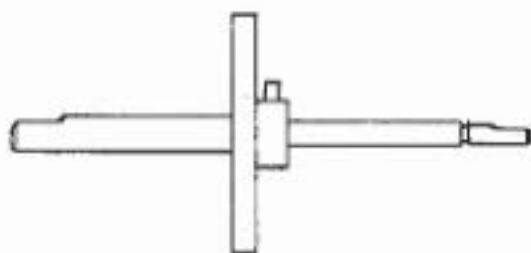


A-7223

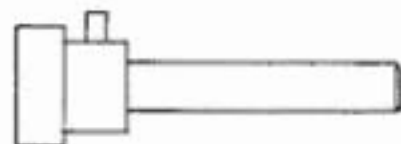


A-7224



A-7225

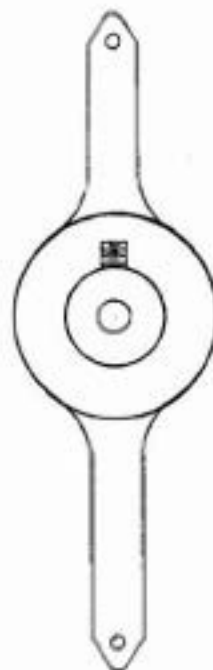

A-7226

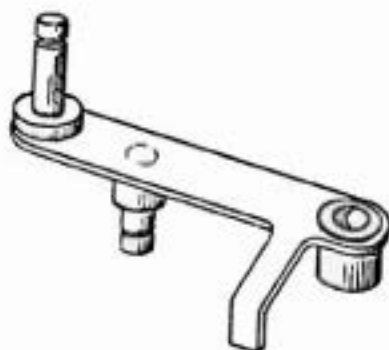

A-6811



A-6812




A-6813



A-6816-1


C-7238 ALTERNATOR UNIT FOR "GRIDIRON"

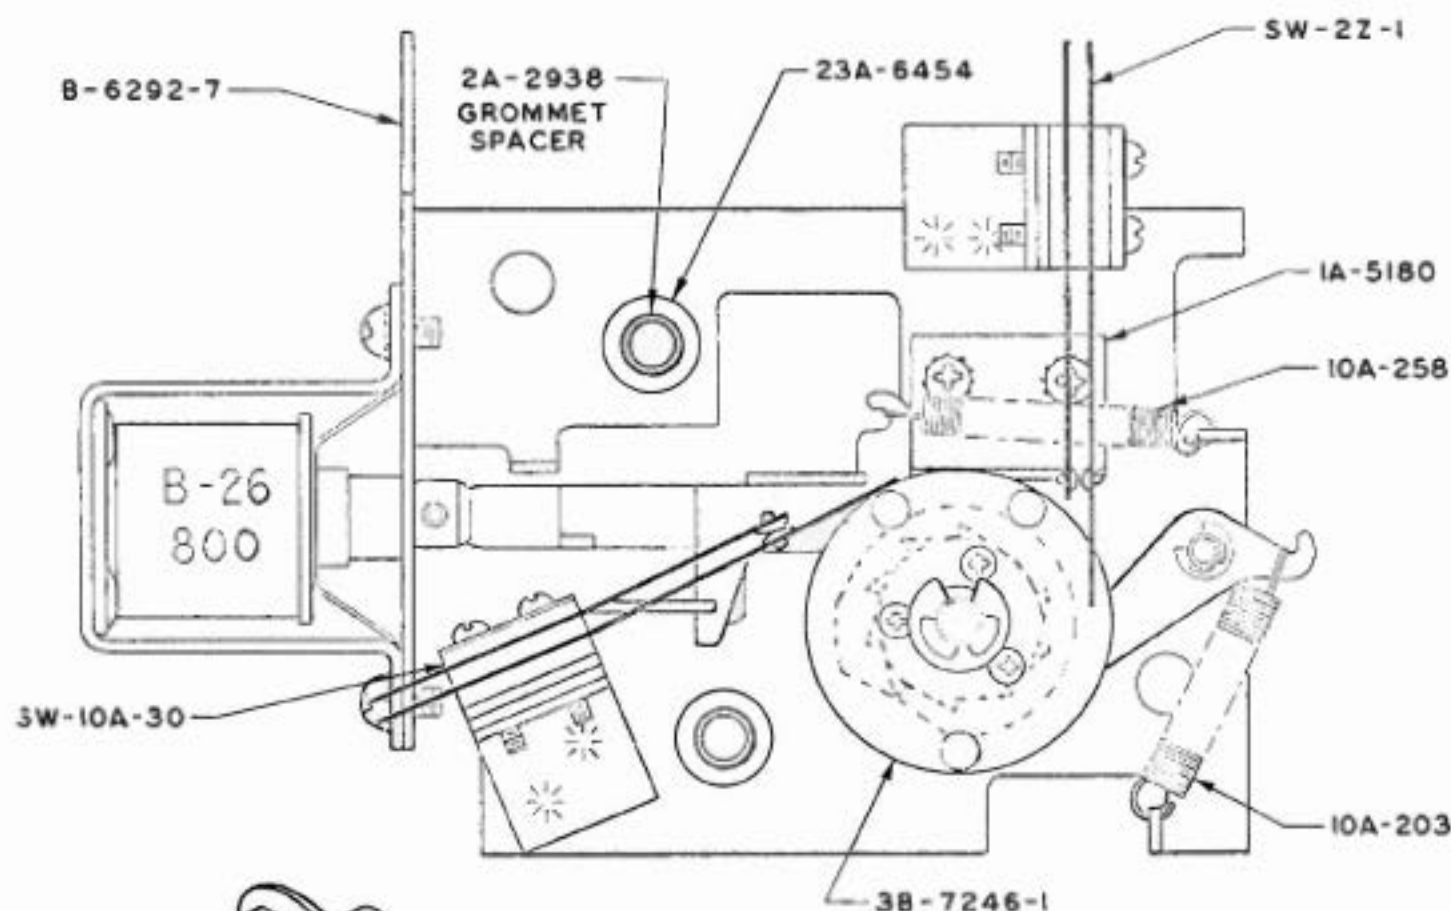


3C-7272
RATCHET & CAM



3A-7125
RATCHET STOP PAWL

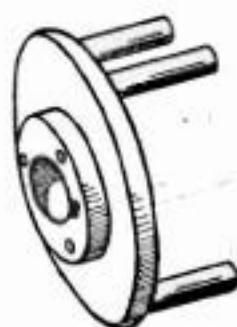


3B-7246-1
ALTERNATOR DISC

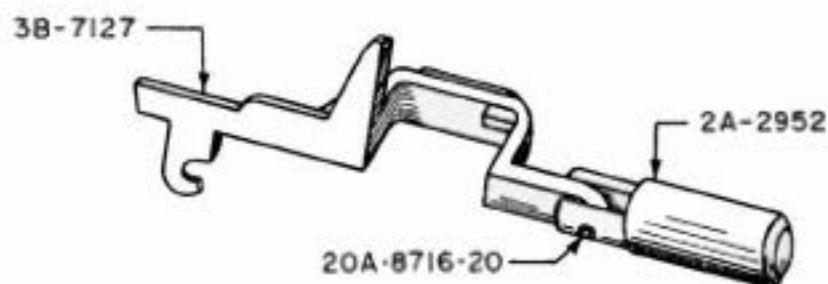


A-6295
DRIVE PAWL & ARMATURE


"HIT & RUN" — PLAYFIELD PARTS.

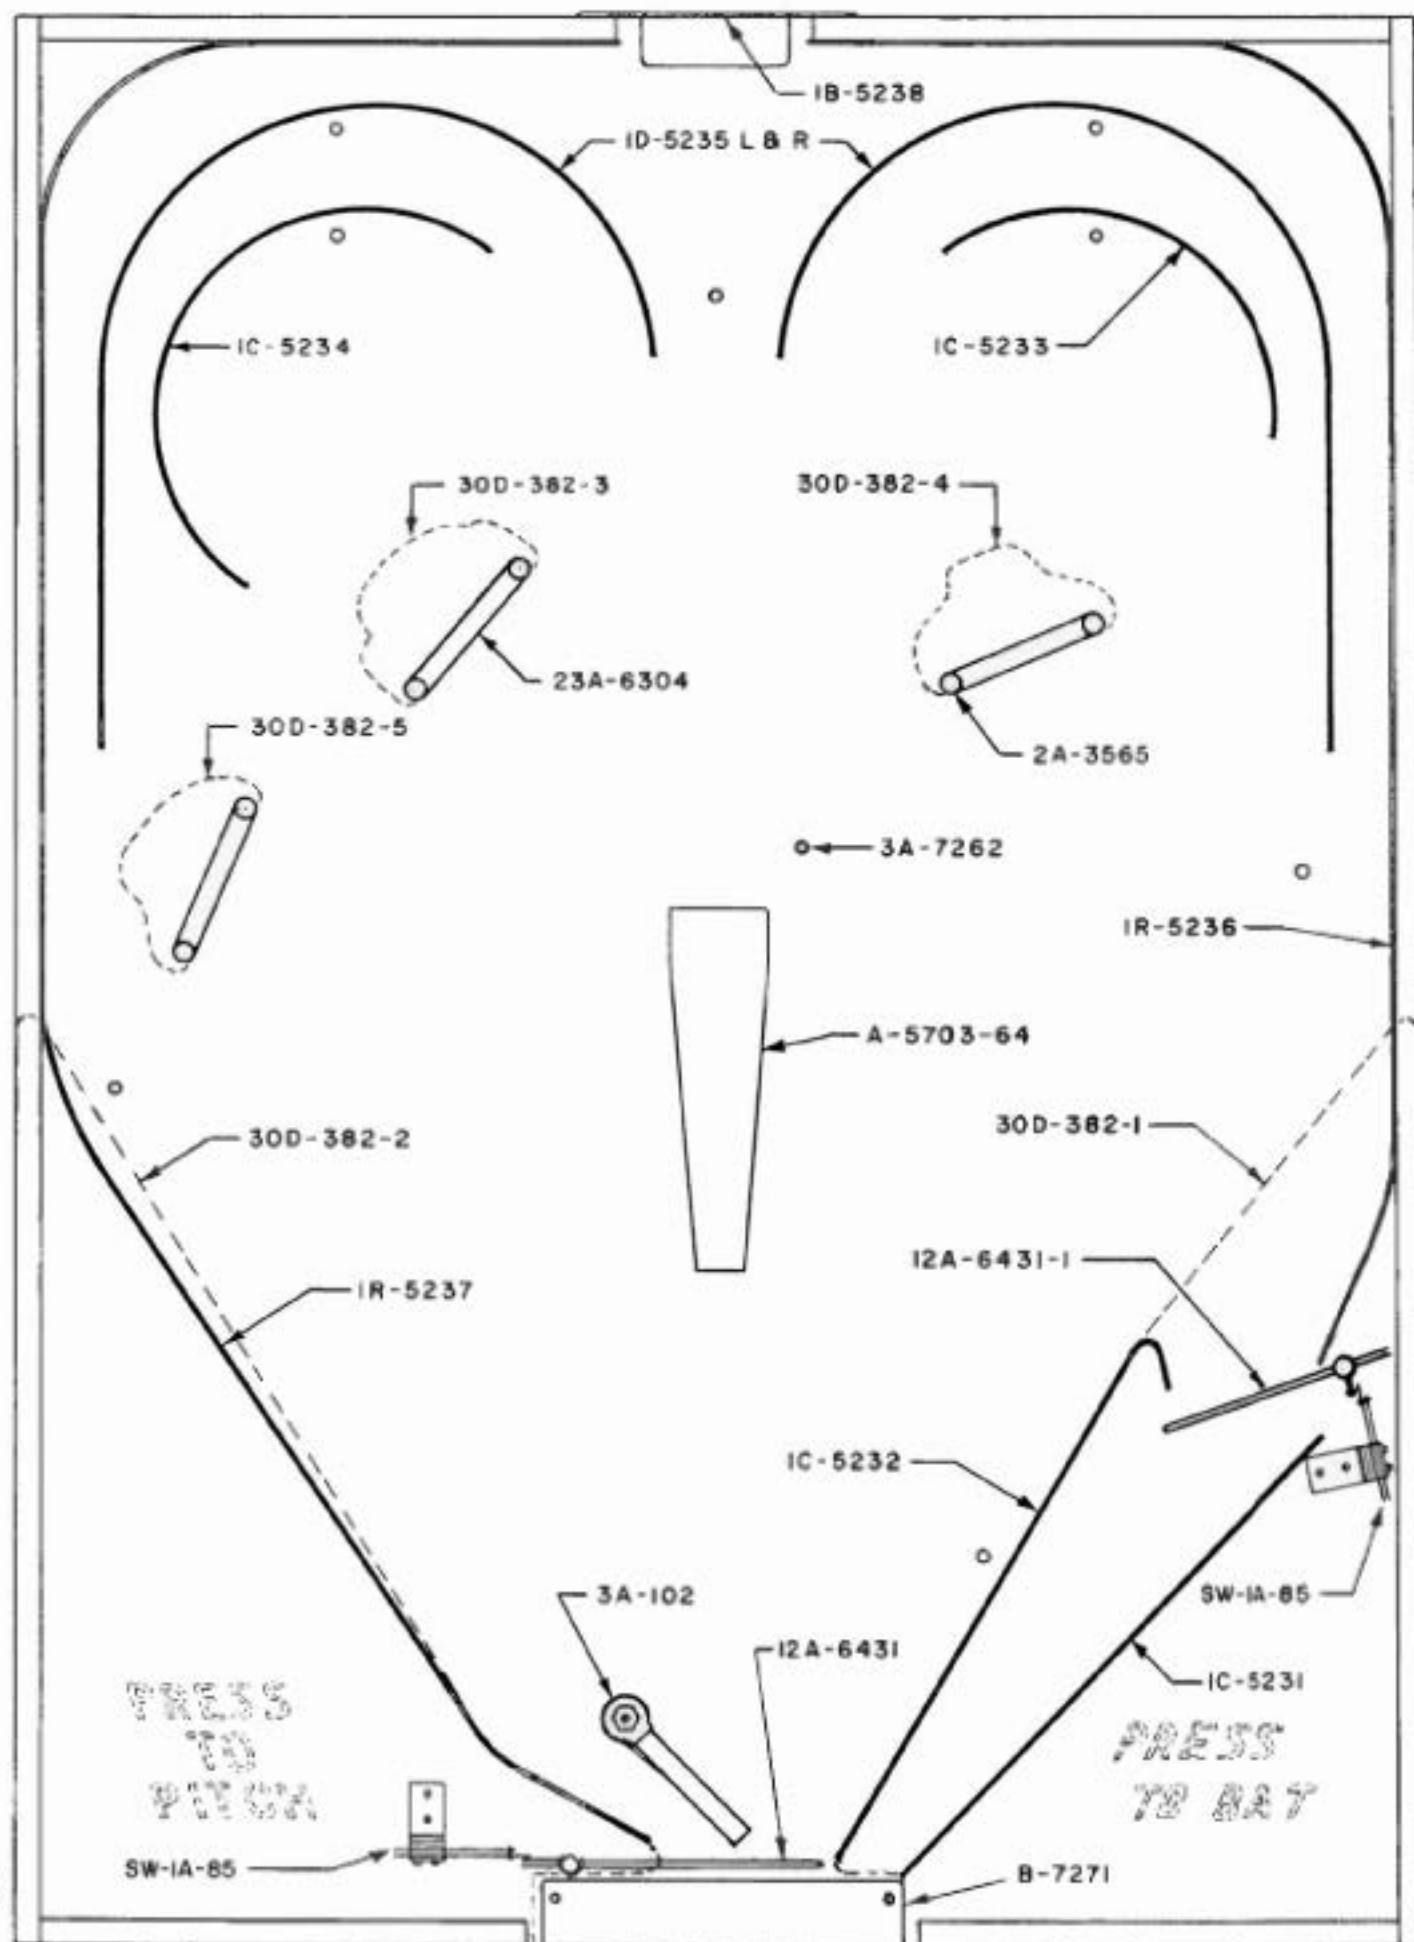


C-7277 BASE RUN MOTOR UNIT ("HIT & RUN")

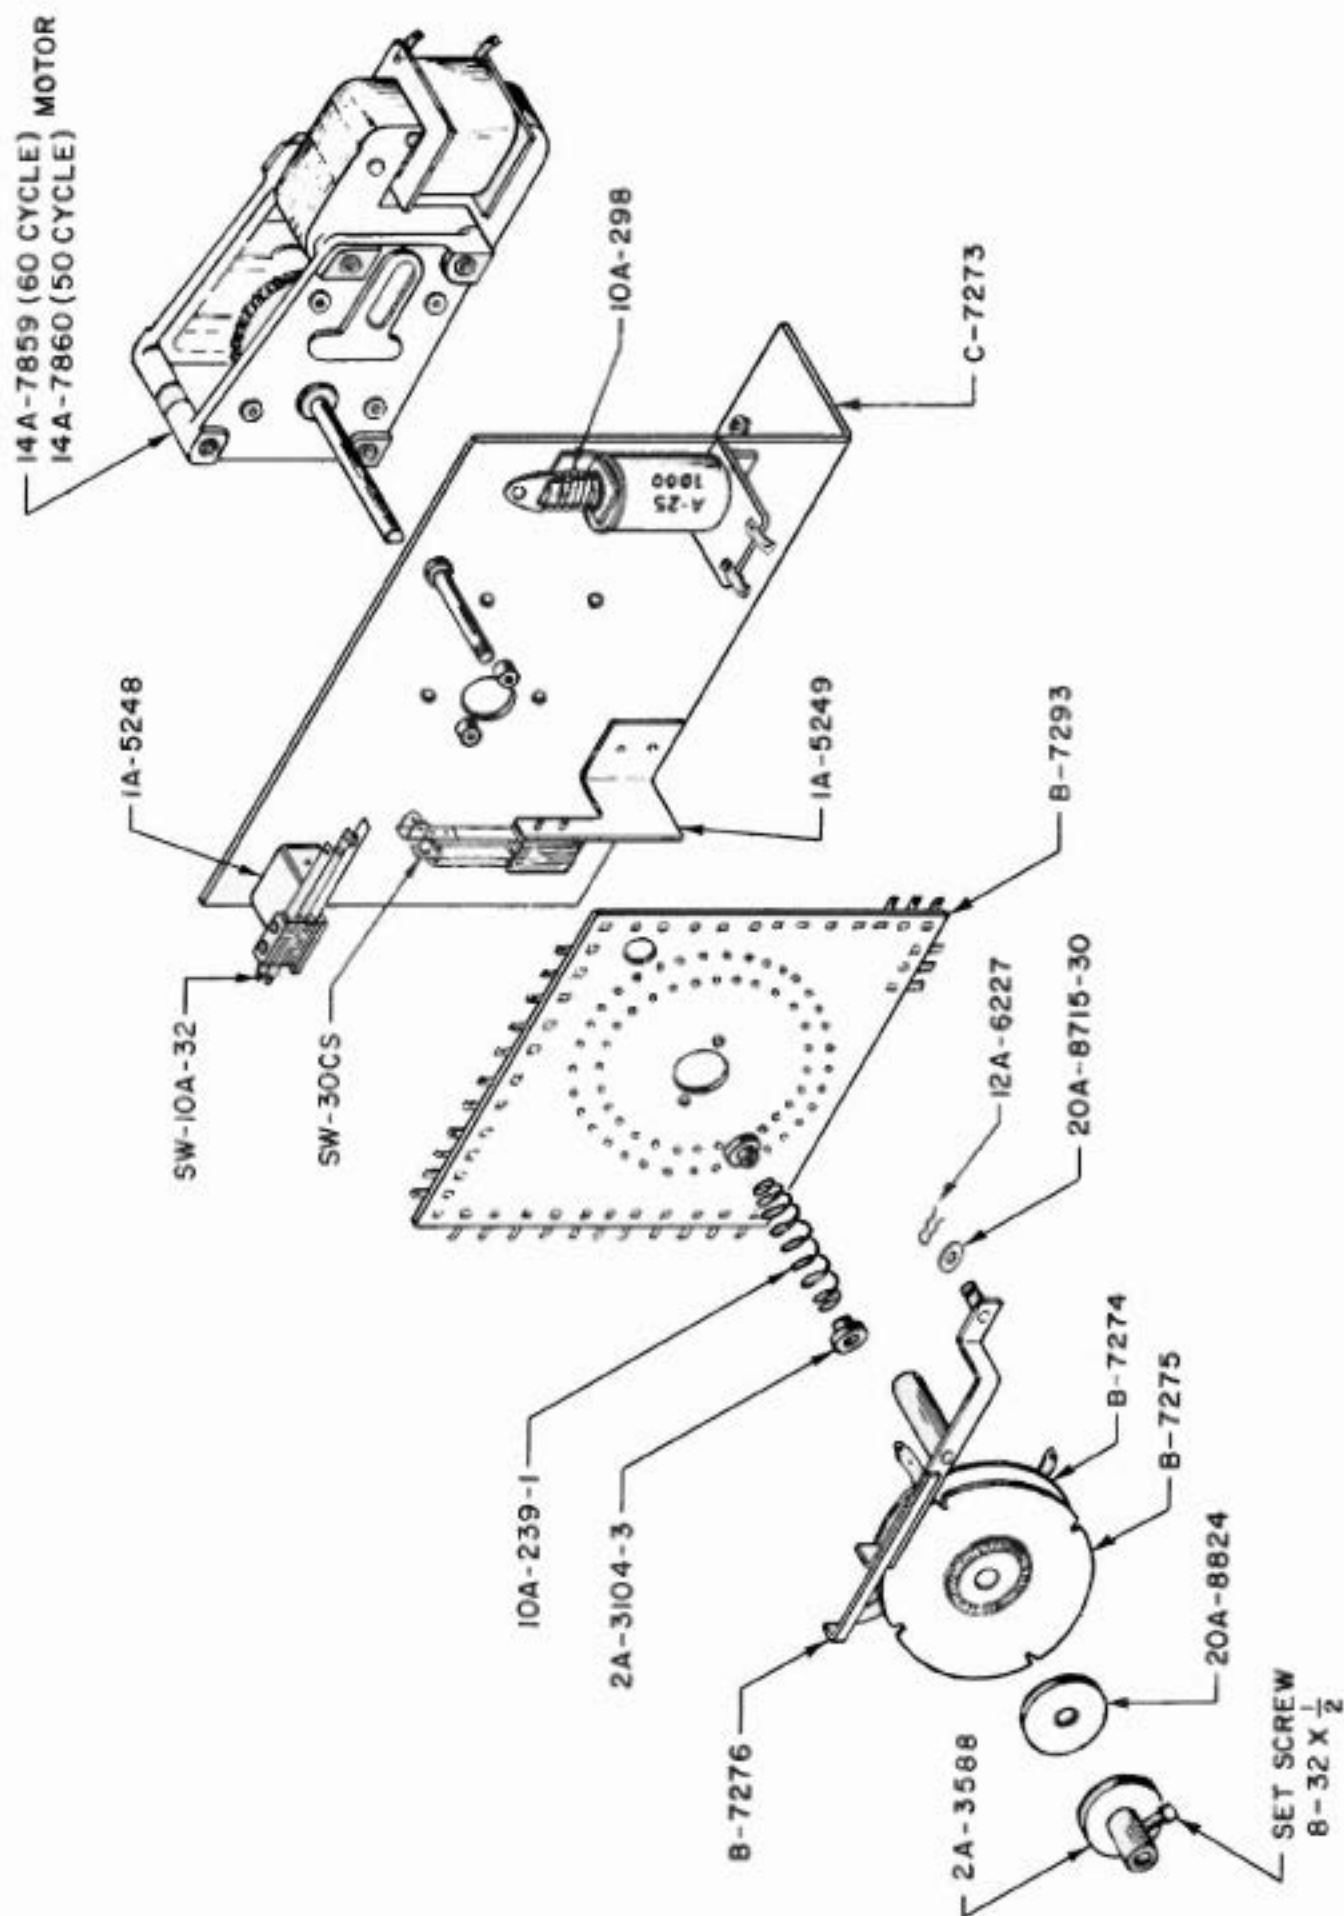



SWITCH ACTUATOR ("HIT & RUN")

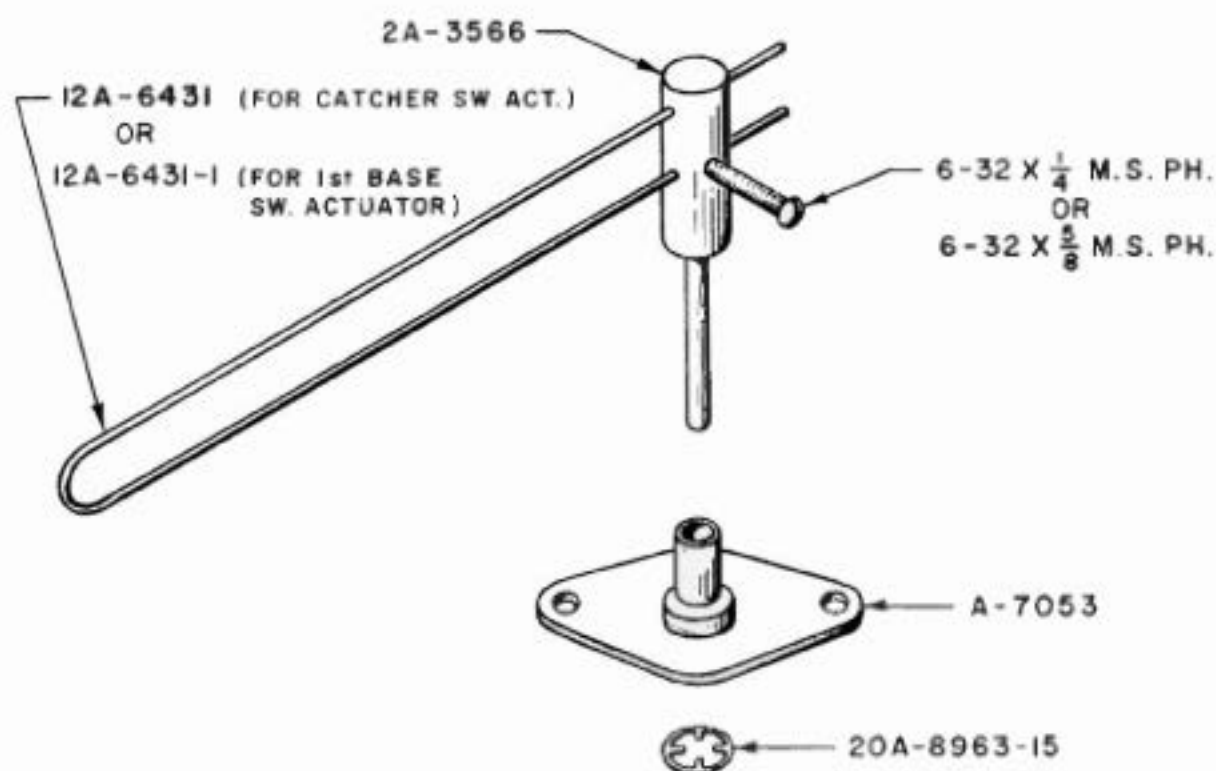

5/16" ROLL-OVER ASSEMBLY

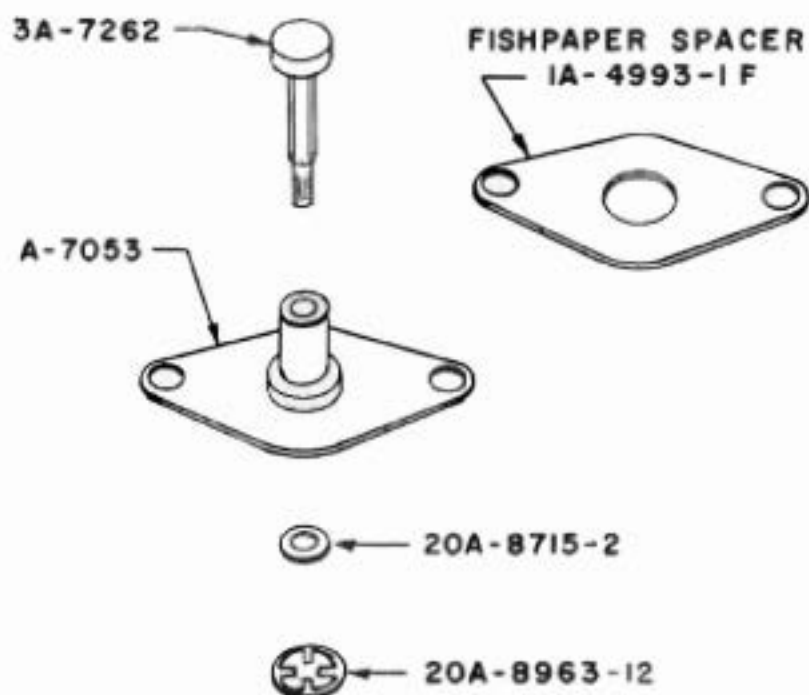


MISCELLANEOUS PARTS FOR BASEBALL 1970 ("HIT & RUN")

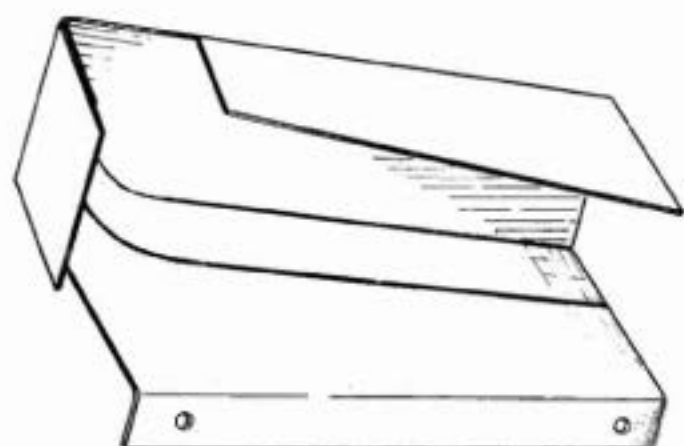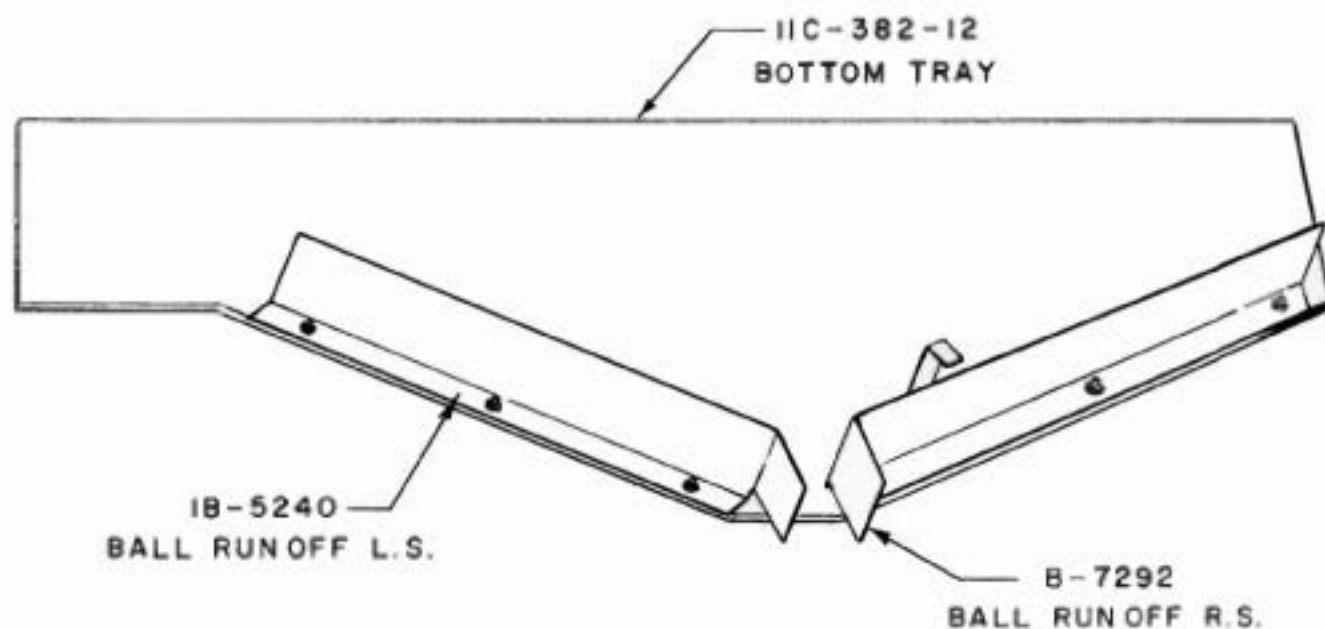

B-7289
BALL TROUGH-TRAY TO PITCH UNIT



1B-5254
HOLD DOWN BRACKET

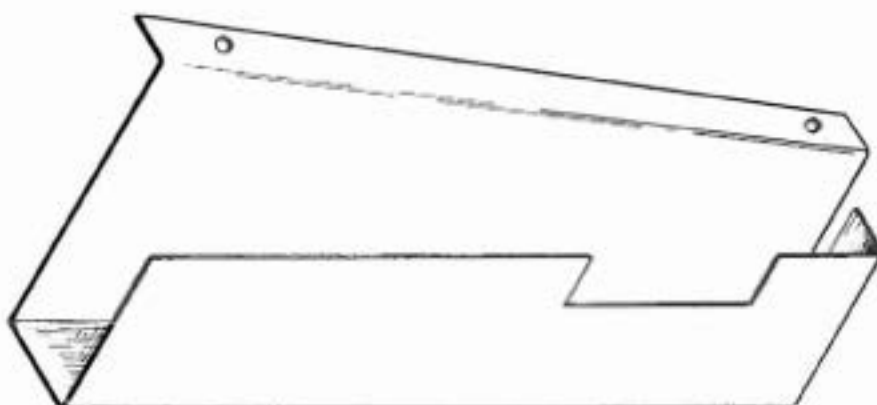


B-7291
REVERSE BALL TROUGH





2A-3565
PLAYFIELD POST

NOTES


GUN GAME PARTS

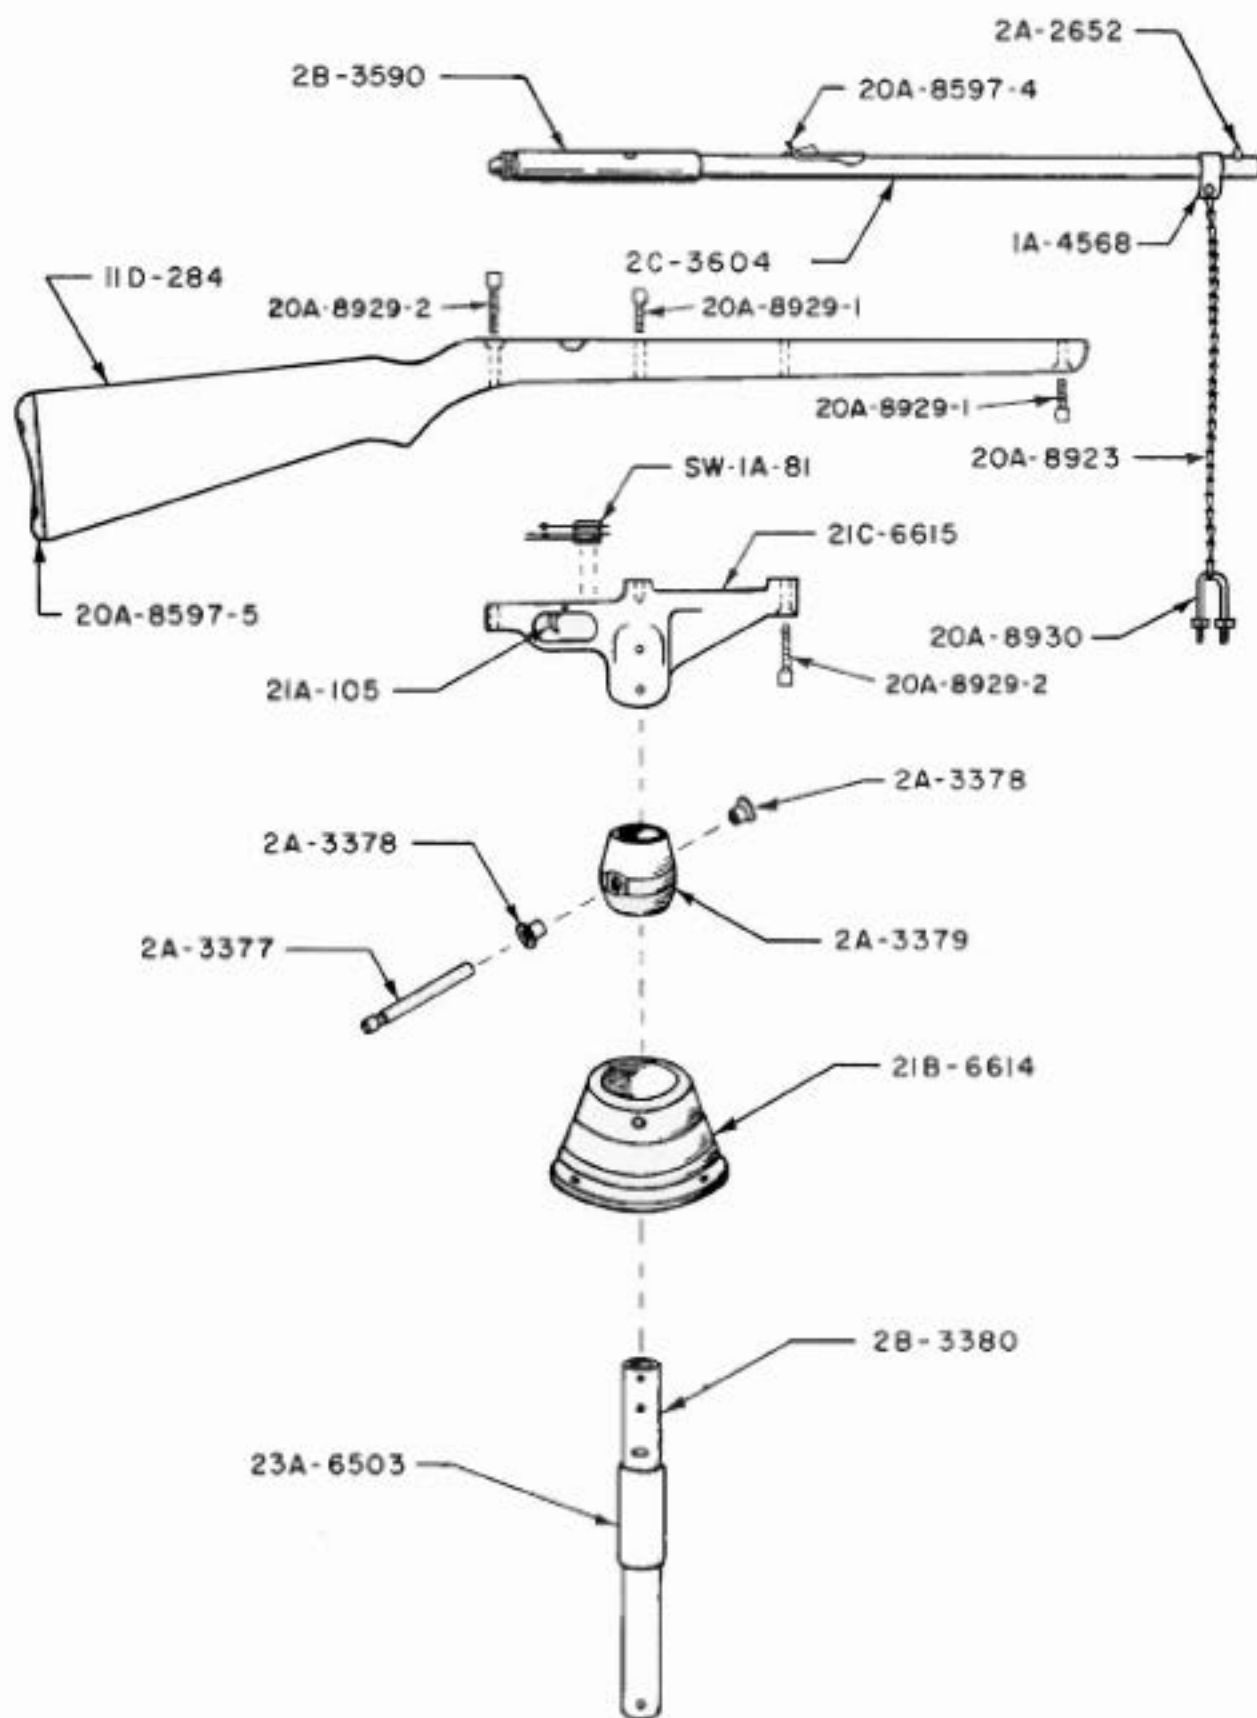

GUN GAME PARTS

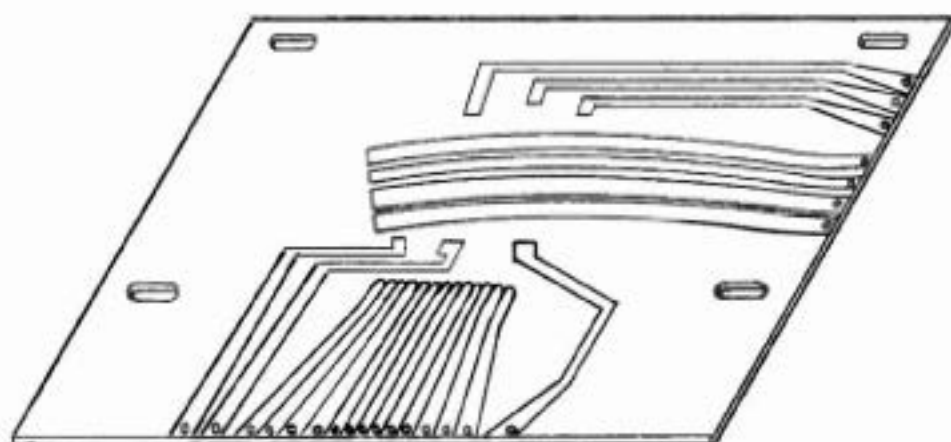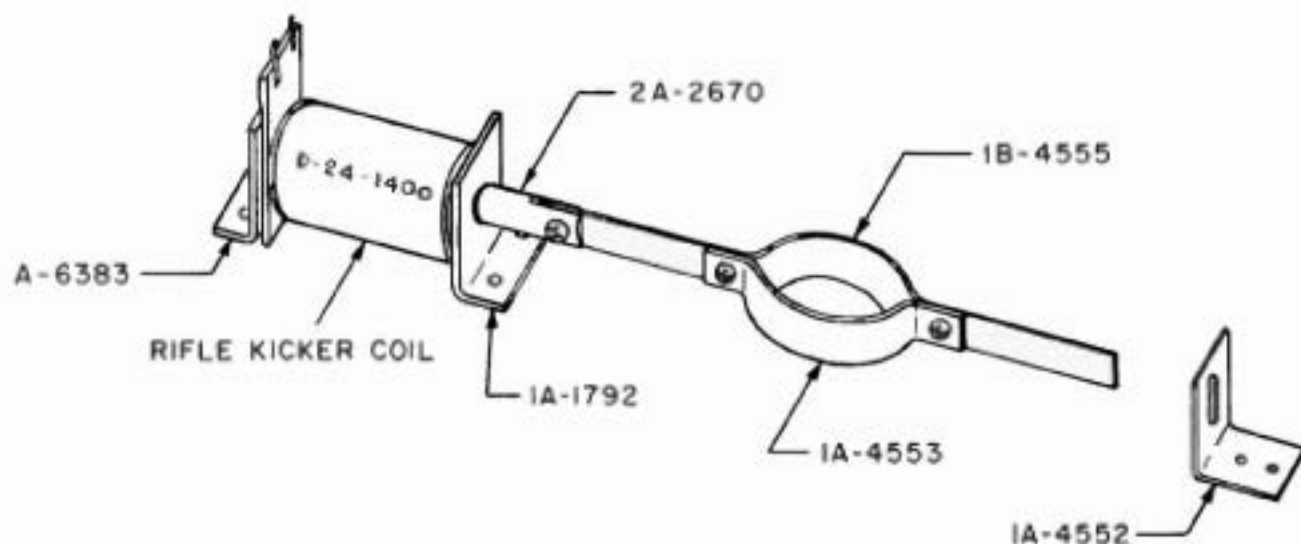

1B-2001-55	SCANNING DISC - SPOOKS GUN
1B-2001-59	SCANNING DISC - PHANTOM GUN
1D-4558-3	SCANNING DISC - BONANZA GUN

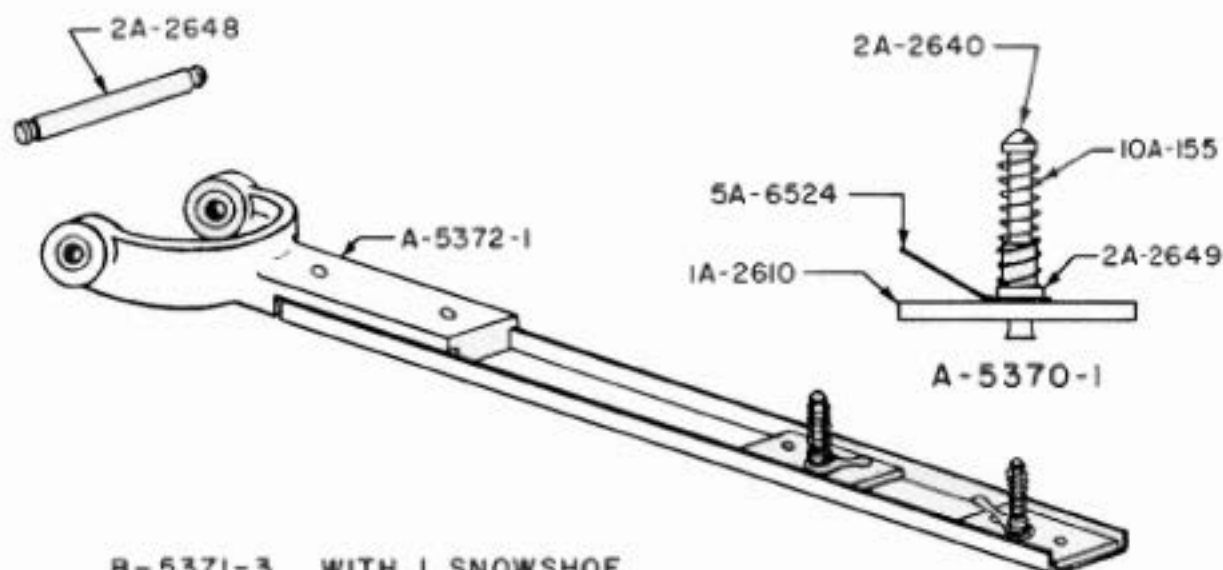


B-5371-3	WITH 1 SNOWSHOE
B-5371-4	WITH 2 SNOWSHOES


YOKE & CHANNEL ASSEMBLY

C-6903 ALTERNATOR UNIT


FOR "SPOOKS" AND "PHANTOM" GUN

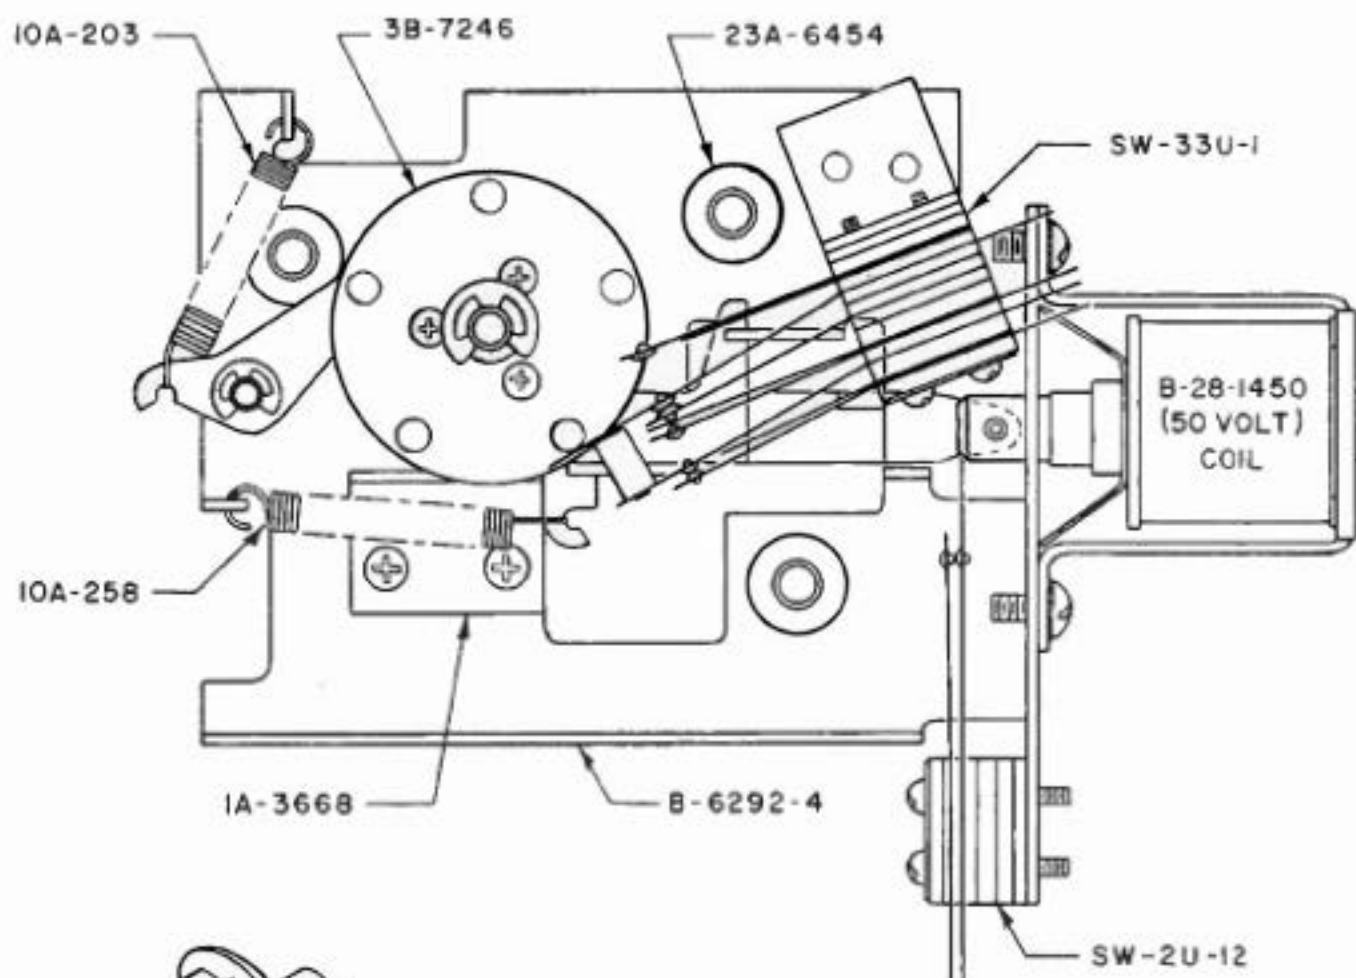


3C-7272
RATCHET & CAM

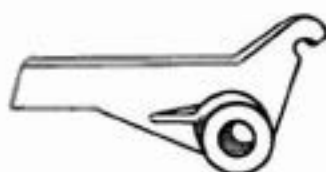

3A-7125
RATCHET STOP PAWL


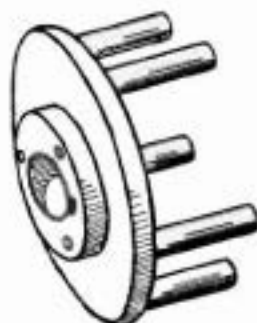


3B-7246
ALTERNATOR DISC

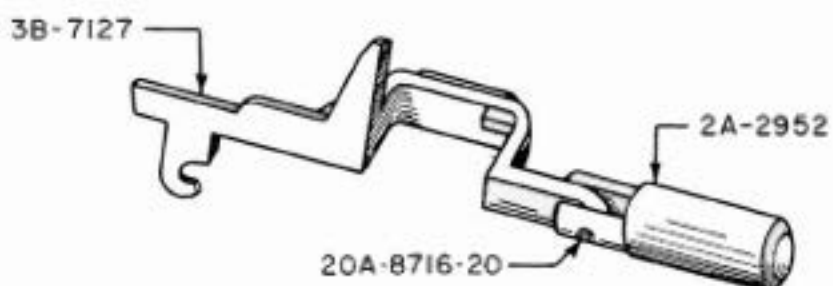

A-6295
DRIVE PAWL & ARMATURE

"SPOOKS" GUN COMPLETE "WITCH" TARGET UNIT

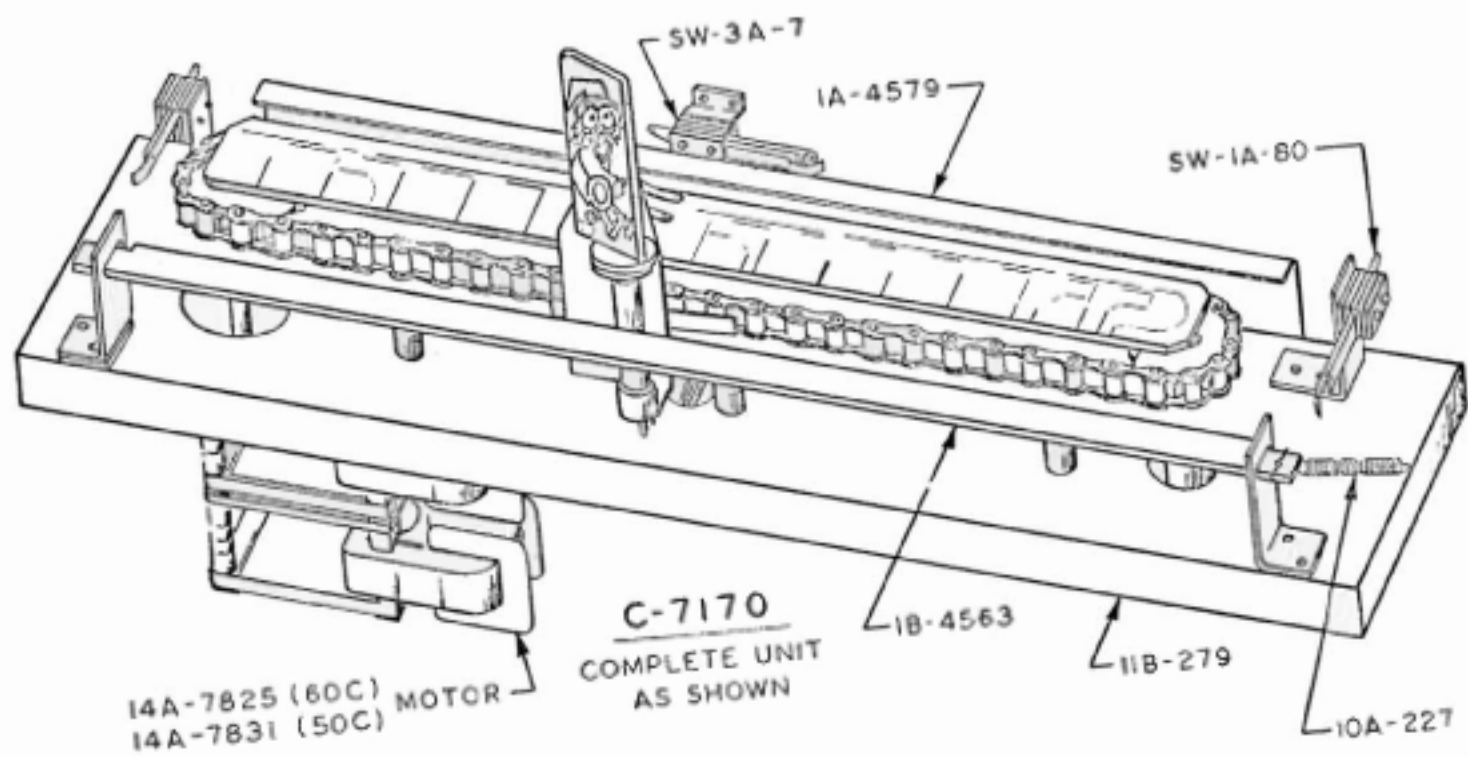


IC-2001-41



20A-8925




38-7191-2

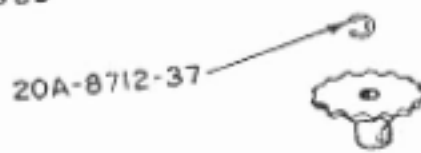


38-7191-1



A-6909

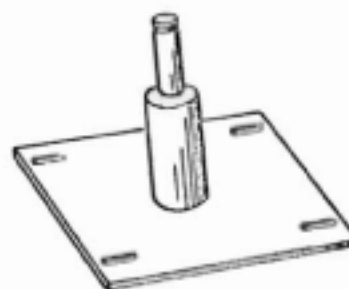


B-6908

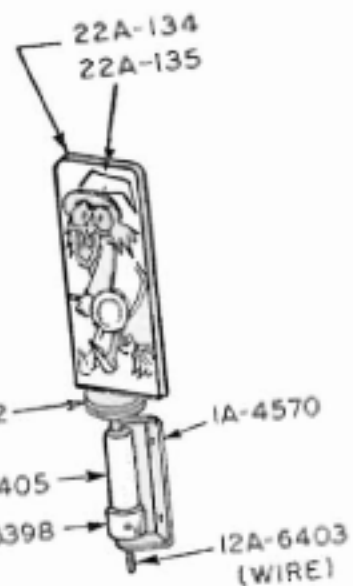

B-7154

" PHANTOM " GUN COMPLETE "PHANTOM" TARGET UNIT

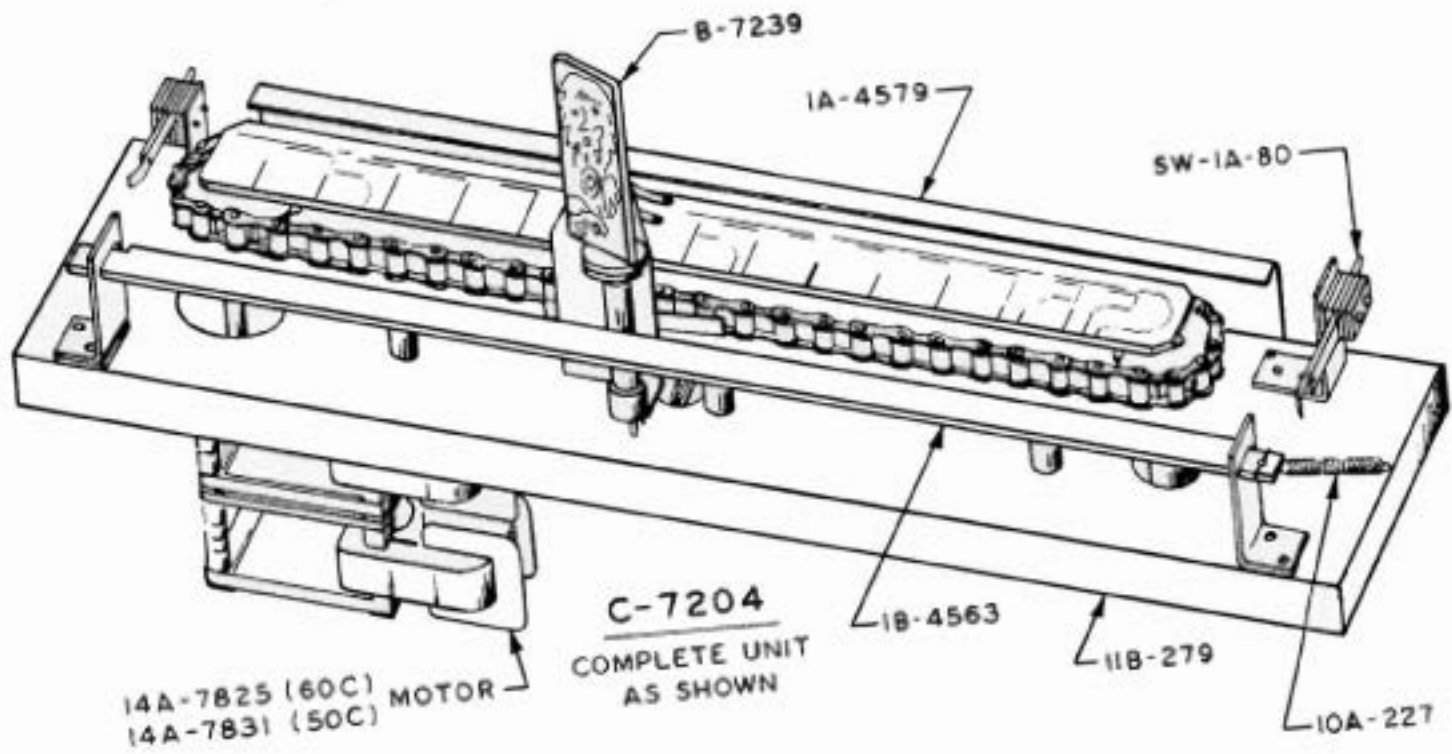

3B-7191-2



A-6909

20A-8712-37



3B-7191-1



B-6908

22A-142
22A-143



B-7239

1A-4291-2

2A-3405








2A-3398

12A-6403
(WIRE)

1A-4570


"BONANZA GUN"

COMPLETE MIDDLE (SLOW HORSE) TARGET UNIT

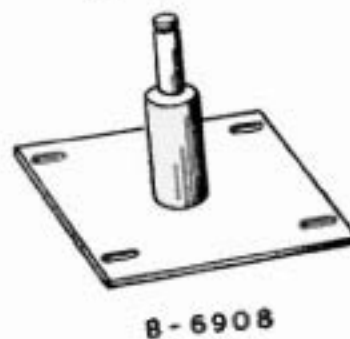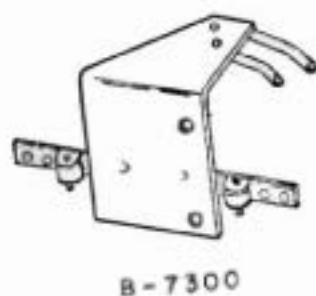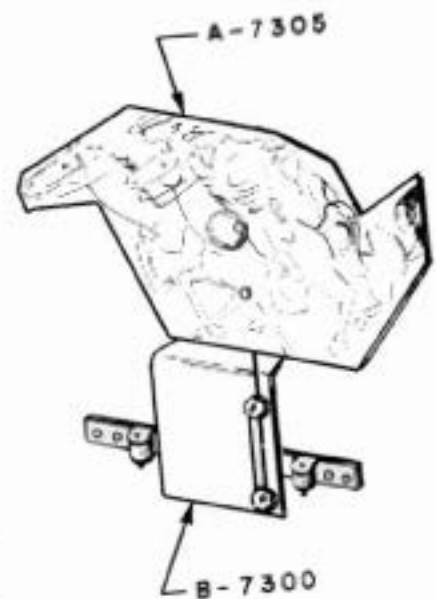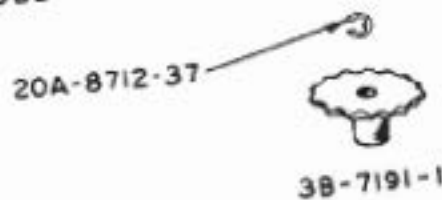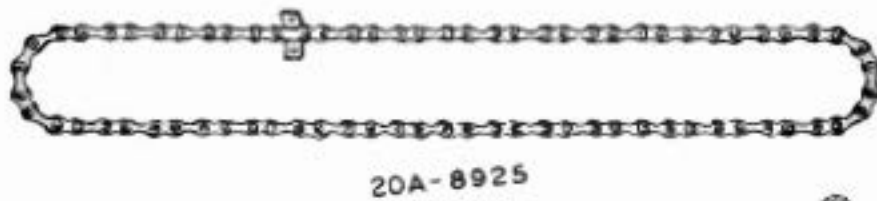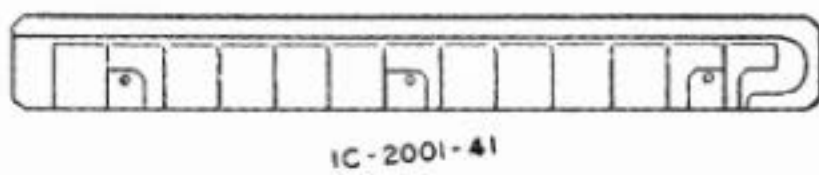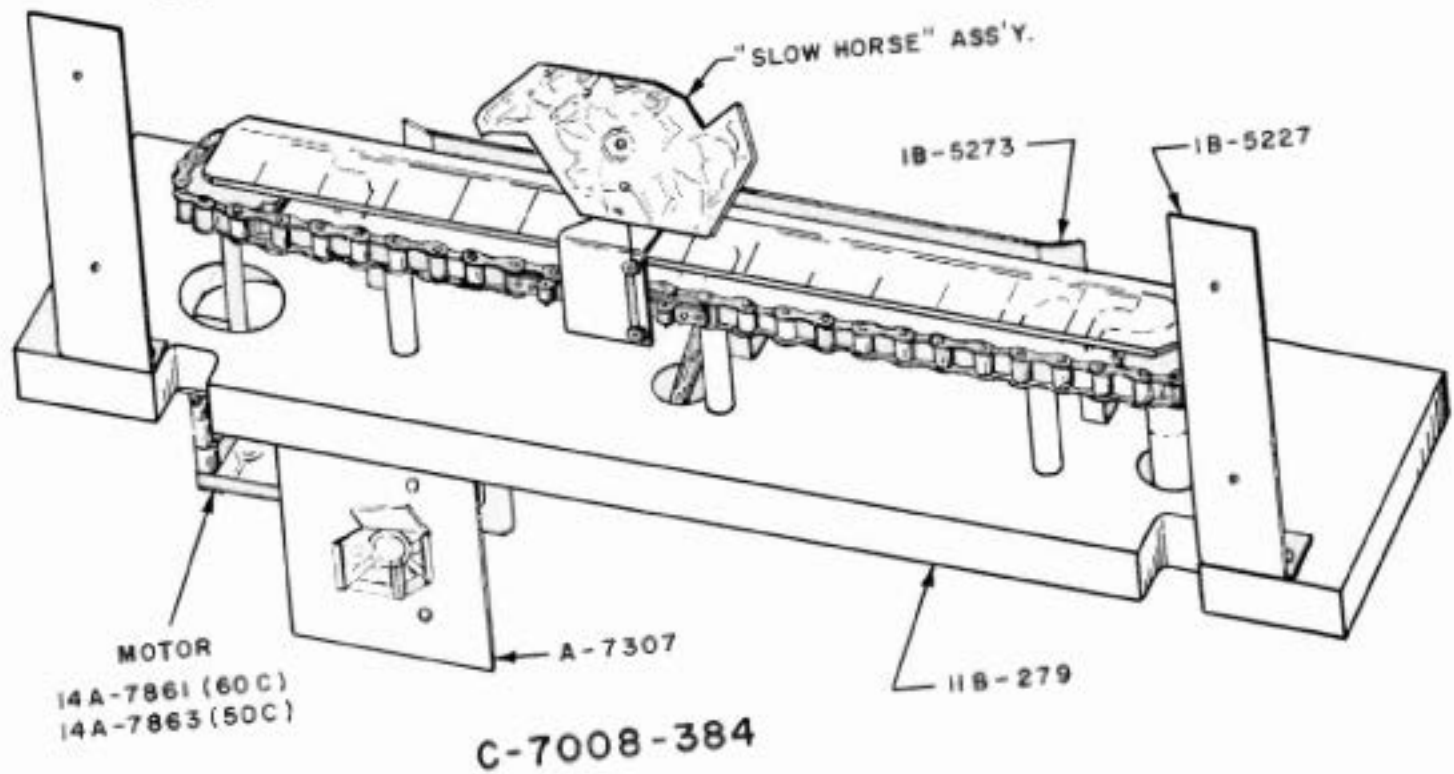


"BONANZA GUN"


COMPLETE UPPER (FAST HORSE) TARGET UNIT

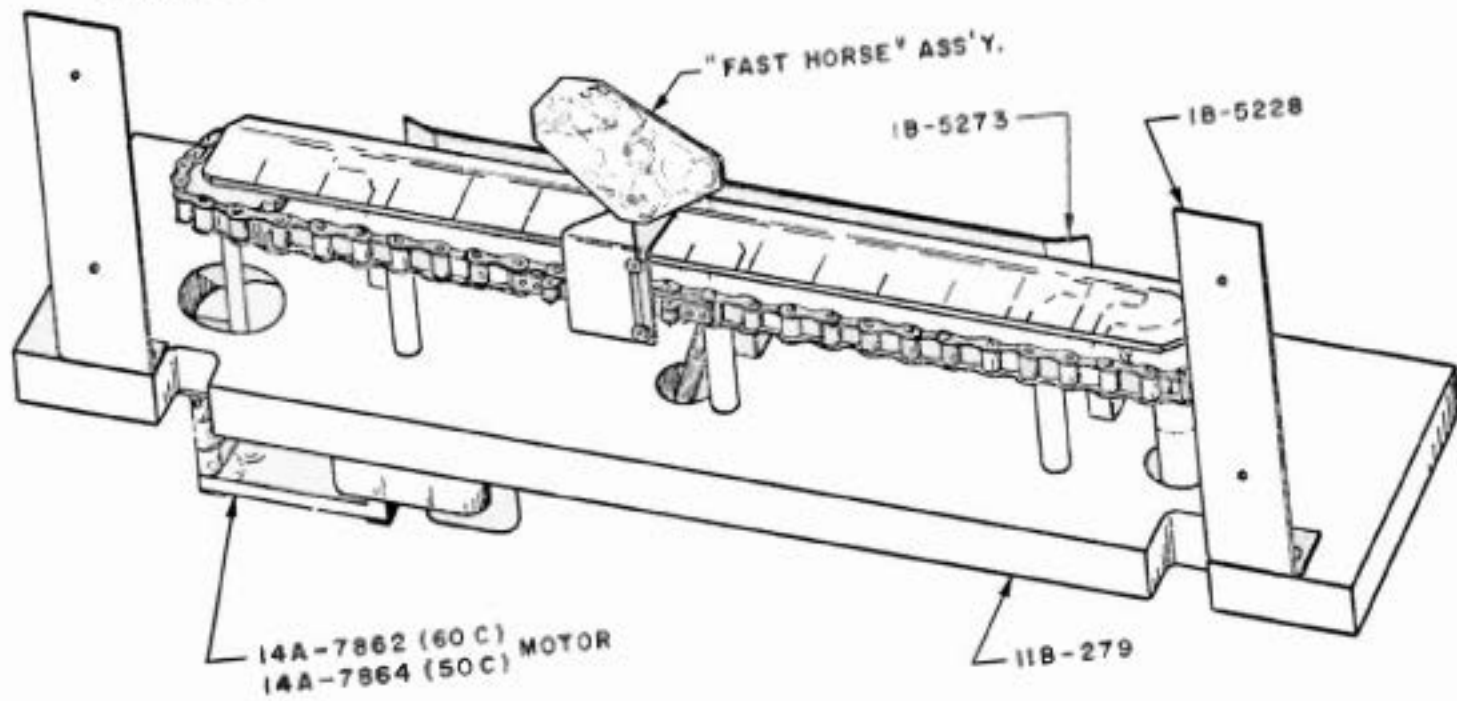

C-7008-384-1



1C-2001-41

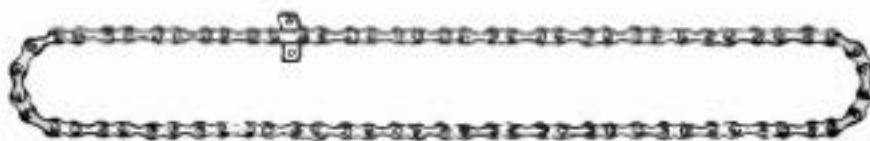

20A-8925




3B-7191-2

20A-8712-37



3B-7191-1

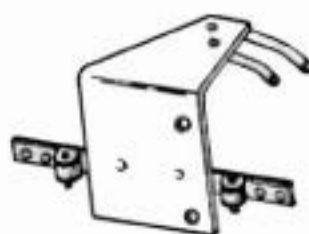

B-7300




B-6908







A-7305-1

B-7300


"BONANZA GUN" LOWER TARGET UNIT

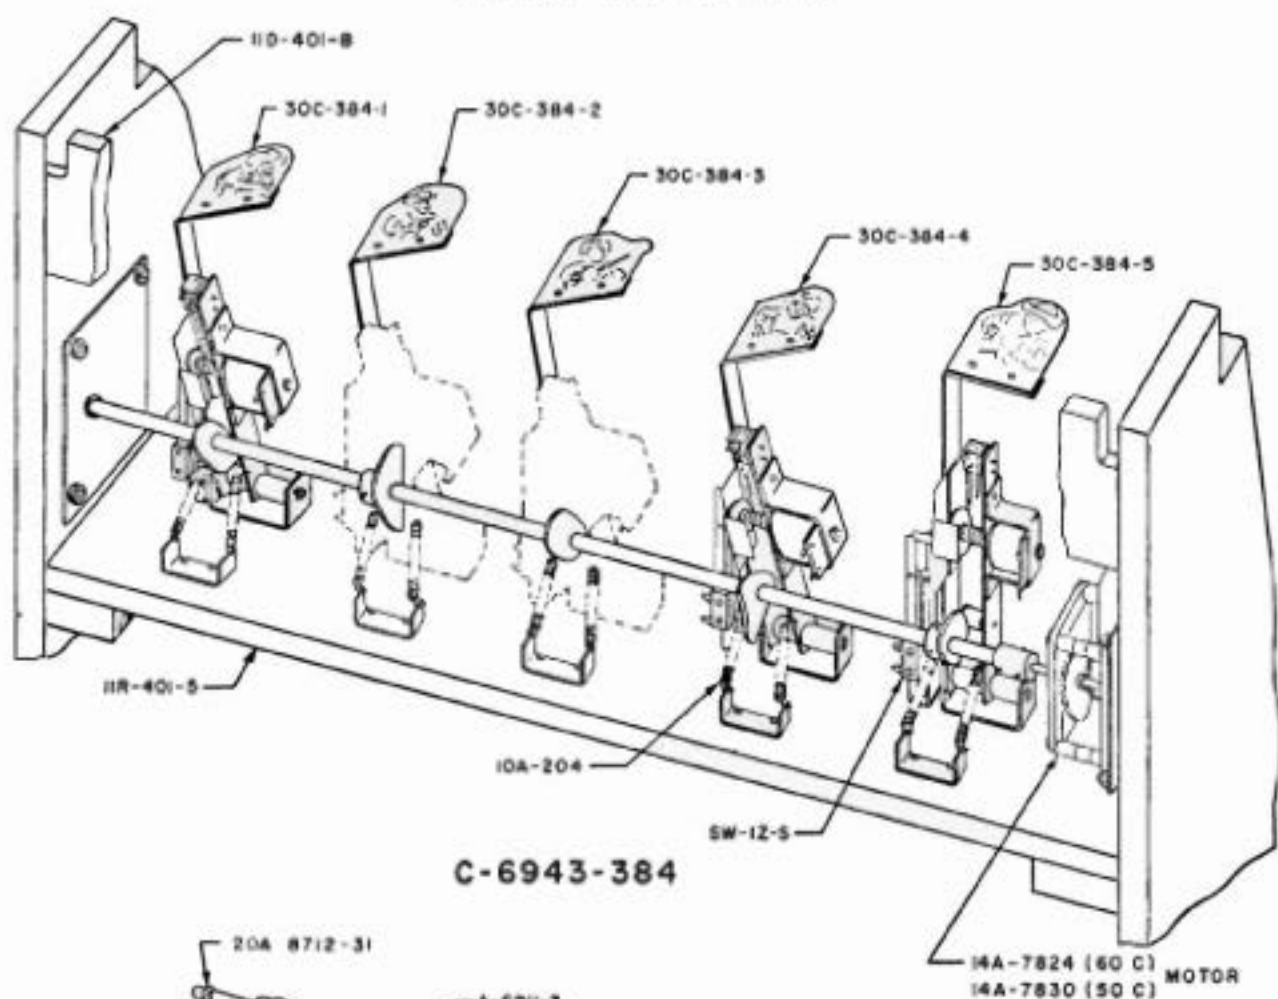


C-6943-384

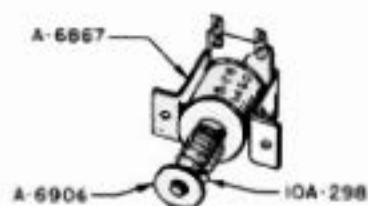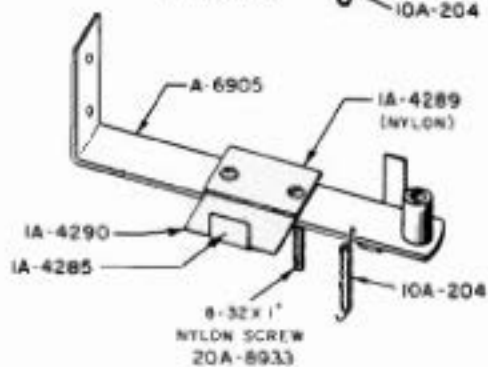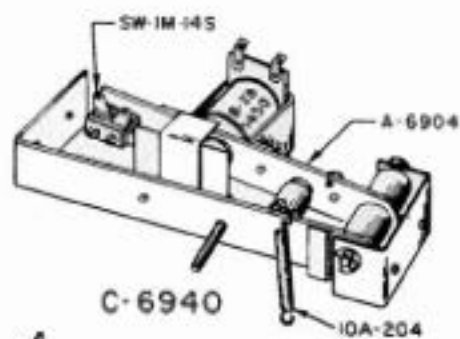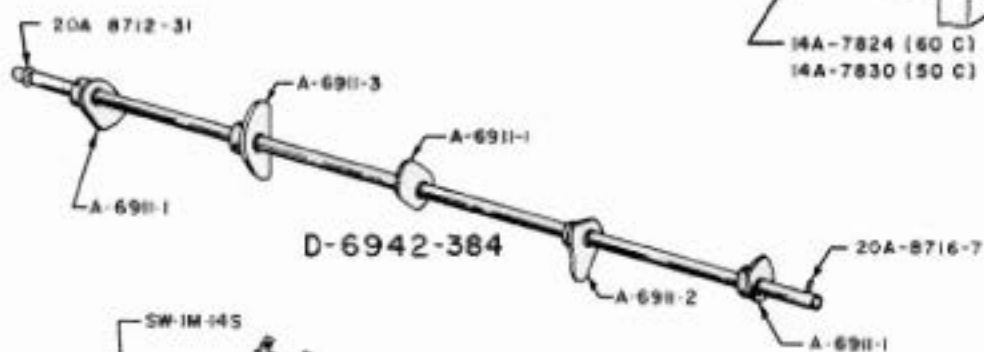


"SKULL" TARGET UNIT PARTS FOR "SPOOKS" GUN

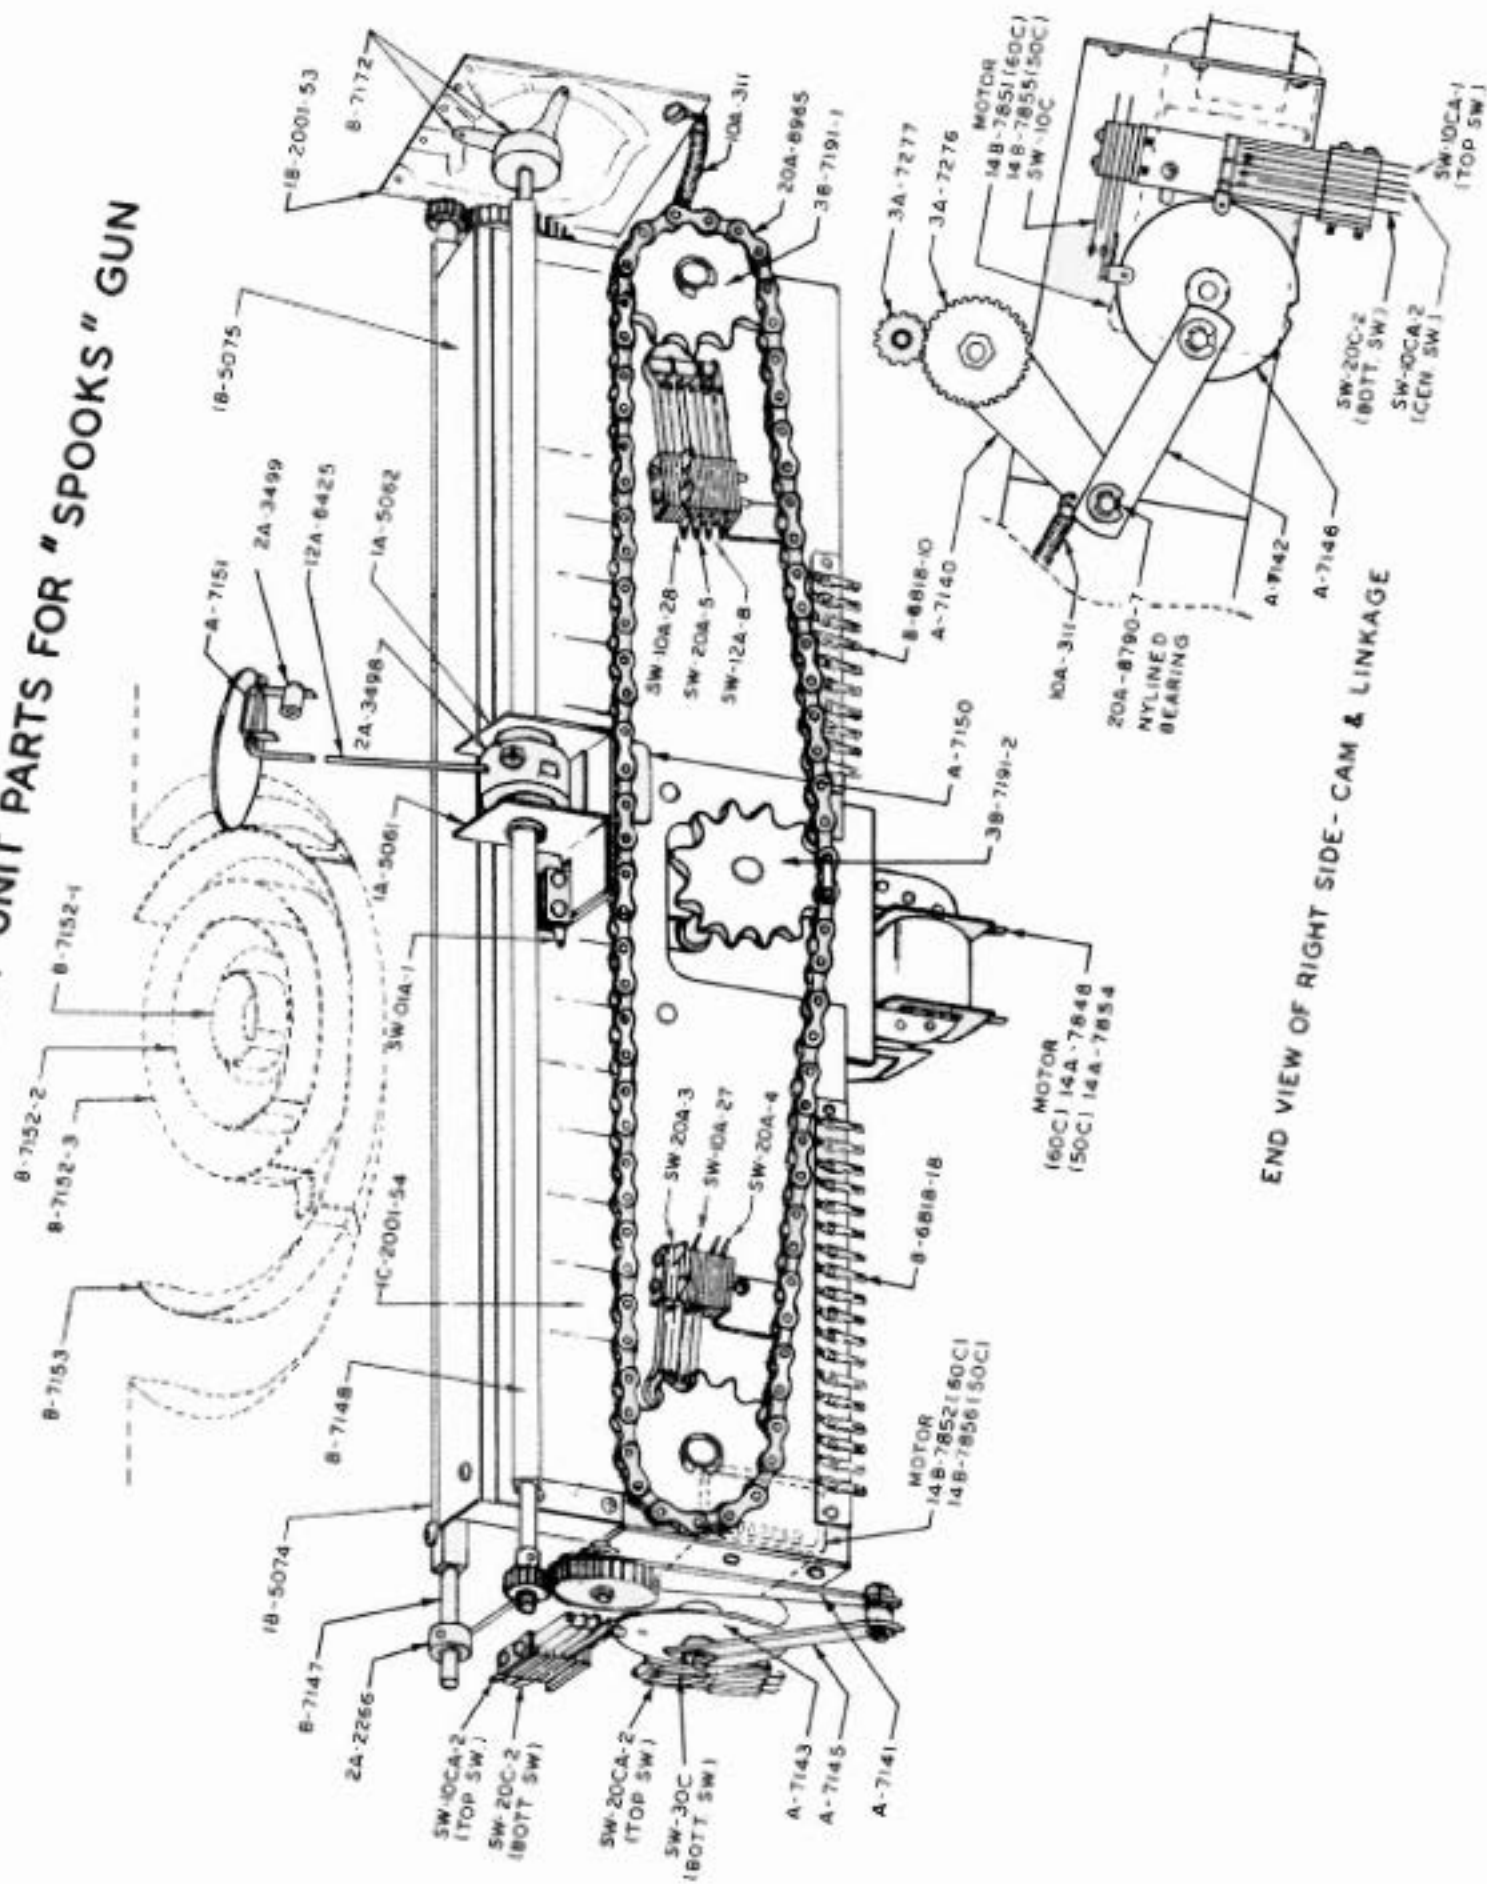


"SPOOK" TARGET UNIT PARTS FOR "PHANTOM" GUN

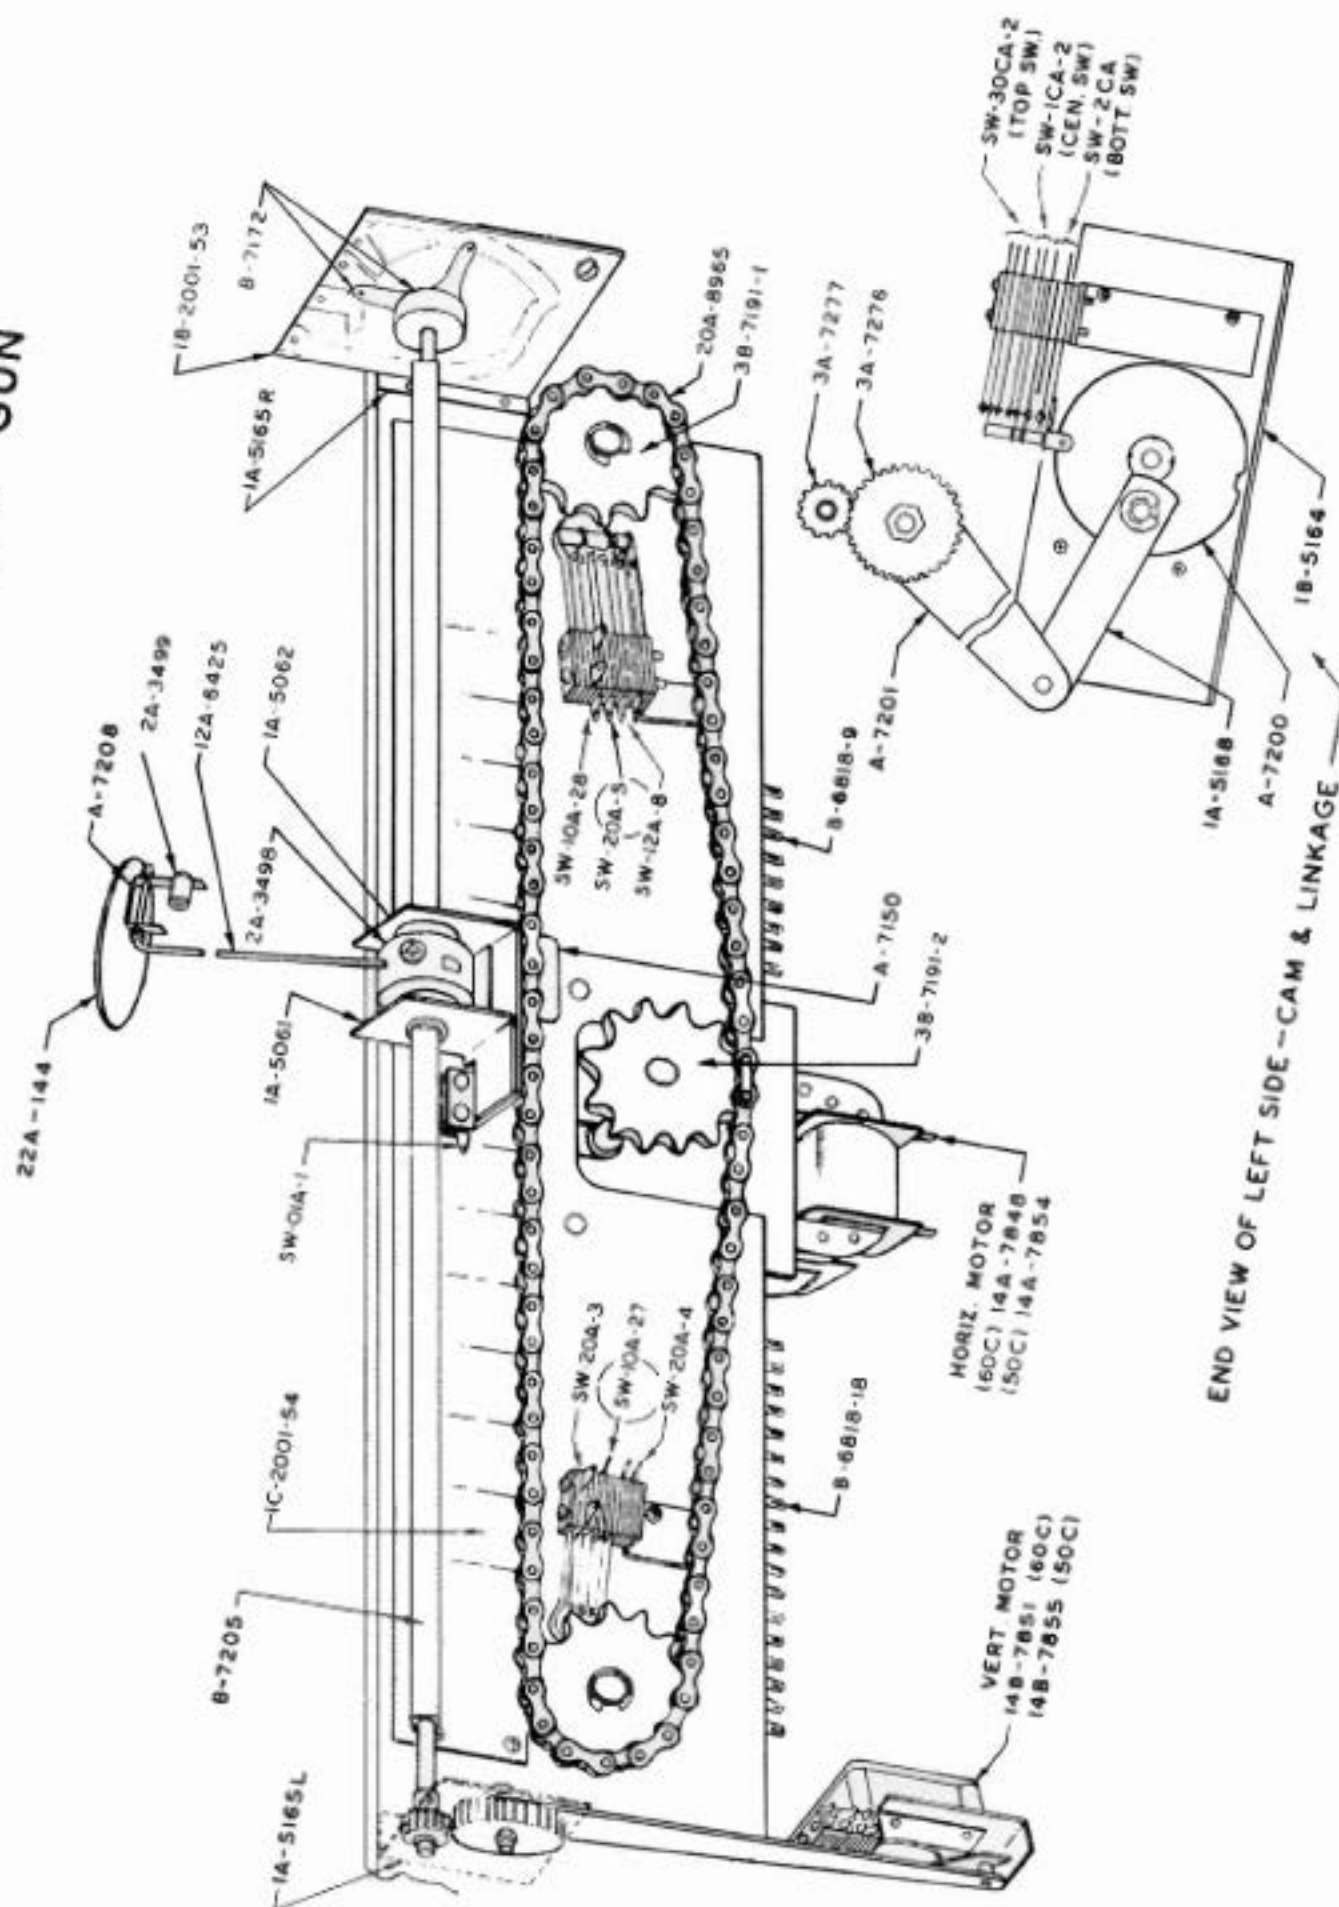

C-7314 REVERBERATOR UNIT ASS'Y. USED ON "BONANZA GUN"

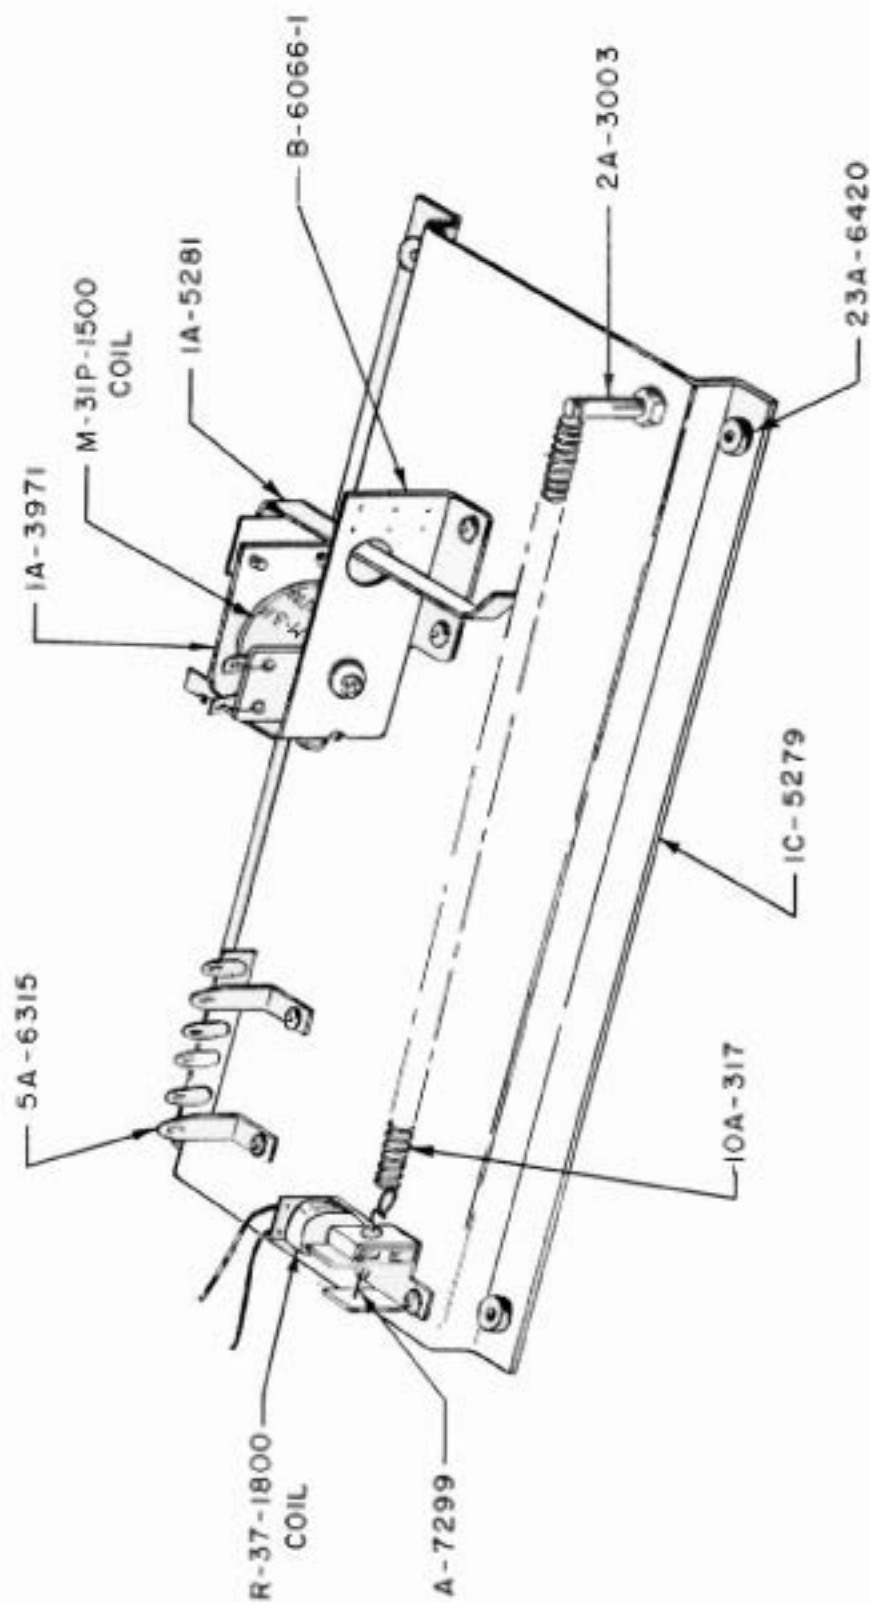

" SPOOKS " - SCREENED PARTS

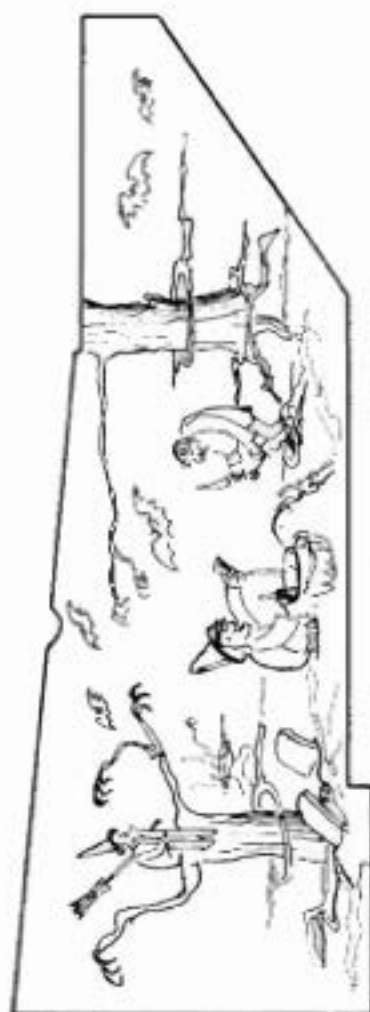

22E-125L
SIDE PANEL
(LEFT SIDE)




22E-126
SCORE EXPLANATION




22D-131
SCENERY UNDER WITCH




22E-125R
SIDE PANEL
(RIGHT SIDE)

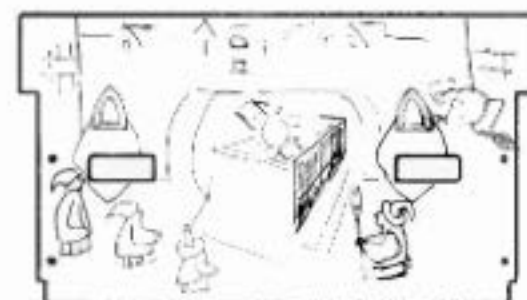


22D-133
BULLSEYE PANEL

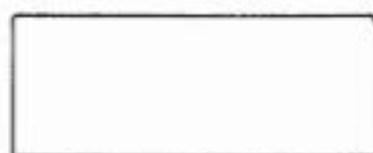

22D-127
BLANK OVER BLACK LIGHT

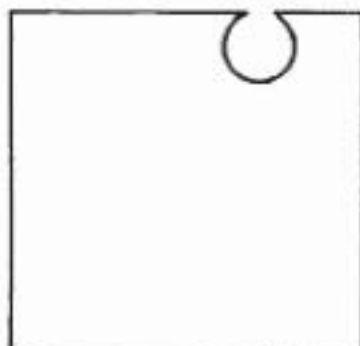

22E-128
BLANK UNDER BLACK LIGHT

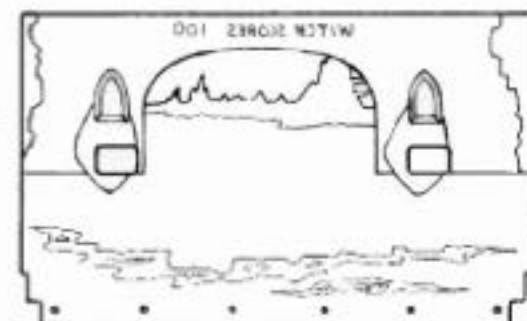

22D-130
CURTAIN



22C-129 L & R
BLANK LOWER COVER
PIECE



22B-132 L & R
WITCH COVER

"PHANTOM" GUN - SCREENED PARTS



22E-145
SCORE INSTRUCTIONS



22A-138-1
LEFT WINDOW
TARGET



22A-138
RIGHT WINDOW
TARGET

1000

30A-375-3
TARGET PLASTIC
(UPPER CENTER)



22E-125 R
CABINET SCENERY
RIGHT SIDE



30A-375-1
TARGET PLASTICS (LOWER)



30A-375-2



22E-125 L
CABINET SCENERY
LEFT SIDE



30A-375-5
TARGET PLASTIC
UPPER R.H.



30A-375-4
TARGET PLASTIC
UPPER L.H.



B-7202
SPINNER TARGET ASS'Y.



30C-375
SHOTS FIRED PLASTIC



22D-139
UPPER SCENERY




B-7203
SCENERY ASS'Y. - LOWER

"BONANZA GUN"—SCREENED PARTS



30C-384-12
1ST LEVEL FRONT SCENERY

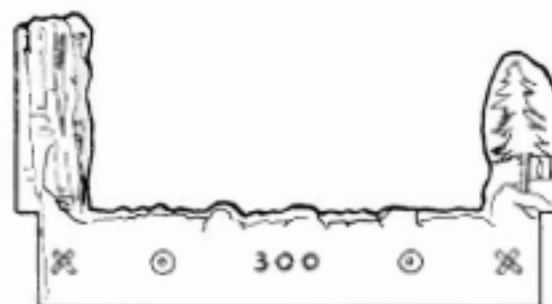

30C-384-13
1ST LEVEL BACK SCENERY



30C-384-14
3RD LEVEL SCENERY



30C-384-19
CABINET SCENERY
(RIGHT SIDE)




30C-384-20
CABINET SCENERY
(LEFT SIDE)




30C-384-15
MINE SHAFT SCENERY




30C-384-16
4TH LEVEL SCENERY



30C-384-18
500 TARGET

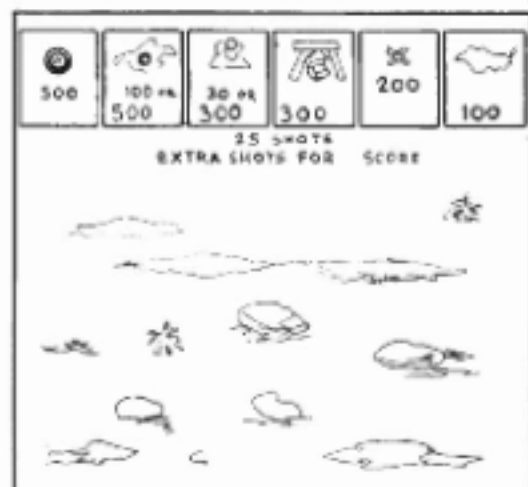

30C-384-21
INSTRUCTION CARD SCENERY



30C-384-22
SHOTS FIRED PLASTIC




30C-384-17
TARGET PANEL SCENERY

NOTES



NOTES

FRONT MOULDING -

HAYBURNERS II

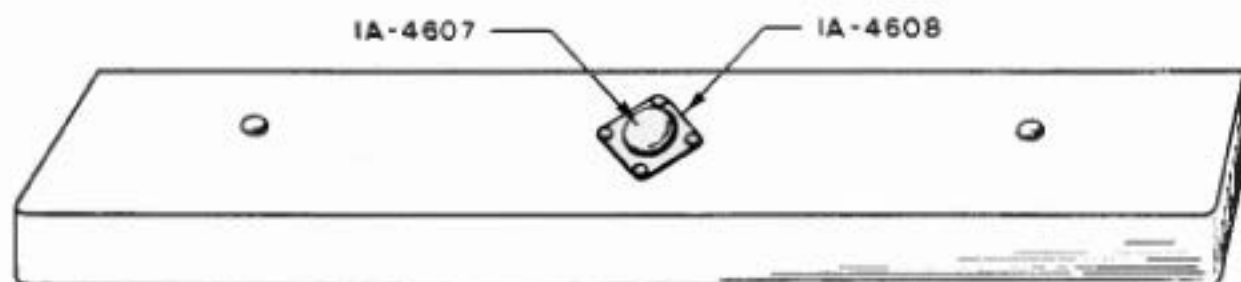


C-6972 - COMPLETE WITH ALL HARDWARE
 IID-273 - MOULDING (WOOD ONLY)

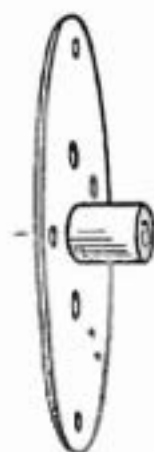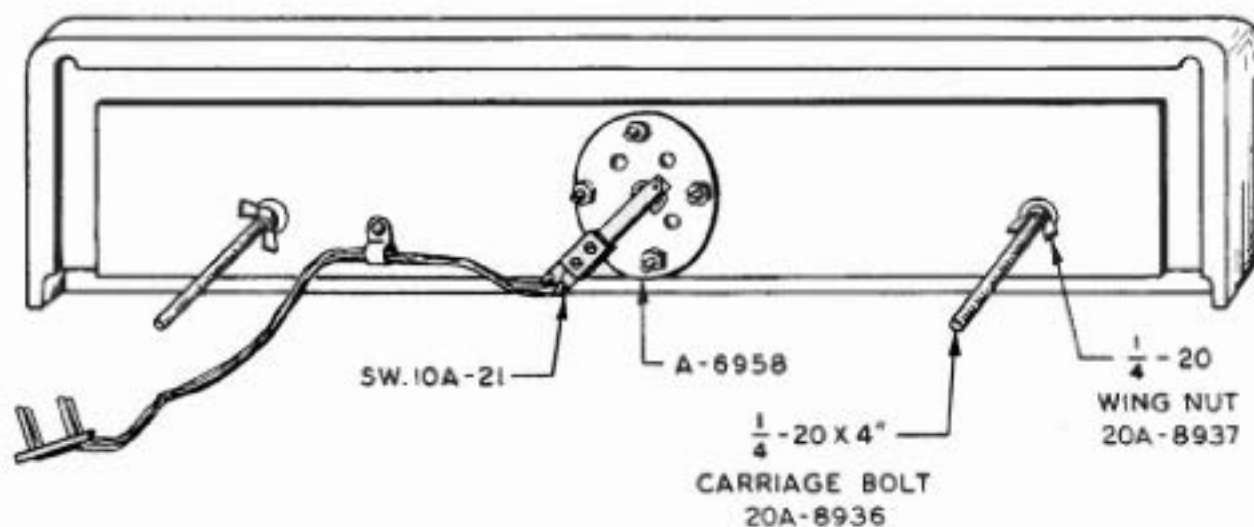

A-6958



10A-303



20A-8715-33




2A-3411



IA-4608




IA-4607

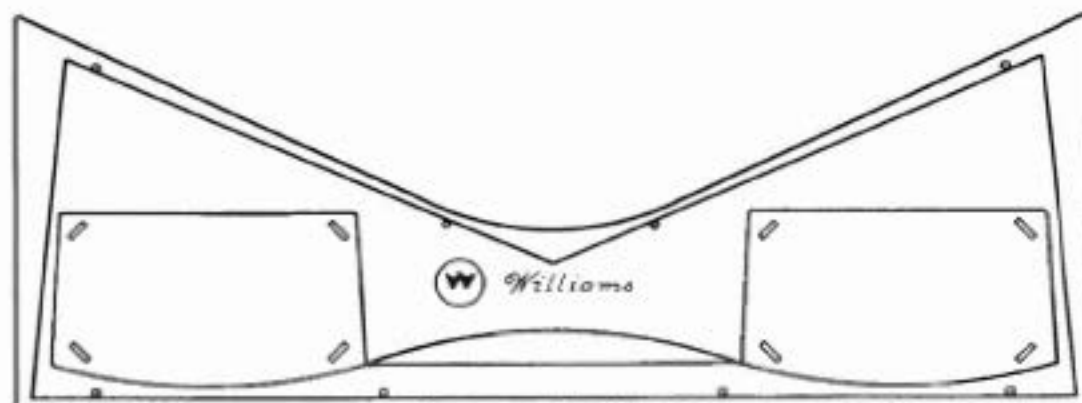


30D-4621-1 BOTTOM ARCH


"CLOSING FLIPPER ACTION" UNIT - "HAYBURNERS II" D-6988-1 COMPLETE UNIT

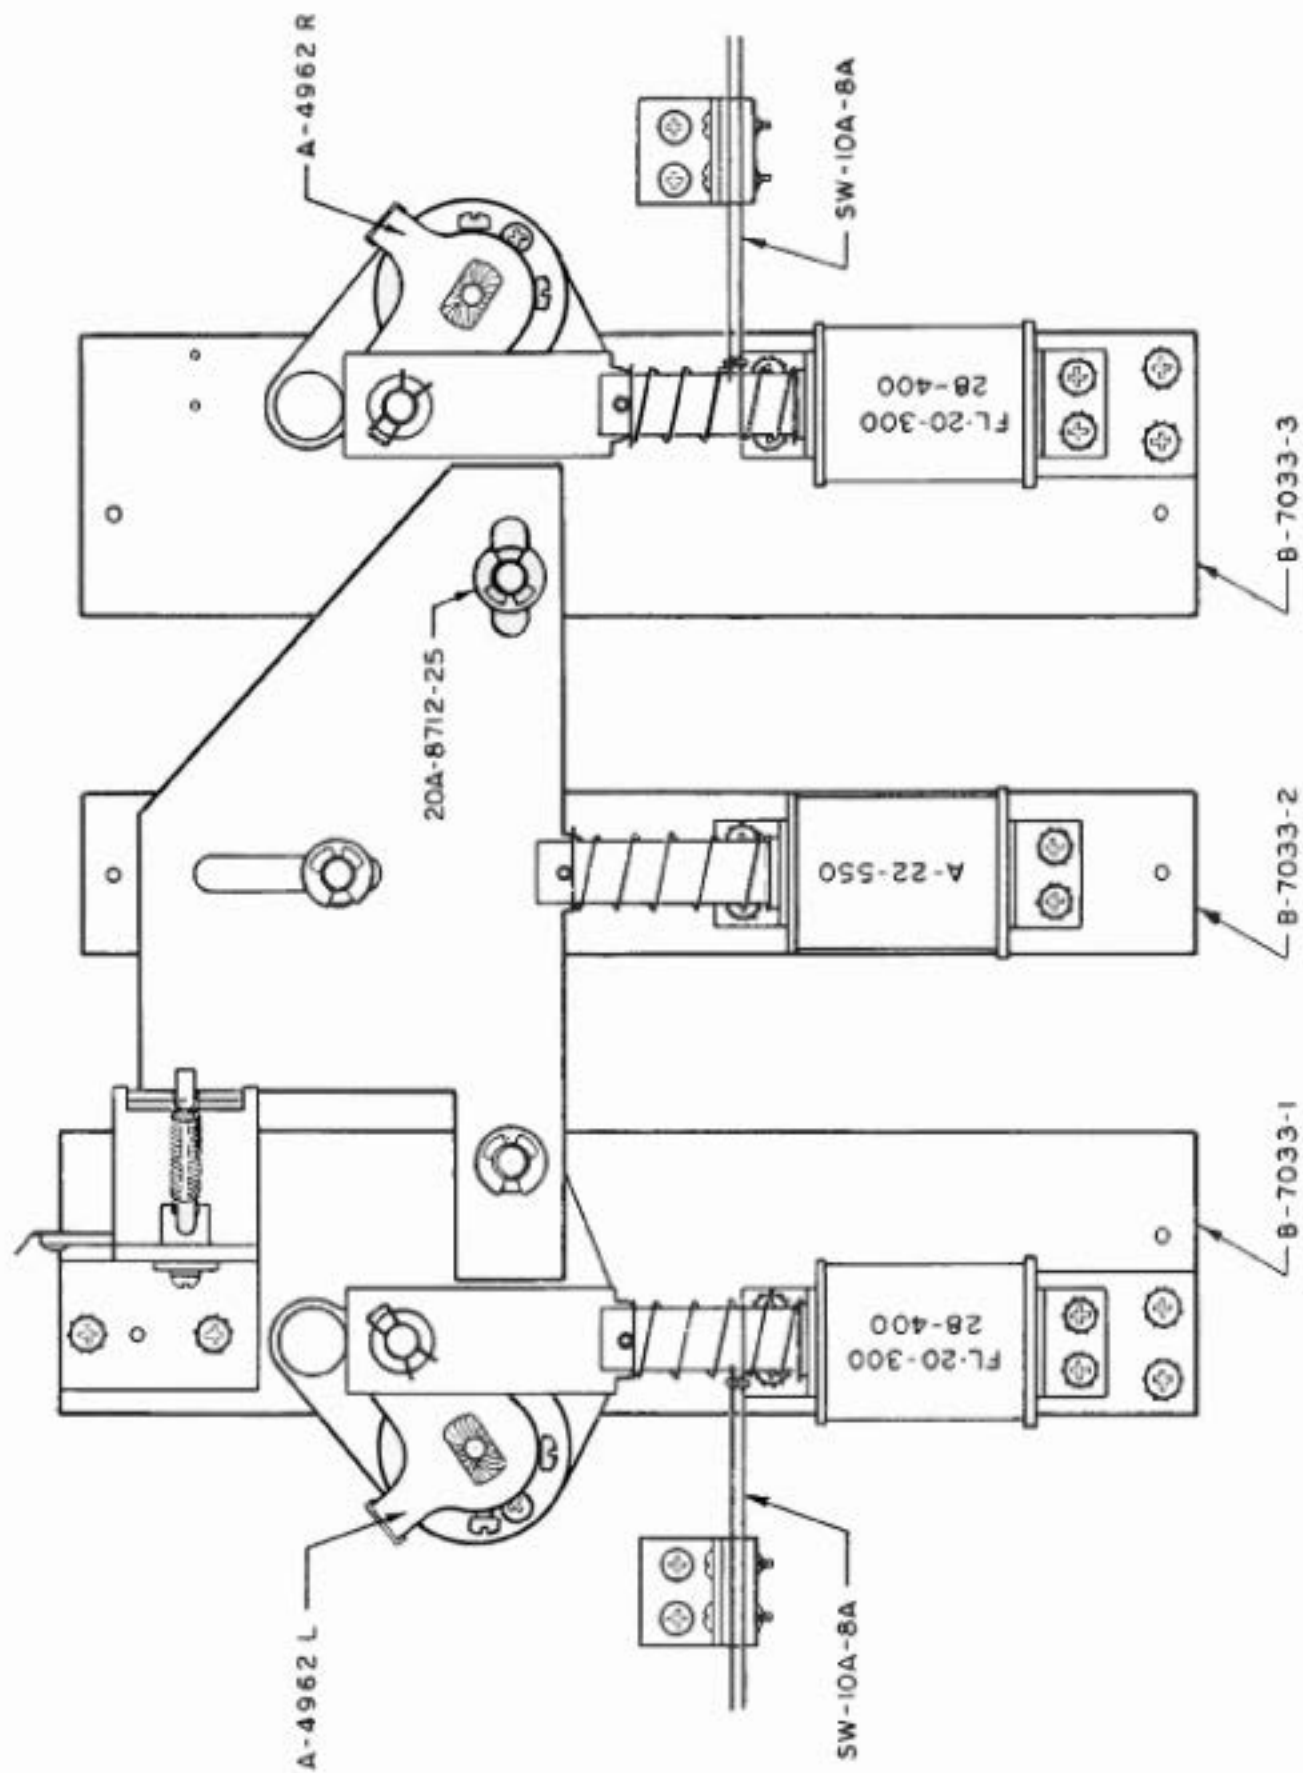

C-6978-1 BALL SHOOTER UNIT (HAYBURNERS II)

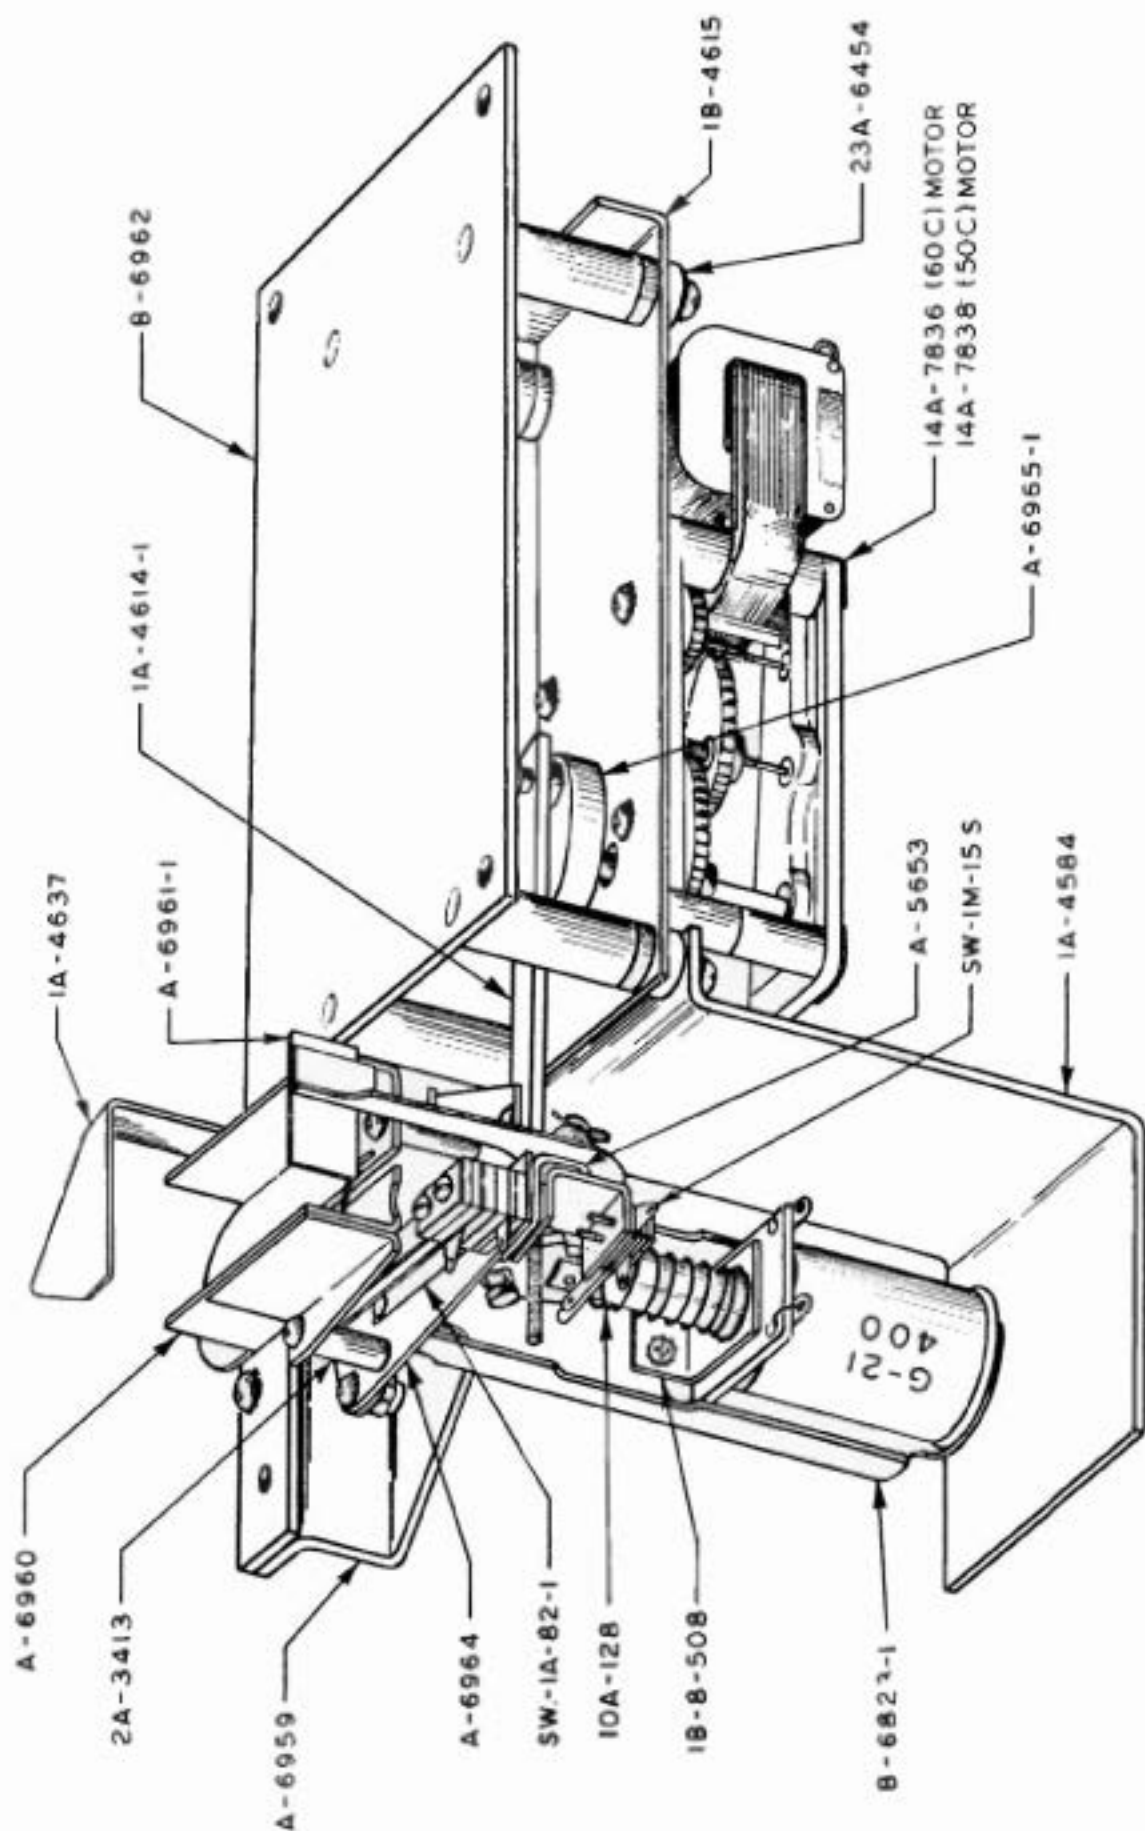


"CLOSING FLIPPER" PARTS ON "HAYBURNERS II"

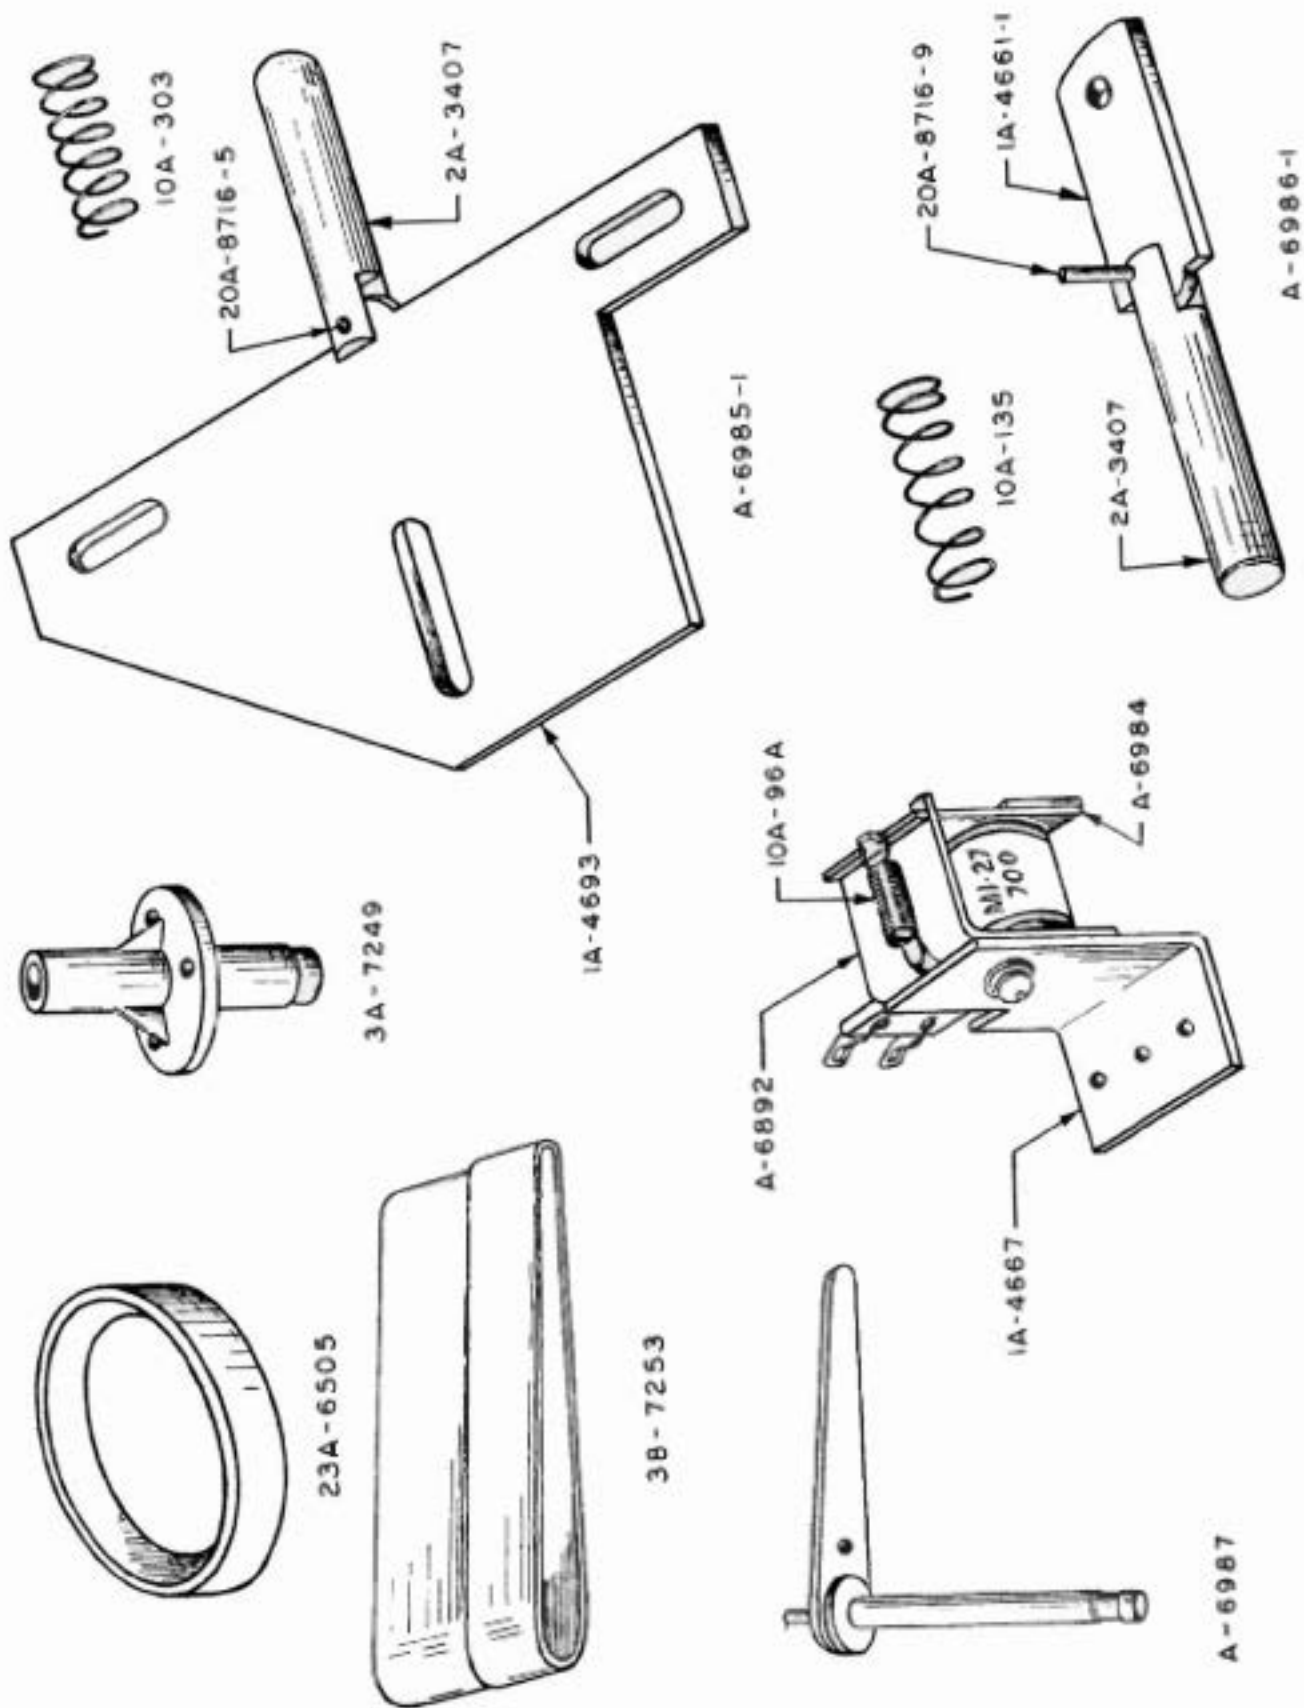


HORSE UNIT COMPLETE - "HAYBURNERS II"


E-6979

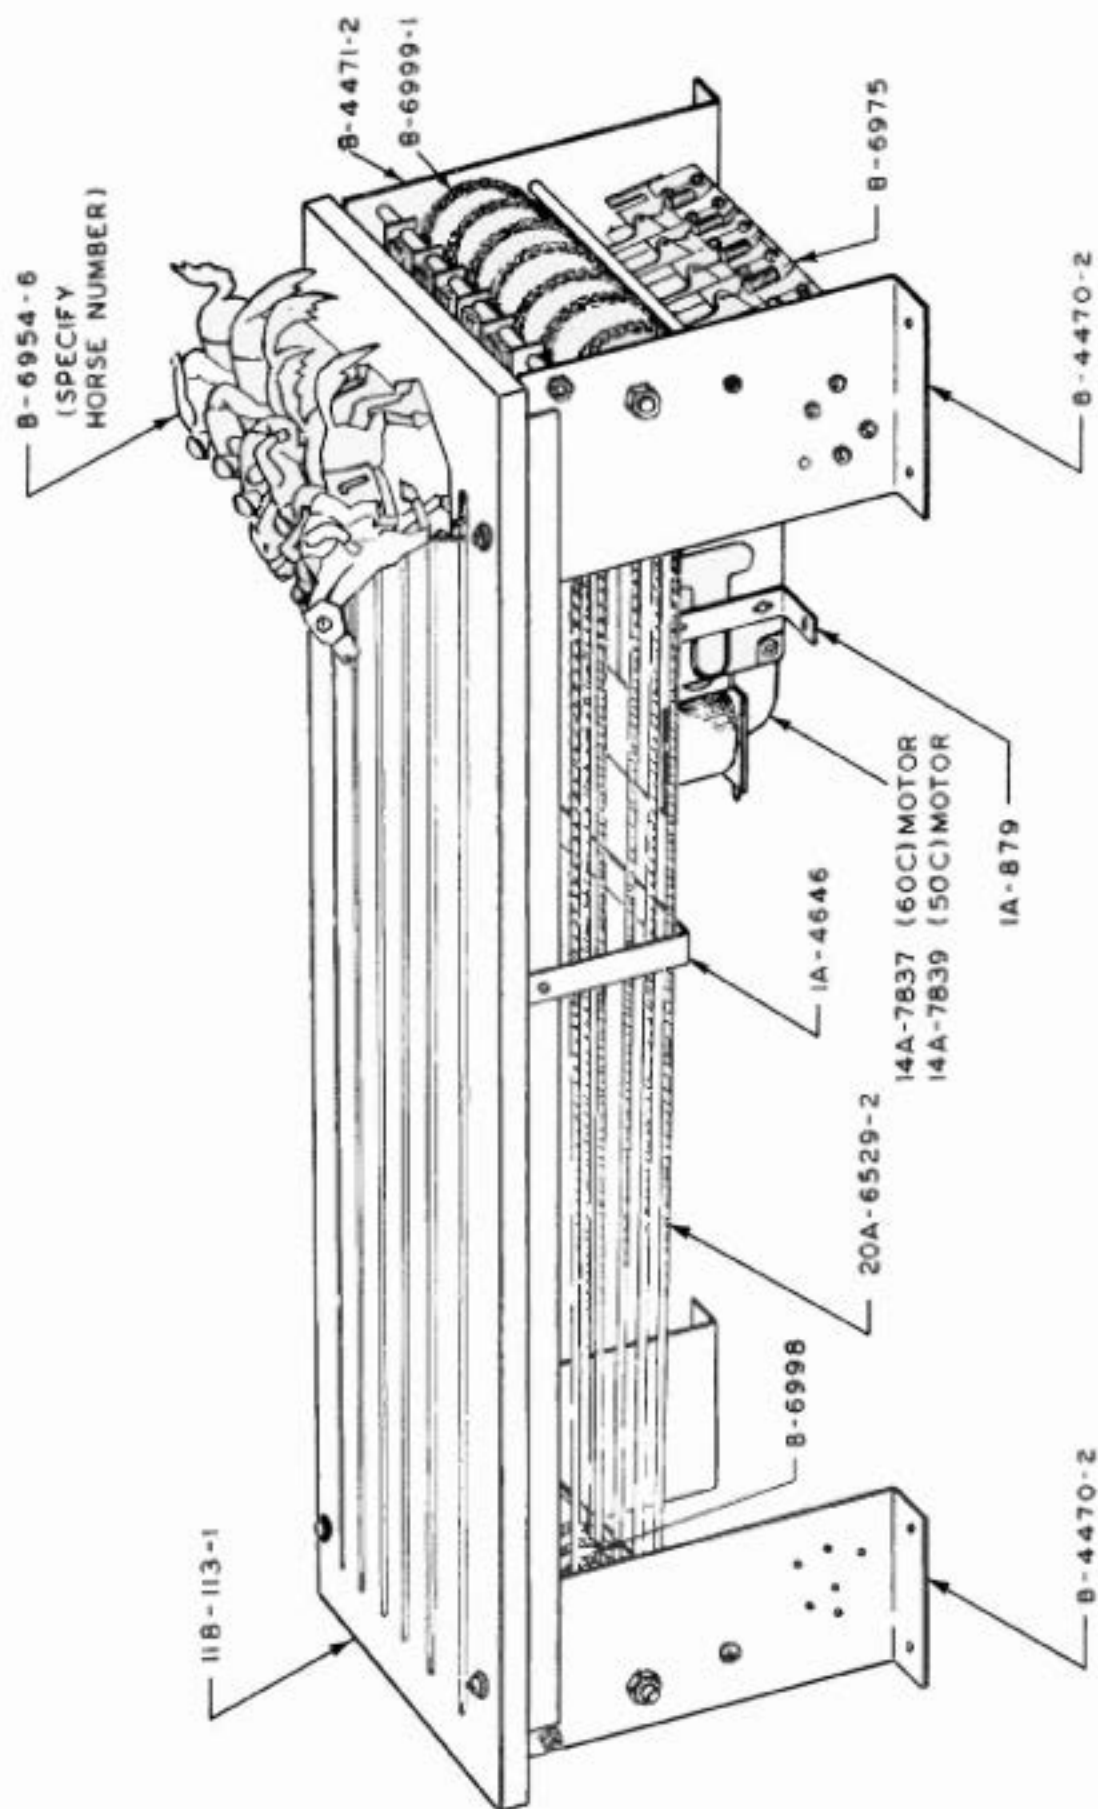



HORSE UNIT PARTS

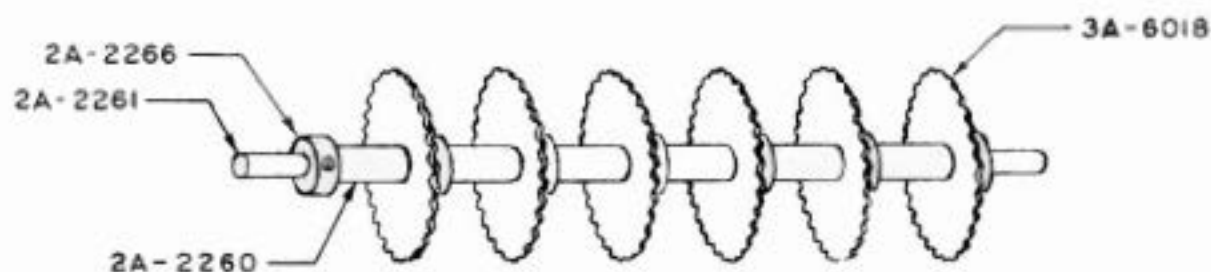

B-6998 #1 (FREE WHEELING) SPROCKET ASSEMBLY

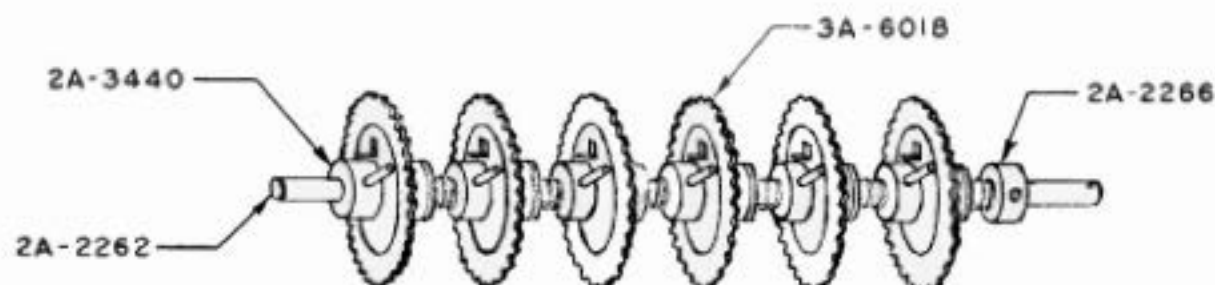

B-6999-1 #2 (CLUTCH TYPE) SPROCKET ASSEMBLY

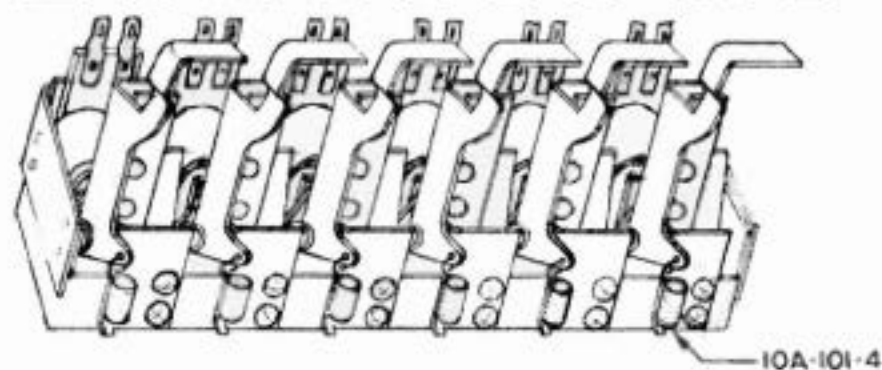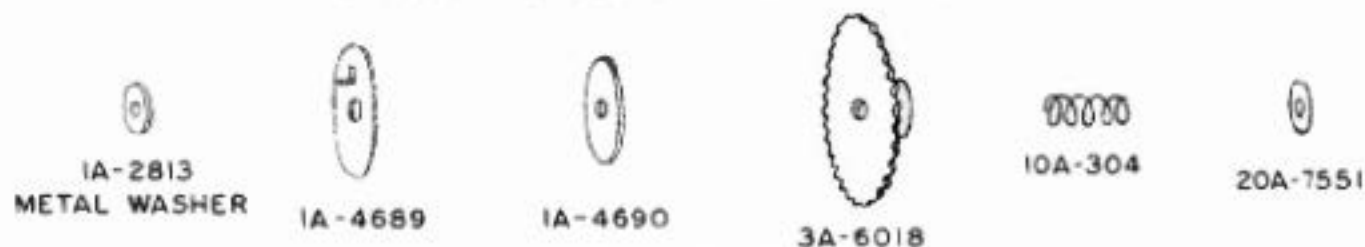

B-6975 BRAKE RELAY ASSEMBLY



A-4488-1



A-6892




A-6967




HORSE RELEASE COIL
M2-29-1000

PARTS FOR HORSE UNIT — "HAYBURNERS II"

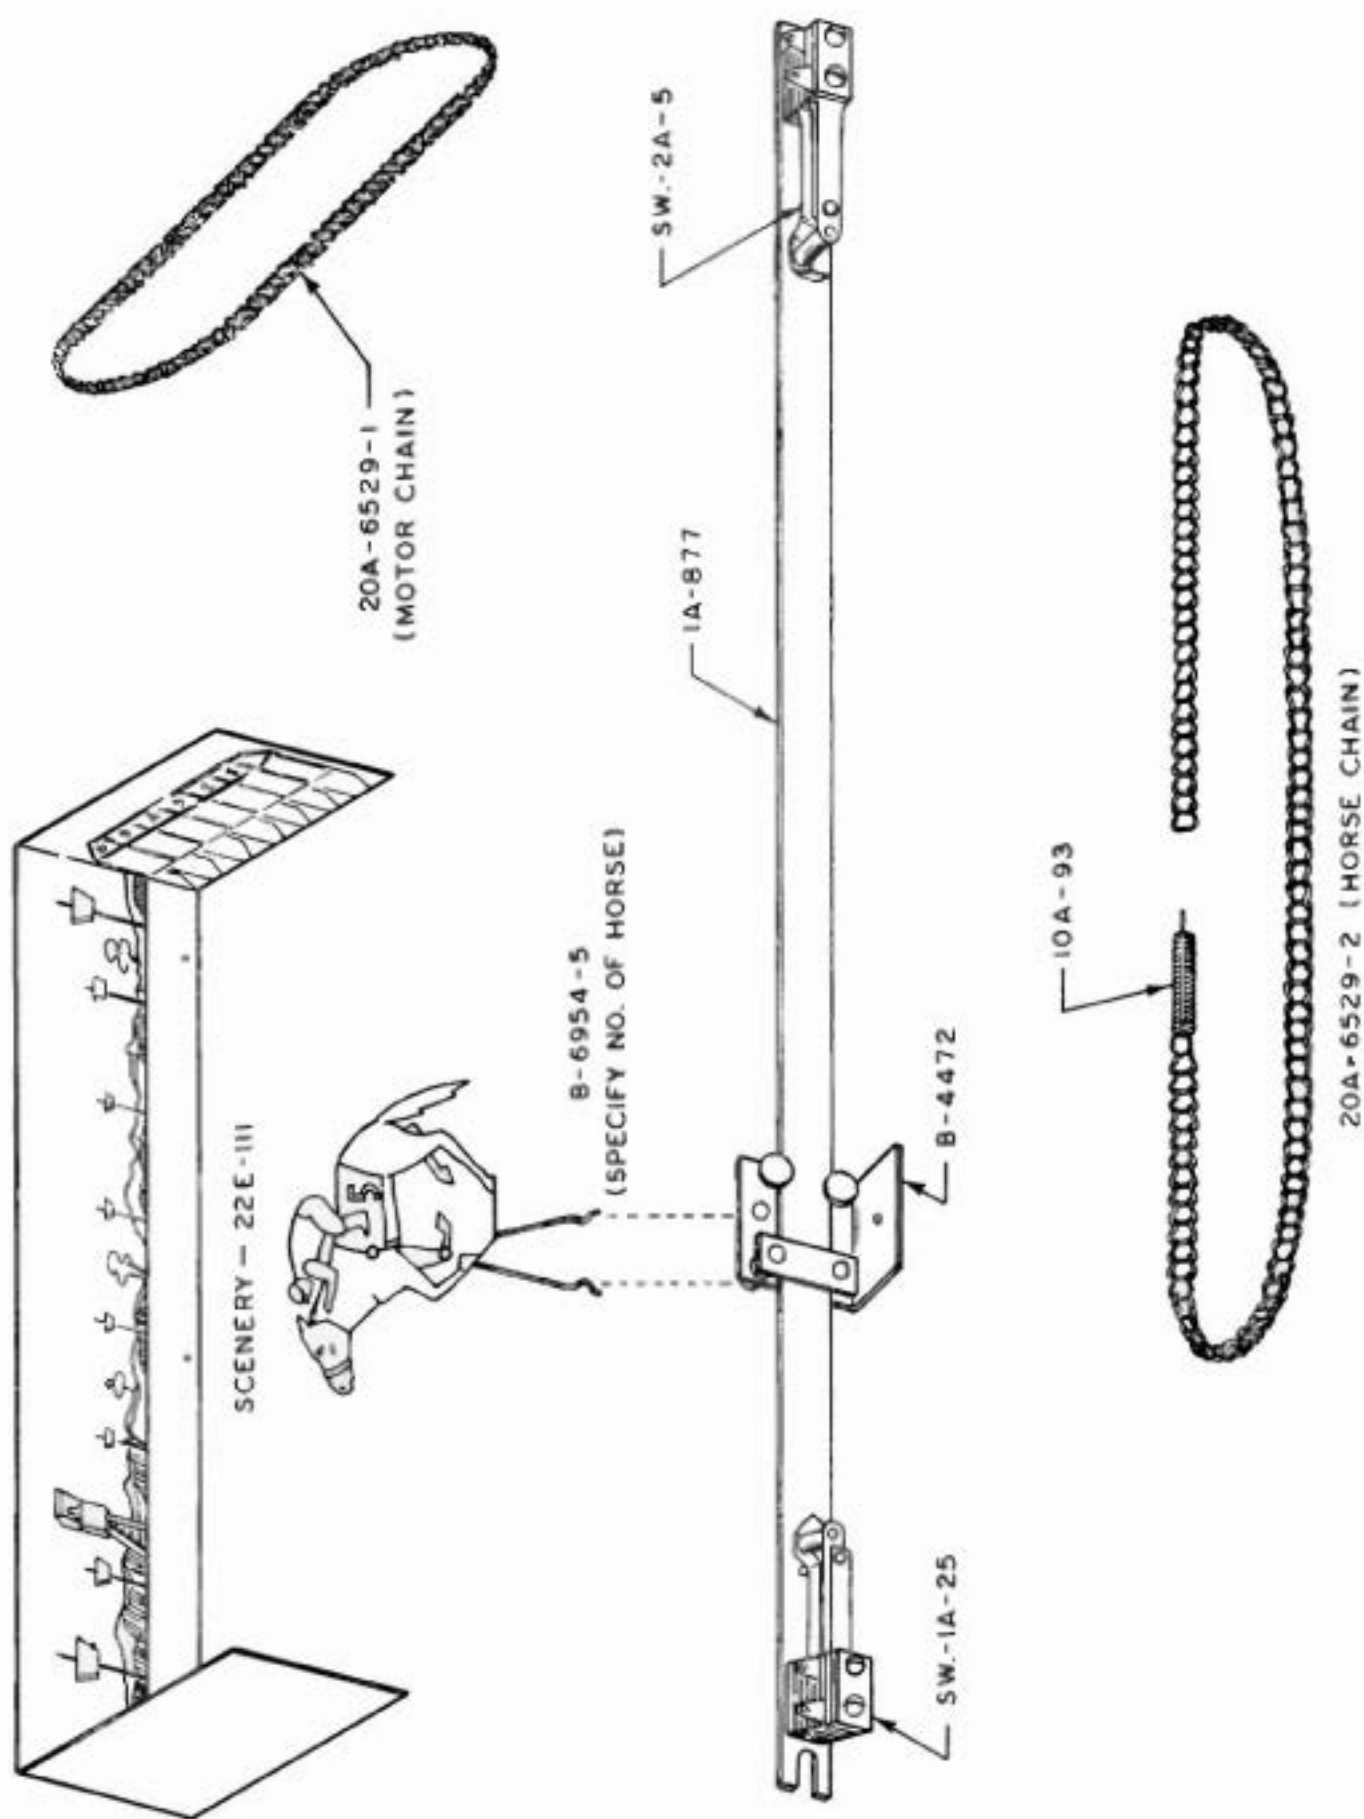

TARGET PANEL ASSEMBLY - "HAYBURNER II"

D-6973-1

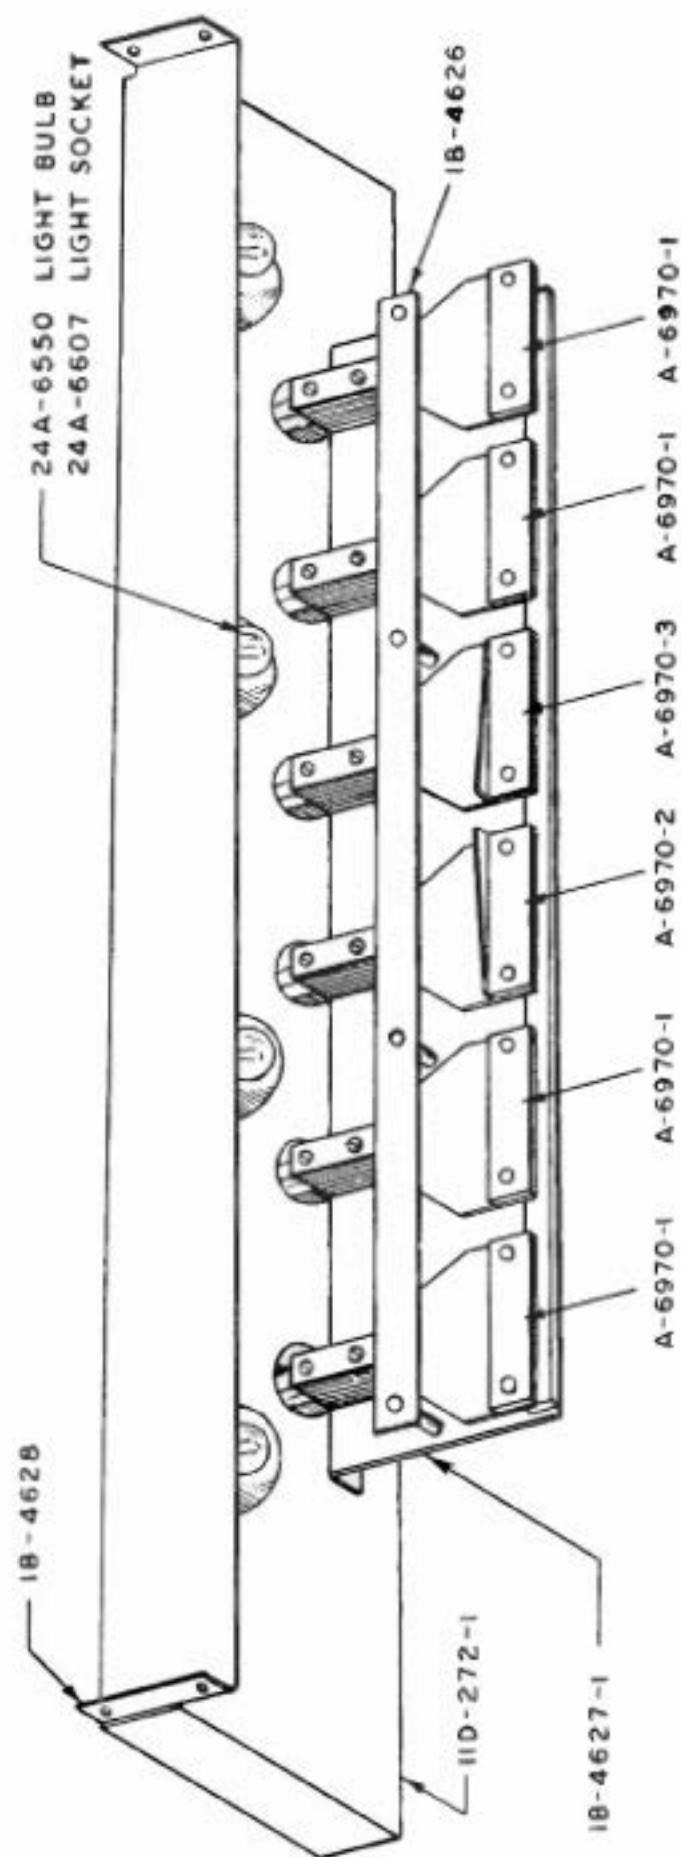

SW-1A-83-1




1A-4622-1



1A-4622-2




1A-4622-3

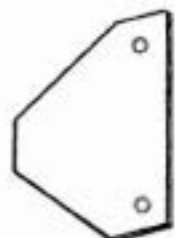

1A-4624-1

D-725I-1 10 STEP 3" DRUM UNIT

WITHOUT PRINTED CIRCUIT & CONTACT RING - WITH 9TH POSITION SWITCH
(0, 10 AND 100 SCORE DRUMS)

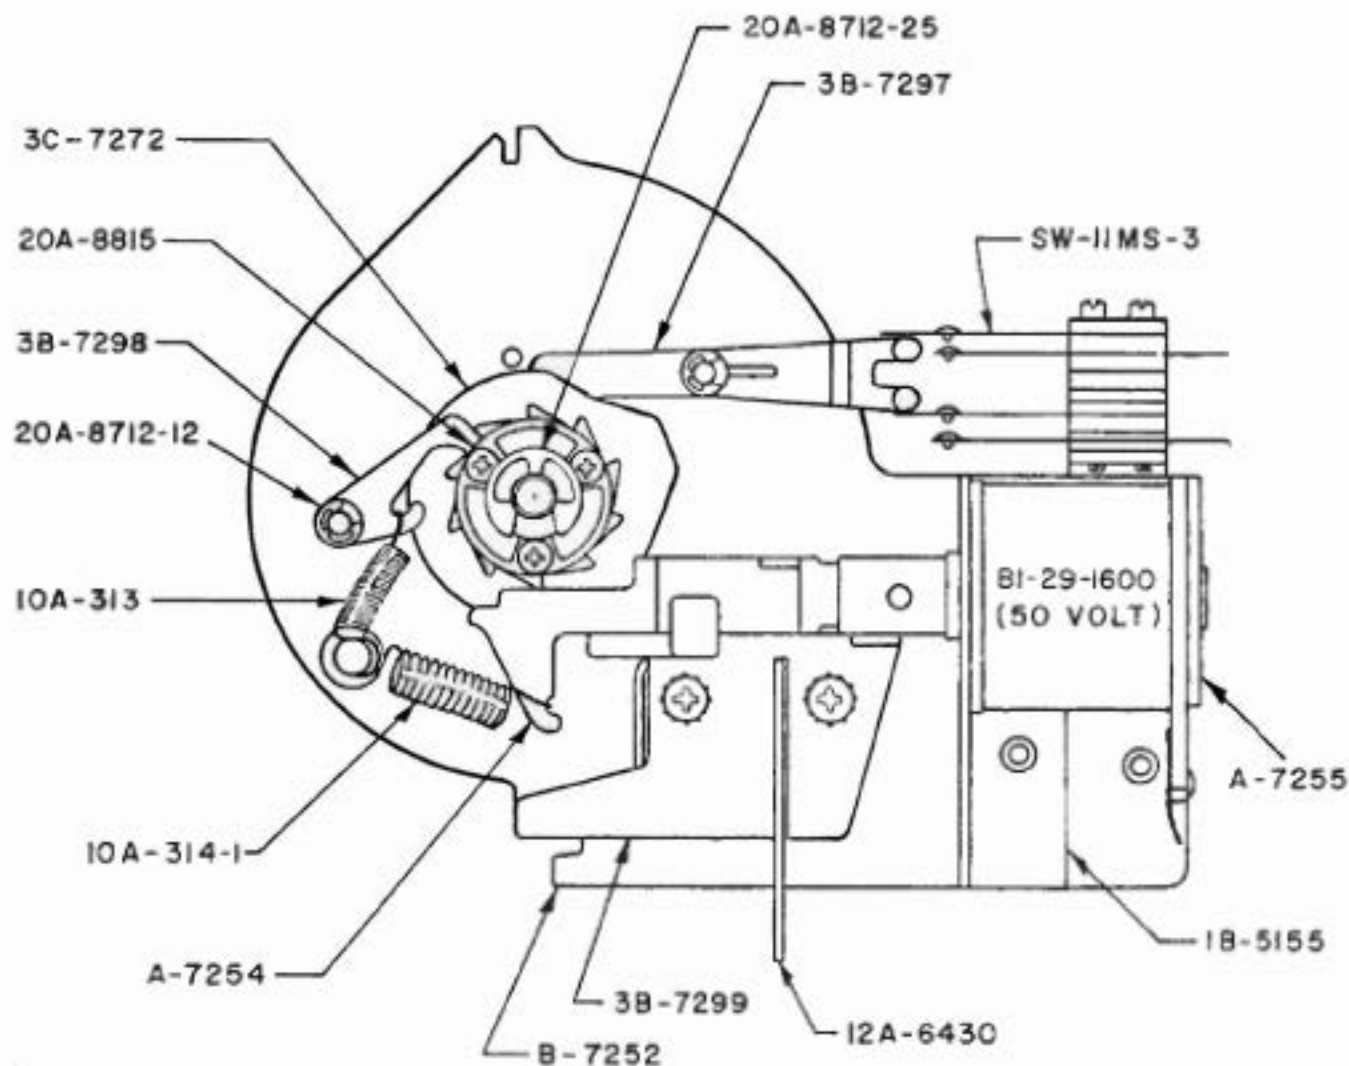


SWITCH ADJUSTMENT :

AT "0" OR INDEX POSITION BOTH SWITCHES ARE OPEN AS SHOWN.

AT 1ST TO 8TH POSITION TOP SWITCH IS CLOSED, BOTTOM SWITCH REMAINS OPEN.

AT 9TH POSITION BOTH SWITCHES ARE CLOSED, AS SHOWN.

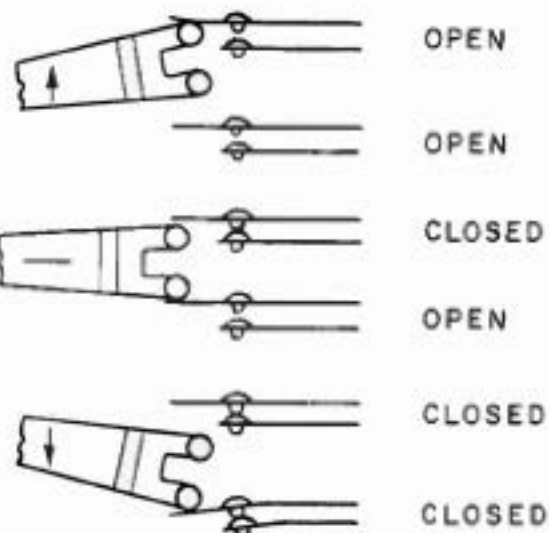


D-7251-1 10 STEP 3" DRUM UNIT

WITHOUT PRINTED CIRCUIT, CONTACT RING AND 9 TH POSITION SWITCH.

(1-9 REEL FOR 1000 UNIT

1-10 REEL FOR FRAME UNIT)

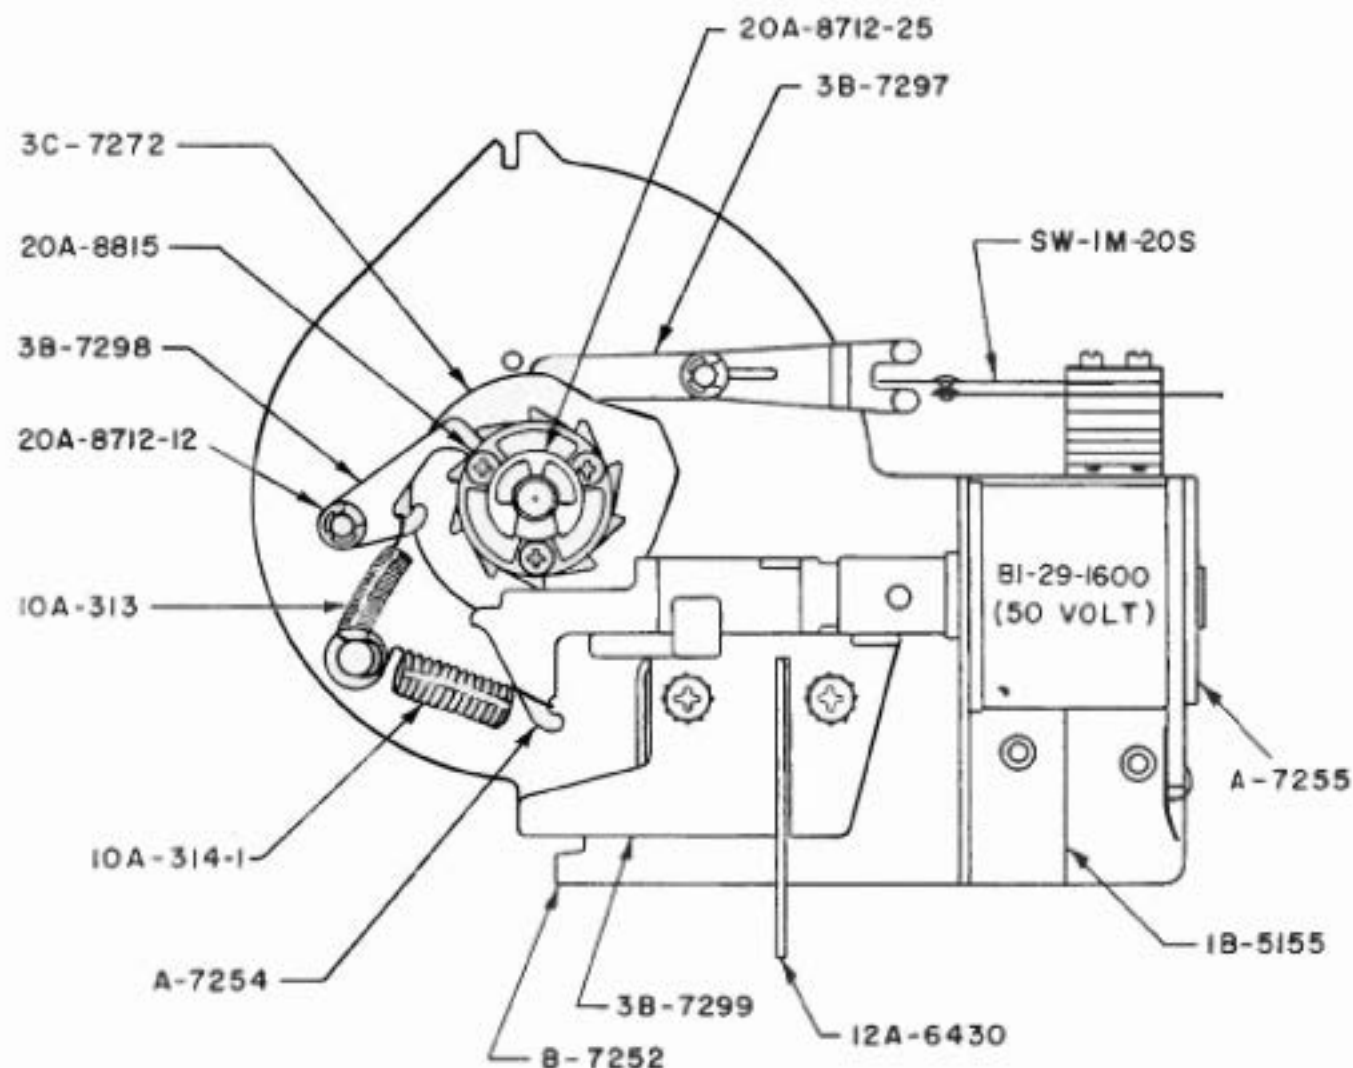


10 STEP UNIT PARTS

3" DRUM UNIT



3B-7297
SWITCH ACTUATOR

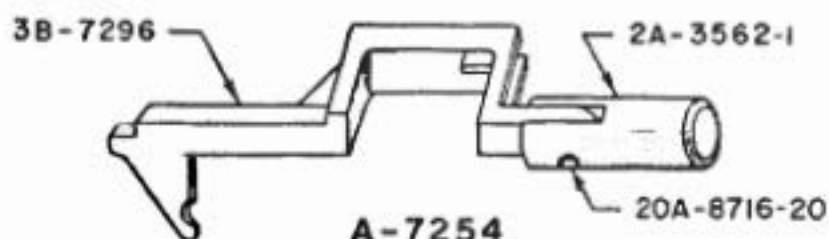


A-7254
DRIVE PAWL & ARMATURE



3C-7272
RATCHET & CAM



3B-7298
RATCHET STOP PAWL

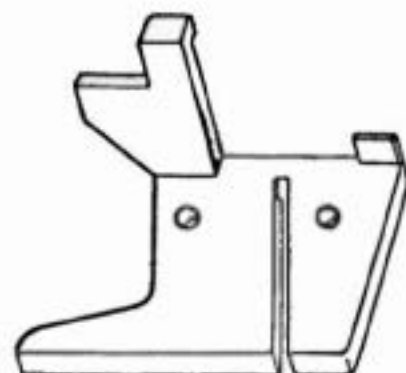

3B-7299
BRACKET-DRIVE PAWL

3" SCORE DRUM REELS



30B-7295-1
ALL SCORE UNITS ON
FLIPPER GAMES,
ON BOWLERS & SHUFFLES,
1-9, "TENS" & "HUNDREDS"




30B-7295-2
BOWLER & SHUFFLE
FRAME UNIT



30B-7295-3
BOWLER & SHUFFLE
"THOUSANDS"


C-7194 ROTO STEP UP UNIT

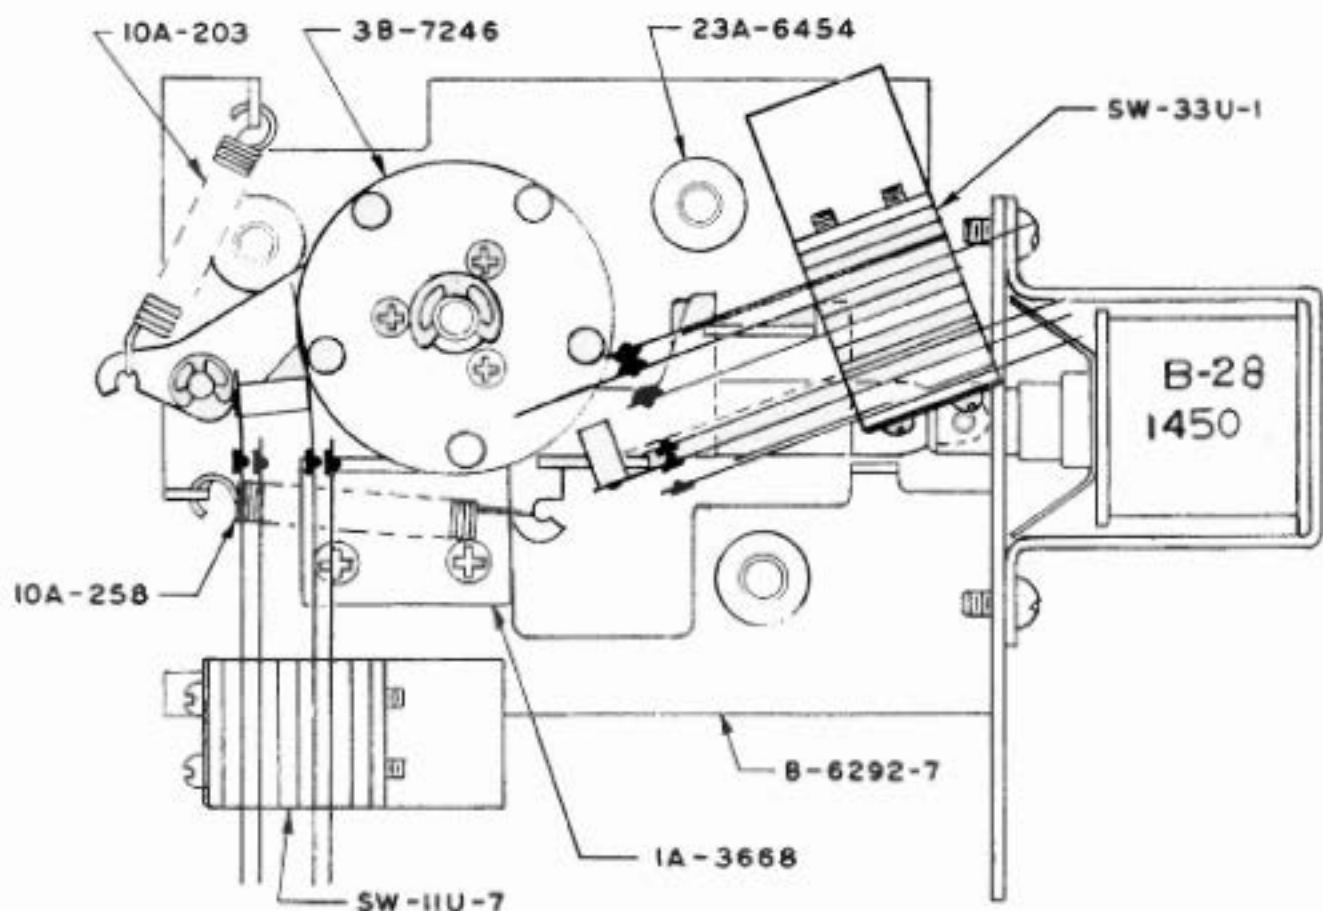


USED ON "BETA"




**3C-7272
RATCHET & CAM**

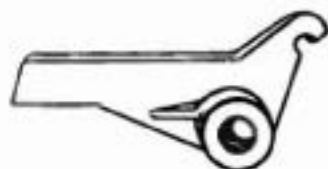

**3A-7125
RATCHET STOP PAWL**

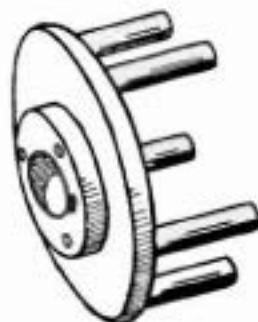


**38-7246
ALTERNATOR DISC**

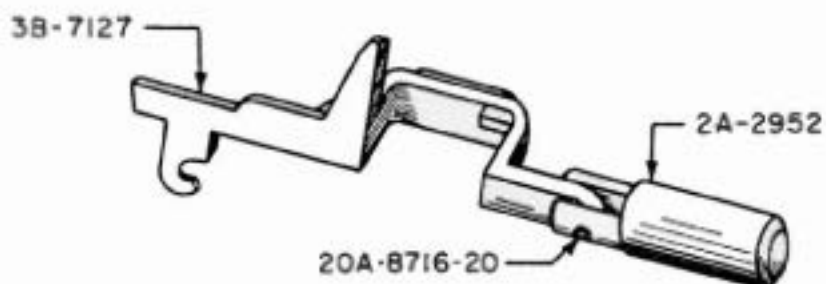


**A-6295
DRIVE PAWL & ARMATURE**


ROLLOVER FORMS FOR BOWLER & SHUFFLE GAMES

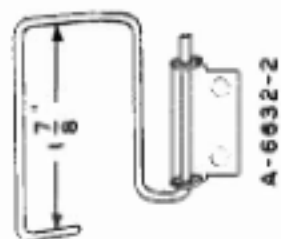


A-6632-2

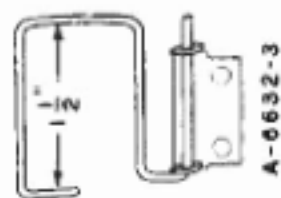


A-6632-3

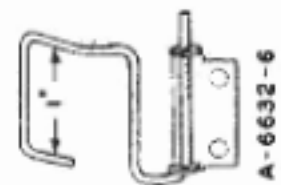


A-6632-6

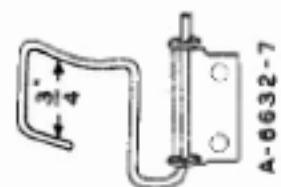

A-6632-7

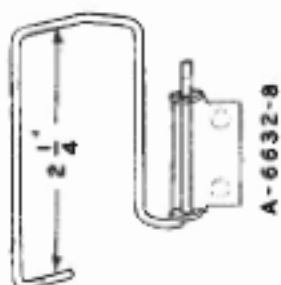


A-6632-8

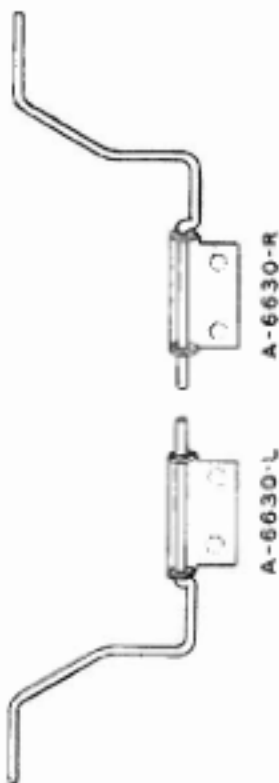


A-6630-L

A-6630-R

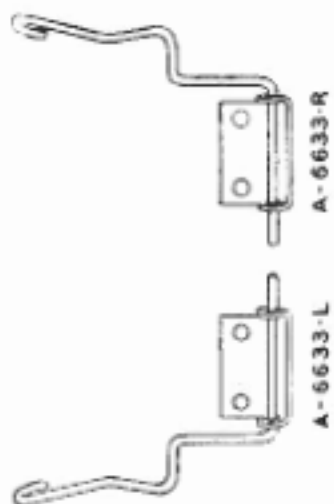


A-6633-L

A-6633-R

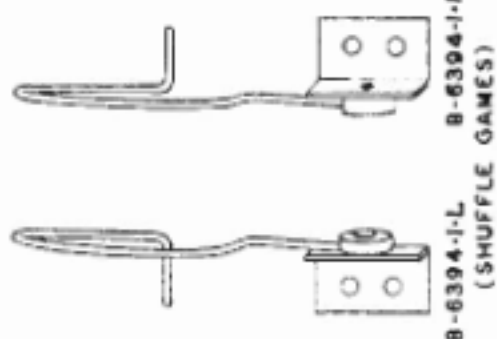

B-6394-L


B-6394-R
(SHUFFLE GAMES)

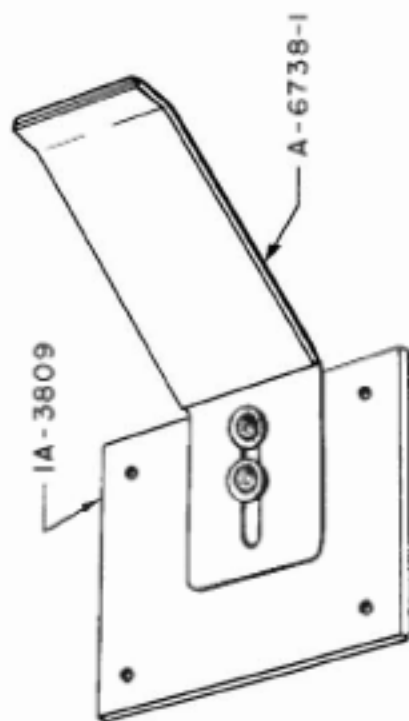

IA-3809

A-6738-I

A-6738 BALL TRACK BRAKE ASS'Y.

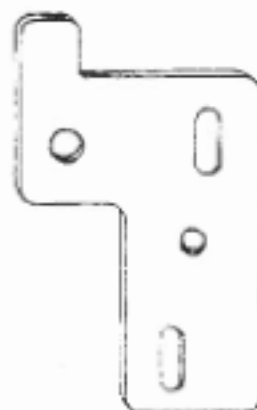


IA-2961 INSERT HINGE




IA-2962-I

INSERT HINGE PIVOT


NEW PIN HANGER ASSEMBLY & RELATED PARTS FIRST USED ON "TANGO" (SHUFFLE) & "AMAZON" (BOWLER) GAMES

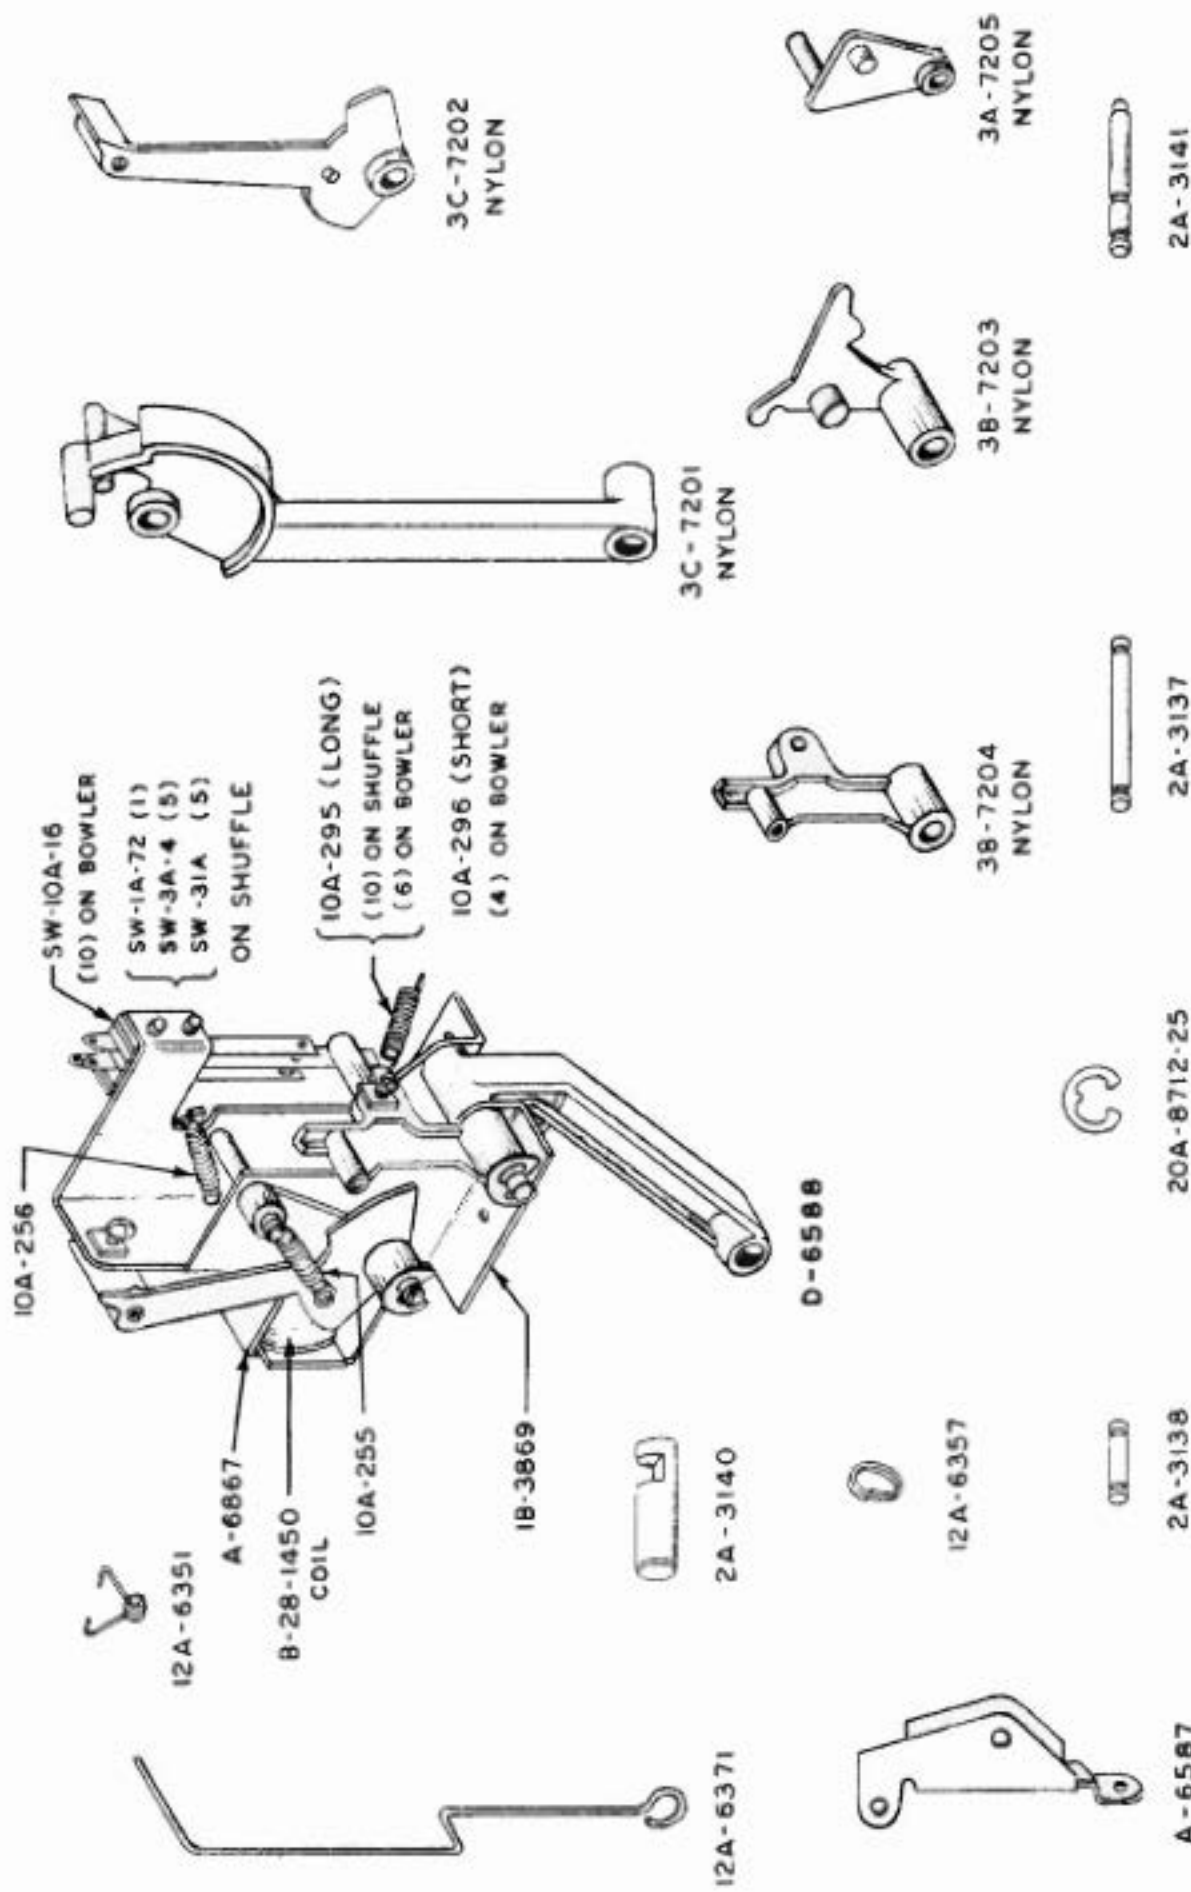


REPLACEMENT PARTS FOR NEW PIN HANGER UNIT FIRST USED ON "TANGO" (SHUFFLE) & "AMAZON" (BOWLER) GAMES

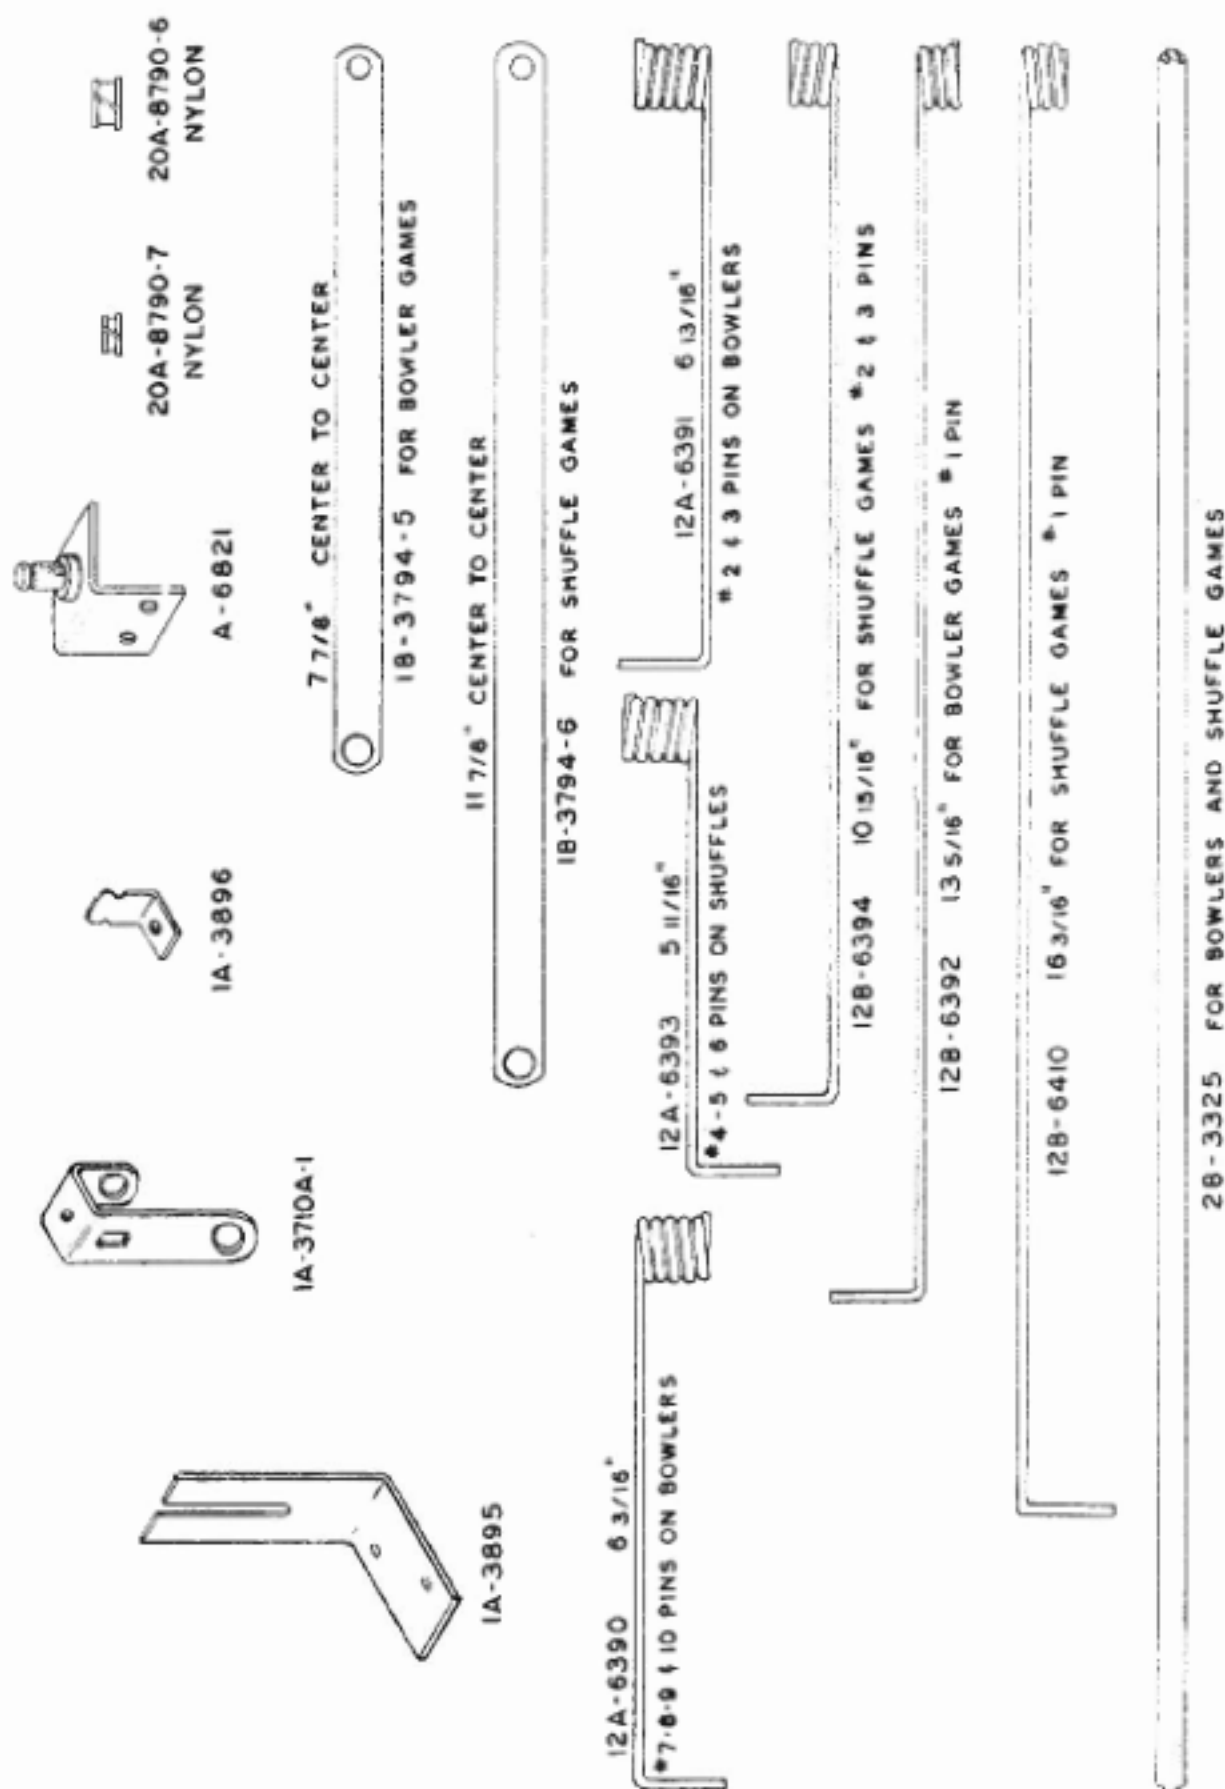

BALL LIFT PARTS FOR BOWLING ALLEY

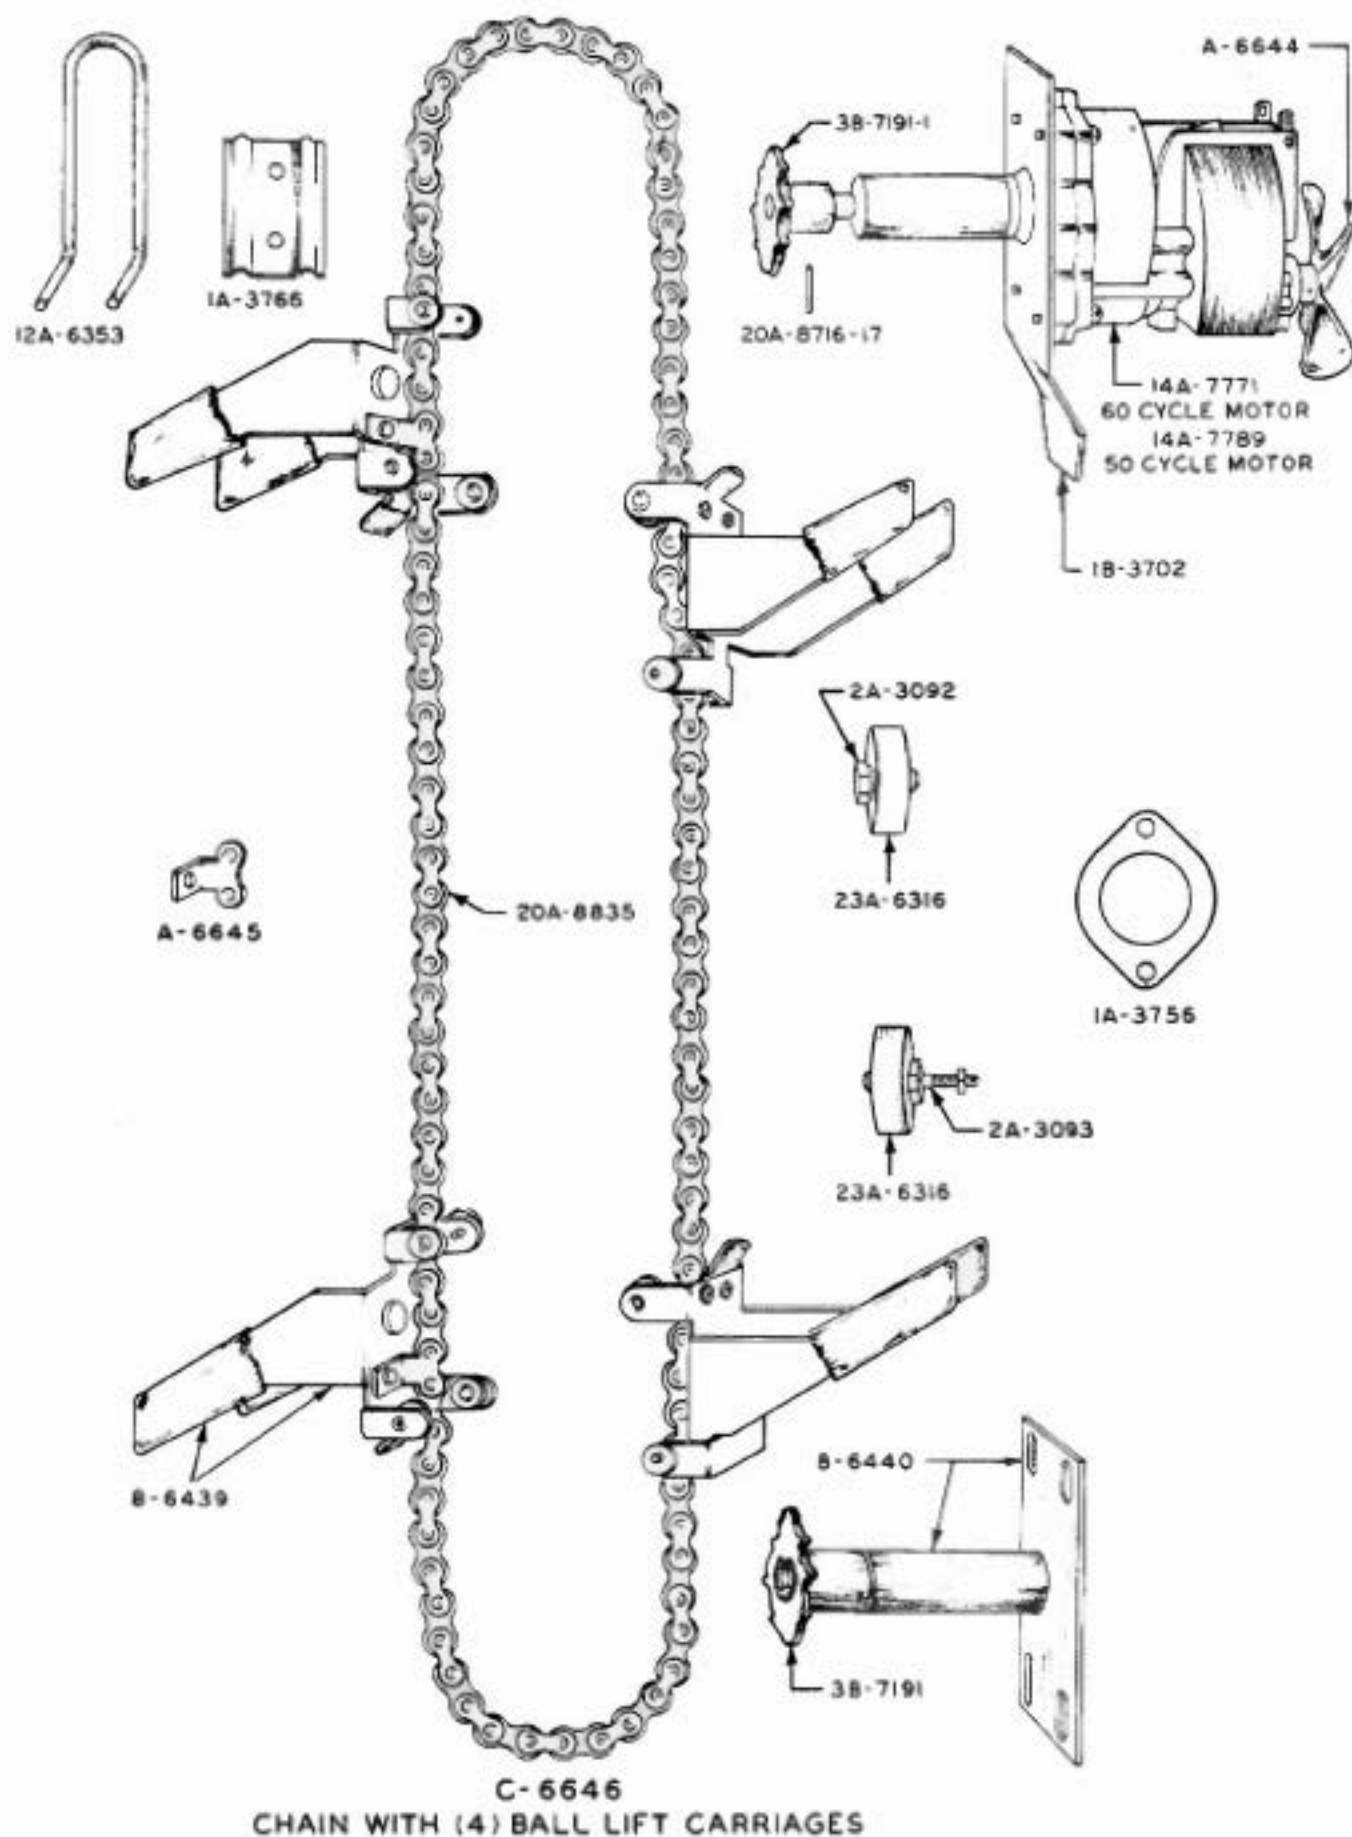

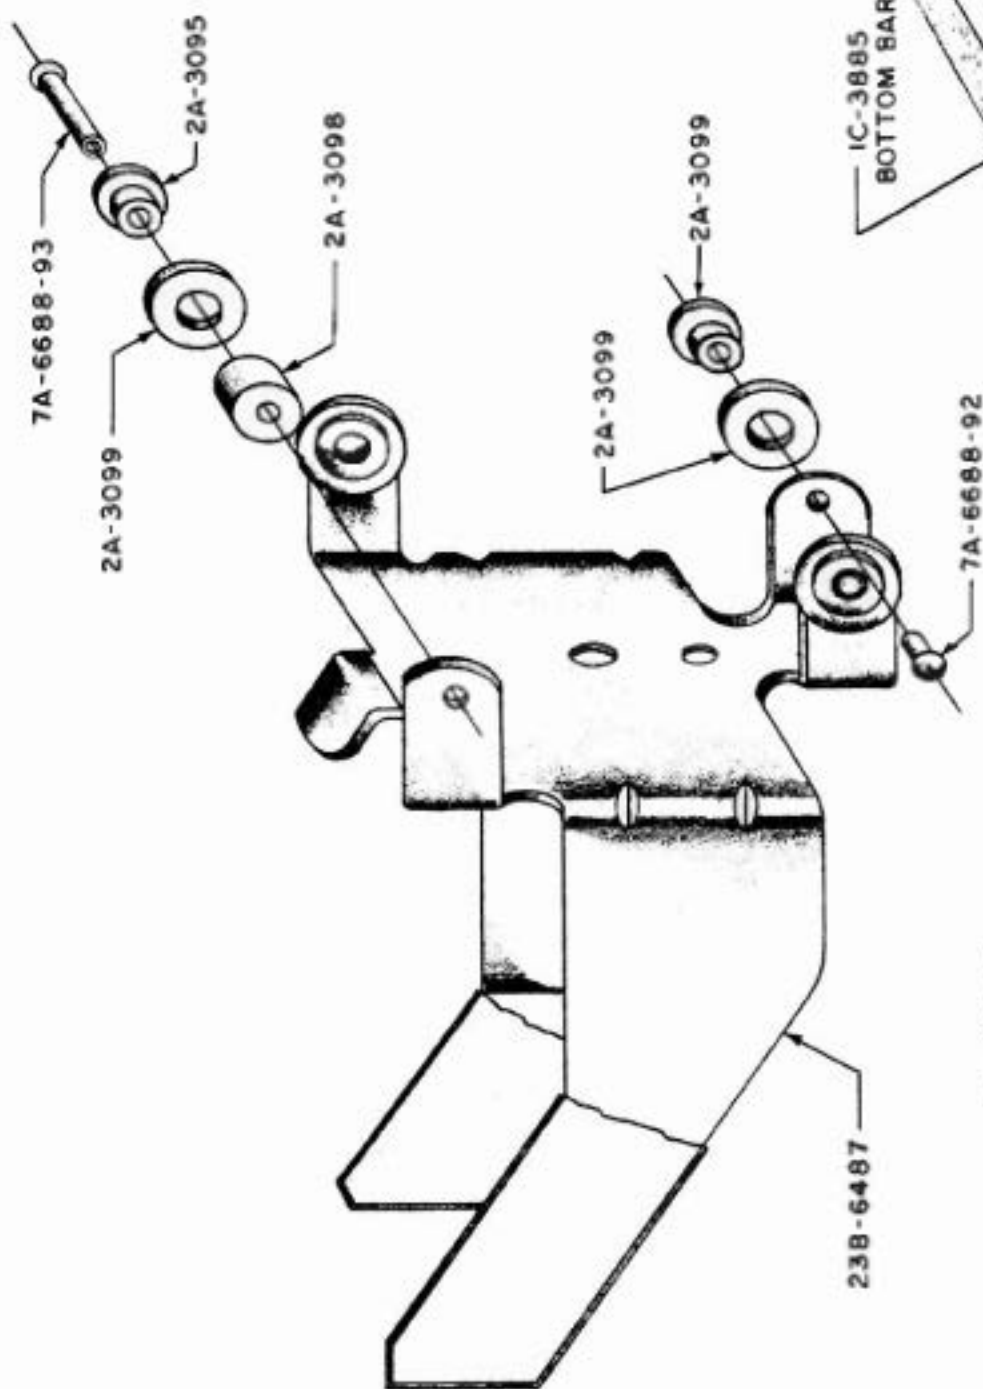


B-6439

BALL LIFT CARRIAGE



20A-8832


KING SIZE PUCK FOR SHUFFLE

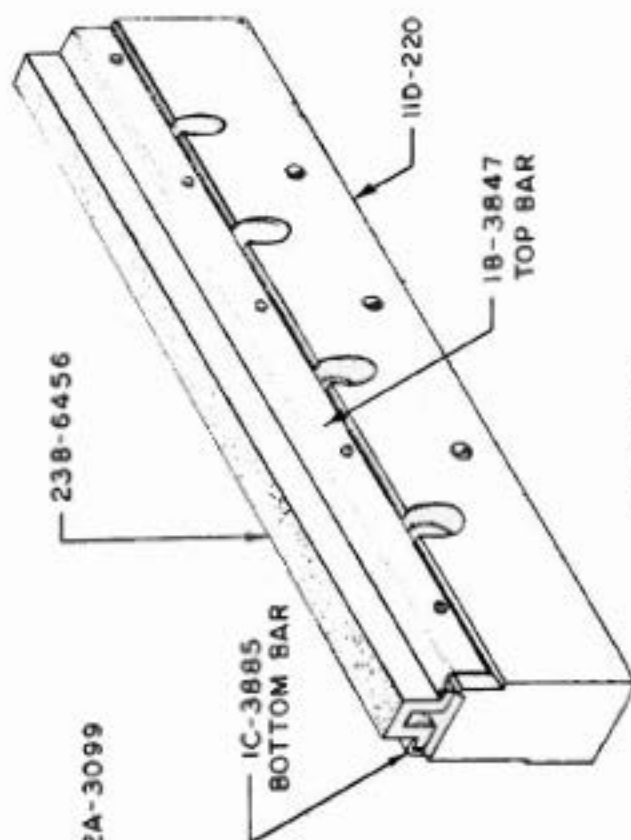


B-6643

PUCK REBOUND RUBBER ASS'Y.

RUBBER PARTS FOR BOWLER


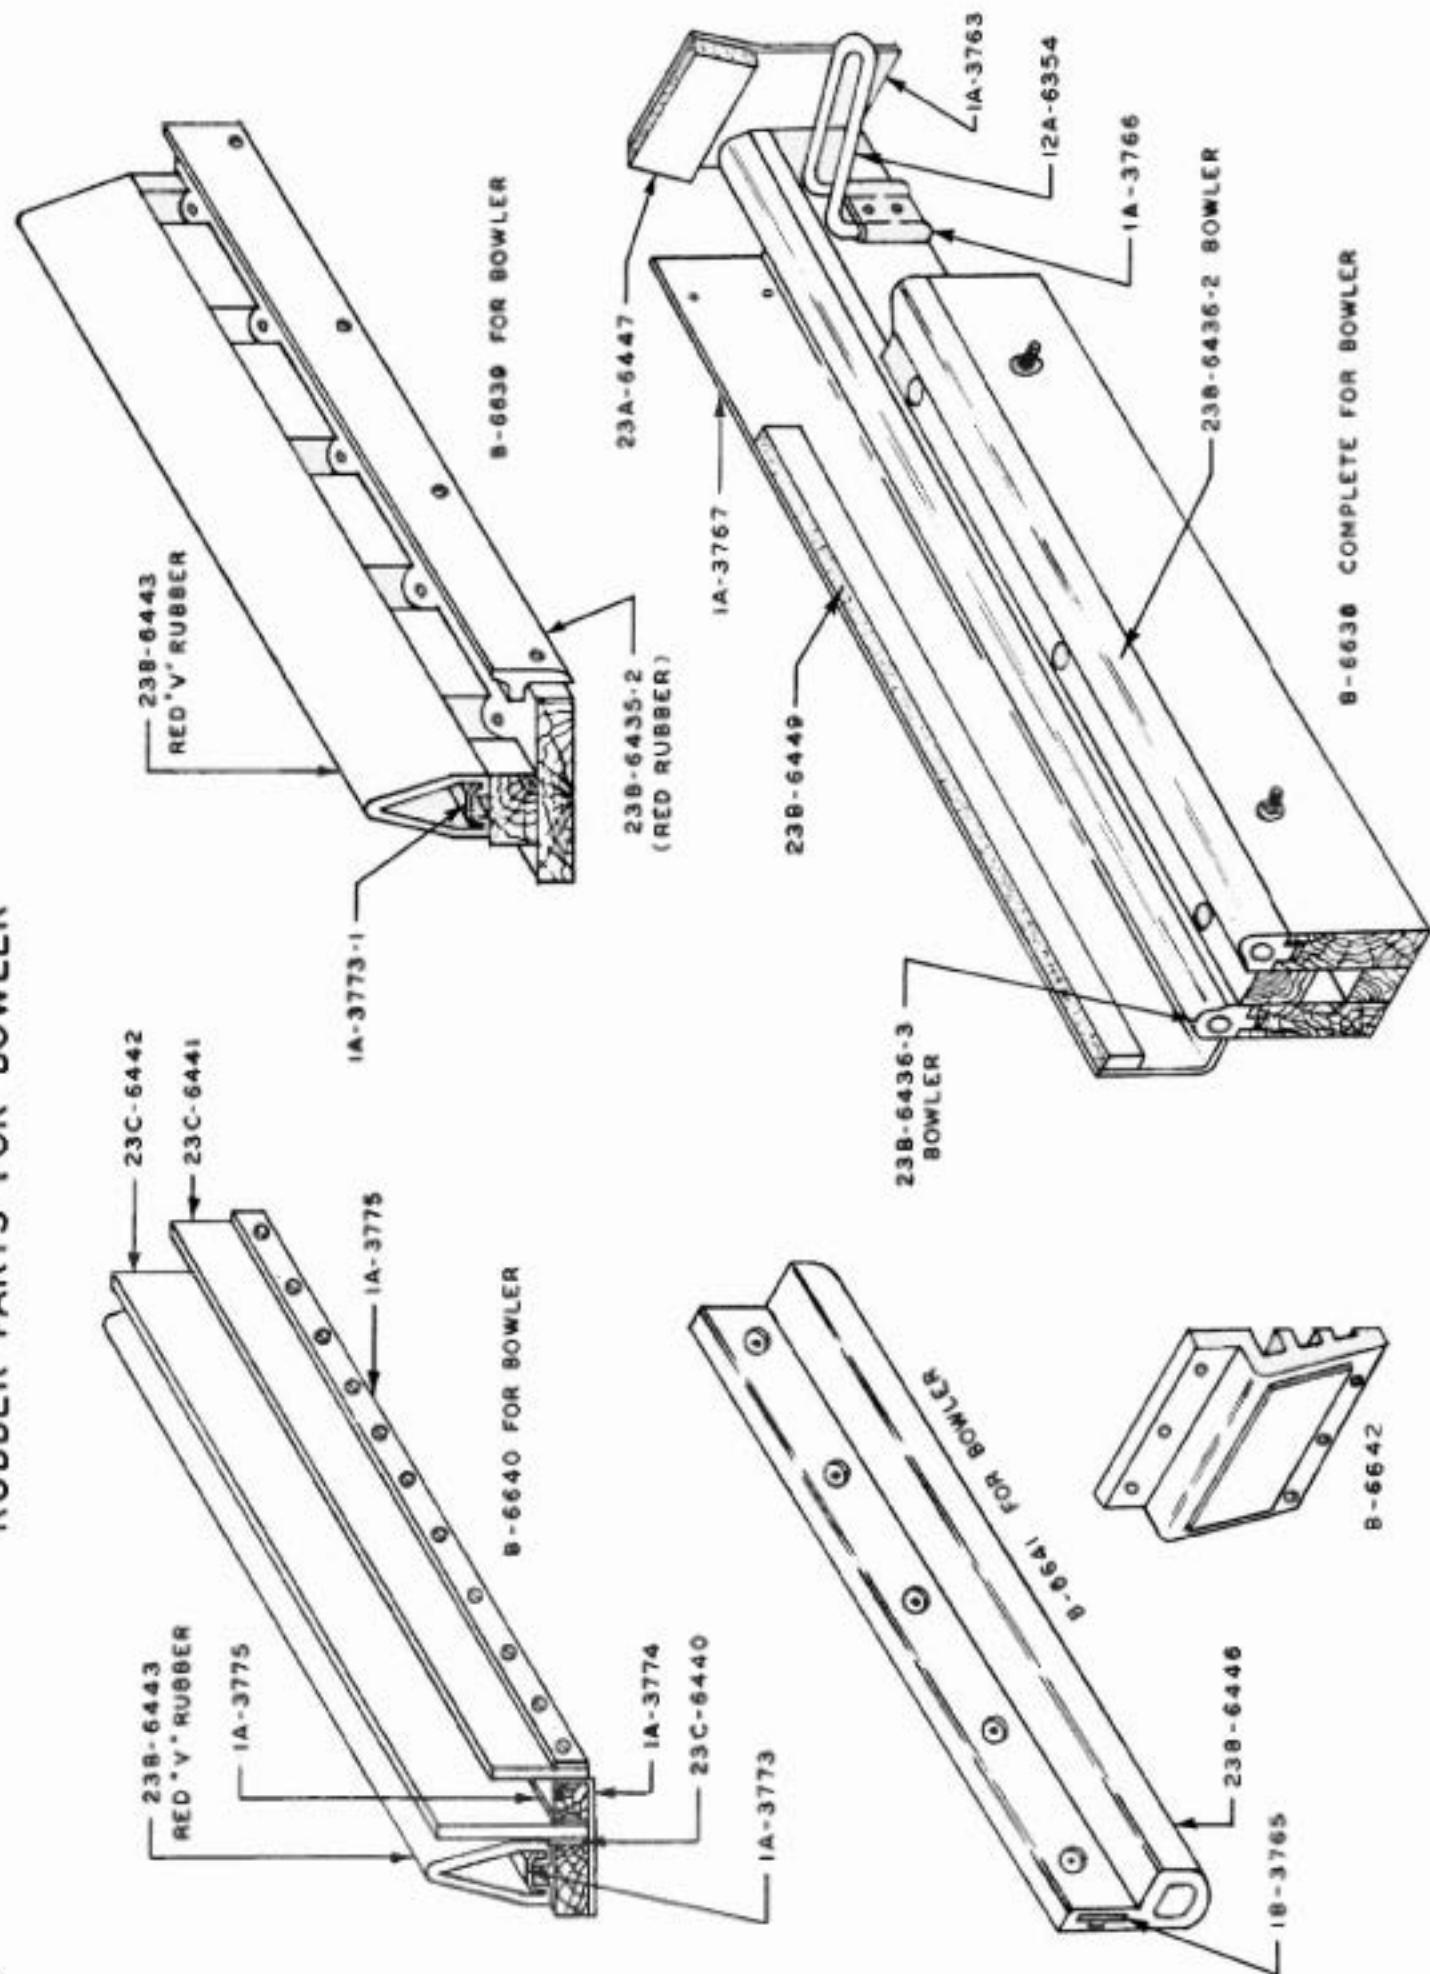


REPLACEMENT PARTS FOR BOWLING GAMES

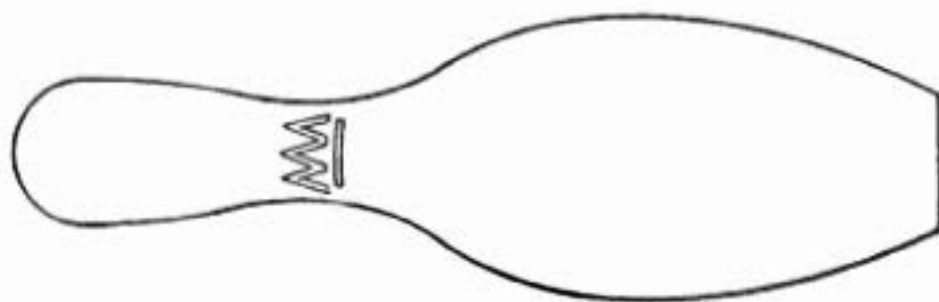

38-7178

238-6444
BALL RETURN RUBBER TRACK
(SPECIFY LENGTH)

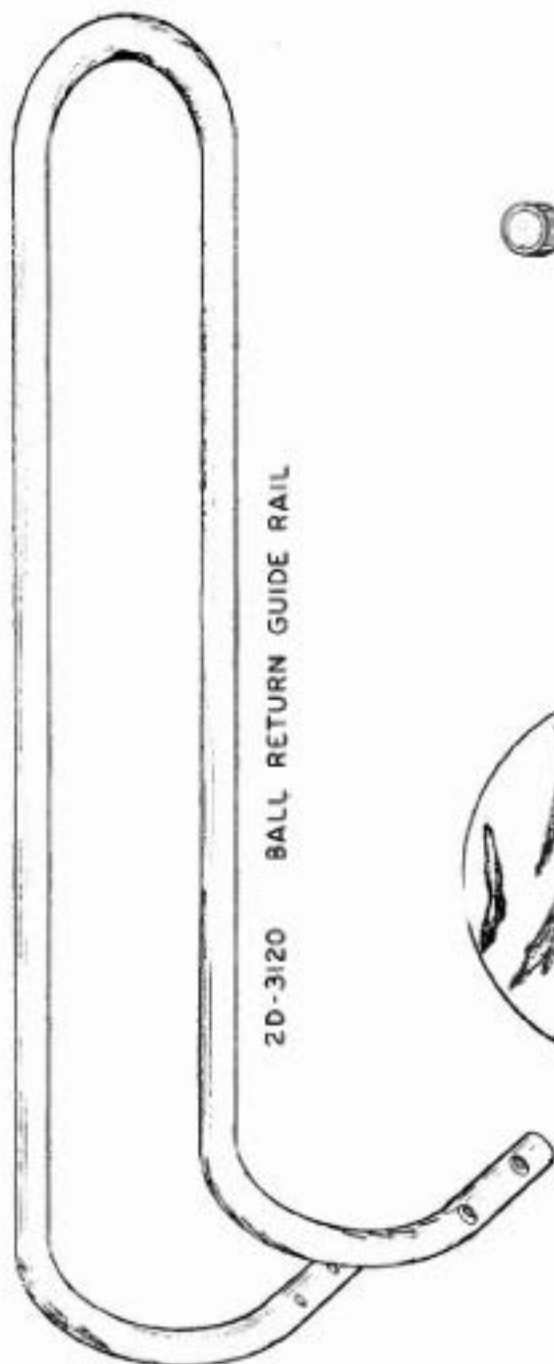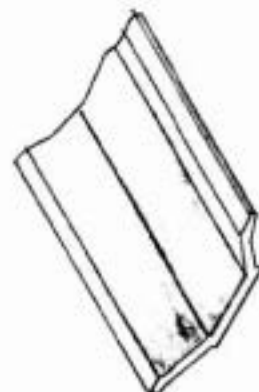

20-3120 BALL RETURN GUIDE RAIL




238-6459
4 1/2" HARD
RUBBER BALL



2A-3136
ASH TRAY INSERT KNOB



1B-3857
REMOVABLE INSERT

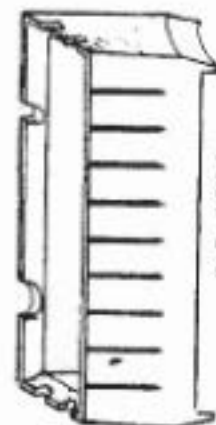

21B-6606
ASH TRAY



2A-3122
NYLON BALL
RETURN BUMPER




3A-7186
NYLON GUIDE RAIL POSTS




3A-7185

MISCELLANEOUS PARTS FOR BOWLER & SHUFFLE GAMES


WHEN ORDERING INFORMATION CARD OR INFORMATION CARD COVER, ALWAYS SPECIFY GAME.

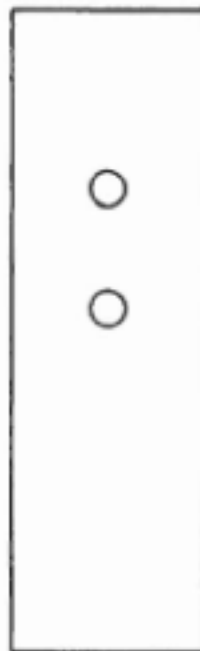


IC-3974-1 STANDARD (1 HOLE)
IC-3974-2 CREDIT (2 HOLES)
INFORMATION CARD COVER (S.A.)

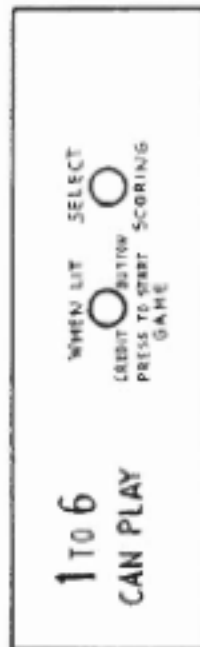

I6C-8616 CREDIT TYPE
I6C-8617 STANDARD
GAME INFORMATION CARD

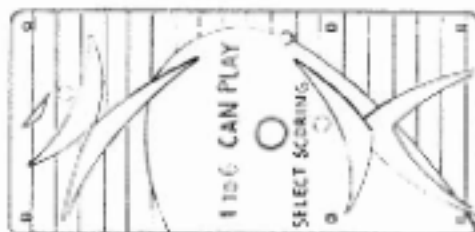


30C-3967-1 STANDARD TYPE
30C-3967-2 CREDIT TYPE

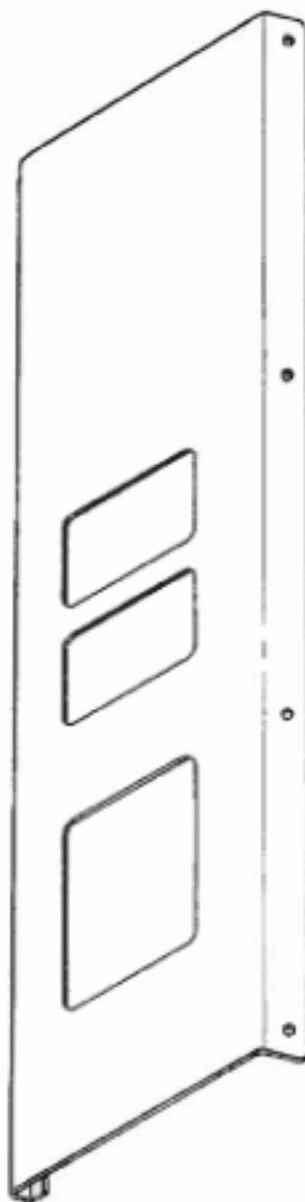

ID-4279
CHROME TRIME (S.A.)

TOOLS

CONTACT ADJUSTER

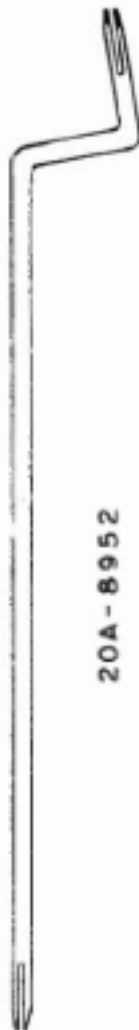





20A-8952

CONTACT BURNISHING TOOL



20A-8951

C-6513 FLASH MOTOR UNIT FOR BOWLER & SHUFFLE GAMES

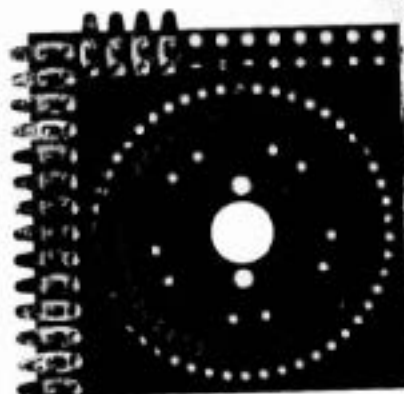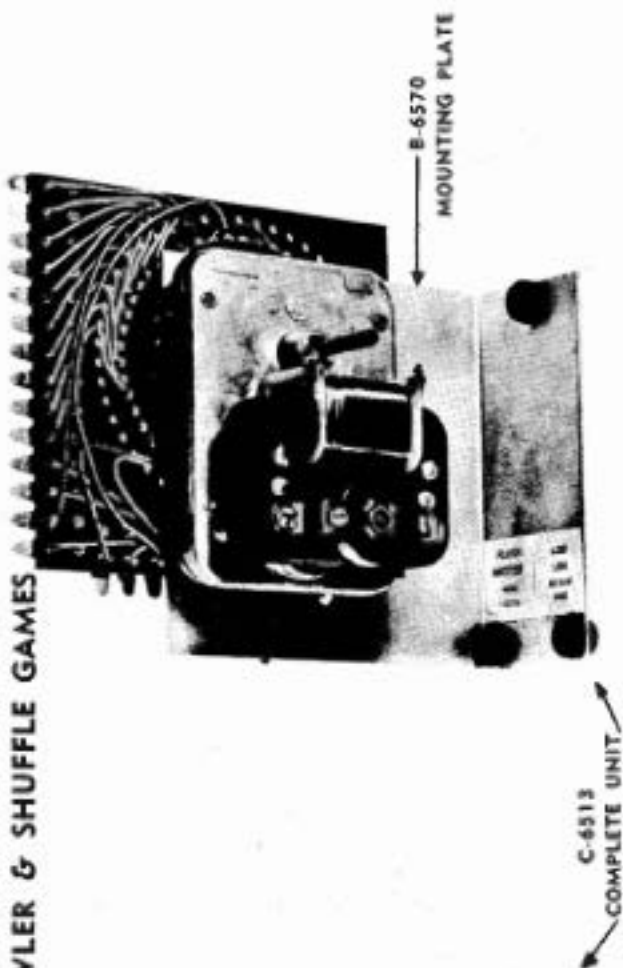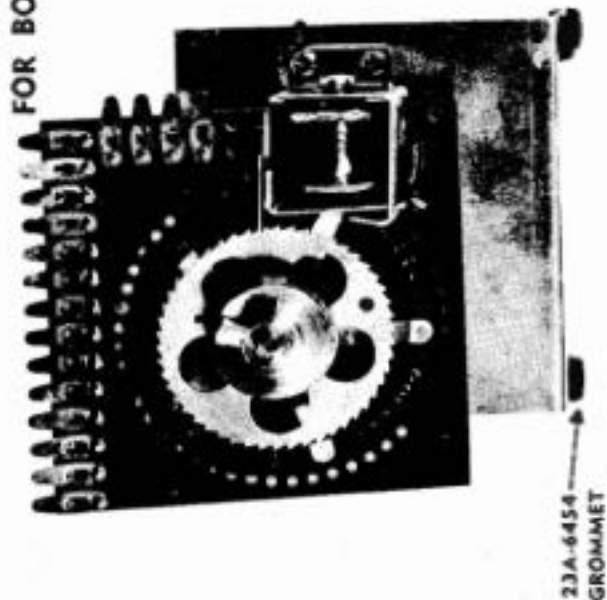

C-6417 - SPECIFY
GAME & UNIT



A-6827

10A-263



Z-30-1400



1A-3680

QMS


5A-6322-1




20A-8824



2A-3089

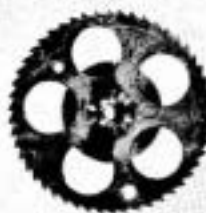

B-6833

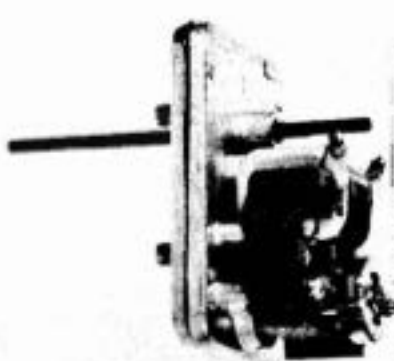


FLASH MOTOR
SPECIFY GAME

WIPER FINGER ASSEMBLY

C-7326

(Score Motor)

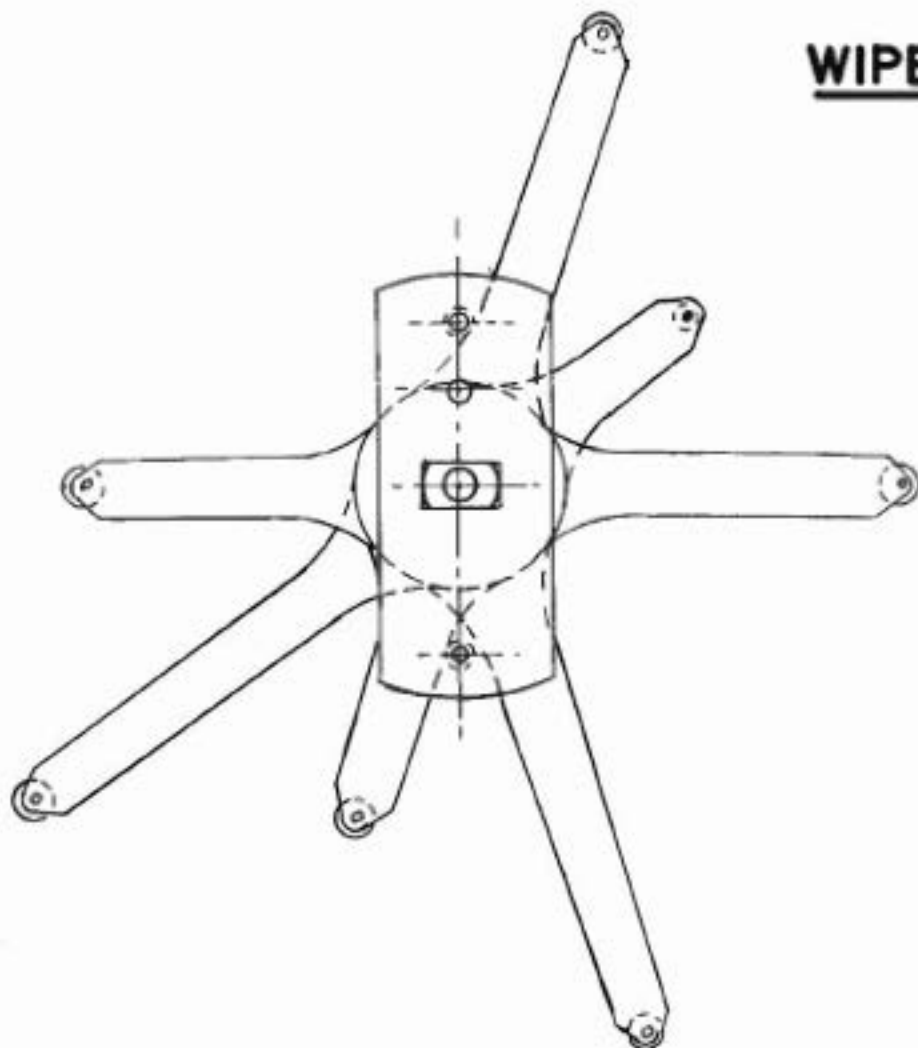

Adjusting
Plate
Assembly

A-7176-1

DRIVE LINK & BUSHING
A-7327




SHUFFLE ALLEY PARTS


PIN RESET
CAM ASSEMBLY
B-7328



SCORE MOTOR
CAM ASSEMBLY
B-6523

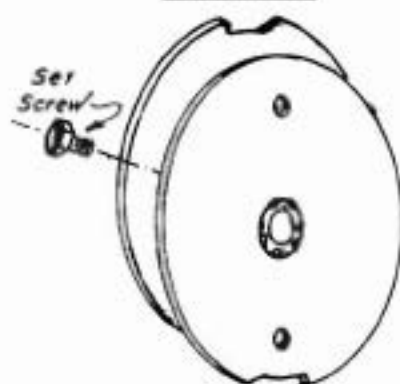


PIN RESET
MOTOR MOUNTING BRACKET
A-6805-1

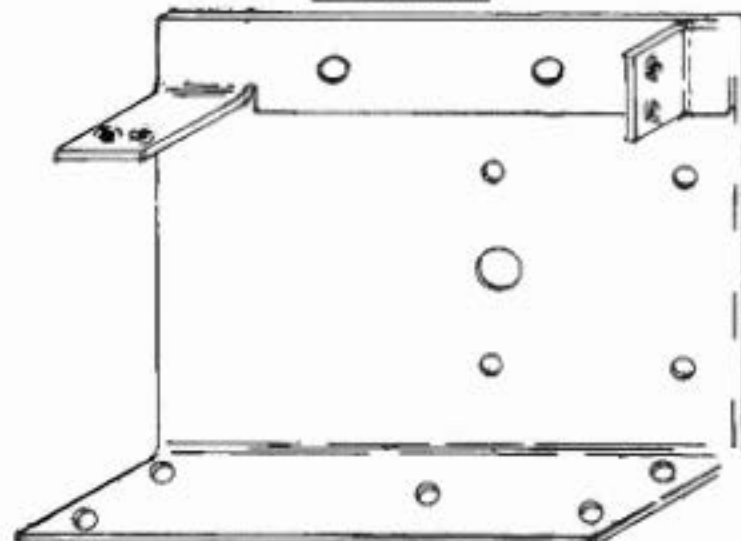


SHUFFLE ALLEY PARTS

SCORE MOTOR


MOUNTING PLATE ASSEMBLY

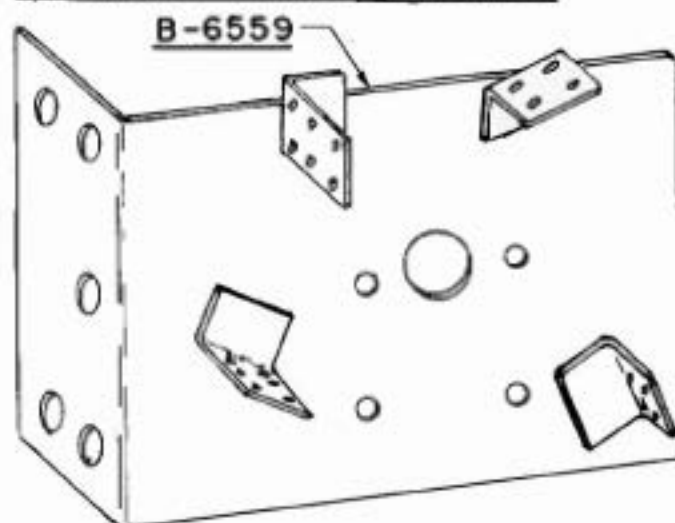

CASH BOX COVER

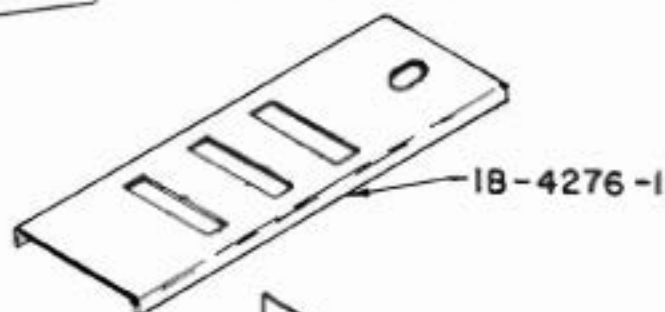


SEPARATOR

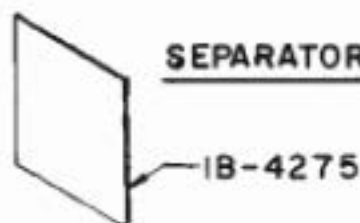

PUSH BUTTON ASSEMBLY


A-6797-C (Plastic)

A-6797 (Aluminum)

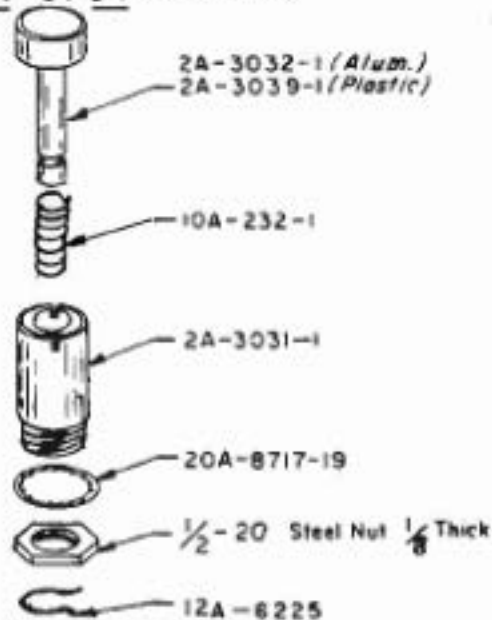


CASH BOX

C-6876


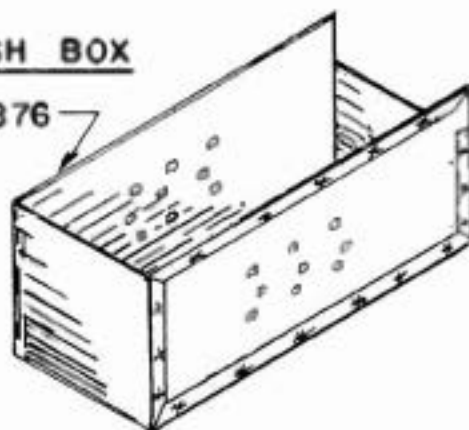


NOTES


C-7094 TOWER & SPACE CRAFT UNIT

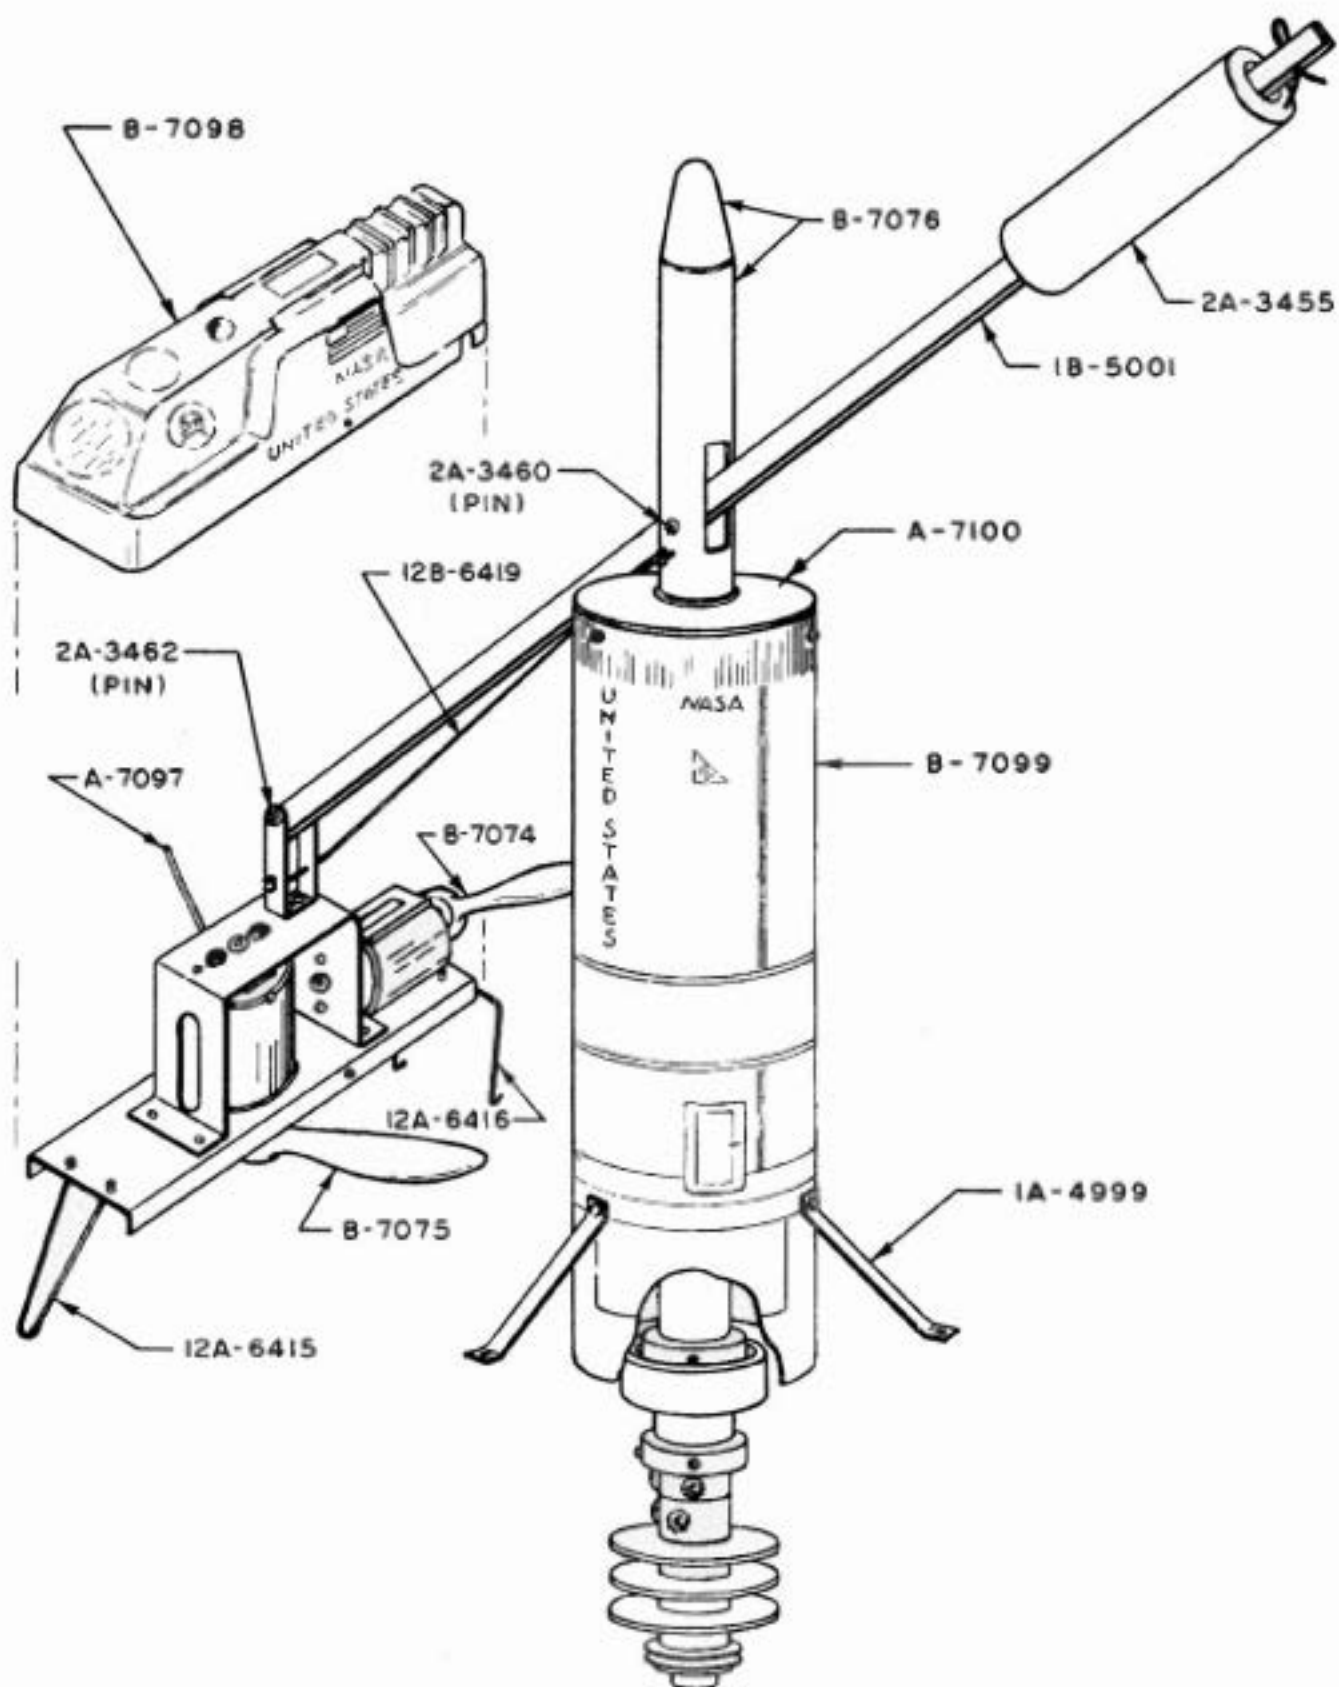


C-7094 COMPLETE AS SHOWN

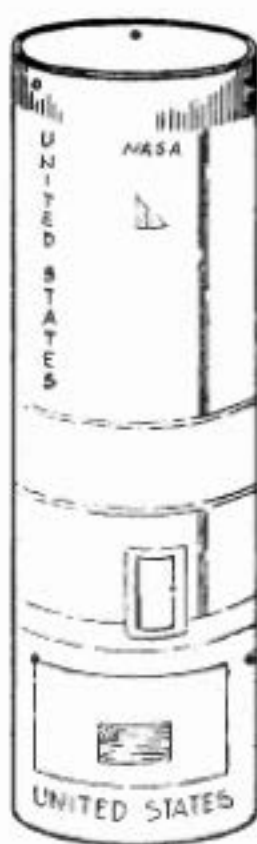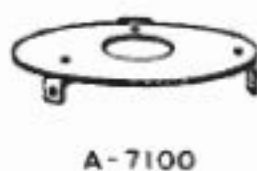

TOWER & DECAL ASS'Y.

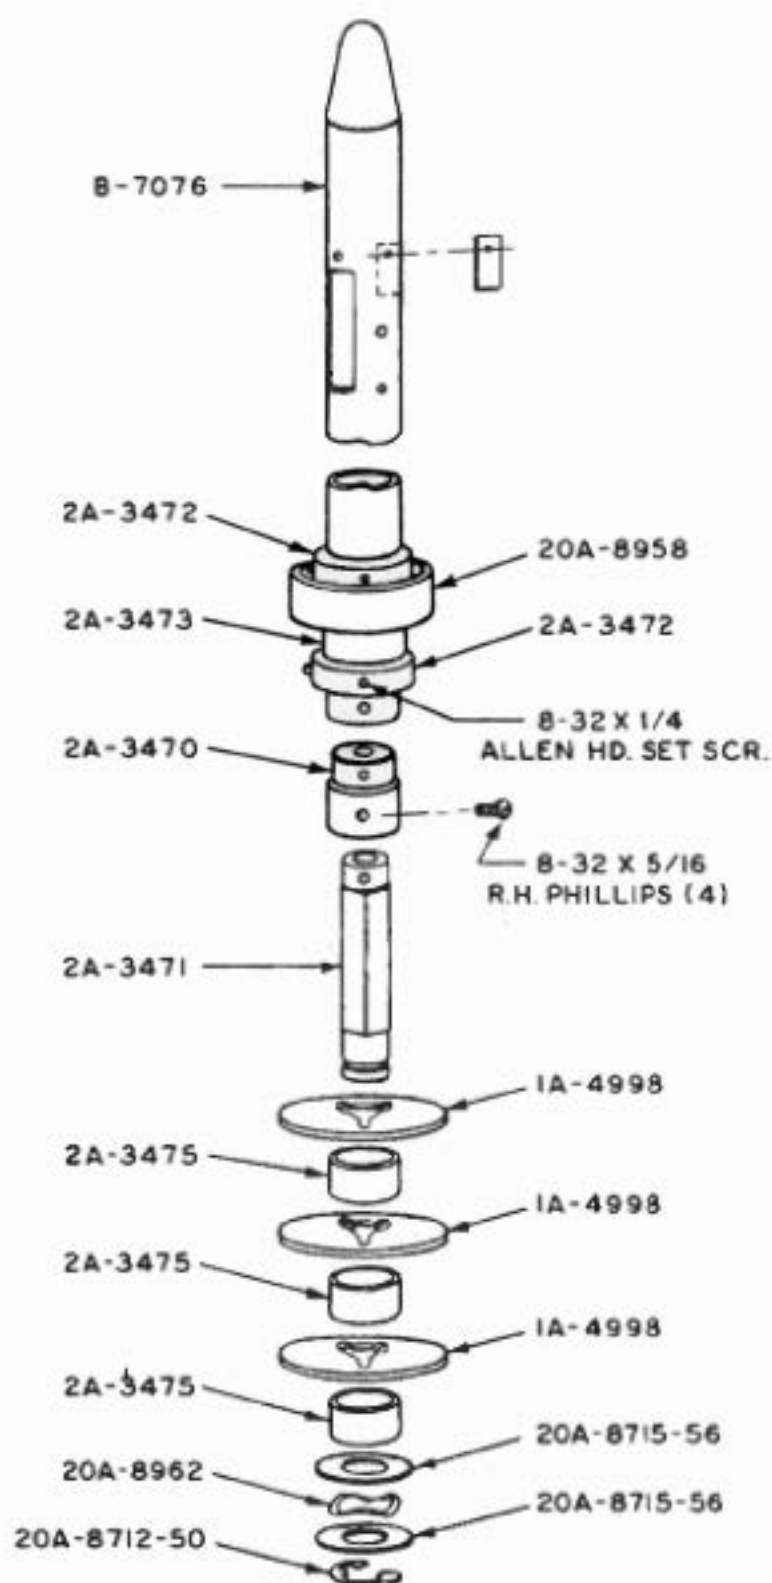


B-7102
CAPSTAN ASSEMBLY

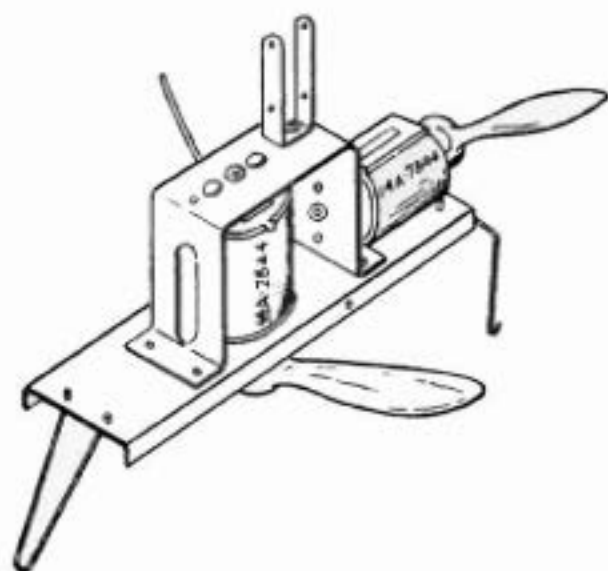

C-7101



A-7097

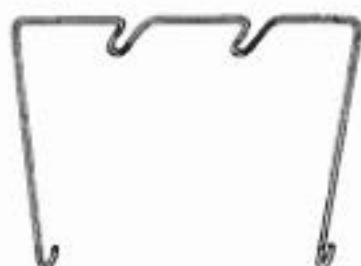


12A-6416



12A-6415




B-7074
REAR PROPELLER

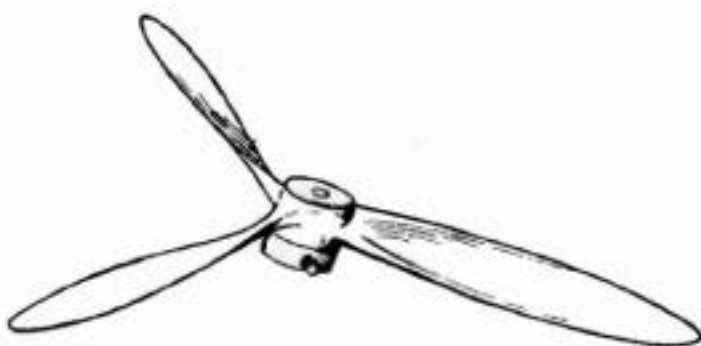


B-7075
BOTTOM PROPELLER

TARGET POST & WIRE ASSEMBLIES (LOCATED ON PLAYBOARD)

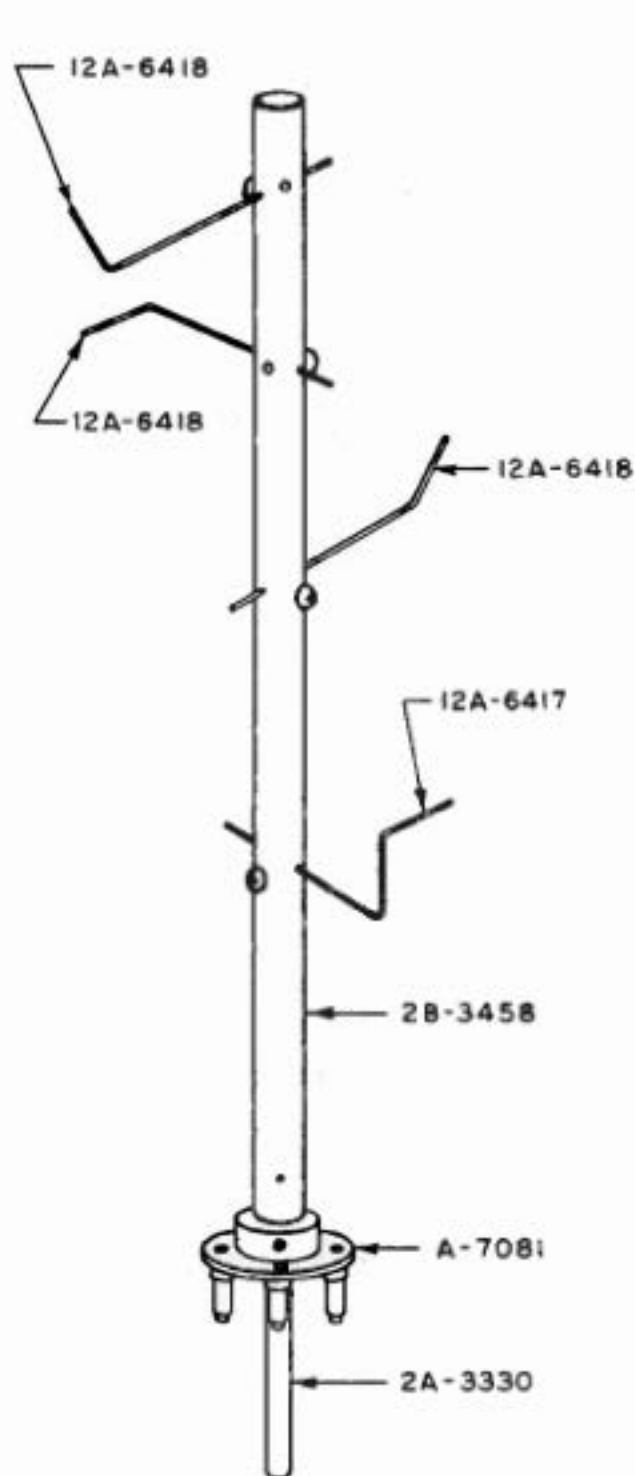


B-7095
1ST & 3RD POSITIONS

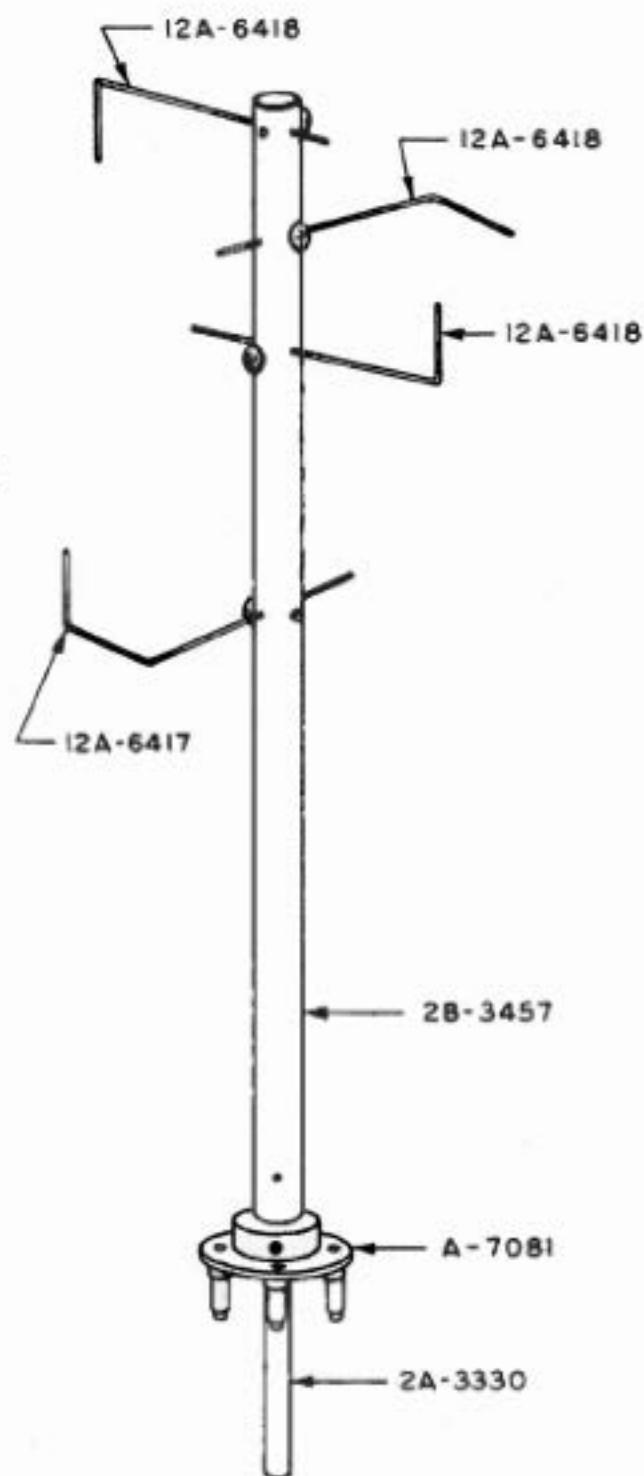


B-7096
2ND & 4TH POSITIONS


-HANDLE CONTROL UNIT - D-7122 COMPLETE UNIT WITH ALL PARTS

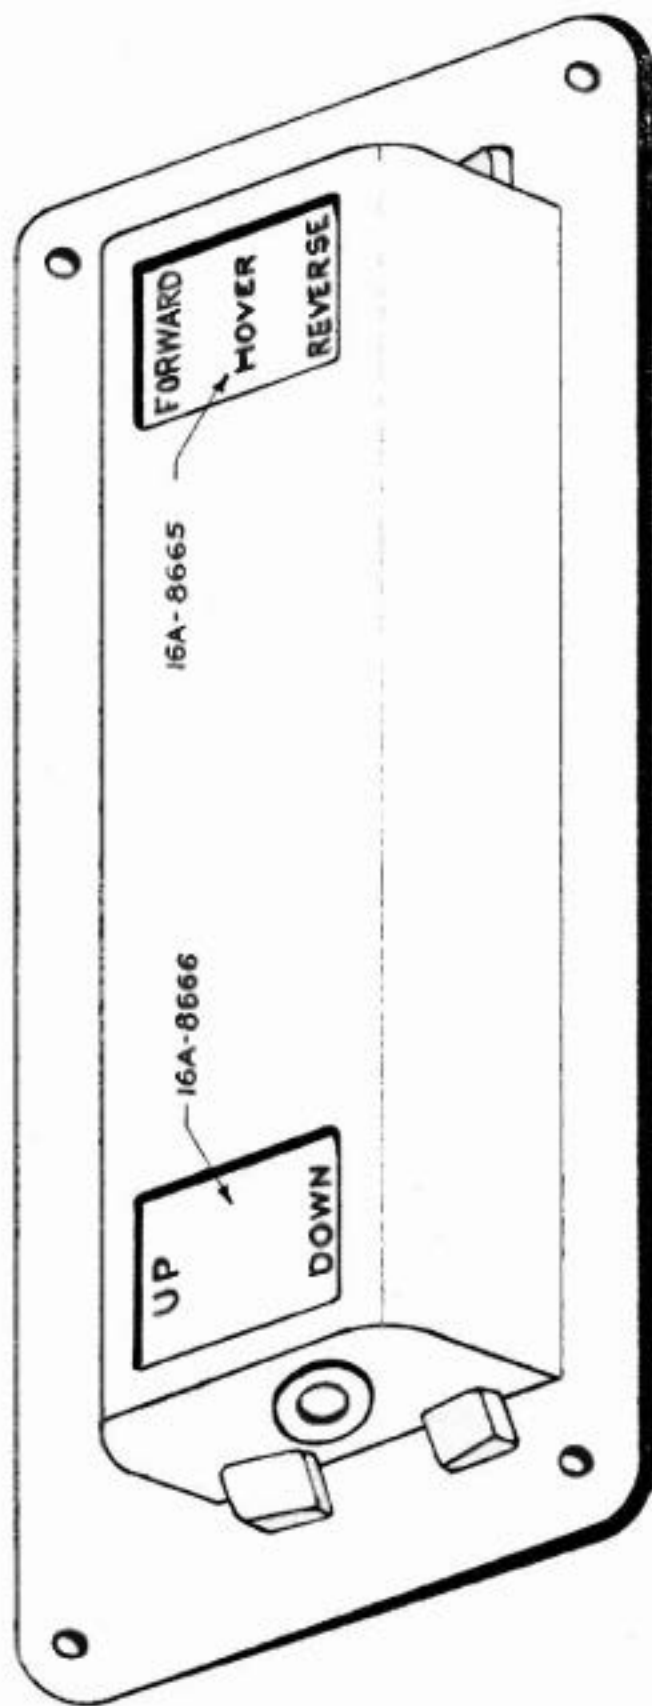

B-7121 CONTROL CASTING ASSEMBLY (SHOWN ABOVE)

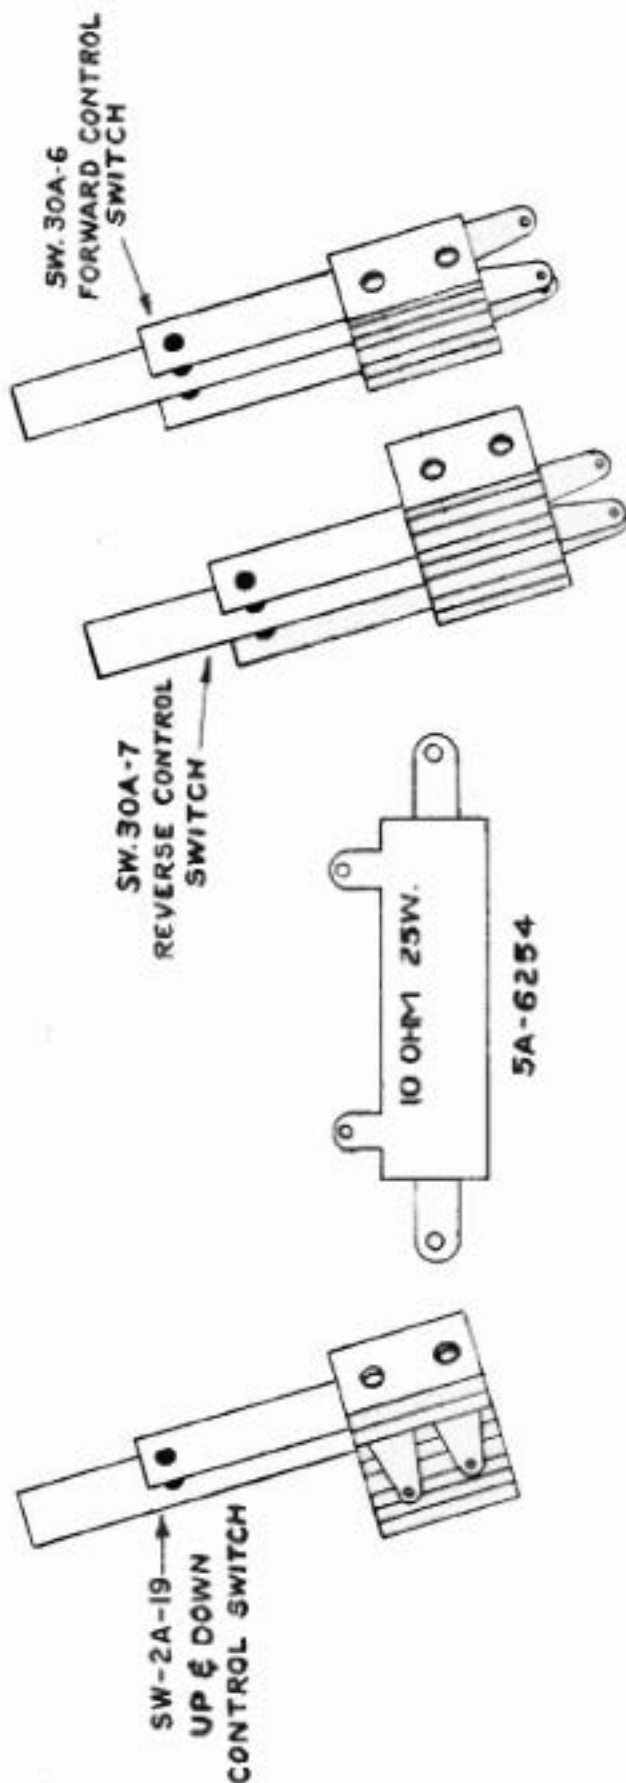


PARTS FOR CONTROL UNIT

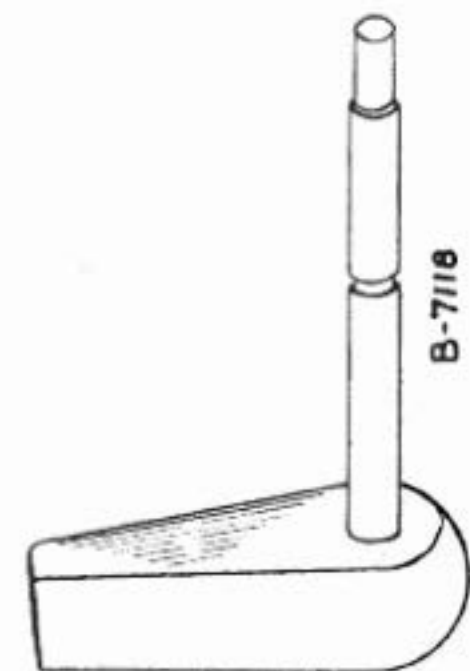

B-7118



10A-255

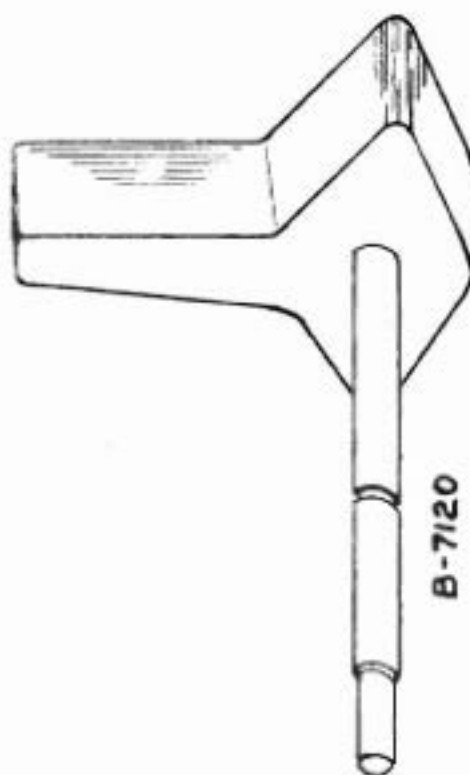


B-7120




10A-310




A-7116

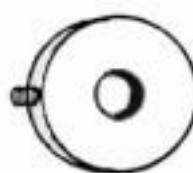


2A-2917-1

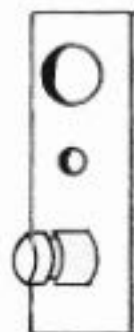

A-7117

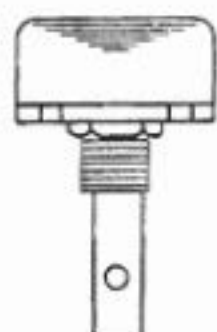


5A-6251

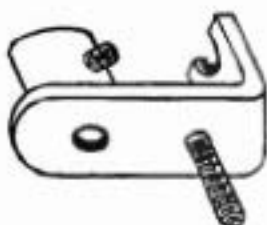

B-7119





20A-8598

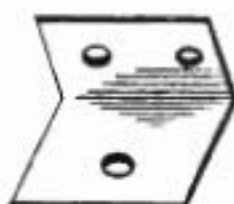

1A-5039

C-6808-SP TARGET POSITION UNIT (LOCATED BOTTOM OF TARGET POSTS)

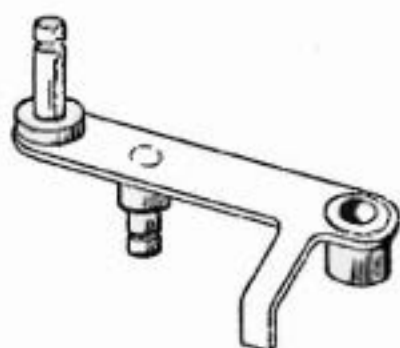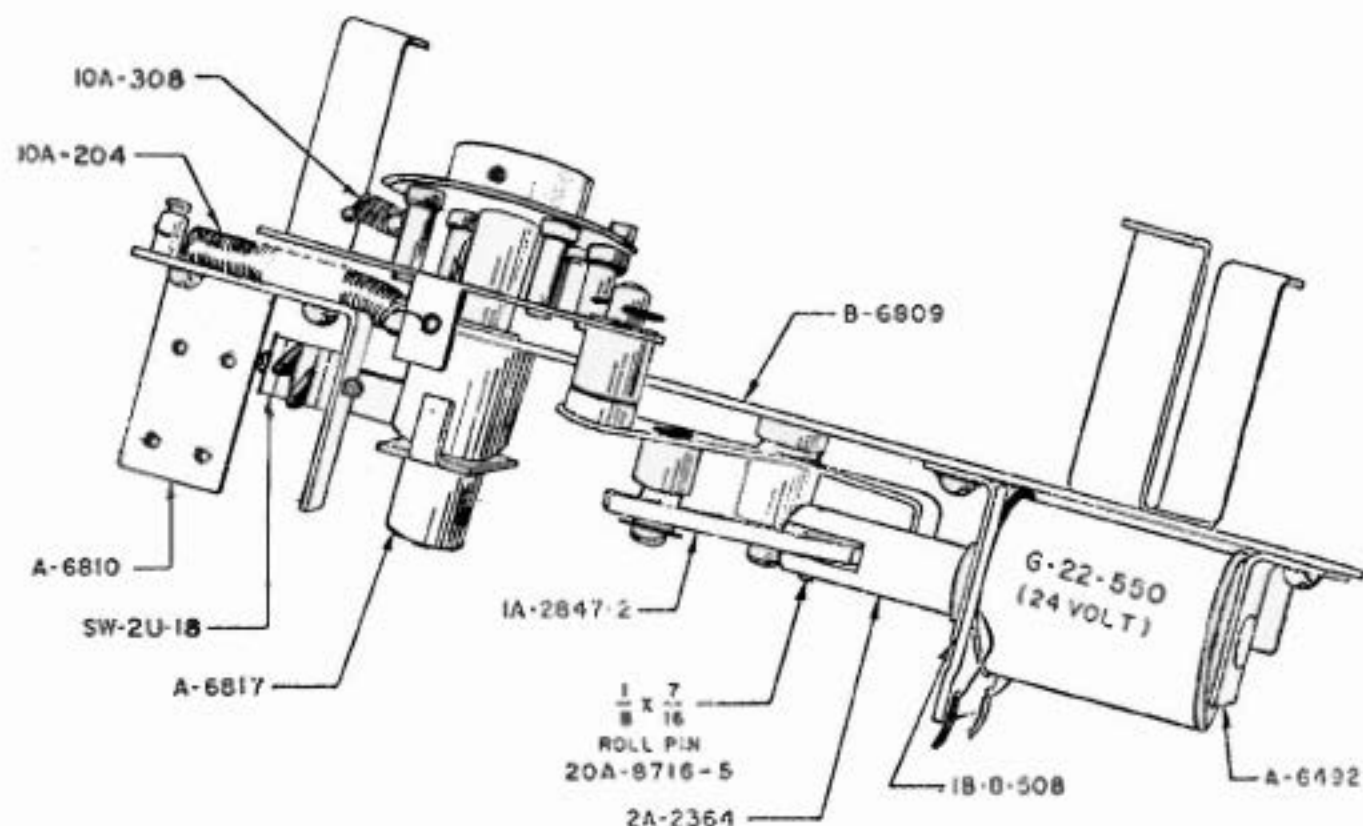

A-6811




A-6812




A-6813




A-7081

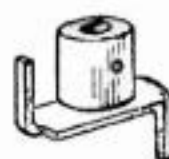


A-6817

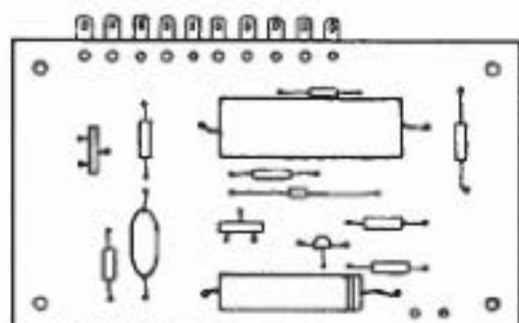


B-7039 TIMER UNIT ASS'Y.

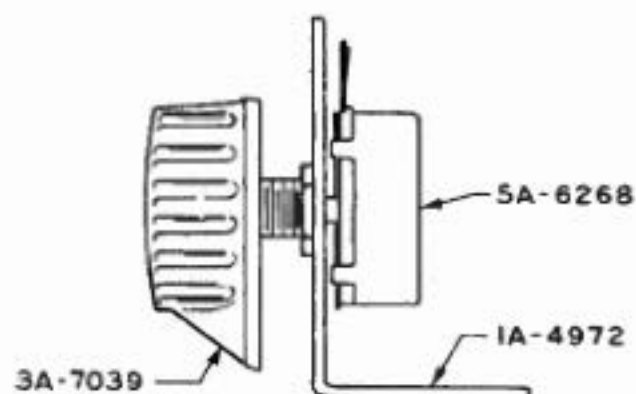

A-7047
TIME ADJUSTMENT CONTROL

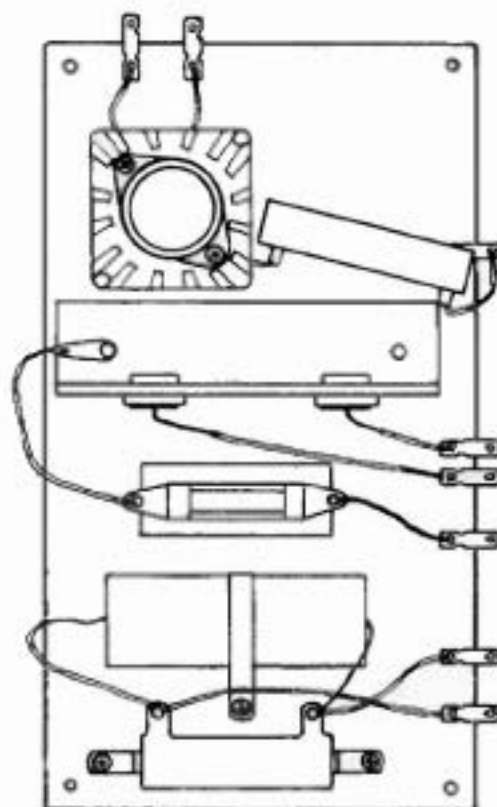


B-7055
D.C. POWER SUPPLY. UNIT

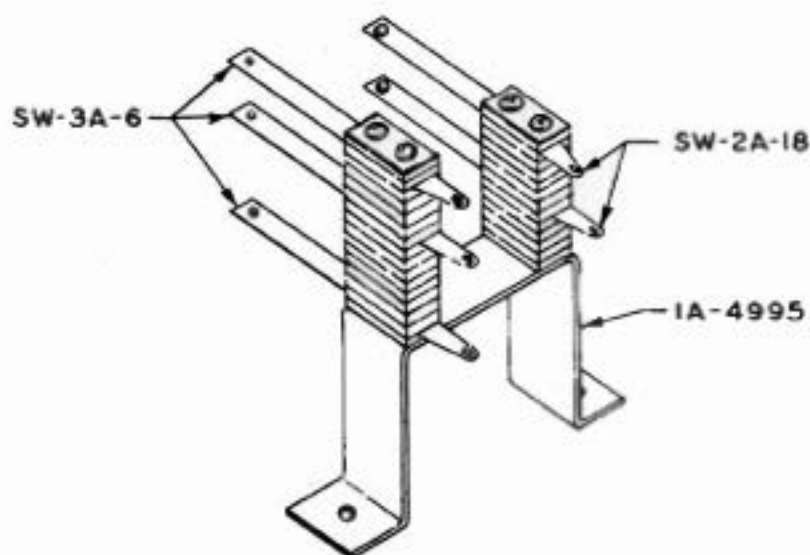


A-7103
COMMUTATOR SWS. & BRACKET ASS'Y.

(D-7322) SPIN MECHANISM


1A-5314

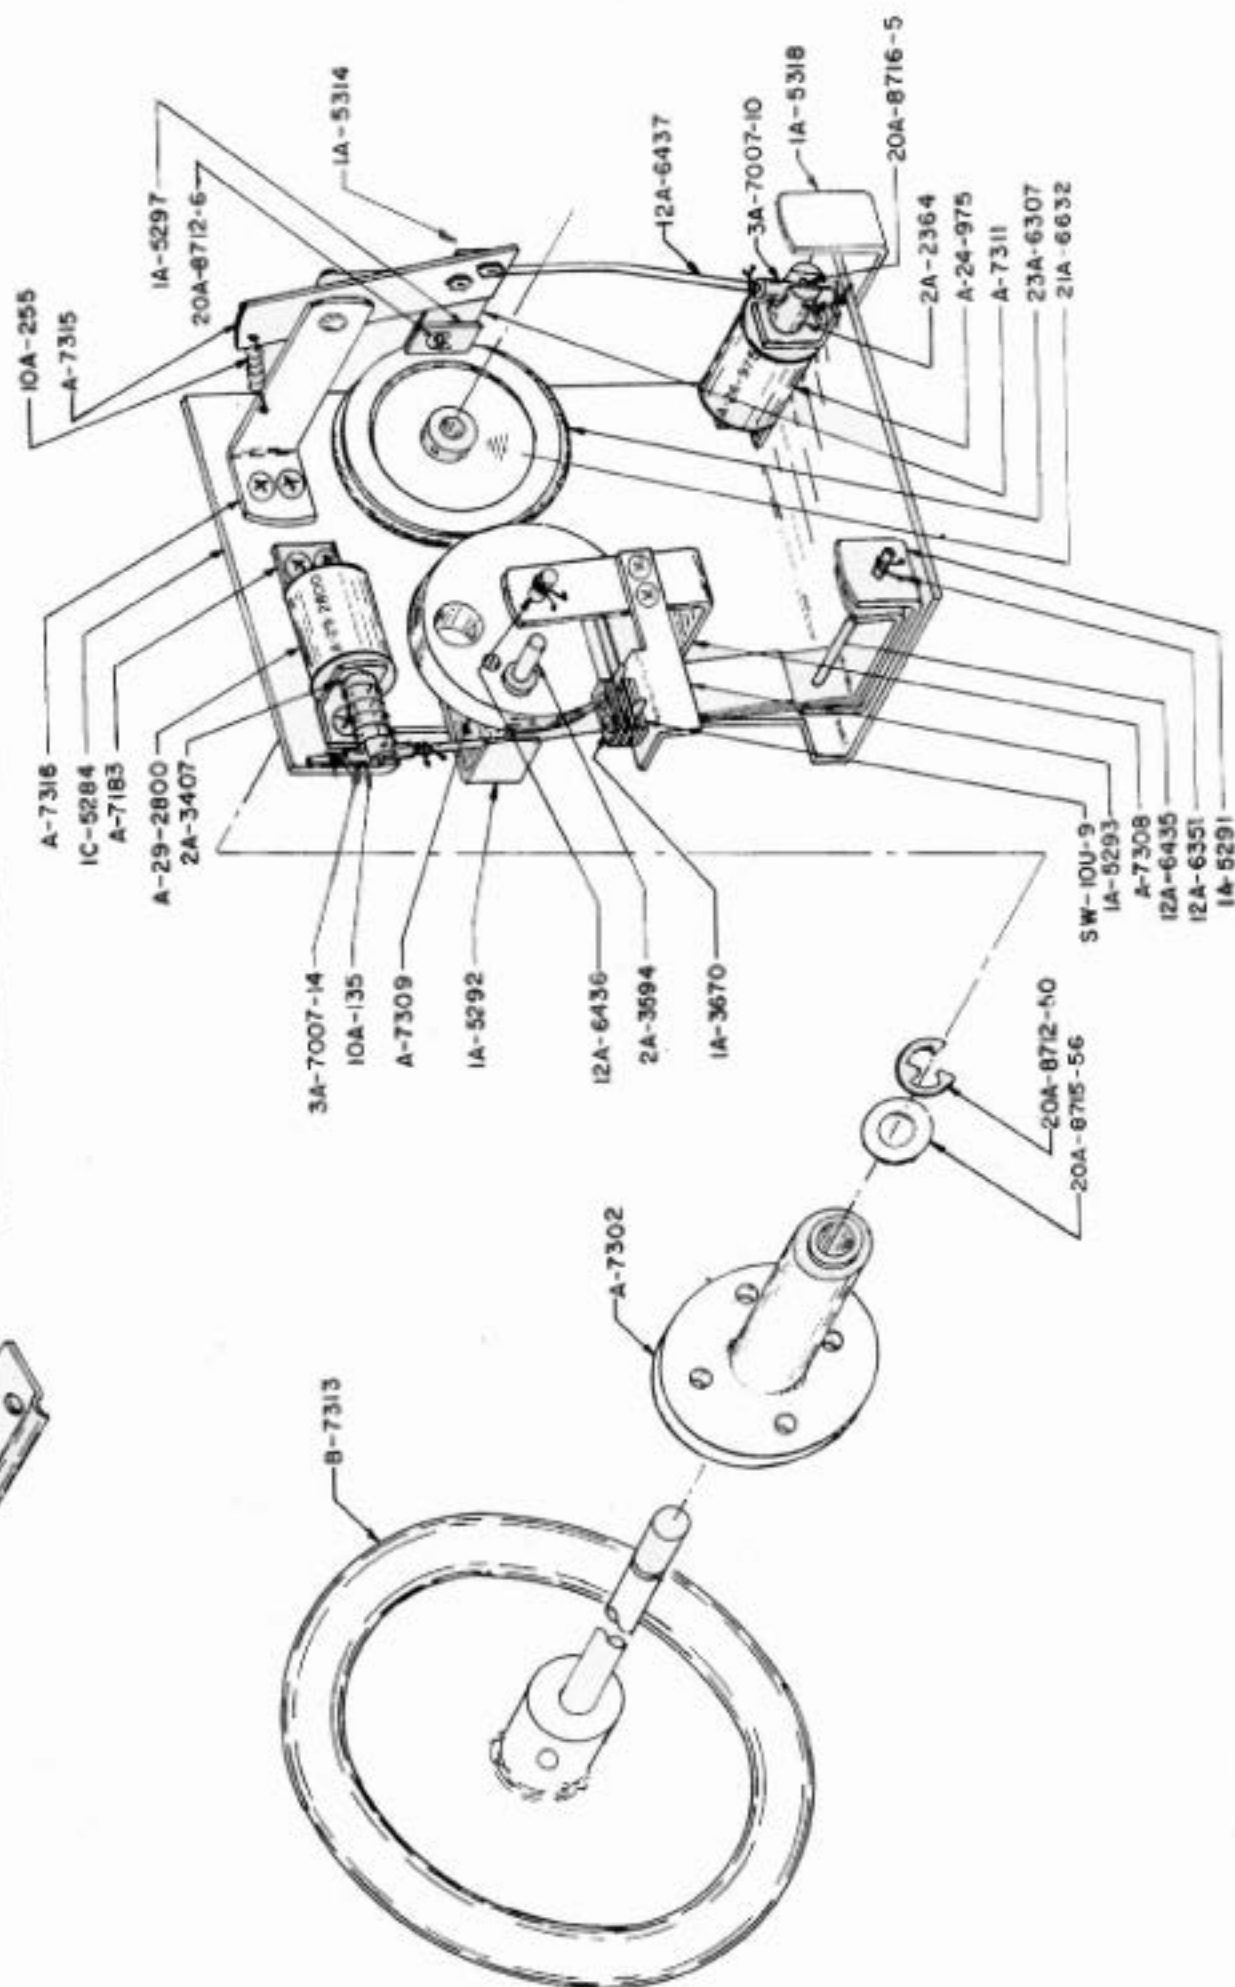


FRONT MOULDING - "MINI-BOWL"

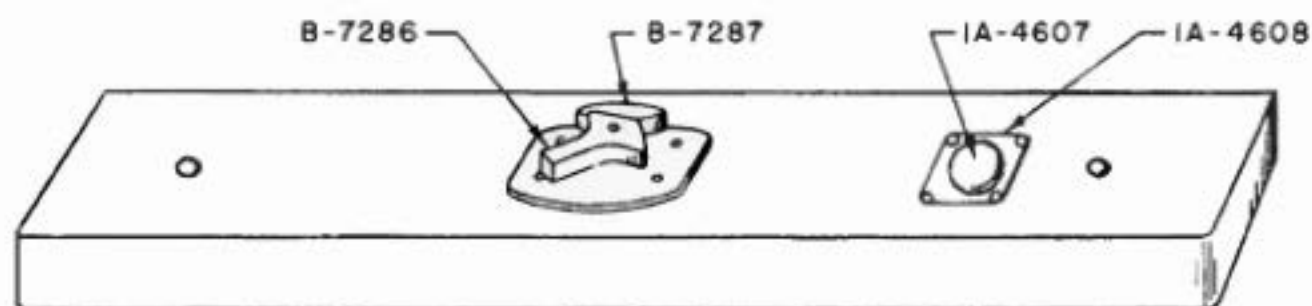


C-7295 COMPLETE WITH ALL HARDWARE
 IIR-369 MOULDING (WOOD ONLY)

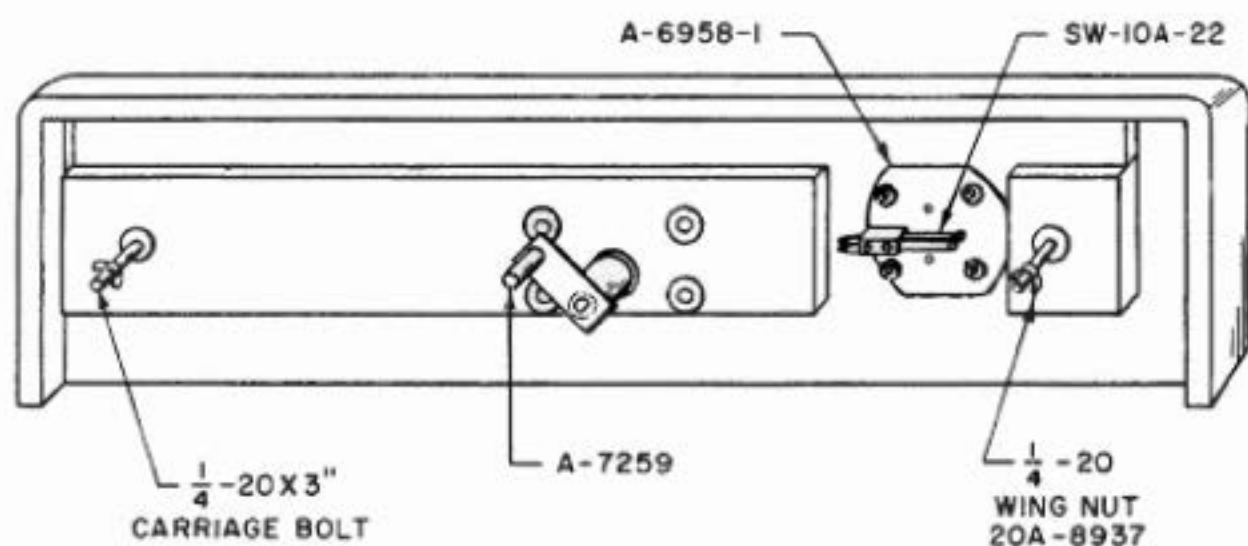

MANIKIN PUSH BUTTON ASS'Y. B-7174-1

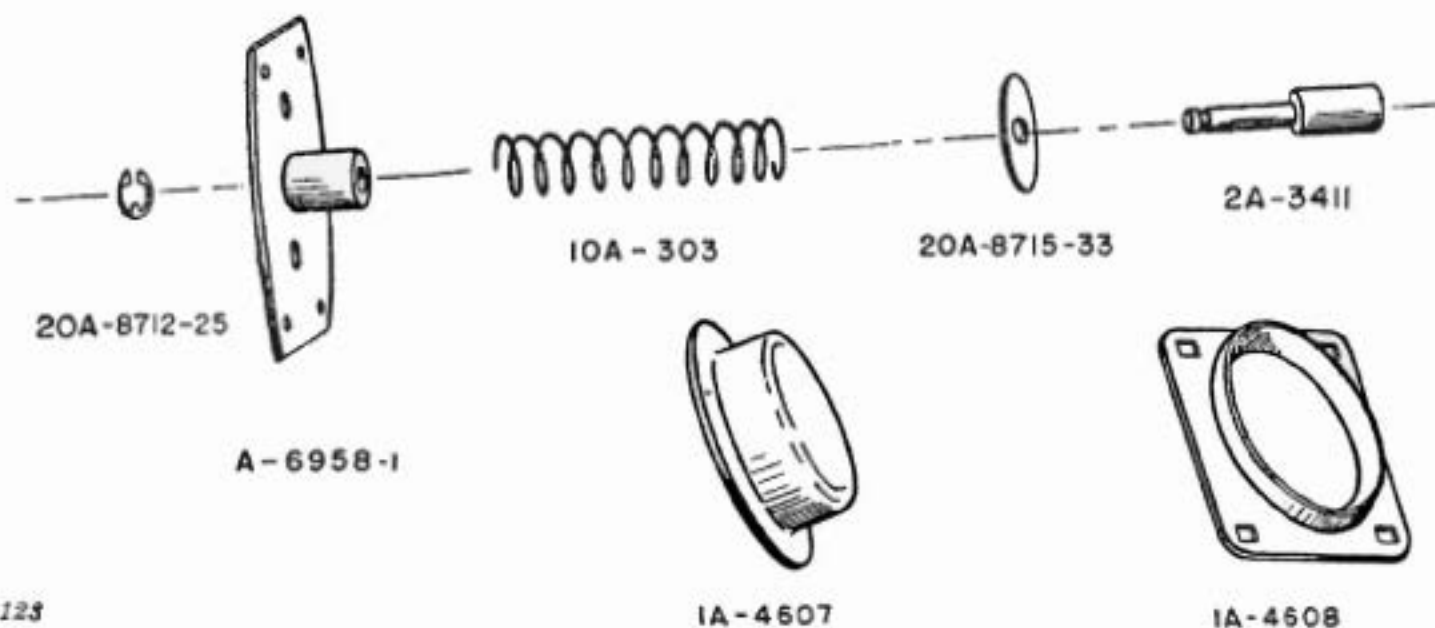


D-7258 MANIKIN ASSEMBLY AND PARTS

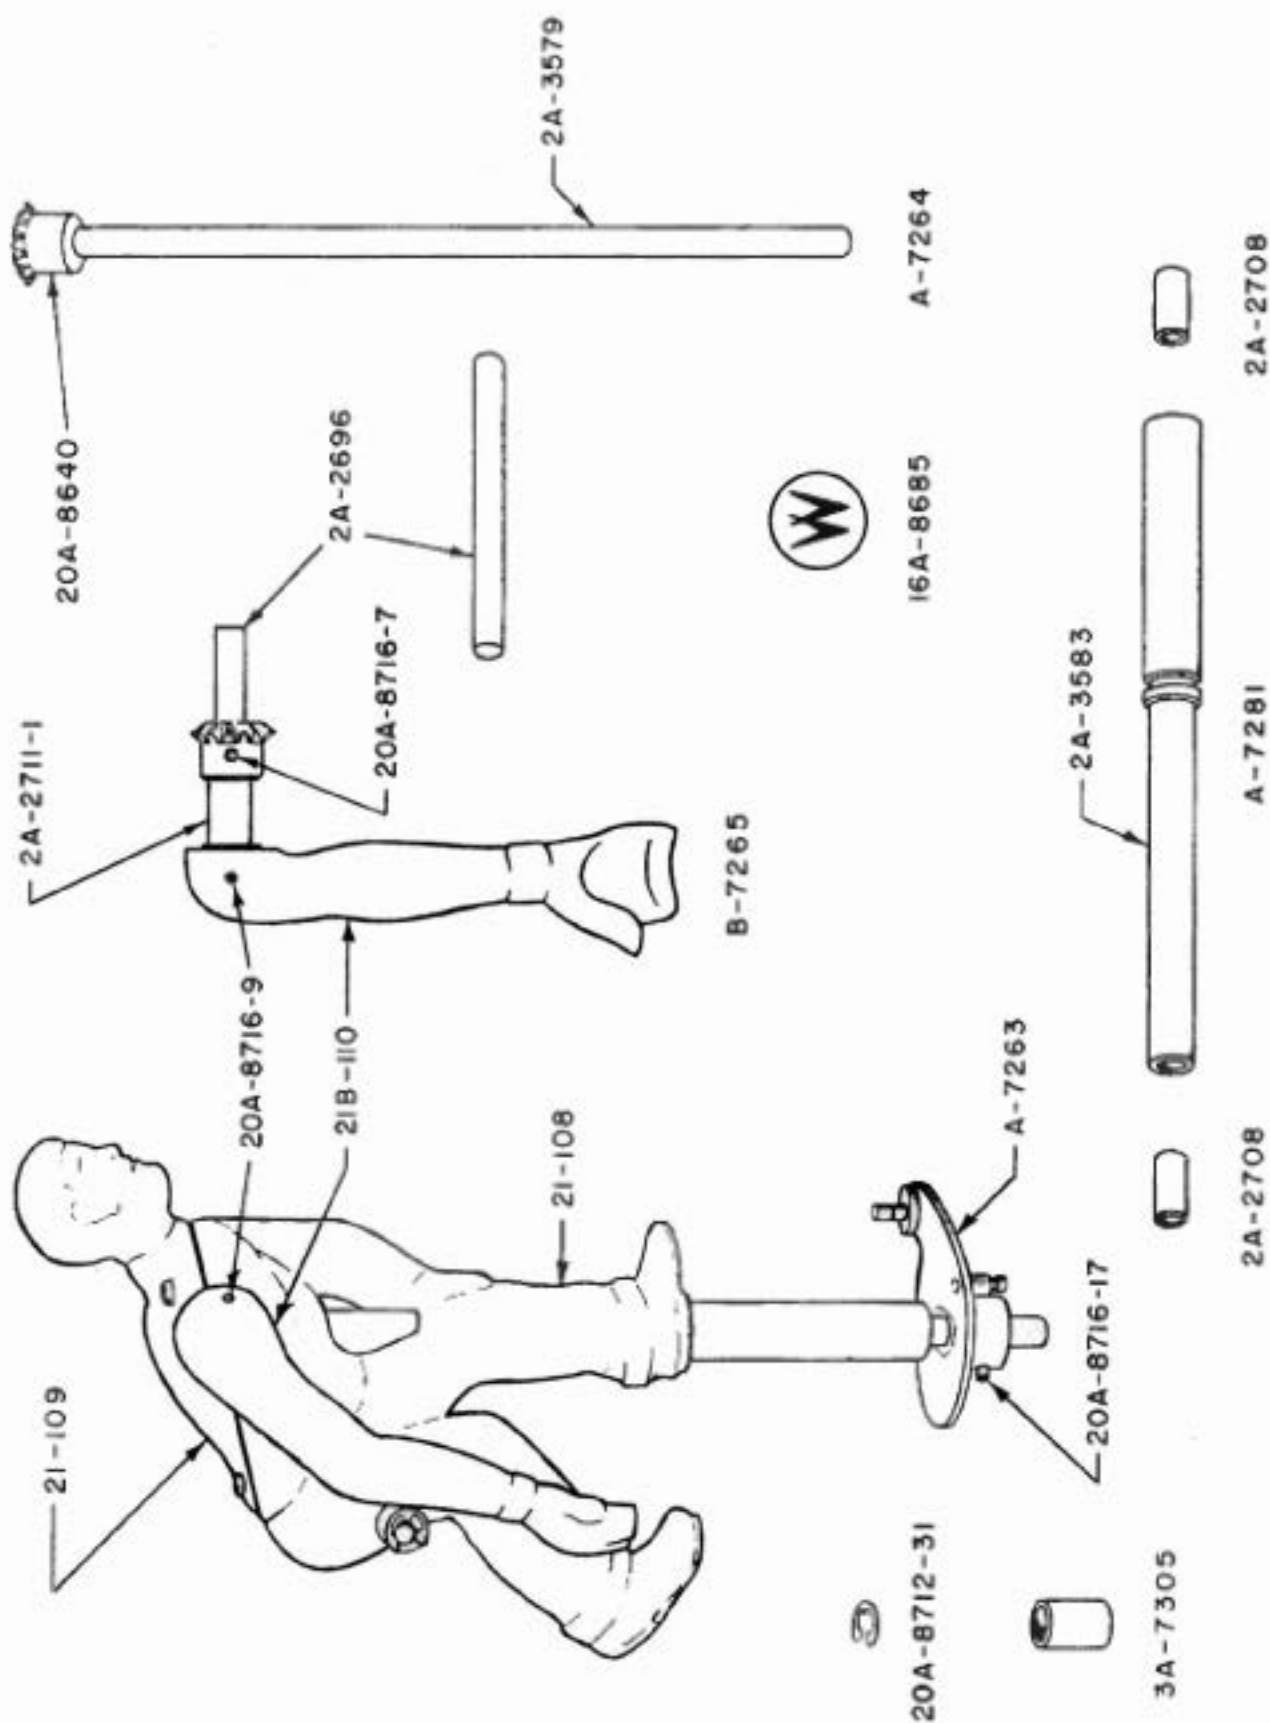


MANIKIN ASSEMBLY INSTRUCTION

FOR DRILLING & INSERTING ROLL PIN

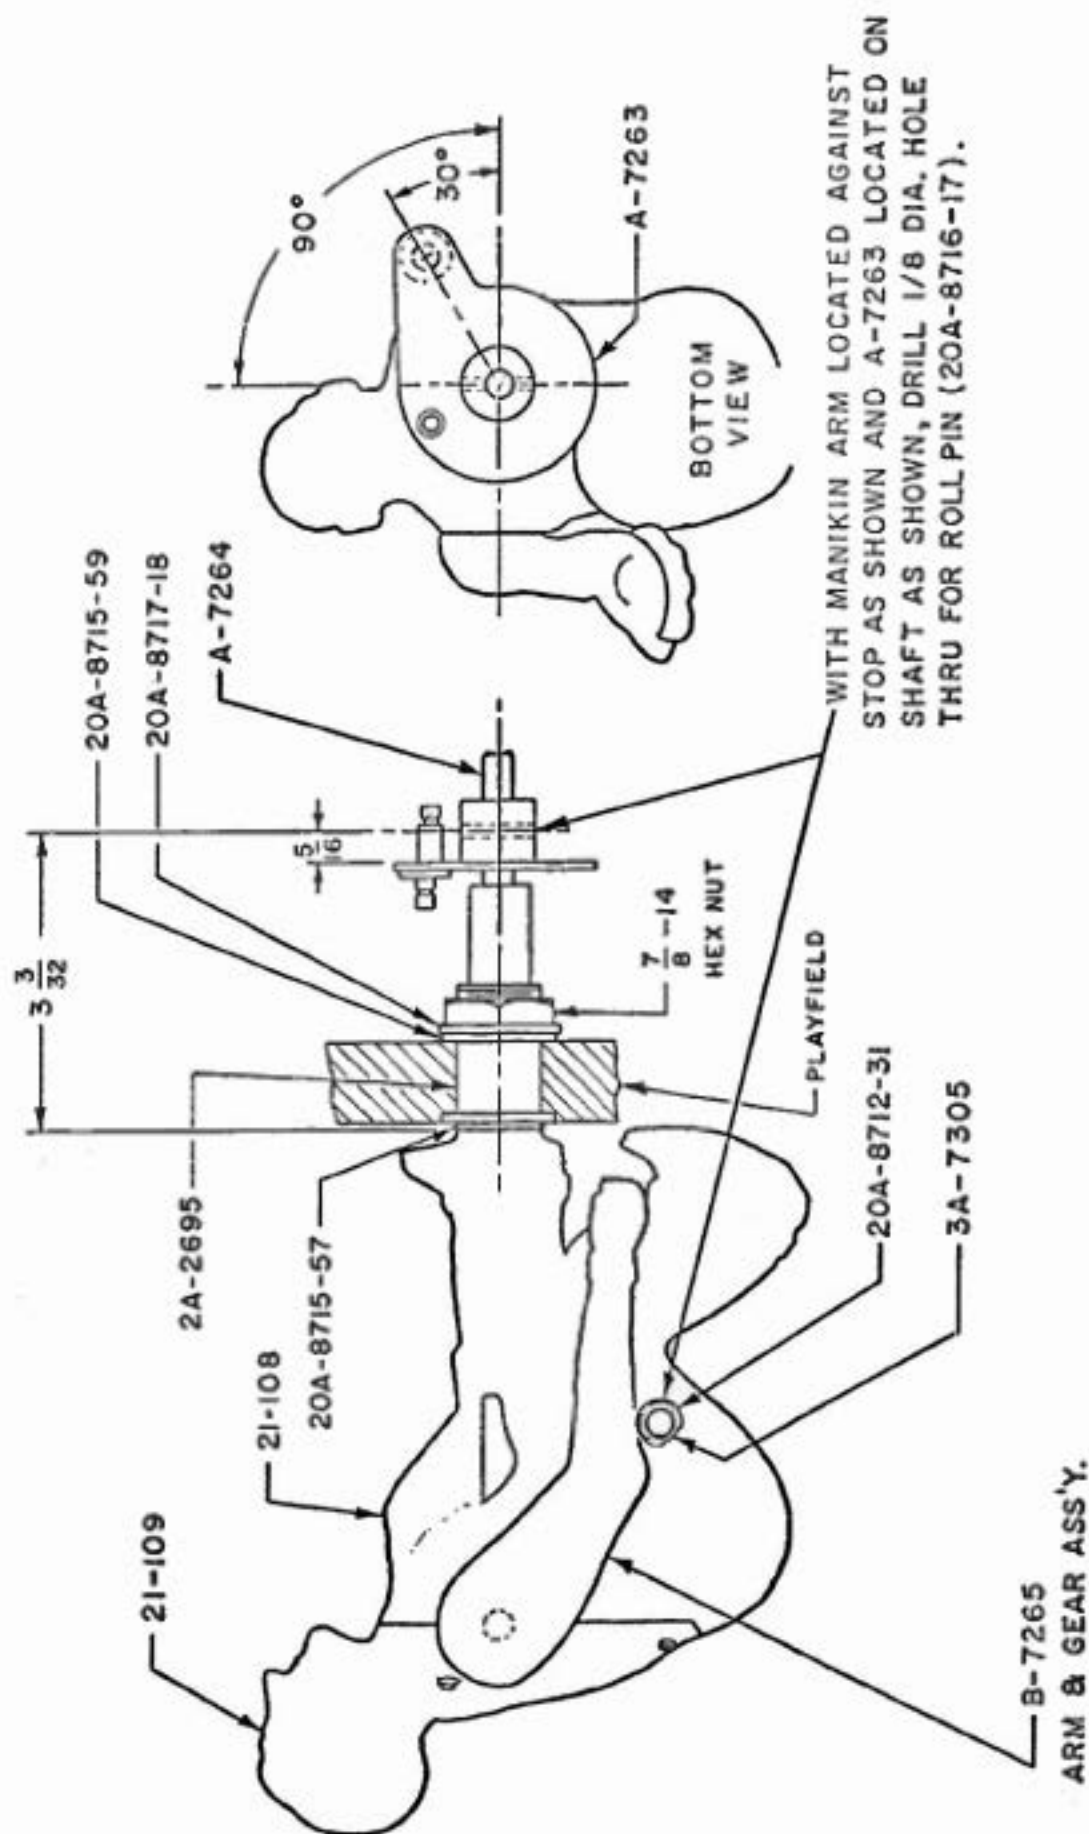


MANIKIN ACTUATOR ASSEMBLY

C-7323

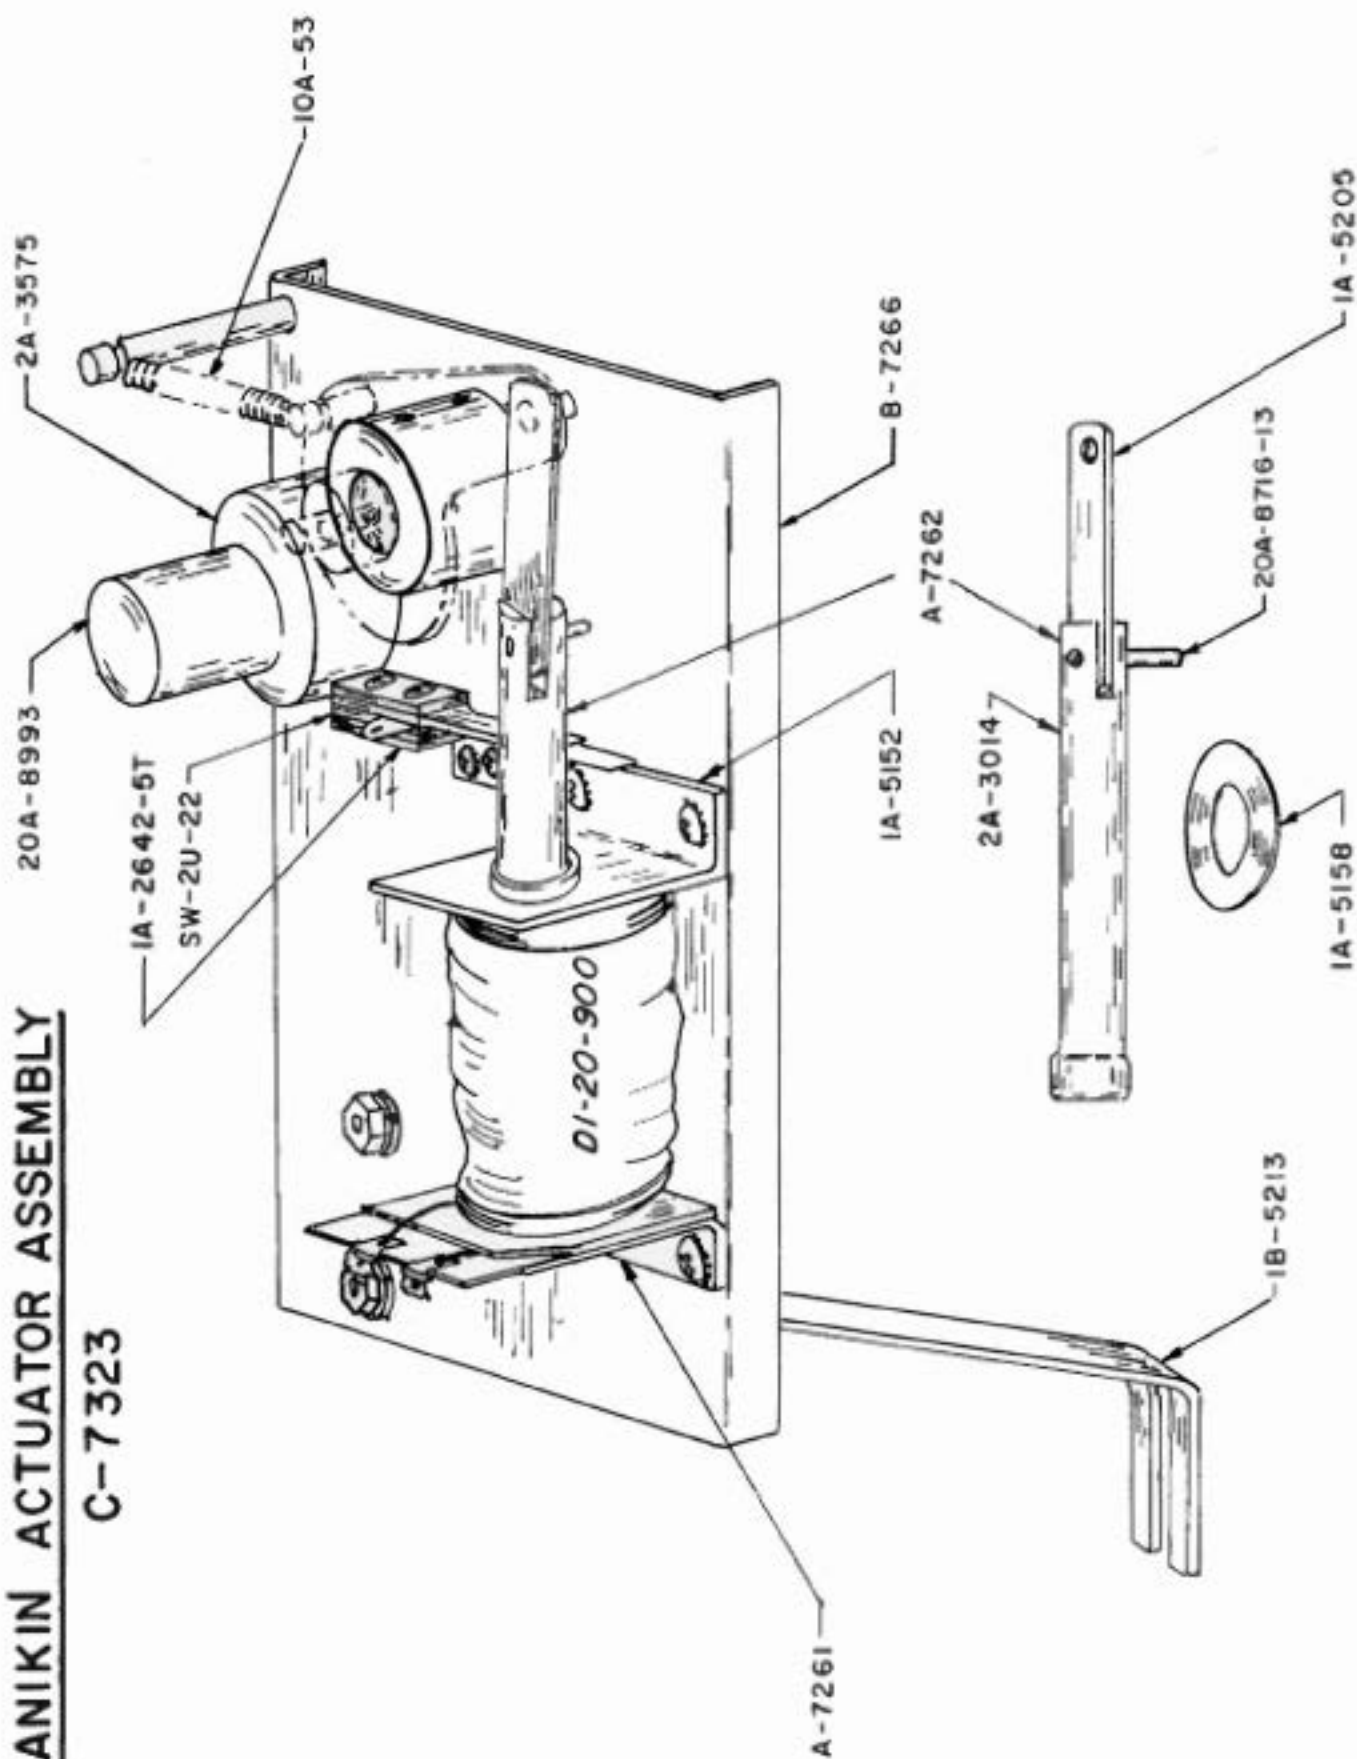


BALL LIFT MINI BOWL

D-7296

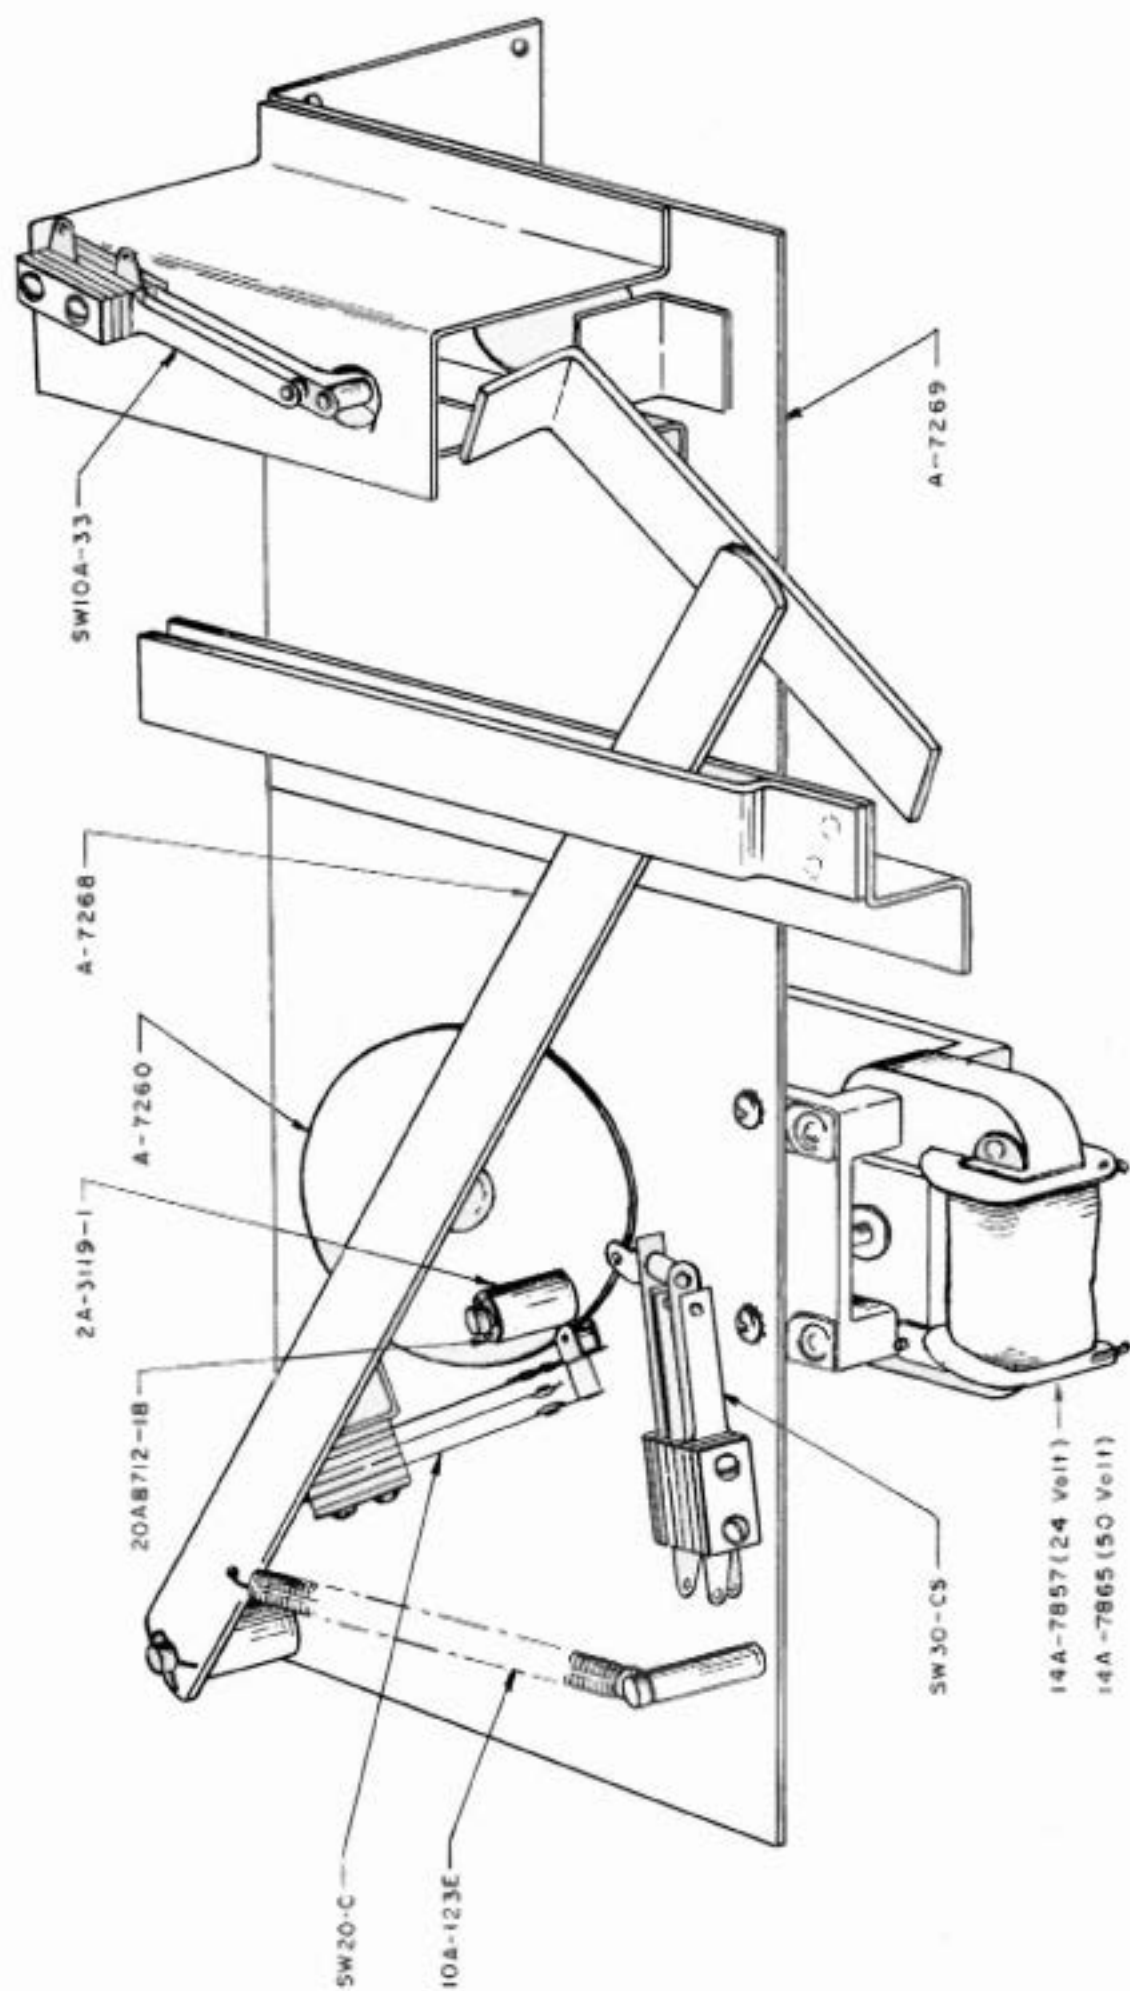


PIN ASSEMBLY

A-5725

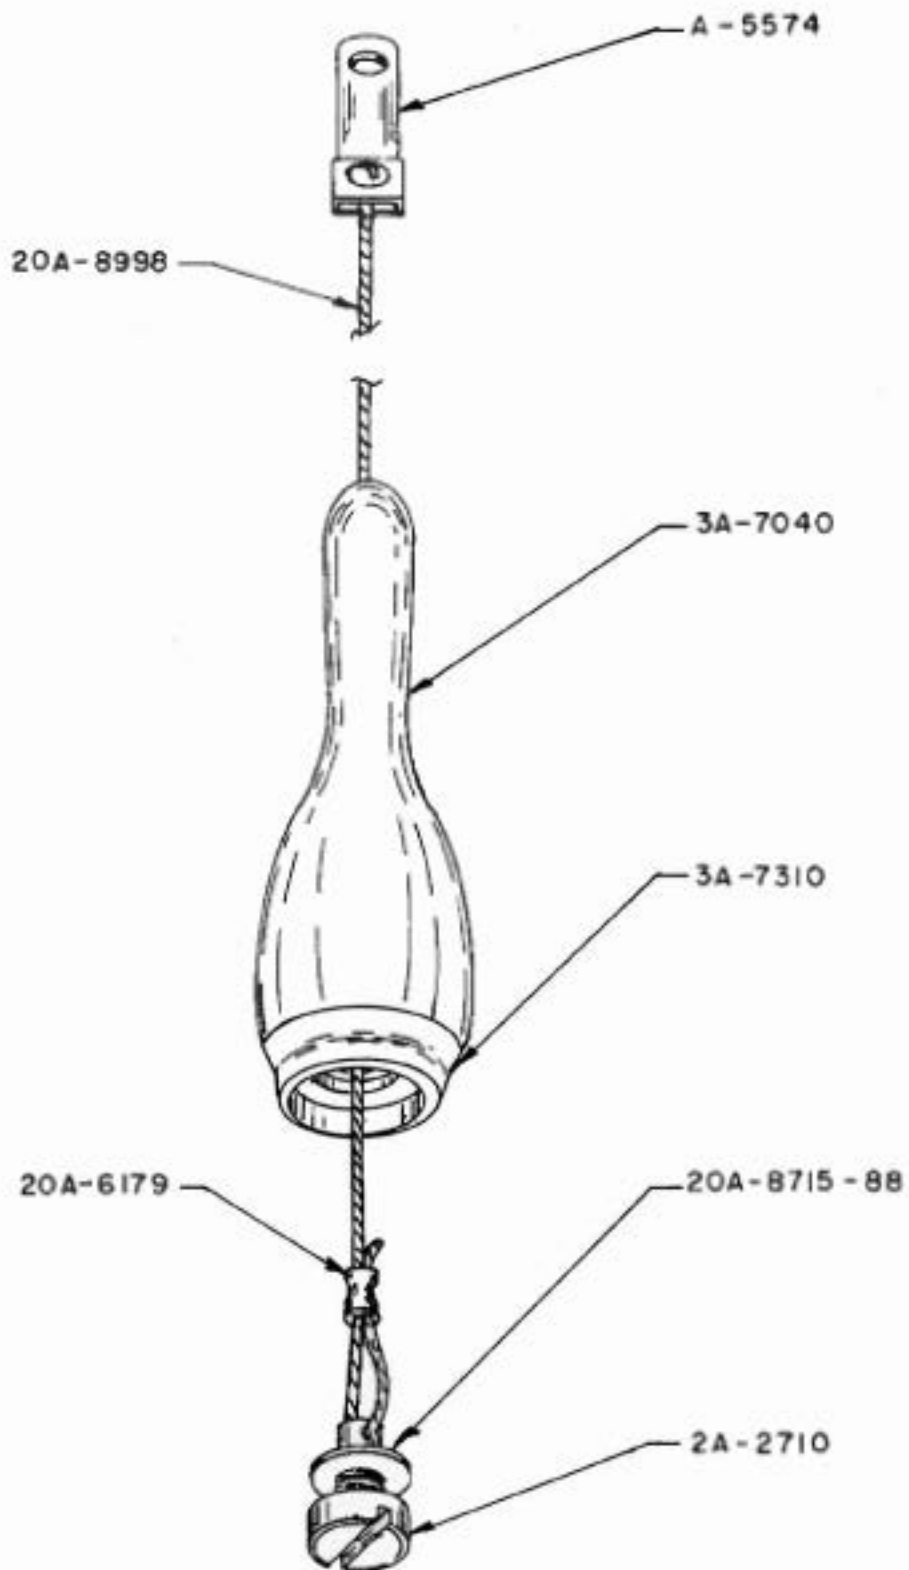

" MINI- BOWL " - PIN RESET MECHANISM C-7317

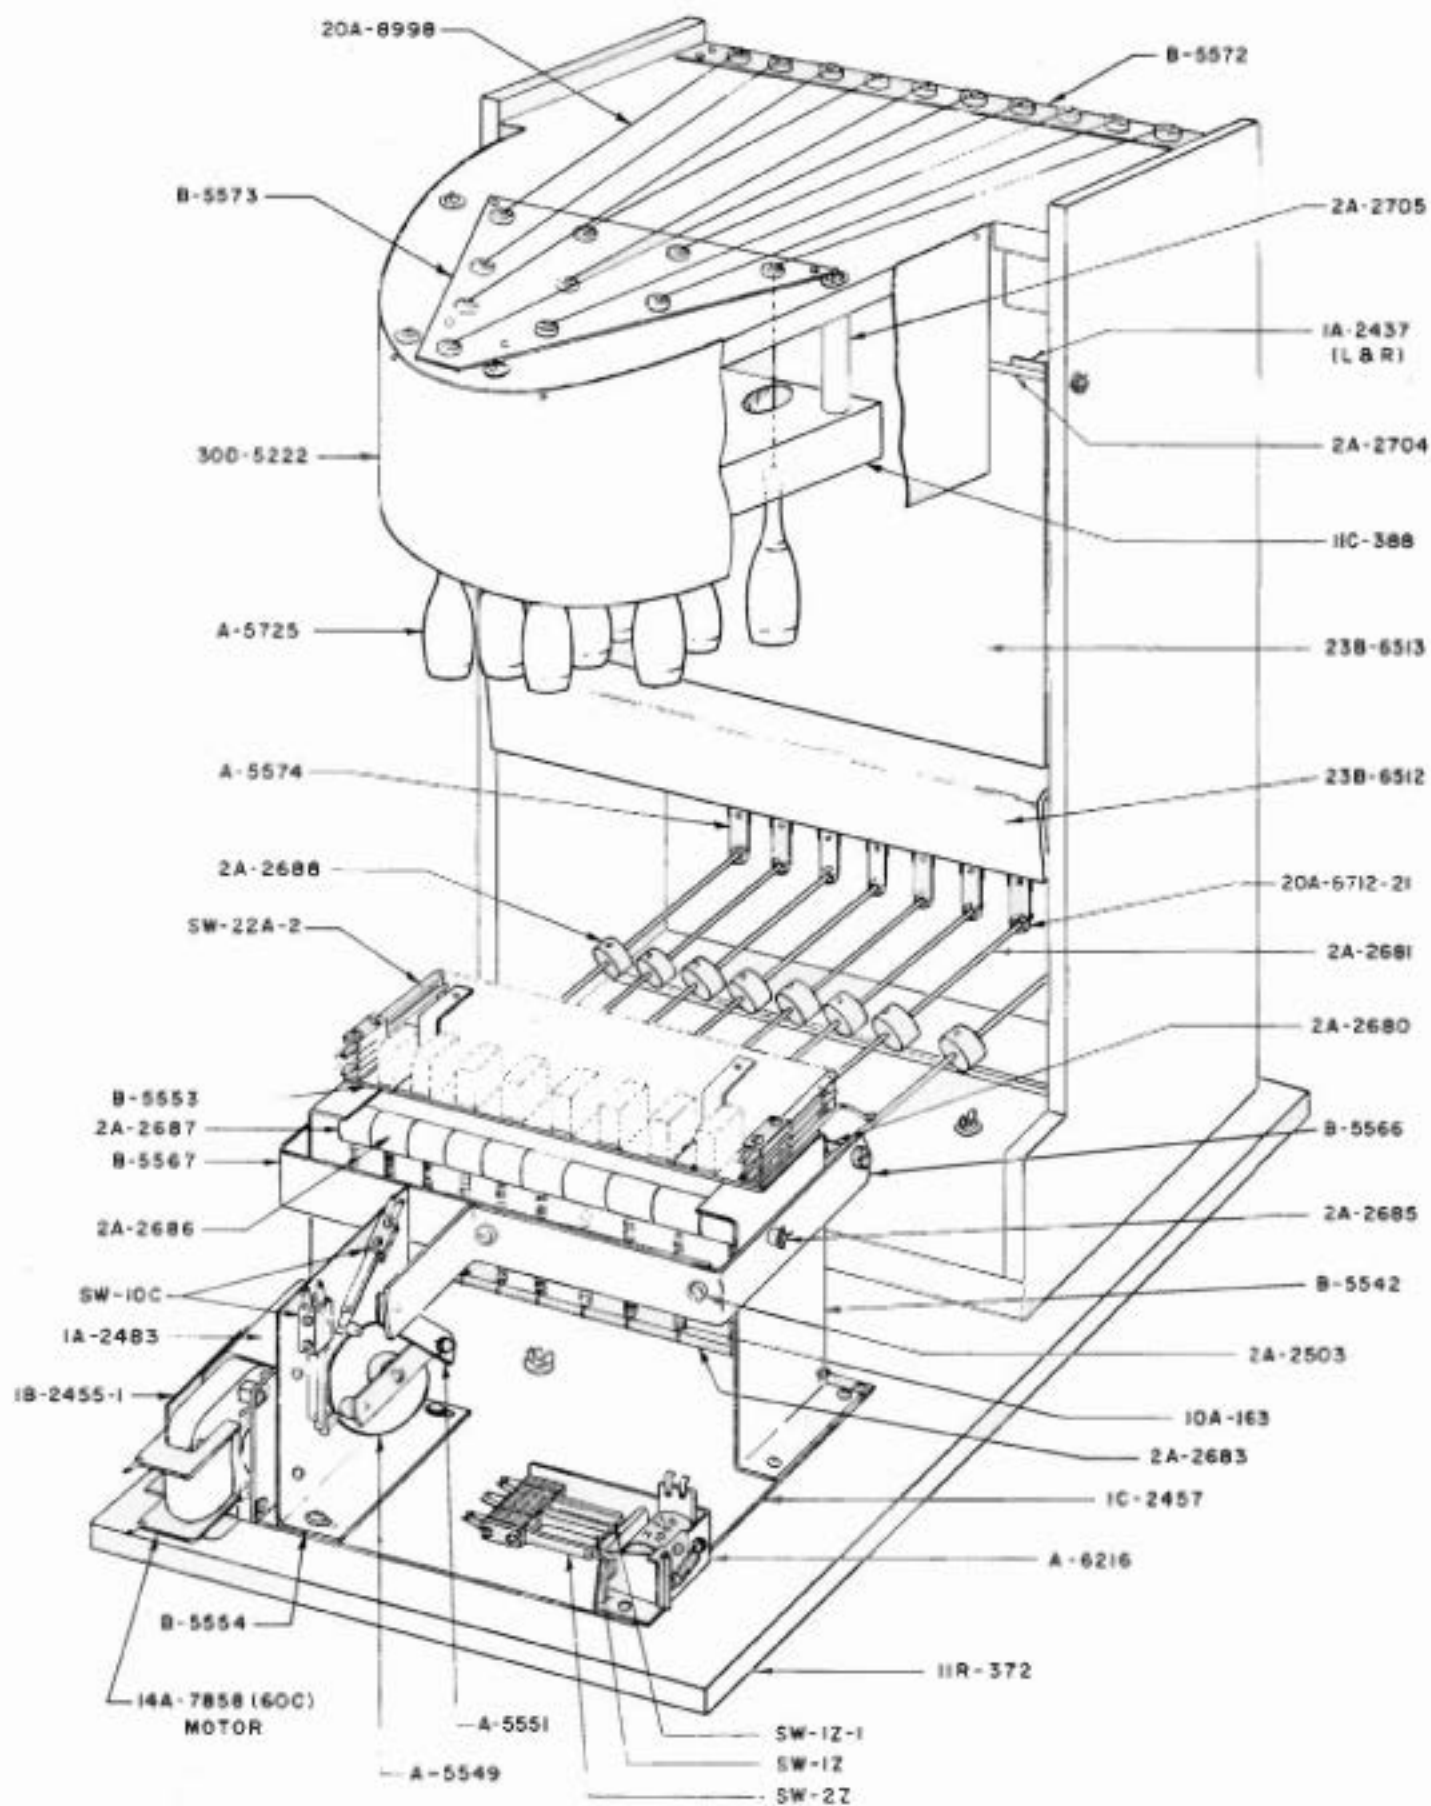

PARTS LIST

PIN GAME

GAME	UNIT				RELAY BANK		FLIPPER LINKS Dimensions Are To Hole Centers	SHIELD		MOTOR
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Reset Coil	Reset Spring		Plastic	Metal	
HAYBURNER	LEFT TARGET	C-6417	C-6520	A-6402-4	D-24-1150	10A-224	1A-4603-1	30C-322		14A-7805 160 C CONTROL 14A-7806 150 C CONTROL 14A-7836 150 C SHOOTER 14A-7837 150 C SHOOTER 14A-7837 160 C HORSE UNIT 14A-7839 150 C HORSE UNIT
	RIGHT TARGET	C-6417	C-6520	A-6402-4						
	REPLAY			A-6400						
	BALL COUNT	C-6578	C-6520	A-6402-10						
	O-9			3C-7128						
CUE T	TENS			3C-7128			1A-4603-1	30C-357		14A-7805 160 C 14A-7806 160 C
	HUNDREDS	B-6297	A-6294	3C-7128						
	THOUSANDS	B-6297	A-6294	3C-7128						
	TEN THOUSANDS	B-6297	A-6294	3C-7128						
				3C-7128						
SPACE PILOT	TARGET S.U.	C-6417	C-6521	A-6402-17						14A-7805 160 C 121 14A-7844 D.C. MOTOR
	TENS			3C-7128						
	HUNDREDS			3C-7128						
	THOUSANDS			3C-7128						
				3C-7128						
CABARET	REPLAY	C-6412	C-6520	A-6400			1A-4607-1	30C-359	1C-1241-21	14A-7805 160 C 14A-7806 150 C
	BALL COUNT	C-6412	C-6520	A-6402-5						
	WATCH	C-6479	C-6520	A-6401						
	PLAYER	C-6417	C-6521	A-6405-1						
	COIN	C-6496	C-6520	A-6402-1						
MISS "D"	O-9	B-6297	A-6294	3C-7128			1A-4603-1	30C-356		14A-7805 160 C 14A-7806 160 C
	TENS			3C-7128						
	HUNDREDS	B-6297	A-6294	3C-7128						
	THOUSANDS	B-6297	A-6294	3C-7128						
				3C-7128						
FAST BALL	REPLAY	C-6417	C-6520	A-6400	D-24-1400	10A-224				14A-7849 160 C MAN RUN 14A-7850 150 C MAN RUN 14A-7805 160 C CONTROL 14A-7806 150 C CONTROL 14A-7821 160 C PITCHER 14A-7823 150 C PITCHER
	INNING	C-6417	C-6520	A-6402-3						
	OUT	C-6417	C-6520	A-6402-3						
	SERIES	C-6417	C-6520	A-6402-3						
	MIXER	C-6417	C-6520	A-6402						
SPOOKS GUN	1st PLAYER O-9	B-6297	A-6294	3C-7128						SKULL TARGET VERTICAL 14A-7852 160 C 14A-7856 150 C SKULL TARGET LEFT & RIGHT 14A-7848 160 C 14A-7854 150 C 14A-7825 160 C WATCH TARGET 14A-7831 150 C WATCH TARGET 14B-7851 160 C CURTAIN 14B-7855 150 C CURTAIN 14A-7766 160 C FLASH 14A-7775 150 C FLASH 14A-7829 160 C CONTROL 14A-7835 150 C CONTROL
	1st PLAYER 10-90	B-6297	A-6294	3C-7128						
	2nd PLAYER O-9	B-6297	A-6294	3C-7128						
	2nd PLAYER 10-90	B-6297	A-6294	3C-7128						
				3C-7128						
BALL PARK	CREDIT	C-6417	C-6520	A-6400	D-22-1150	10A-224				14A-7751 160 C MAN RUN 14A-7757 150 C MAN RUN 14A-7805 160 C CONTROL 14A-7806 150 C CONTROL 14A-7821 160 C PITCHER 14A-7823 150 C PITCHER
	PERIOD	C-6417	C-6520	A-6402-4						
	BONUS	C-6417	C-6520	A-6402-2						
	FLASHER	C-6417	C-6520	B-6833						
	TENS			3C-7128						
POST TIME	HUNDREDS			3C-7128			1A-4603-1	30C-368		14A-7805 160 C 14A-7806 150 C
	THOUSANDS	B-6297	A-6294	3C-7128						
	TEN THOUSANDS	B-6297	A-6294	3C-7128						
	ALTERNATOR	B-6297	A-6294	3C-7128						
				3C-7128						
SUSPENSE	REPLAY	C-6417	C-6520	A-6400						14A-7857 160 C SPINNER 14A-7858 150 C SPINNER 14A-7805 160 C SCORE 14A-7806 150 C SCORE
	BALL COUNT	C-6417	C-6520	A-6402-10						
	BONUS	C-6417	C-6520	A-6401						
	NO. MATCH	C-6479	C-6520	A-6401						
	O-9	B-6297	A-6294	3C-7128						
	TENS			3C-7128						
	HUNDREDS	B-6297	A-6294	3C-7128						
	THOUSANDS	B-6297	A-6294	3C-7128						
				3C-7128						
				3C-7128						

PARTS LIST

PIN GAME

GAME	UNITS				RELAY BANK		FLIPPER LINKS Dimensions Are To Hole Centers	SHIELD		MOTOR
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Reset Coil	Reset Spring		Plastic	Metal	
SMART SET	REPLAY	C-6832	C-6520	A-6400			1A-4603-1	30C-367		14A-7805 ISO C1 SCORE 14A-7806 ISO C1 SCORE 14A-7853 ISO C1 WHEEL
	BALL COUNT	C-6417	C-6521	A-6402-5						
	NO. MATCH	C-6417	C-6521	A-6403						
	PLAYER	C-6879	C-6520	A-6405-3						
	COIN	C-6898	C-6520	A-6402-3						
	WHEEL	C-6417	C-6520	B-6833						
	O-9	B-6297	A-6294	3C-7128						
	TENS			3C-7128						
	HUNDREDS	B-6297	A-6294	3C-7128						
	THOUSANDS	B-6297	A-6294	3C-7128						
PADDOCK	REPLAY	C-6417	C-6520	A-6400			1A-4603-1	30C-358		14A-7805 ISO C1 14A-7806 ISO C1
	BALL COUNT	C-6417	C-6520	A-6402-9						
	ADVANCE	C-6417	C-6520	A-6401						
	RACE	C-6417	C-6520	A-6402-19						
	NO. MATCH	C-6879	C-6520	A-6401						
	O-9	A-7195	A-6294	3C-7272						
	TENS			3C-7272						
	HUNDREDS	A-7195	A-6294	3C-7272						
	THOUSANDS	A-7195	A-6294	3C-7272						
	ALTERNATOR			3C-7272						
PHANTOM GUN	CREDIT	C-6417	C-6520	A-6400						SPOOK TARGET VERTICAL 14A-7851 ISO C1 14A-7855 ISO C1 SPOOK TARGET LEFT & RIGHT 14A-7848 ISO C1 14A-7854 ISO C1 14A-7825 ISO C1 PHANTOM 14A-7831 ISO C1 PHANTOM 14A-7828 ISO C1 SPINNER 14A-7834 ISO C1 SPINNER 14A-7829 ISO C1 CONTROL 14A-7835 ISO C1 CONTROL
	SHOTS			A-6402-20						
	TENS			3C-7272						
	HUNDREDS			3C-7272						
	THOUSANDS	A-7195	A-6294	3C-7272						
	ALTERNATOR			3C-7272						
				3C-7272						
				3C-7272						
				3C-7272						
				3C-7272						
GRIMMON	CREDIT	C-6417	C-6520	A-6400						14A-7805 ISO C1 SCORE 14A-7806 ISO C1 SCORE 14A-7821 ISO C1 PITCHER 14A-7823 ISO C1 PITCHER
	FOOTBALL	C-6417	C-6520	A-6402-20						
	DOWN			A-6402-5						
	TIMER	B-7231	A-7226	A-7224						
				A-7223						
	MIX			3C-7272						
	1st PLAYER O-9	A-7195	A-6294	3C-7272						
	1st PLAYER TENS	A-7195	A-6294	3C-7272						
	2nd PLAYER O-9	A-7195	A-6294	3C-7272						
	2nd PLAYER TENS	A-7195	A-6294	3C-7272						
EXPD	REPLAY	C-6878	C-6520	A-6400	D-24-1150	10A-224	1A-4603-1	30C-366		14A-7805 ISO C1 SCORE 14A-7806 ISO C1 SCORE 14A-7846 ISO C1 SPIN
	BALL COUNT	C-6417	C-6520	A-6402-10						
	NO. MATCH	B-7104	A-7175	A-6401						
	SPIN			3C-7272						
	ALTERNATOR			3C-7272						
	O-9	A-7195	A-6294	3C-7272						
	TENS			3C-7272						
	HUNDREDS	A-7195	A-6294	3C-7272						
	THOUSANDS	A-7195	A-6294	3C-7272						
				3C-7272						
SET UP	BALL COUNT	C-6937	C-6520	A-6402-5	D-24-1400	10A-224	1A-4603-1	30C-373	1C-1241-7 1C-1241-35	14A-7805 ISO C1 14A-7806 ISO C1
	EXTRA BALL	C-7164	C-6520	A-6402-5						
	MAN ADVANCE	C-6417	C-6521	A-6403						
	TENS			3C-7272						
	HUNDREDS			3C-7272						
	THOUSANDS			3C-7272						
	TEN THOUSANDS			3C-7272						
	ALTERNATOR	A-7195	A-6294	3C-7272						
				3C-7272						
				3C-7272						
SEVEN UP	REPLAY	C-6932	C-6520	A-6400			1A-4603-1	30C-372	1C-1241-7	14A-7805 ISO C1 14A-7806 ISO C1
	BALL COUNT	C-6417	C-6521	A-6402-5						
	MAN ADVANCE	C-6417	C-6521	A-6403						
	ADVANCE	C-6417	C-6520	A-6402-4						
	NO. MATCH	C-6879	C-6520	A-6401						
	O-9	A-7195	A-6294	3C-7272						
	TENS			3C-7272						
	HUNDREDS	A-7195	A-6294	3C-7272						
	THOUSANDS	A-7195	A-6294	3C-7272						
	ALTERNATOR			3C-7272						
GAY 90'S	REPLAY	C-6937	C-6520	A-6400			1A-4603-1	30C-367		14A-7805 ISO C1 14A-7806 ISO C1
	BALL COUNT	C-6879	C-6520	A-6402-5						
	MATCH	C-6417	C-6520	A-6401						
	TARGET ADVANCE	C-6417	C-6520	A-6401						
	HOLE ADVANCE	C-6417	C-6520	A-6402-9						
	PLAYER	C-6417	C-6521	A-6405-3						
	COIN	C-6898	C-6520	A-6402-3						
	O-9	A-7195	A-6294	3C-7272						
	TENS			3C-7272						
	HUNDREDS	A-7195	A-6294	3C-7272						
4 ACES	REPLAY	C-6878	C-6520	A-6400	D-24-1400	10A-227	1A-4603-1	30C-354		14A-7805 ISO C1 SCORE 14A-7806 ISO C1 SCORE
	BALL COUNT	C-6417	C-6520	A-6402-10						
	LEFT BONUS	C-6417	C-6520	A-6402-20						
	RIGHT BONUS	C-6417	C-6520	A-6402-20						
	CARD	C-6417	C-6520	A-6402-12						
	I-9			3C-7272						
	10-90			3C-7272						
	100-900	A-7195	A-6294	3C-7272						
	1000-9000	A-7195	A-6294	3C-7272						
				3C-7272						

PARTS LIST

PIN GAME

GAME	UNITS				RELAY BANK		FLIPPER LINKS Dimensions Are To Hole Centers	SHIELD		MOTOR	
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Reset Coil	Reset Spring		Plastic	Metal		
ROCK & ROLL	REPLAY BALL COUNT BONUS SPIN TENS HUNDREDS THOUSANDS 10,000 100,000	C-6537 C-6417 B-7104 A-7195 A-7195	C-6520 C-6520 A-7175 A-6294 A-6294	A-6400 A-6402-9 A-6402-10 3C-7272 3C-7272 3C-7272 3C-7272 3C-7272			1A-4603-1	30C-381		14A-7846 150 C SPINNER 14A-7805 160 C SCORE 14A-7806 150 C SCORE	
HIT & RUN	CREDIT KICKING OUT STRIKE GRAND SLAM MAN MOTOR 1st PLAYER 1 PT. 1st PLAYER 10 PT. 2nd PLAYER 1 PT. 2nd PLAYER 10 PT.	C-6417 C-6417 C-6417 C-6417 B-7253 A-7195 A-7195 A-7195 A-7195 A-7195	C-6520 C-6520 C-6520 C-6126 C-6520 A-6294 A-6294 A-6294 A-6294 A-6294	A-6400 A-6402-10 A-6402-3 A-6402-3 A-6402-5 3C-7272 3C-7272 3C-7272 3C-7272					30C-382		18A-7859 160 D MAN 18A-7860 150 D MAN 14A-7805 160 D CONTROL 14A-7806 150 D CONTROL 14A-7821 160 D PITCHER 14A-7823 150 D PITCHER
ACES & KINGS	REPLAY BALL COUNT NO. MATCH PLAYER COIN LEFT BONUS RIGHT BONUS 1 POINT 10 POINT 100 POINT 1,000 POINT	C-6932 C-6879 C-6417 C-6886 C-6417 C-6417 A-7195 A-7195 A-7195 A-7195	C-6520 C-6520 C-6521 C-6520 C-6520 C-6520 A-6294 A-6294 A-6294 A-6294	A-6400 A-6402-5 A-6401 A-6405-3 A-6402-3 A-6402-10 A-6402-10 3C-7272 3C-7272 3C-7272 3C-7272	D-24-1150	10A-724	1A-4603-1	30C-377	3C-1241-55		14A-7805 160 C SCORE 14A-7806 150 C SCORE
JIVE TIME	REPLAY BALL COUNT BONUS NO. MATCH SPIN TENS HUNDREDS THOUSANDS 10,000 100,000	C-6417 C-6417 C-6879 B-7104 A-7195 A-7195 A-7195	C-6520 C-6520 C-6520 A-7175 A-6294 A-6294 A-6294	A-6400 A-6402-10 A-6401 A-6401 3C-7272 3C-7272 3C-7272 3C-7272 3C-7272			1A-4603-1	30C-380			14A-7846 150 C SPINNER 14A-7805 160 C SCORE 14A-7806 150 C SCORE
BONANZA SUN	CREDIT SHOT COUNTER 10 POINT 100 POINT 1,000 POINT	C-6417 A-7195	C-6520 A-6294	A-6400 A-6402-35 3C-7272 3C-7272 3C-7272							14A-7829 160 C CONTROL 14A-7835 150 C CONTROL TARGETS 14A-7824 160 C BOBBING 14A-7830 150 C BOBBING 14A-7861 160 C SLOW HORSE 14A-7863 150 C SLOW HORSE 14A-7862 160 C FAST HORSE 14A-7864 150 C FAST HORSE
STRIKE ZONE	REPLAY BALL COUNT NO. MATCH ALTERNATOR O-9 TENS HUNDREDS THOUSANDS	C-6878 C-6417 A-7195 A-7195 A-7195	C-6520 C-6520 A-6294 A-6294 A-6294	A-6400 A-6402-10 A-6401 3C-7272 3C-7272 3C-7272 3C-7272	D-24-1150	10A-724	1A-4603-1	30C-371			14A-7805 160 C SCORE 14A-7806 150 C SCORE
STRAIGHT FLUSH	REPLAY BALL COUNT 10 POINT 100 POINT 1,000 POINT 10,000 POINT 100,000 POINT ADVANCE	C-6937 A-7195 A-7195 A-7195 A-7195	C-6520 A-6294 A-6294 A-6294 A-6294	A-6400 A-6402-9 3C-7272 3C-7272 3C-7272 3C-7272 3C-7272	D1-24-1608	10A-724	1A-4603-1	30C-389			14A-7805 160 C SCORE 14A-7806 150 C SCORE
HINGLER	CREDIT SHOT COUNTER HORSESHOE 1 POINT 10 POINT	C-6417 C-6417 A-7195 A-7195	C-6520 C-6520 A-6294 A-6294	A-6400 A-6402 A-6402 3C-7272 3C-7272							14A-7805 160 D SCORE 14A-7806 150 D SCORE
MINI BOWL	CREDIT STRIKE SPARE FRAME EXTRA SHOTS 1 POINT 10 POINT 100 POINT	C-6981 C-6417 C-6414 C-6886 C-6417 B-7253 A-7195	A-6443 C-6520 A-6443 C-6520 A-6294 A-6294 A-6294	A-6400 A-6402-5 A-6402A-11 A-6402A-5 3C-7272 3C-7272 3C-7272							18A-7857 160 D SCORE 18A-7868 150 D SCORE 14A-7829 160 D PIN RESET 14A-7866 150 D PIN RESET 14A-7857 160 D BALL LIFT 14A-7865 150 D BALL LIFT
DIPSY DOODLE	REPLAY BALL COUNT NO. MATCH PLAYER COIN ADVANCE 10 POINT 100 POINT 1,000 POINT 10,000 POINT	C-6932 C-6879 C-6417 C-6886 C-6417 B-7253 B-7253 B-7253 B-7253	C-6520 C-6520 C-6521 C-6520 A-6294 A-6294 A-6294 A-6294	A-6400 A-6402-5 A-6401 A-6405-3 A-6402-3 A-6402-4 3C-7272 3C-7272 3C-7272 3C-7272			1A-4603-1	30C-386			14A-7805 160 C SCORE 14A-7806 150 C SCORE

PARTS LIST SHUFFLE GAME

GAME	UNITS				RELAY BANK		MOTOR	
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Reset Coil	Reset Spring		
TANGO	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR - 60C	14A-7765
	FRAME CONTROL	C-6417-19	C-6520-9F	A-6402A-11			SCORE MOTOR - 50C	14A-7776
	PLAYER UP	C-6417-26	C-6521-4	A-6405-5			PIN RESET MOTOR - 60C	14A-7820
	GAME SELECTION	C-6415-7	C-6521-3	A-6403			PIN RESET MOTOR - 50C	14A-7777
	EXTRA SHOTS	C-6414-1	A-6443-4	A-6402A-5			FLASH MOTOR - 60C	14A-7766
	COIN	C-6412-2	C-6520-4	A-6402A-5			FLASH MOTOR - 50C	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
AMAZON	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR - 60C	14A-7765
	FRAME CONTROL	C-6417-19	C-6520-9F	A-6402A-11			SCORE MOTOR - 50C	14A-7776
	PLAYER UP	C-6417-26	C-6521-4	A-6405-5			PIN RESET MOTOR - 60C	14A-7820
	GAME SELECTION	C-6415-7	C-6521-3	A-6403			PIN RESET MOTOR - 50C	14A-7777
	EXTRA SHOTS	C-6414-1	A-6443-4	A-6402A-5			FLASH MOTOR - 60C	14A-7766
	COIN	C-6412-2	C-6520-4	A-6402A-5			FLASH MOTOR - 50C	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
BLAZER	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR - 60C	14A-7765
	FRAME CONTROL	C-6417-19	C-6520-9F	A-6402A-11			SCORE MOTOR - 50C	14A-7776
	PLAYER UP	C-6417-26	C-6521-4	A-6405-5			PIN RESET MOTOR - 60C	14A-7820
	GAME SELECTION	C-6415-7	C-6521-3	A-6403			PIN RESET MOTOR - 50C	14A-7777
	EXTRA SHOTS	C-6414-1	A-6443-4	A-6402A-5			FLASH MOTOR - 60C	14A-7766
	COIN	C-6412-2	C-6520-4	A-6402A-5			FLASH MOTOR - 50C	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
ENCORE	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR - 60C	14A-7765
	FRAME CONTROL	C-6417-19	C-6520-9F	A-6402A-11			SCORE MOTOR - 50C	14A-7776
	PLAYER UP	C-6417-26	C-6521-4	A-6405-5			PIN RESET MOTOR - 60C	14A-7820
	GAME SELECTION	C-6415-7	C-6521-3	A-6403			PIN RESET MOTOR - 50C	14A-7777
	EXTRA SHOTS	C-6414-1	A-6443-4	A-6402A-5			FLASH MOTOR - 60C	14A-7766
	COIN	C-6412-2	C-6520-4	A-6402A-5			FLASH MOTOR - 50C	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
AZTEC	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR - 60C	14A-7765
	FRAME CONTROL	C-6417-19	C-6520-9F	A-6402A-11			SCORE MOTOR - 50C	14A-7776
	PLAYER UP	C-6417-26	C-6521-4	A-6405-5			PIN RESET MOTOR - 60C	14A-7820
	GAME SELECTION	C-6415-7	C-6521-3	A-6403			PIN RESET MOTOR - 50C	14A-7777
	EXTRA SHOTS	C-6414-1	A-6443-4	A-6402A-5			FLASH MOTOR - 60C	14A-7766
	COIN	C-6412-2	C-6520-4	A-6402A-5			FLASH MOTOR - 50C	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
ALTAR	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR - 60C	14A-7765
	FRAME CONTROL	C-6417-19	C-6520-9F	A-6402A-11			SCORE MOTOR - 50C	14A-7776
	PLAYER UP	C-6417-26	C-6521-4	A-6405-5			PIN RESET MOTOR - 60C	14A-7820
	GAME SELECTION	C-6415-7	C-6521-3	A-6403			PIN RESET MOTOR - 50C	14A-7777
	EXTRA SHOTS	C-6414-1	A-6443-4	A-6402A-5			FLASH MOTOR - 60C	14A-7766
	COIN	C-6412-2	C-6520-4	A-6402A-5			FLASH MOTOR - 50C	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
CORONADO	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR - 60C	14A-7765
	FRAME CONTROL	C-6417-19	C-6520-9F	A-6402A-11			SCORE MOTOR - 50C	14A-7776
	PLAYER UP	C-6417-26	C-6521-4	A-6405-5			PIN RESET MOTOR - 60C	14A-7820
	GAME SELECTION	C-6415-7	C-6521-3	A-6403			PIN RESET MOTOR - 50C	14A-7777
	EXTRA SHOTS	C-6414-1	A-6443-4	A-6402A-5			FLASH MOTOR - 60C	14A-7766
	COIN	C-6412-2	C-6520-4	A-6402A-5			FLASH MOTOR - 50C	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				

PARTS LIST

SHUFFLE GAME

GAME	UNITS				RELAY BANK		MOTOR
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Reset Coil	Reset Spring	
ORION	STRIKE SPARE	C-681	A-6443-6	A-6402-24	0-22-1150	10A-65	SCORE MOTOR - 60C 14A-7765 SCORE MOTOR - 50C 14A-7775 PIN RESET MOTOR - 50C 14A-7820 PIN RESET MOTOR - 50C 14A-7777 FLASH MOTOR - 60C 14A-7766 FLASH MOTOR - 50C 14A-7775
	FRAME CONTROL	C-6417	C-6520	A-6402A-12			
	PLAYER UP	C-6417	C-6521	A-6405-5			
	GAME SELECTION	C-6417	C-6521	A-6403			
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			
	COIN	C-6896	C-6443-5	A-6402A-5			
	1-9			3A-7128			
	TENS			3A-7128			
	HUNDREDS			3A-7128			
	THOUSANDS			3A-7128			
	SCORE MOTOR	C-6418-9	C-6519-7				
	FLASH MOTOR	C-6413-9	C-6520-8	B-6833			
ALPHA	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	0-22-1150	10A-66	SCORE MOTOR - 60C 14A-7765 SCORE MOTOR - 50C 14A-7775 PIN RESET MOTOR - 50C 14A-7820 PIN RESET MOTOR - 50C 14A-7777 FLASH MOTOR - 60C 14A-7776 FLASH MOTOR - 50C 14A-7775
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			
	PLAYER UP	C-6417	C-6521	A-6405-5			
	GAME SELECTION	C-6417	C-6521	A-6403			
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			
	COIN	C-6896	C-6443-5	A-6402A-5			
	1-9			3A-7128			
	TENS			3A-7128			
	HUNDREDS			3A-7128			
	THOUSANDS			3A-7128			
	SCORE MOTOR	C-6418-9	C-6519-7				
	FLASH MOTOR	C-6413-9	C-6520-8	B-6833			
PEGASUS	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	0-22-1150	10A-66	SCORE MOTOR (60C) 14A-7765 SCORE MOTOR (50C) 14A-7775 PIN RESET MOTOR (60C) 14A-7820 PIN RESET MOTOR (50C) 14A-7777 FLASH MOTOR (60C) 14A-7766 FLASH MOTOR (50C) 14A-7775
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			
	PLAYER UP	C-6417	C-6521	A-6405-5			
	GAME SELECTION	C-6417	C-6521	A-6403			
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			
	COIN	C-6896	C-6443-5	A-6402A-5			
	1-9			3A-7128			
	TENS			3A-7128			
	HUNDREDS			3A-7128			
	THOUSANDS			3A-7128			
	SCORE MOTOR	C-6418-9	C-6519-7				
	FLASH MOTOR	C-6413-9	C-6520-8	B-6833			
DELTA	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	0-22-1150	10A-66	SCORE MOTOR (60C) 14A-7765 SCORE MOTOR (50C) 14A-7775 PIN RESET MOTOR (60C) 14A-7820 PIN RESET MOTOR (50C) 14A-7777 FLASH MOTOR (60C) 14A-7766 FLASH MOTOR (50C) 14A-7775
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			
	PLAYER UP	C-6417	C-6521	A-6405-5			
	GAME SELECTION	C-6417	C-6521	A-6403			
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			
	COIN	C-6896	C-6443-5	A-6402A-5			
	1-9			3A-7128			
	TENS			3A-7128			
	HUNDREDS			3A-7128			
	THOUSANDS			3A-7128			
	SCORE MOTOR	C-6418-9	C-6519-7				
	FLASH MOTOR	C-6413-9	C-6520-8	B-6833			
CENTURY	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	0-22-1150	10A-66	SCORE MOTOR (60C) 14A-7765 SCORE MOTOR (50C) 14A-7775 PIN RESET MOTOR (60C) 14A-7820 PIN RESET MOTOR (50C) 14A-7777 FLASH MOTOR (60C) 14A-7766 FLASH MOTOR (50C) 14A-7775
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			
	PLAYER UP	C-6417	C-6521	A-6405-5			
	GAME SELECTION	C-6417	C-6521	A-6403			
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			
	COIN	C-6896	C-6443-5	A-6402A-5			
	1-9			3A-7128			
	TENS			3A-7128			
	HUNDREDS			3A-7128			
	THOUSANDS			3A-7128			
	SCORE MOTOR	C-6418-9	C-6519-7				
	FLASH MOTOR	C-6413-9	C-6520-8	B-6833			
GAMMA	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	0-22-1150	10A-66	SCORE MOTOR (60C) 14A-7765 SCORE MOTOR (50C) 14A-7775 PIN RESET MOTOR (60C) 14A-7820 PIN RESET MOTOR (50C) 14A-7777 FLASH MOTOR (60C) 14A-7766 FLASH MOTOR (50C) 14A-7775
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			
	PLAYER UP	C-6417	C-6521	A-6405-5			
	GAME SELECTION	C-6417	C-6521	A-6403			
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			
	COIN	C-6896	C-6443-5	A-6402A-5			
	1-9			3A-7128			
	TENS			3A-7128			
	HUNDREDS			3A-7128			
	THOUSANDS			3A-7128			
	SCORE MOTOR	C-6418-9	C-6519-7				
	FLASH MOTOR	C-6413-9	C-6520-8	B-6833			
BETA	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	0-22-1150	10A-66	SCORE MOTOR (60C) 14A-7765 SCORE MOTOR (50C) 14A-7775 PIN RESET MOTOR (60C) 14A-7820 PIN RESET MOTOR (50C) 14A-7777 FLASH MOTOR (60C) 14A-7766 FLASH MOTOR (50C) 14A-7775
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			
	PLAYER UP	C-6417	C-6521	A-6405-5			
	GAME SELECTION	C-6417	C-6521	A-6403			
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			
	COIN	C-6896	C-6443-5	A-6402A-5			
	1-9			3C-7272			
	TENS			3C-7272			
	HUNDREDS			3C-7272			
	THOUSANDS			3C-7272			
	SCORE MOTOR	C-6418-9	C-6519-7				
	FLASH MOTOR	C-6413-9	C-6520-8	B-6833			

PARTS LIST

SHUFFLE GAME

GAME	UNITS				RELAY BANK		MOTOR	
	Name	Contact Disc	Wiper Carrier	Gear & Shaft	Reset Coil	Reset Spring		
CENTENIAL	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR (60C)	14A-7766
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			SCORE MOTOR (50C)	14A-7776
	PLAYER UP	C-6417	C-6521	A-6405-5			PIN RESET MOTOR (60C)	14A-7820
	GAME SELECTION	C-6417	C-6521	A-6403			PIN RESET MOTOR (50C)	14A-7777
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			FLASH MOTOR (60C)	14A-7766
	COIN	C-6896	C-6443-5	A-6402A-5			FLASH MOTOR (50C)	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
SCORE MOTOR	C-6418-9	C-6519-7						
FLASH MOTOR	C-6413-9	C-6520-8	B-6833					
EPSILON	STRIKE SPARE	C-6981	A-6443-6	A-6402-24	D-22-1150	10A-66	SCORE MOTOR (60C)	14A-7766
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			SCORE MOTOR (50C)	14A-7776
	PLAYER UP	C-6417	C-6521	A-6405-5			PIN RESET MOTOR (60C)	14A-7820
	GAME SELECTION	C-6417	C-6521	A-6403			PIN RESET MOTOR (50C)	14A-7777
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			FLASH MOTOR (60C)	14A-7766
	COIN	C-6896	C-6443-5	A-6402A-5			FLASH MOTOR (50C)	14A-7775
	1-9			3C-7272				
	TENS			3C-7272				
	HUNDREDS			3C-7272				
	THOUSANDS			3C-7272				
SCORE MOTOR	C-6418-9	C-6519-7						
FLASH MOTOR	C-6413-9	C-6520-8	B-6833					
EL GRANDE	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D-22-1150	10A-66	SCORE MOTOR (60C)	14A-7766
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			SCORE MOTOR (50C)	14A-7776
	PLAYER UP	C-6417	C-6521	A-6405-5			PIN RESET MOTOR (60C)	14A-7820
	GAME SELECTION	C-6417	C-6521	A-6403			PIN RESET MOTOR (50C)	14A-7777
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			FLASH MOTOR (60C)	14A-7766
	COIN	C-6896	C-6443-5	A-6402A-5			FLASH MOTOR (50C)	14A-7775
	1-9			3A-7128				
	TENS			3A-7128				
	HUNDREDS			3A-7128				
	THOUSANDS			3A-7128				
SCORE MOTOR	C-6418-9	C-6519-7						
FLASH MOTOR	C-6413-9	C-6520-8	B-6833					
LAGUNA	STRIKE SPARE	C-6981	A-6443-6	A-6402-24	D-22-1150	10A-66	SCORE MOTOR (60C)	14A-7766
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			SCORE MOTOR (50C)	14A-7776
	PLAYER UP	C-6417	C-6521	A-6405-5			PIN RESET MOTOR (60C)	14A-7820
	GAME SELECTION	C-6417	C-6521	A-6403			PIN RESET MOTOR (50C)	14A-7777
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			FLASH MOTOR (60C)	14A-7766
	COIN	C-6896	C-6443-5	A-6402A-5			FLASH MOTOR (50C)	14A-7775
	1-9			3C-7272				
	TENS			3C-7272				
	HUNDREDS			3C-7272				
	THOUSANDS			3C-7272				
SCORE MOTOR	C-6418-9	C-6519-7						
FLASH MOTOR	C-6413-9	C-6520-8	B-6833					
PALOS VERDE	STRIKE SPARE	C-6981	A-6443-6	A-6402-24	D1-21-1125	10A-66	SCORE MOTOR (60C)	14A-7766
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			SCORE MOTOR (50C)	14A-7776
	PLAYER UP	C-6417	C-6521-4	A-6405-5			FLASH MOTOR (60C)	14A-7766
	GAME SELECTION	C-6415	C-6521	C-6403			FLASH MOTOR (50C)	14A-7775
	EXTRA SHOTS	C-6413	C-6520-5	A-6402A-5			PIN RESET MOTOR (60C)	14A-7820
	COIN	C-6896	A-6443-5	A-6402A-5			PIN RESET MOTOR (50C)	14A-7777
	1-9			3C-7272				
	10-90			3C-7272				
	HUNDREDS			3C-7272				
	THOUSANDS			3C-7272				
FLASH MOTOR	C-6413-9	C-6520-8						
SCORE MOTOR	C-6418-9	C-6519-7						
ROTO				3C-7272				
CIMARRON	STRIKE SPARE	C-6414-2	A-6443-3	A-6402-5	D1-24-1400	10A-66	SCORE MOTOR (60C)	14A-7766
	FRAME CONTROL	C-6417	C-6520	A-6402A-11			SCORE MOTOR (50C)	14A-7776
	PLAYER UP	C-6417	C-6521	A-6505-5			PIN RESET MOTOR (50C)	14A-7820
	GAME SELECTION	C-6417	C-6521	A-6403			PIN RESET MOTOR (50C)	14A-7777
	EXTRA SHOTS	C-6414	A-6443-4	A-6402A-5			FLASH MOTOR (60C)	14A-7766
	COIN	C-6896	C-6443-5	A-6402A-5			FLASH MOTOR (50C)	14A-7775
	1-9			3C-7272				
	TENS			3C-7272				
	HUNDREDS			3C-7272				
	THOUSANDS			3C-7272				
ROTO				3C-7272				
FLASH MOTOR								
SCORE MOTOR	C-6418-9	C-6519-7						
	C-6413-9	C-6520-8	B-6833					

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
SINGLE PLAYER CABINETS - "POST TIME, PADDOCK" FORWARD			
1E-2263-2	Plated metal leg - (4 per set) 22"		4.18
11R-266	Cabinet only		92.00
11R-326	Light box only		48.00
1D-3594-1	Light box metal door only		8.00
1B-3595-1	Light box channel only		1.70
8A-7228	Screened light box glass		22.50
30A-7228	Screened light box plexiglass		36.00
B-6390	Front moulding assembly	52	10.58
B-6391	Front moulding lever slide assembly	52	1.58
C-6392	Front moulding latch guide assembly	52	3.40
1D-2887R	Right side stainless moulding (use with nylon buttons)		11.06
1D-2888L	Left side stainless moulding (use with nylon buttons)		11.06
1B-2892-2	Back "U" trim-glass stop		2.24
1B-2893	Back top stainless trim		4.00
3A-7135-1	Playfield glass channel	31	1.36
8A-7028	21" x 43" playfield top glass		15.00
MULTI PLAYER CABINETS - "CABARET" FORWARD			
1E-2263-2	Plated metal leg - (4 per set) 22"		4.18
11R-266	Cabinet only		92.00
11R-327	Light box only		48.00
1D-3594-2	Light box metal door only		9.60
1B-3595-2	Light box channel only		1.90
8A-7227	Screened light glass		28.00
30A-7227	Screened light box plexiglass		42.00
B-6390	Front moulding assembly	52	10.58
B-6391	Front moulding lever slide assembly	52	1.58
C-6392	Front moulding latch guide assembly	52	3.40
1D-2887R	Right side stainless moulding (use with nylon buttons)		11.06
1D-2888L	Left side stainless moulding (use with nylon buttons)		11.06
1B-2892-2	Back "U" trim - glass stop		2.24
1B-2893	Back top stainless trim		4.00
3A-7135-1	Playfield glass channel	31	1.36
8A-7028	21" x 43" playfield top glass		15.00
MISCELLANEOUS CABINET HARDWARE			
1A-2961	Insert hinge - male	103	.34
1A-2962	Insert hinge - female		.32
3A-7208	Flipper button (red nylon)	22, 58	.22
8A-7025A	Leg leveler		.30
8A-7025B	Leg leveler nut		.06
20A-6500	1 1/8" steel ball (flipper games)		.78
20A-6502A	Carbon tilt bob	22	.86
20A-6518	3/8" Steel ball (baseball games)	55	.58
20A-6519	15/16" Steel ball (roll tilt)	22	.76
20A-6520	3/4" Steel ball (baseball)		.34

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
MISCELLANEOUS CABINET HARDWARE, Cont'd.			
20A-6542T	Front door lock (2 keys)	45	3.30
20A-8995	Back door lock w/ #288 keys		3.20
C-6856	Cash box cover (new type)	48	2.02
C-6855	Cash box (new type)	48	5.12
	Leg bolt $\frac{3}{8}$ -16 x 2 $\frac{3}{8}$ "		.18
	Light box mounting bolt $\frac{3}{8}$ -16 x 3 $\frac{1}{2}$ "		.18
BASEBALL CABINETS (SPECIFY GAME)			
	Cabinet only		152.00
	Light box only		85.00
	Light box door only (metal)		9.50
	Light box with door		94.50
	Screened light box glass		27.00
	Screened light box plexiglass		52.00
	Screened (playboard only)		60.00
1E-2263-2	Plated metal leg 22"		4.18
1D-2887-370	Right side stainless moulding - Fast Ball, Hit & Run		11.06
1D-2888-370	Left side stainless moulding - Fast Ball, Hit & Run		11.06
3A-7134	Arch Ball Rail 1969 Baseball		1.50
3B-7134-4	Playfield glass channel - Base Hit, Ball Park		.76
3A-7135-7	Playfield glass channel - Fast Ball, Hit & Run	31	1.58
3A-7135-8	Playfield glass channel - Gridiron	31	1.54
3A-7135-9	Playfield glass channel - Fast Ball, Hit & Run	31	1.40
C-6855	Cash box (Base Hit - Ball Park)	48	5.12
C-6856	Cash box cover (Base Hit - Ball Park)	48	2.02
SPOOKS, PHANTOM & BONANZA CABINET & PARTS			
11R-401-1	Bonanza cabinet only		307.50
11R-304	Spooks, Phantom cabinet only		256.00
8A-7235	Screened score glass Spooks Gun		22.00
8A-7242	Screened score glass Phantom Gun		21.00
8A-7254	Screened score glass Bonanza Gun		24.00
	Screened score plexiglass All Guns		48.00
20B-8920	Glass mirror for gun game		10.00
"MINI-BOWL" CABINET & PARTS			
11R-371	Cabinet only		263.00
11R-370	Formica playfield		47.00
11R-369	Front moulding	123	45.40
1C-388	Pin panel	129	19.00
8C-7243	Clear side glass		30.00
8C-7244	Clear top glass		30.00
8A-7255	Screened score glass		22.00
30D-5222	Bowling shroud	129	13.00
3A-7306	Aluminum frame R.H. for clear glass		8.12
3A-7307	Aluminum frame L.H. for clear glass		8.12

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
"RINGER" CABINET & PARTS			
11D-399	Cabinet only		130.00
11D-382-2	Cabinet foot		8.00
8A-7257	Screened score glass		23.00
30D-7314	Instruction sign		8.10
1B-5286	Frame instruction sign		3.12
20A-9004	Back door lock w/L618 keys		3.52
"SPACE PILOT" CABINET & PARTS			
11R-329	Cabinet only		211.00
11R-334	Playfield		46.00
8B-7216	Screened front glass		22.00
8B-7218	Screened score glass		13.00
8B-7217	Clear side glass		16.00
"HAYBURNER II" CABINET & PARTS			
11R-331	Cabinet only		105.00
11R-295	Light box only		54.00
1D-3594-2	Light box door only		9.60
8A-7157	Screened light box glass		28.00
11R-303	Screened playfield		18.00
1E-2263-2	Plated metal leg		4.18
1D-2887-322	Right side stainless moulding		11.06
1D-2888-322	Left side stain		11.06
3B-7135-5	Playfield glass moulding	31	1.14
C-6855	Cash box	48	5.12
C-6856	Cash box cover	48	2.02
BOWLING ALLEY CABINET PARTS			
We need name of game on all wood cabinet parts			
On any formica, wood and cork playfield we need total thickness, width and length			
	13 and 16 foot rollover playfield only		43.00
	13 and 16 foot printed front playfield		100.00
	13 foot lined center playfield		54.00
	16 foot lined center playfield		98.00
	4 foot lined section playfield		66.00
	8 foot lined section playfield		134.00
	Wood frame for Score Plexiglass		45.00
	Wood frame for Hood Plexiglass		26.00
	Wood Hood		114.00
	No. 1 Wood upper ball stop support $\frac{3}{4}$ " x $2\frac{7}{8}$ " x $23\frac{3}{4}$ " ..		6.00
	No. 2 Wood upper ball stop support $\frac{3}{4}$ " x $1\frac{3}{8}$ " x $23\frac{3}{4}$ " ..		5.50
	Wood lower ball stop support 2" x $5\frac{3}{4}$ " x 23" ..		13.00
	New style pedestal legs (give name of game)		23.00
	Wood block for front and center pedestal legs		2.40
	Wood block for lite box		10.60

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
BOWLING ALLEY CABINET PARTS, Cont'd.			
	Wood ball track roll down box		25.00
	Hinge for Hood		.90
	Hinge for back door		.90
SHUFFLE ALLEY CABINET & PARTS (Give Name of Game)			
	Rollover Formica playfield only 23" x 94½" x 9/16" thick SPECIFY SIZE		122.00
	Wood frame for Score Plexiglass		45.00
	Wood frame for Hood Plexiglass		25.00
	Wood Hood		114.00
	Wood Cross Member only for T Rebound Rubber		16.00
	Hinge for Hood		.90
	Hinge for Backdoor		.90
BOWLING ALLEY CABINET PARTS			
Coin box housing door etc. used on following games specify B.A. or S.A. and give name of game charcoal grey type			
From Encore S.A. Feb. 1967			
From last 50 Aztec B.A. June 1967 and on			
D-6922	B.A. Coin box housing and door only (Charcoal Grey)		31.14
D-6872	S.A. Coin box housing and door only (Charcoal Grey)		30.78
E-6922	B.A. Coin box housing and door complete less rejector		86.40
E-6872	S.A. Coin box housing and door complete less rejector		86.40
D-6920	Coin box door assembly complete less rejector		55.28
C-6876	Cash box	112	4.45
D-6877	Door and Hinge only	45, 46	12.56
1B-4276	Cash box cover		1.24
MOTORS			
14A-7745	Motor Swinging Target Gay 90's, 50 & 60 cycle	16	12.50
14A-7765	Score motor, 60 cycle		13.50
14A-7766	Flash motor, 60 cycle		13.00
	(Shuffle Games) Spooks Gun		13.00
14A-7767	Flash motor, 60 cycle (Bowler Games)		13.00
14A-7771	Ball lift motor, 60 cycle (Bowler Games)	106	39.00
14A-7773	Flash motor, 50 cycle		13.00
14A-7775	Flash motor, 50 cycle - Spooks Gun		12.50
14A-7776	Score motor, 50 cycle (Bowler & S.A., Matador & Mambo)		13.50
14A-7777	Pin reset motor, 50 cycle (Shuffle)		15.00
14A-7789	Ball lift motor, 50 cycle (Bowler)	106	39.00
14A-7805	Score motor, 60 cycle (Flipper Games) - Base Hit		12.50
14A-7806	Score motor, 50 cycle (Flipper Games)	14	12.50
14A-7820	Pin reset motor replaces 14A-7770, 60 cycle (Bowler & S.A.)		15.00

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
MOTORS Cont'd.			
14A-7821	Pitcher unit motor, 60 cycle Fast Ball, Hit & Run, Gridiron, Pitch & Bat	63, 64	15.00
14A-7823	Pitcher unit motor, 50 cycle, Fast Ball, Gridiron, Hit & Run (Base Hit 1967 - Pitch & Bat)	63, 64	14.00
14A-7824	Front row target motor, 60 cycle for Bonanza Gun	84	13.00
14A-7825	Bear run motor, 60 cycle, Phantom Gun, Spooks Gun	80, 81	27.00
14A-7828	Spinner motor		7.00
14A-7829	"Control" motor, 50 volt, 60 cycle		12.50
14A-7830	Bottom target motor, 50 cycle for Bonanza Gun	84	12.50
14A-7831	Motor, 50 cycle, Guns	80, 81	28.00
14A-7835	Control motor, 50 cycle, Bonanza Gun and Phantom Gun ..		12.50
14A-7836	Ball shooter motor, 60 cycle, Hayburner	93	13.00
14A-7837	Horse unit motor, 60 cycle, Hayburner	95	24.50
14A-7838	Ball shooter motor, 50 cycle, Hayburner	93	13.50
14A-7839	Horse unit motor, 50 cycle	95	24.50
14A-7844	Propeller motor - Space Pilot	116	7.00
14A-7846	Spinner motor - Expo - Rock 'N Roll - Expo - 50 & 60 cycle	56	15.00
14A-7847	Car motor, 60 cycle, 500 Auto Race		9.50
14A-7848	Horizontal motor guns, 60 cycle, Spooks Gun and Phantom Gun	85, 86	27.00
14A-7849	Man run motor, 60 cycle, Fastball	65	13.50
14A-7850	Man run motor, 50 cycle, Fastball	65	13.00
14A-7851	Vertical motor, 60 cycle, Spooks Gun and Phantom Gun ..	85, 86	12.50
14A-7852	Skull vertical motor guns, 60 cycle	85	13.50
14A-7853	Motor spin unit, 50 cycle, Smart Set		13.00
14A-7854	Horizontal motor guns, 50 cycle, Spooks Gun and Phantom Gun	85, 86	28.00
14A-7855	Vertical motor guns, 50 cycle, Spooks Gun and Phantom Gun	86, 86	13.00
14A-7856	Skull vertical motor guns, 50 cycle	85	13.50
14A-7857	Ball lift motor, 60 cycle, Mini-Bowl	127	13.50
14A-7858	Pin reset motor, 50 cycle, Mini-Bowl	129	15.00
14A-7859	Base run motor, 60 cycle, Hit & Run	74	32.00
14A-7860	Base run motor, 50 cycle, Hit & Run	74	32.00
14A-7861	Middle target motor, 60 cycle, Bonanza Gun	82	18.50
14A-7862	Top target motor, 60 cycle, Bonanza	83	18.50
14A-7863	Middle target motor, 50 cycle, Bonanza	82	18.50
14A-7864	Top target motor, 50 cycle, Bonanza Gun	83	18.50
14A-7865	Ball lift motor, 50 cycle, Mini-Bowl	127	13.50
14A-7866	Pin reset motor, 50 cycle, Mini-Bowl		15.00
14A-7867	Score motor, 60 cycle, Mini-Bowl		13.50
14A-7868	Score motor, 50 cycle, Mini-Bowl		13.50

PLASTIC PARTS (SPECIFY COLOR)

3A-102	Plastic bat	61, 73	3.20
3A-102-2	Plastic bat (Gridiron)	62	3.20
3A-6003	Large rollover guide		.12

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
PLASTIC PARTS Cont'd.			
3A-6004	Medium rollover guide		.10
3A-6005	Small rollover guide		.10
3A-6008	Jet bumper body	17, 22	.28
3A-6009-A	Jet bumper base	17, 22	.14
3A-6013	Nylon plunger		.18
3A-6014	Nylon flipper bushing	23	.30
3A-6015	Eject hole shield (specify game)	25	.14
3A-6021-A	Bumper body assembly (less rubber ring & socket)		.92
3A-6032	Amber sleeve		.06
3A-6035	Jet bumper wafer plastic stem	17, 22	.28
3A-7034-1	Plastic lite hood 1½" double apron		.18
3A-7035	Plastic lite hood 2⅝" double apron		.18
3A-7036	Plastic lite hood 2⅝" single apron		.18
3A-7037	Plastic lite hood 1½" single apron		.20
3A-7065	Kick-off plunger bushing		.28
3A-7125	Ratchet pawl	5, 6, 7, 12, 30, 72, 79, 102	.08
3B-7127	Drive pawl (10 step unit)	7, 12, 72, 79, 102	.10
3A-7134	Arch ball rail		.76
3A-7151	Nylon motor cam	14	.30
3A-7152	Nylon motor cam	14	.30
3A-7153	Nylon motor cam	14	.22
3A-7154	Nylon motor cam	14	.22
3B-7160	Nylon ball shooter housing	21	1.08
3A-7170	Small rollover button	28	.22
3A-7176-1	Nylon striker ring	21	.04
3B-7178	10¼" bowling pin (Bowlers & Shuffles)	109	1.24
3A-7185	Nylon guide rail post	109	.26
3A-7186	Nylon guide rail post	109	.24
3A-7187	Sunburst bumper cap (specify color & lettering)	17	.60
3B-7191	Nylon idler sprocket	82, 83, 106	1.04
3B-7191-1	Nylon drive sprocket	80, 81, 82, 83, 85, 86, 106	1.04
3C-7201	Nylon pin hanger	104	.46
3C-7202	Nylon secondary lever	104	.28
3B-7203	Nylon pin release latch	104	.16
3B-7204	Nylon adjustable reset lever	104	.16
3A-7205	Nylon trip actuator	104	.10
3A-7208	Nylon flipper button	22, 58	.22
3A-7217	Chime bar retainer	32	.10
3A-7219	Drop target stage	15	.04
3A-7231	Switch actuator (nylon)	47	.14
3B-7233	Coin switch cover	46	.28
3A-7239	Large playfield post (specify color)		.14
3A-7240	Small playfield post (specify color)	50	.12
3B-7246	Alternator unit disc	79, 102	.40
3A-7252	Arrow type plastic insert		.18
3B-7253	3" Flipper	23, 24, 94	.36
3B-7253-1	3" Flipper extended play	24, 26, 27	.36
3A-7257	Bumper	53	.48
3B-7258	Latch Armature		.24

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
PLASTIC PARTS, Cont'd.			
3A-7262	Rollover 5/16" Dia.	42, 43, 75	.32
3A-7263	Rollover 3/4" Dia.	42	.20
3A-7264	Target swinging type	16, 42	.14
3A-7265	Target drop type	15	.14
3B-7271	Switch actuator	5, 6, 7	.08
3C-7272	Ratchet and cam	5, 6, 7, 9, 10, 11, 12, 30, 72, 79, 99	.12
3A-7276	Nylomatic gear	85, 86	.48
3A-7277	Nylomatic gear	85, 86	.16
3C-7291	Styrene coin tray, large	48	1.34
3C-7292	Styrene coin tray, medium	48	1.24
3C-7293	Styrene coin tray, small	48	1.20
3B-7297	Switch actuator	9, 10, 11, 99, 100, 101	.12
3B-7298	Ratchet stop pawl	9, 10, 11, 99, 100, 101	.10
3B-7299	Bracket drive pawl	9, 10, 11, 99, 100, 101	.16
3B-7301	Insulator	54	.10
3B-7302	Thrust screw	54	.10
3B-7303	Nylon switch actuator	54	.38
3A-7309-5	N.S. Rollover button, white	55	.38
3A-7315	Cover-rollover button	55	.14
BALLS & PUCKS			
20A-6500	1-1/16" Steel ball, Flippers		.78
20A-6518	7/8" Steel ball, Adder Upper	55	.58
20A-6519	15/16" Steel ball, Roll Down Tilt	22	.78
20A-6520	3/4" Steel ball, Gridiron, Fast Ball		.34
20A-8646	1 1/4" Steel ball, Mini-Bowl		1.82
20A-8810	3/8" Steel ball, Mini-Bowl Driving Range		.26
20A-8832	2 3/4" King size puck, Shuffle Games	107	10.18
20A-8862	13/16" Steel ball, Hit & Run		.08
20A-8935	1" Steel ball, Derby Day, Hayburners II		1.00
23B-6459	4 1/2" Hard Rubber bowling ball, Bowlers	109	1.32
FUSES, FUSE HOLDERS AND RESISTORS			
5A-6217	2700 OHM 2 Watt resistor		.56
5A-6314	4 Amp. slo-blo fuse		.88
5A-6507	5 Amp. fuse		.12
5A-6508	10 Amp. fuse		.10
5A-6509	20 Amp. fuse		.30
5A-6567	15 Amp. fuse		.16
5A-6569	1 Amp. slo-blo fuse		.16
5A-7518	2 Amp. fuse		.88
5A-8633	3 Amp. slo-blo fuse		.40
5A-8665	2 Amp. slo-blo fuse		.60
5A-8713	.75 Amp. slo-blo fuse		.58
5A-8714	1.6 Amp. slo-blo fuse		.60
5A-8724	5 Amp. slo-blo fuse		.82
B-6448-1	1 clip fuse block		.86
B-6448-4	4 clip fuse block		2.00
B-6448-5	5 clip fuse block		2.40

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
TRANSFORMERS			
15A-6771	Transformer (25 Volt - 60 cycle) 5 ball type games		38.80
15A-6771-1	Transformer (24 Volt - 60 cycle) Flippers & Baseball		44.04
15A-6775	Transformer (50 Volt - 60 cycle) Bowlers & Shuffles		38.40
15A-6776	Transformer (50 Volt - 50 cycle) Bowlers & Shuffles		45.84
15A-6779	Transformer (28 Volt - 60 cycle) Space Pilot		44.84
15A-6780	Transformer (28 Volt - 50 cycle) Space Pilot		49.70
15A-6782-1	Transformer (24 Volt - 50 cycle) Flippers		59.88
15A-6783	Transformer (50 Volt - 60 cycle) Bonanza Gun		46.38
15A-6784	Transformer (50 Volt - 50 cycle) Bonanza Gun		60.68
FASTENERS			
12A-6223	Hairpin Clip		.04
12A-6225	Hairpin Clip	113	.02
12A-6226	Hairpin Clip		.02
12A-6227	Hairpin Clip	15, 16, 28, 74	.02
12A-6267	Snap on Cotter Key	67, 104, 122	.02
12A-6335	Hairpin Clip		.02
12A-6336	Hairpin Clip		.04
12A-6351	Spring Clip		.08
20A-6514	Speed Nut		.04
20A-6516	Speed Nut		.02
20A-8712-6	E Retaining Ring	122	.04
20A-8712-9	E Retaining Ring		.10
20A-8712-12	E Retaining Ring	9, 10, 99, 100	.02
20A-8712-15	E Retaining Ring	55	.02
20A-8712-17	E Retaining Ring		.04
20A-8712-18	E Retaining Ring	1, 3, 30, 31, 54, 63, 64, 127	.02
20A-8712-21	E Retaining Ring		.04
20A-8712-25	E Retaining Ring	1, 3, 9, 10, 30, 58, 63, 64, 92, 99, 100, 104	.02
20A-8712-31	E Retaining Ring	84, 124, 125	.02
20A-8712-37	E Retaining Ring	1, 3, 14, 80, 81, 82, 83	.02
20A-8712-62	E Retaining Ring		.16
20A-8712-75	E Retaining Ring		.10
20A-8712-100	E Retaining Ring		.10
20A-8713-25	Tru Arc Ring	29	.04
20A-8713-31	Tru Arc Ring	22	.06
20A-8713-37	Tru Arc Ring		.04
20A-8713-62	Tru Arc Ring		.16
20A-8713-75	Tru Arc Ring		.10
20A-8718-1	C Retaining Ring	21	.04
20A-8718-3	C Retaining Ring		.04

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
LIGHT SOCKETS			
24A-6404-1	Light Socket		.18
24A-6405	Light Socket	53	.18
24A-6406	Light Socket		.18
24A-6406-A	Light Socket		.18
24A-6416	Bumper Socket	22	.20
24A-6421-1	Light Socket for #81 Lamp		.42
24A-6590	New Style Drum Lite Socket S.A. & B.A.		.18
24A-6595	Light Socket Playfield B.A. & S.A.		.20
24A-6603	Front Door Light Socket	46	.36
24A-6607	Light Socket (Use on Inserts)	57-98	.12
LIGHT BULBS			
24A-6549	#44 Bayonet Type Light Bulb	17, 22, 46, 53	.22
24A-6550	#55 Bayonet Type Light Bulb	57, 98	.26
24A-6551	64 Bayonet Type Light Bulb		.30
24A-6552	#40 Bayonet Type Light Bulb		.46
24B-6597-6	Fluorescent Lamp S.A. Ball Park		2.40
24A-6597-8	Black Light Fluorescent bulb F15T8 Bk		17.50
24A-6605	#81 Bayonet Lamp		.60
24A-8668	60 W. 120 Orange Lamp		2.10
MISCELLANEOUS HARDWARE			
	3-48 Round Head machine screw for M switches		.02
	5-40 Round Head machine screw for regular switch		.02
	5-40 Steel Hex nut		.02
	6-32 Steel Hex Nut		.01
	6-32 Elastic Stop Nut		.08
	8-32 Steel Hex Nut		.01
	8-32 Elastic Stop Nut		.08
	10-32 Steel Hex Nut		.01
	1/4-20 Steel Wing Nut		.06
	3/8-16 x 4 Light Box Mounting Bolt		.12
	3/16 x 2 1/2 Carriage Bolt		.06
	3/16 x 3 Carriage Bolt		.08
	3/16 x 5 Carriage Bolt		.18
	6 x 1/2 Round Head Wood Screw		.03
	8 x 1/2 Round Head Wood Screw		.02
	1/4 I.D. Lock Washer B.A. Playfield		.01
	1/4 I.D. x 3/4 O.D. Steel Washer B.A. Frame		.01
	10/32 Stop Nut B.A. Playfield		.08
	4 x 1/4 Phillips Rd. Wood Screw B.A. & S.A.		
	Chrome Trim L & R		.02
	3/8-16 x 19 Hook Up Bolt B.A. Frame		1.42
	1/4-20 x 3/4 Rd. Hd. Bolt B.A. Playfield		.04
	3/8-16 Hex Nut Back Box B.A. & S.A.		.04
	8A-7025-A Leg Adjuster B.A. & S.A. Back Box		
	Pedestal		.30
	8A-7025-B Leg Adjuster B.A. & S.A. Back Box Pedestal		.06

PRICE LIST

Arranged by Groups of Related Parts

Part No.	Description	Page	Price
MISCELLANEOUS HARDWARE, Cont'd.			
	3/16 Allen Wrench Gun Game		.34
	1/4-20 x 1 1/2 Allen Hd. Cap Screw Gun Game		.30
	1/4-20 x 1 Allen Hd. Cap Screw Gun Game		.30
	5/8-18 Wing Nut S.A. Back Box		.06
	3/8-16 x 3 Hex Hd. Bolt S.A. & B.A. Back Box to Frame		.08
	3/8-16 x 2 Hex Hd. Bolt S.A. & B.A. Back Box, Frame Mounting		.06
	3/8-16 x 3 3/4 Hex Hd. Bolt S.A. & B.A. Pedestal Frame		.14
	3/8-16 x 1 1/4 Hex Hd. Bolt S.A. Front Leg		.12
20A-6530-A	1/16 x 1/2 Cotter Pin		.02
20A-6530-E	1/16 x 1 Cotter Pin		.02
20A-8716-2	3/32 x 5/8 Roll Pin	29	.04
20A-8716-5	1/8 x 7/16 Roll Pin	21, 23, 27, 94, 120, 122	.02
20A-8716-6	1/8 x 1/2 Roll Pin	28	.04
20A-8716-10	3/16 x 1/2 Roll Pin		.06
20A-8716-20	1/8 x 3/8 Roll Pin	7, 11, 12, 72, 79, 101, 102	.02
20A-8716-21	7/32 x 1 1/8 Roll Pin		.14
20A-6514	Speed Nut for Plastic Targets		.04
20A-6516	Speed Nut for Switches		.02
20A-8789	8-32 x 1/4 Shoulder type Thumb Screw		.22
	Steel Washers (Specify I.D. O.D. & Thickness)		
SCORE CARDS			
	Score Cards	each	.08
	Score Cards	per set	.80
SCHEMATIC DIAGRAMS			
	Schematic Diagram		1.60

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1B-8-508	Coil Bracket	23, 28, 93, 120	.10
1B-8-508-S	Coil Bracket	15, 26	.08
1B-8-508-T	Coil Bracket	32, 33	.28
1A-15	Switch Plate Steel	37	.06
1A-482	Rebound Bracket	44	.56
1A-497	Rollover wire bracket		.16
1A-600	Mounting Bracket	23	.72
1A-624	Mounting Bracket	42	.08
1B-663B	Ball Guide Wire		.52
1B-663C	Ball Guide Wire		.40
1A-877	Horse Slide Bar	7	.38
1A-879	Motor Adjustment Bracket	95	.16
1A-916H	Fibre Spacer 3/32	37	.02
1A-916R	Fibre Spacer 1/16 (Tight)	37	.02
1A-916RA	Aluminum Spacer	37	.14
1A-916Q	Switch Spacer 1/64	37	.02
1A-916-S	Switch Spacer Bakelite 1/16" Open end	37	.02
1A-916-T	Fibre Spacer 1/32"	37	.02
1A-954	Jet bumper armature link (metal)	17	.14
1A-1101	Switch bracket (Baseball)	65	.40
1B-1178	Large Bell 5" Dia.	33	1.40
1A-1179A	Small Bell 3 3/8" Dia.	2	.76
1A-1231-1	Jet bumper armature link fibre. (3/32" Bakelite)	17	.32
1C-1241-1	Metal Shield 3-15/16" Centers		.66
1C-1241-12	Metal Shield 3 7/8" Centers		.46
1C-1241-16	Metal Shield 3" Centers		.40
1C-1241-19	Metal Shield 2 1/8" Centers		.34
1C-1241-21	Metal Shield 6" Centers		.34
1C-1241-23	Metal Shield 2 3/8" Centers		.24
1C-1241-24	Metal Shield 3-1/16" Centers		.28
1C-1241-33	Metal Shield 4" Centers		.38
1C-1241-34	Metal Shield 5 3/8" Centers		.51
1C-1241-36	Metal Shield 3 3/8" Centers		.24
1C-1241-39	Metal Shield 4 3/4" Centers		.50
1C-1241-42	Metal Shield 4 3/8" Centers		.38
1C-1241-43	Metal Shield 5 1/2" Centers		.44
1C-1241-44	Metal Shield 2 1/2" Centers		.46
1C-1241-45	Metal Shield 2 3/4" Centers		.32
1C-1241-45-S	Metal Shield 2 3/4" Centers (Star)		.46
1C-1241-47	Metal Shield 2 1/4" Centers		.46
1C-1241-48	Metal Shield 1 1/4" Centers		.22
1C-1241-49	Metal Shield 1 1/2" Centers		.42
1C-1241-50	Metal Shield 6 1/4" Centers		.60
1C-1241-51	Metal Shield 5" Centers		.34
1C-1241-52	Metal Shield 1" Centers		.44
1C-1241-53	Metal Shield 1 1/8" Centers		.24
1C-1241-54	Metal Shield 7 5/8" Centers		.64
1A-1248	Switch Cover Plate		.02
1A-1354	Ball Gate	44	.22
1A-1747	Coil Retaining Bracket	17	.24
1A-1789	Armature Link (Fibre)	25-28	.14

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1A-1792	Coil Bracket	78	.16
1A-1834	Coil Bracket	61	.48
1A-1860	Cigarette Holder		.46
1C-2001-41	Printed Circuit - Specify Game & Unit80, 81, 82, 83		8.64
1B-2001-53	Printed Circuit - Specify Game & Unit85, 86		1.50
1B-2001-53R	Printed Circuit - Specify Game & Unit		2.20
1B-2001-54	Printed Circuit - Specify Game & Unit85, 86		4.40
1B-2001-55	Printed Circuit - Specify Game & Unit	78	7.98
1C-2001-56	See A-7195 Drum Biscuit	7	.78
1B-2001-57	See B-7253 Drum Biscuit	11	1.08
1B-2001-59	Printed Circuit - Specify Game & Unit	78	8.66
1A-2005-1	Switch Space Bakelite 1/16"	37	.02
1A-2005-2	Switch Spacer Bakelite 1/32"	37	.02
1A-2005-3	Switch Spacer Bakelite 3/32"	37	.02
1A-2005-4	Switch Spacer Bakelite 1/64"	37	.02
1A-2005-8	Switch Spacer Bakelite 1/16"	37	.02
1A-2048	Switch Cover Plate	37, 54	.02
1E-2263-2	Plated Metal Leg 22"		4.18
1E-2263-3	Plated Metal Leg 18½"		4.18
1B-2373	Mounting Bracket - Replay Unit	3	.94
1A-2423	Switch Bracket	3	.22
1A-2437-L	Back Stop Hinge Bracket	129	1.10
1A-2437-R	Back Stop Hinge Bracket	129	1.10
1B-2455-1	Motor Mount Plate	129	1.58
1C-2457	Pin Mech. Mtg. Plate	129	3.62
1A-2483	Motor Cover	129	1.00
1A-2531	Ball Guide Rail (Baseball)	63, 64	.68
1A-2532	Ball Guide Rail (Baseball)	63, 64	.96
1A-2610	Bakelite - Target Channel	78	.16
1A-2642-5T	Switch Bracket	126	.20
1A-2642-17	Switch Bracket		.16
1A-2646	Target Switch Plate	42	.10
1A-2813	Clutch Washer (Metal)	96	.30
1A-2847-2	Flipper Link	70, 120	3.28
1B-2851	Upper Arch (Bottom Plate)		4.90
1C-2852	Upper Arch (Top Plate) Specify Game		11.06
1D-2887-R	Right Side Moulding (Stainless Steel)		11.06
1D-2887-322	Right Side Stainless Steel Moulding - (Horses)		11.06
1D-2887-370	Right Side Stainless Steel Moulding - (Fastball)	66	11.06
1D-2888-L	Left Side Stainless Steel Moulding		11.06
1D-2888-322	Left Side Stainless Steel Moulding - (Horses)		11.06
1D-2888-370	Left Side Stainless Steel Moulding - (Fastball)	66	11.06
1B-2892-2	Rear Moulding - Bottom Plate		2.24
1B-2893	Rear Moulding - Top Plate (Stainless Steel)		4.00
1A-2926	Drive Stop Bracket		.20
1A-2961	Insert Hinge (Male)	103	.38
1A-2962	Insert Hinge (Female)		.54
1A-2962-1	Insert Hinge (Female)	103	.52
1A-3203	Flipper Stop Bracket	23	.20
1A-3206	Ball Gate 2¾"	29	.62
1A-3206-1	Ball Gate 2"	29	.60
1B-3233	"J" Relay Mounting Frame	29	.84

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1A-3251	Trip Relay Armature (New Interlock)	18, 53	.42
1A-3251-1	Latch Relay Armature	18	.38
1A-3251-3	Armature Latch Relay Small		.38
1A-3411	Rollover Wire Bracket	43	.22
1B-3437-L	Side Plate (Left)	14	1.32
1B-3437-R	Side Plate (Right)	14	1.32
1B-3438	Switch Mounting Plate	14	1.14
1A-3439	Connecting Plate	14	.94
1A-3444	Tilt Wire Bracket	22	.40
1A-3445	Tilt Bob Bracket	22	.40
1A-3451	Flipper Link		.68
1A-3459	Coil Bracket Adaptor	5, 6, 12, 30	.38
1A-3464	Switch Mounting Bracket		1.10
1A-3464-2	Switch Mounting Bracket	63, 64	1.82
1A-3492	Roller Mounting Bracket	31	.54
1A-3508	Coin Return Cup Gate	45	.26
1B-3524-1	Door Lock Plate	52	.66
1A-3535	Washer - Ball Shooter	21	.48
1B-3536	Playfield Hold Down Bracket (Flippers)		.56
1A-3574	Lock Cam	46, 52	.28
1A-3574-1	Lock Cam (For Ace Locks)	52	.14
1D-3594-6	Metal Back Door - Baseball		10.58
1D-3594-7	Metal Back Door - Single Player Flippers		10.30
1D-3594-8	Metal Back Door - Multi-Player Flippers		9.64
1B-3595-1	Metal Back Door Channel - Single Player Flippers		1.70
1B-3595-2	Metal Back Door Channel - Multi-Player Flippers		1.90
1B-3595-5	Metal Back Door Channel - Baseball		1.60
1C-3600	Base Plate Step Up Unit	1, 2, 3	1.44
1A-3601	Bell Mounting Bracket	2	.24
1A-3602	Base Plate Mounting Bracket	1, 2	.32
1A-3604	Reset Plunger Stop Bracket	1	.10
1A-3610	Bell Clapper	2	.50
1B-3613	Relay Bank Set-Up Bar (Specify Length)	13	.66
1B-3629	Relay Bank Cover (Specify Length)	13	.82
1A-3630	Latch Support	52, 60	.36
1A-3638-1B	Brass Coil Bracket	33	.24
1A-3668	Drive Stop Bracket	102	.08
1A-3670	Switch Plate	30, 37, 55, 79, 122	.02
1A-3675	Bracket Hood Ring - B.A. & S.A.		.38
1A-3680	Relay Bracket	111	.82
1B-3694	4" Bell	33	.96
1B-3695	Brass Switch Spacer		.30
1B-3702	Ball Lift Motor Plate	106	1.10
1A-3703	Coin Trip Wire Stop B.A. & S.A.		.32
1A-3710-A-1	Reset Bar Arm B.A. & S.A.	105	.60
1A-3722	Lock Retainer Back Door B.A. & S.A.		.18
1B-3741	Bell Bracket - Long	33	1.04
1B-3741-1	Chime Mounting Bracket - Short	32	.76
1B-3749	Wiper Blade (Flat Type)	4, 31	.08
1A-3753	Wiper Blade (Round Type) Sno-Shoe	4	.06
1A-3755	Formica Rollover Stop Bracket B.A.		.10

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1A-3756	Shock Mount Retainer	106	.46
1A-3760	Ball Lift Channel B.A.		2.94
1A-3763	Ball Position Plate B.A.	108	.68
1B-3764	Bolt Plate Section Retainer B.A.		.74
1B-3765	Front Moulding Retainer B.A.	108	1.60
1A-3766	Ball Guide Retainer B.A.	106, 108	.70
1A-3767	Ball Return Plate 28 1/2" Long - B.A.	108	5.74
1A-3773	Retainer Ball Stop Support Plate 3/8-16 Threads B.A.	108	1.98
1A-3773-1	Retainer Ball Stop Support 1/4-20 Threads B.A.	108	2.38
1A-3774	Mounting Plate - B.A.	108	3.70
1A-3775	Support Ball Stop - B.A.	108	1.04
1A-3787	Cover Plate Ball Lift B.A.		4.00
1B-3794-5	Motor Drive Link - S.A.	105	.48
1B-3794-6	Motor Drive Link - S.A.	105	.34
1A-3805-2	Rollover Switch Protector B.A.		1.40
1A-3809	Ball Brake Bracket - B.A.	103	.92
1A-3812	Latch Bracket for Hood B.A. & S.A.		.62
1D-3814	Wax Pan - S.A.		5.88
1A-3815	Flare Trim - B.A.		9.62
1A-3816	Joint Trim Right - B.A.		1.78
1A-3817	Joint Trim Left - B.A.		2.26
1A-3832	Catch Pawl	1	.42
1A-3837	Chime Bar	32	.90
1A-3839	Relay Armature Retainer		.14
1A-3841	Fluorescent Lamp Mtg. Bracket B.A. & S.A.		.82
1B-3847	O.S. & N.S. Top Rubber Retainer S.A.	107	1.70
1B-3857	Removable Insert for Ash Tray B.A.	109	2.22
1A-3863	Relay Mounting Bar	29	.64
1A-3864	Gate Mounting Bracket	29	.50
1B-3869	Mounting Bracket N.S. Pin Hanger B.A. & S.A.	104	1.70
1A-3872	Retaining Plate (Flipper Button)	22	.16
1C-3885	New Style Bottom T-Rubber Retainer S.A.	107	3.18
1A-3886	Yoke Bracket	30	.26
1A-3893	Ball Tilt Bracket	22	1.68
1A-3895	Guide Bracket B.A. & S.A.	105	.10
1A-3896	Spring Bracket - B.A. & S.A.	105	.06
1A-3971	Explosion Armatures	87	.62
1C-3973-5-S.A.	Top Chrome Trim No Coin Slot S.A.		9.96
1C-3974-1	Plastic Info Card Cover (Specify Game)	110	2.00
1C-3974-2-S.A.	Plastic Credit Type Info. Card Cover From Cheetah On	110	2.12
1C-3981	N.S. Playfield Tie Plate After Galleon B.A.		3.16
1A-4143	Drop Target Guide Bracket	15	.70
1A-4162	Glass Binder Metal - Different Lengths	31	1.60
1A-4162-2	Glass Binder Bottom Hayburner II		1.66
1A-4162-4	Back Glass Bottom Binder Spooks Gun		1.42
1A-4162-6	Bottom Glass Binder Single Player Flippers		1.56
1A-4162-7	Bottom Glass Binder Multi Player Flippers		1.72
1A-4162-8	Bottom Glass Binder 1969 Baseball		1.74
1A-4162-9	Bottom Glass Binder Mini Bowl		1.54
1A-4162-10	Bottom Glass Binder Ringer		1.66
1B-4178	Back Box Glass Lock Bracket Flipper Games	31	.64
1B-4178-1	Back Box Glass Lock Bracket B.A. & S.A.		.72

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1A-4178-2	Back Glass Lock Bracket Guns		.56
1A-4178-4	Back Glass Lock Bracket Ringer		.50
1A-4199	Phos-Bronze Washer for 8 Ball Rollover Special	28	.12
1C-4211	Front Door Liner	46	3.00
1B-4214	Rejector Mounting Channel		1.80
1A-4215	Coin Insert Plate (Specify Coin)	45	.66
1A-4216	Grommet Mounting Plate		.12
1B-4218	Scavenger Bar	46	.86
1B-4219	Door Frame (Top)	45	1.30
1B-4220	Door Frame (Bottom)	45	1.30
1B-4221	Door Frame (Side)	45	1.78
1B-4222	Coin Entry Strap	46	.36
1B-4223	Scavenger Pivot Channel	46	.18
1A-4226	Coin Entry Chute Body	46	.94
1A-4228	Coin Entry Chute Cover	46	.44
1B-4229	Coin Entry Retainer Plate	45	.44
1A-4230	Top Brace Strap (2 or More Rejectors)	46	.30
1A-4231	Rejector Angle Guide	46	.14
1A-4232	Return Cup Dummy Cover	46	.16
1A-4233	Coin Lockout Pivot Bracket	46	.16
1A-4234	Coin Lockout Strap Guide	46	.08
1A-4236	Coin Lockout Strap	46, 48	.54
1A-4237	Flip-over Tapping Plate	46	.66
1A-4238	Top Brace Strap (Single Rejector)		.16
1B-4242	Coin Trip Channel Cover		.54
1B-4244	Spacer	48	.14
1B-4245	Spacer	48	.12
1B-4250	Coin Separator		1.12
1A-4251	Armature Link	21	.26
1A-4253	Rejector Locking Plate	46	.16
1B-4275	Separator - Cash Box	113	.36
1B-4276	Cash Box Cover From Last 50 Aztecs Onward	113	1.24
1A-4279	Top Chrome Trim No Coin Slot 3-Window From Altair	110	7.54
1A-4285	Plunger Stop Bracket	84	.36
1A-4289	Target Reset Bar	84	.32
1A-4290	Coil Plunger Insulator	84	.28
1A-4291-2	Bakelite Washer	80, 81	.32
1A-4552	Kicker Guide Bracket	78	.28
1A-4553	Pivot Tube Clamp	78	.36
1A-4555	Pivot Tube Kicker	78	.76
1D-4558-3	Scanning Disc - Bonanza Gun	78	5.20
1B-4563	Reverse Bar	80, 81	.60
1A-4568	Gun Barrel Clamp	77	.70
1A-4570	Chain Support Bracket	80, 81	.12
1A-4579	Wiper Support	80, 81	1.60
1A-4584	Shield Bracket	93	1.94
1A-4586	Hinge for Coin Insert Casting	45	.74
1A-4603-1	Flipper Armature Link	23	.16
1A-4607	Ball Shooter Button	58, 59, 61	1.24
1A-4608	Escutcheon Plate	58, 59, 91, 123	.66
1A-4614	Connecting Link		.50

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1A-4614-1	Connecting Link	93	.40
1B-4615	Motor Mounting Plate	93	1.00
1B-4622	Target Ball Deflector		.18
1B-4622-1	Target Ball Deflector	98	.10
1B-4622-2	Target Ball Deflector	98	.10
1B-4622-3	Target Ball Deflector	98	.28
1B-4622-4	Target Ball Deflector		.28
1B-4622-5	Target Ball Deflector	57	.46
1A-4623-L	Target Ball Deflector		.26
1A-4623-R	Target Ball Deflector		.26
1A-4624-1	Target (center)	57, 98	.20
1A-4624-2	Target	51	.20
1A-4626	Target Damper Bar	98	.84
1A-4626-2	Target Damper Bar	57	.90
1B-4627	Target Mounting Plate		2.78
1B-4627-1	Target Mounting Plate	98	1.70
1B-4627-2	Target Mounting Plate	57	1.68
1B-4628	Mounting Bracket	57, 98	3.80
1A-4637	Ball Pointer	93	1.14
1A-4646	Chain Support Bracket	95	1.16
1A-4647	Target Trim Plate	123	.08
1A-4660	Flipper Link Locking		.82
1A-4661	Link Plunger	8	.26
1A-4661-1	Armature Link	94	.22
1A-4667	Mounting Bracket - relay	94	.16
1A-4668	Switch Bracket		.38
1B-4674	Playfield Ball Ramp		1.00
1A-4689	Clutch Drive Washer	96	.18
1A-4690	Leather Clutch Washer	96	.24
1A-4693	Fibre Linkage	94	.90
1A-4694	Mounting Bracket - Relay	53	.46
1A-4695	Mounting Bracket	53	1.14
1A-4696	Bell Mounting Bracket	33	.44
1A-4698	Switch Bracket	53	.24
1A-4972	Mounting Bracket - Timer Control	121	.96
1A-4973	Heat Sink - 2 Hole		6.02
1A-4973-1	Heat Sink - 1 Hole		5.82
1A-4993-1-F	Fichpaper Spacer	42, 75	.14
1A-4995	Switch Mounting Bracket	121	1.02
1A-4998	Circuit Board	115	.90
1A-4999	Tower Support Leg	114	.40
1B-5001	Spacecraft Control Arm	114	5.20
1A-5002	Control Card - Plastic		.36
1A-5003	Control Lever Mounting Panel		5.68
1A-5018	Motor Mounting Bracket	56	.88
1A-5026	Connecting Link	26	.30
1A-5027	Connecting Link	26	.30
1A-5032	Tie Link	26	.38
1A-5033	Kickout Link	26, 27	.24
1A-5038	Switch Bracket		1.04
1A-5039	Adjustment Bracket	119	.40

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1B-5042	Switch Plate		.58
1A-5051	Mounting Plate	67	.54
1B-5052	Ball Catcher Door - Green or Beige	67	.96
1A-5061	Universal Bracket	85, 86	.66
1A-5062	Universal Body	85, 86	2.70
1B-5067	Motor Mounting Plate Left		2.52
1B-5068	Motor Mounting Plate — Right		2.52
1B-5074	Curtain Retainer	85	.80
1B-5075	Tie Rod	85	1.66
1A-5135	Arrow	56	2.58
1A-5144	Washer Square		.14
1A-5142	Solenoid Bracket R. B.	13	1.46
1A-5143	Solenoid Brace R. B.	13	.34
1A-5152	Coil Retaining Bracket	13, 126	.64
1A-5155	Bracket	9, 10, 99, 199	.92
1A-5158	Spring Steel Curved Washer	126	.38
1A-5159	Ball Ramp Playfield		.84
1A-5164	Mounting Plate	86	1.78
1A-5165-L	Bracket	86	.98
1A-5165-R	Bracket	86	.98
1A-5168	Link	86	.56
1A-5173	Perforated Support		.50
1A-5180	Stop Bracket	12, 30, 72	.08
1A-5183	Moulding Strip	69	1.00
1A-5186	Switch Bracket	54	.60
1A-5187	Thrust Bearing Bracket	54	1.44
1A-5193	Ball Deflector Small		.78
1A-5194	Ball Deflector Large	57	.64
1A-5205	Link	126	.22
1A-5211	Magnet Plate Retainer		2.12
1A-5213	Connecting Strap	126	1.40
1A-5217	Ball Guide Left Side		1.32
1A-5218	Ball Guide Right Side		1.38
1A-5227	Scenery Support	82	1.12
1A-5228	Scenery Support	83	1.12
1C-5231	Ball Guide	73	1.38
1C-5232	Ball Guide	73	1.38
1C-5233	Ball Guide R. F.	73	2.64
1C-5234	Ball Guide L. F.	73	3.42
1D-5235-L	Ball Guide	73	5.40
1D-5235-R	Ball Guide	73	5.40
1R-5236	Ball Guide R. F. Long	73	4.70
1R-5237	Ball Guide L. F. Long	73	8.26
1B-5238	Ball Deflector Rear	73	1.46
1B-5239	Ball Run Off - Right Side		1.76
1B-5240	Ball Deflector - Left Side	76	1.38
1B-5244	Base Run Contact Disc - 32 Position		4.00
1A-5248	Switch Bracket	74	1.34
1A-5249	Switch Bracket	74	1.70
1B-5254	Holddown Bracket - Playfield	76	.92
1A-5256	Frame	55	7.98

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
1A-5258	Light Shield - Painted		4.60
1A-5260	Switch Plate Special R. B.	37	.40
1A-5273	Wiper Retainer Bracket	82, 83	1.74
1C-5279	Aluminum Mtg. Plate	87	3.26
1A-5280	Control Cover Tape Player		.98
1A-5281	Spring Striker	87	.44
1C-5284	Mounting Plate	122	2.30
1B-5286	Instruction Frame		3.12
1A-5291	Support Bracket	122	.94
1A-5292	Stop Bracket	122	.68
1A-5293	Switch Bracket	122	1.32
1A-5296	Amplifier Mounting Bracket		1.18
1A-5297	Brake Shoe	122	.44
1-5300	Ball Guide	55	.84
1A-5301	Pointer (Arrow)	30	1.26
1A-5305	Painted Plate	30	2.74
1A-5314	Clamp - Brake Spring	122	.60
1A-5316	Hold-Down Bracket Mini-Bowl		1.30
1A-5316-1	Hold-Down Bracket Mini-Bowl		1.30
1A-5318	Stop Bracket Brake	122	.84
2A-2143	Switch Pin	3	.12
2A-2167-4	"A" Aluminum Coil Tubing	35	.28
2A-2168	Coil Sleeve	35	.22
2A-2188	Bushing	65	.32
2A-2260	Spacer for #1 Sprocket Assembly	96	.38
2A-2262	Shaft A for #2 Sprocket Assembly	96	1.36
2A-2261	Shaft B for #1 Sprocket Assembly	96	1.32
2A-2266	Shaft Collar	85	.66
2A-2364	Solenoid Plunger	21, 25, 27, 28, 34, 70, 120, 122	.38
2A-2387-A	Pivot Screw	65	.22
2A-2503	Shoulder Screw	129	.40
2A-2559	Armature Pin	61, 62	.42
2A-2577	Roller Stud	61, 62	.28
2A-2578	Roller	61, 62	.38
2A-2587	Armature	61, 62	.80
2A-2640	Target Arm Brass Stylus Pin	78	.26
2A-2648	Yoke Hinge Pin	78	.26
2A-2649	Target Channel Bushing	78	.28
2A-2652	Front Gun Sight	77	.52
2A-2670	Kicker Coil Plunger	78	.82
2A-2680	Pin Reset Bar	129	1.88
2A-2681	Pin Counter Weight Bar	129	.64
2A-2683	Spring Retaining Rod	129	.46
2A-2685	Pin Shaft	129	1.96
2A-2686	Counterweight - Shaft Bushing	129	1.36
2A-2687	End Weight - Shaft Bushing		1.20
2A-2688	Pin Counterweight	129	.52
2A-2695	Main Pivot Bushing	125	2.92
2A-2696	Arm Shaft	124	.30
2A-2698	Arm Stop Pin		.40

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
2A-2704	Hinge Bar	129	.72
2A-2705	Spacer	129	.80
2A-2708	Bearing	124	.74
2A-2710	Screw - Bowling Pin Base	128	.46
2A-2711-1	Bearing	124	.70
2A-2732	Stop Adjustment	61, 62	.88
2A-2750	Roller	61, 62	.42
2A-2767	Armature	34, 65	.40
2A-2773	Slotless F. H. Mach. screw for coin entry plate		.02
2A-2917-1	Crank Hub	119	.76
2A-2938	Metal Spacer for rubber grommet	72	.04
2A-2945	Playfield miniature post	44	.26
2A-2948	Retainer bushing	47	.16
2A-2952	Armature	7, 12, 34, 72, 79, 102	.38
2A-2953	Coin trip weight	47	.12
2A-2966	Roller stud	61, 62	.36
2A-2968	Tape Roller	31	.98
2A-2969	Roller pin	31	.24
2A-2994	Cam shaft	14	.90
2A-3002	Reset arm post	1, 2, 3	.34
2A-3003	Drive arm post	1, 2, 3, 87	.20
2A-3006	Stud latch	1	.06
2A-3011	Pivot pin bank reset	13	.14
2A-3014	Plunger bank reset	13, 34, 126	1.06
2A-3031-1	Push button bushing S. A.	113	.86
2A-3032-1	Push button bushing S. A.	113	.74
2A-3035-5	Aluminum push button - B. A.		.56
2A-3036-3	Brass push button - B. A.		1.06
2A-3039-1	Lucite Credit Button S. A.	113	1.56
2A-3040-5	Lucite Credit Button B. A.		1.76
2A-3049	Drive armature	1, 2, 3, 34	.30
2A-3050	Reset armature	1, 3, 34	.36
2A-3079-2	Bushing (wiper)	4	.06
2A-3085	Plunger for O. S. relay bank reset coil, B. A. & S. A.		2.50
2A-3089	Clutch plate B. A. & S. A.	111	1.10
2A-3092	Stud upper ball lift B. A.	106	.72
2A-3093	Stud lower ball lift B. A.	106	.92
2A-3095	Bearing - B. A.	107	.12
2A-3098	Spacer B. A.	48, 107	.16
2A-3099	Nylon roller - B. A.	107	.28
2A-3104-3	Clutch Spring Retainer	74	.28
2A-3105	Shoulder screw for bell	33	.20
2A-3119-1	Spacer	55, 127	.16
2A-3120	New Style guide rail for ball return B. A.	109	7.16
2A-3122	Nylon ball return bumper B. A.	109	.88
2A-3126	Roller back door lift B. A. & S. A.		.30
2A-3133	Ball gate post	29	.38
2A-3134	Gate Yoke	29	.76
2A-3135	Gate post hub free ball gate	29	.68
2A-3136	Ash tray handle or insert knob B. A.	109	1.46
2A-3137	Main Lever Shaft B. A. & S. A.	104	.08

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
2A-3138	Pin suspension shaft B. A. & S. A.	104	.06
2A-3140	Solenoid plunger - B. A. & S. A.	104	.32
2A-3141	Trip Actuator Shaft B. A. & S. A.	104	.08
2B-3325	Pin Reset Bar B. A. & S. A.	105	2.16
2A-3330	4 Position Target Shaft	117	.28
2A-3346	Spacer Baseball	26	.22
2A-3348	Roller Baseball	63, 64	.16
2A-3350	Coin Rejector Plunger	45	.26
2A-3351	Reject Bushing	45	.42
2A-3352	Spacer	47	.06
2A-3353	Scavenger Pivot Shaft	46	.10
2A-3355	Long Stud For Mounting Coin Chute		.12
2A-3355-A	Short Stud For Mounting Coin Chute		.12
2A-3377	Pivot Shaft	77	.46
2A-3378	Thrust Bearing	77	.50
2A-3379	Pivot Joint	77	21.80
2A-3380	Pivot Tube	77	19.58
2A-3398	Target Hub	80, 81	1.82
2A-3404	Shoulder Stud		.42
2A-3405	Hub Roller	80, 81	.60
2A-3406	Jet Bumper Armature	17, 34	.22
2A-3407	Flipper Armature New	23, 34, 94, 122	.46
2A-3411	Push Button Shaft	58, 91, 123	.20
2A-3413	Spacer	93	.16
2A-3415	Link Roller		.14
2A-3440	Shaft Collar	96	.48
2A-3444	Bumper Shaft	53	.44
2A-3445	Solenoid Armature	53	.40
2A-3455	Control Arm Counterweight	114	3.00
2A-3457	Target Post 1st and 3rd Position	117	7.92
2A-3458	Target Post 2nd and 4th Position	117	7.92
2A-3460	Pivot Pin Control Arm	114	.24
2A-3462	Pivot Pin Space Craft	114	.22
2A-3470	Adapter Capstan	115	1.44
2A-3471	Circuit Board Shaft	115	1.36
2A-3472	Collar	115	1.44
2A-3473	Spacer-Copper	115	.52
2A-3475	Spacer-Acrylic	115	.24
2A-3498	Universal Broached Bushing	85, 86	2.38
2A-3499	Counterweight Pendulum	85, 86	.32
2A-3501	Universal Shaft		5.14
2A-3502	Curtain Shaft		6.36
2A-3503	Wiper Hub		2.48
2A-3514	Counter Balance Weight	67	.36
2A-3535	Stud	54	.86
2A-3536	Shaft	54	1.48
2A-3561	"D1" Aluminum Sleeve	35	.22
2A-3562	Solenoid plunger	11	.86
2A-3562-1	Solenoid plunger	101	.86
2A-3565	Aluminum Post	73, 76	.44
2A-3566	Shaft	75	.86

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
2A-3575	Mounting Ring - Magnet	126	4.36
2A-3579	Arm Activating Shaft	124	1.24
2A-3583	Bearing Tube	124	9.08
2A-3588	Clutch Plate Rear	74	1.44
2A-3590	N. S. Receiver - Rifle	77	5.50
2A-3594	Pin Switch Actuator	122	.96
2A-3604	Rifle Barrel	77	9.62
3A-102	Plastic bat - baseball	61, 73	3.20
3A-102-2	Plastic bat - (Gridiron)	62	3.20
3A-6001-4	Special post Derby Day (cut down)	44	.14
3A-6001-5	Plastic post	44	.14
3A-6003	Large rollover guide (specify color)		.12
3A-6004	Medium rollover guide (specify color)		.10
3A-6005	Small rollover guide (specify color)		.10
3A-6008	Jet bumper body	17, 22	.28
3A-6009-A	Jet bumper base	17, 22	.14
3A-6013	Nylon plunger		.18
3A-6014	Nylon flipper bushing	23	.30
3A-6015	Eject hole shield (specify game)		.14
3A-6015-G-6	Eject hold shield	25	.14
3A-6018	Nylon Sprocket	96	.50
3A-6021-A	Bumper assy.		.92
3A-6022	Switch blade lifter (Give size)	137	.02
3A-6032	Amber sleeve		.06
3A-6035	Jet bumper wafer - plastic stem	17, 22	.28
3A-6096-4	7/8" dia. red plastic coin box - insert B. A. & S. A.		.14
3A-7006	Switch tubing "M" relay - specify length	37	.02
3A-7007	Switch tubing - Specify Length	37, 122	.02
3A-7027	Switch pin insulator	3	.02
3A-7034-1	Plastic lite hood (double apron) 1 1/2"		.30
3A-7035	Plastic lite hood 2 1/8" (double apron)		.30
3A-7036	Plastic lite hood 2 1/8" (single apron)		.30
3A-7037	Plastic lite hood 1 1/2" (single apron)		.26
3A-7039	Control knob rheostat baseball	44, 121	.40
3A-7040	Plastic bowling pin	44, 128	.76
3A-7065	Bushing kickoff plunger		.28
3A-7066-1	Coil sleeve	35	.12
3A-7066-2	Coil sleeve	35	.12
3A-7067-1	Coil sleeve	35	.18
3A-7067-2	Coil sleeve	35	.14
3A-7125	Ratchet stop pawl	5, 6, 7, 12, 30, 72, 79, 102	.08
3A-7126	Switch actuator pawl		.06
3B-7127	Drive pawl	7, 12, 72, 79, 102	.10
3A-7134	Arch Ball Rail - Fastball		.76
3B-7135	Playfield glass channel - need name of game	31	1.32
3A-7150	Nylon impulse cam	14	.22
3A-7151	Nylon motor cam	14	.30
3A-7152	Nylon motor cam	14	.30
3A-7153	Nylon motor cam	14	.22
3A-7154	Nylon motor cam	14	.22
3A-7159	Coin funnel (nylon)	45	.16

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
3B-7160	Ball shooter housing	21	1.08
3A-7164-4	Plastic insert - Red		.16
3A-7167-5	1-3/16" dia. white playfield insert — N. S. B. A. & S. A.		.18
3A-7167-9	1-3/16" dia. red playfield insert — N. S., B. A. & S. A.		.18
3A-7170-5	Rollover button - Hot Line		.20
3A-7170-A-5	Rollover button with hole through center	28	.22
3A-7171-5	Rollover button for Full House		.24
3B-7175-4	Red arrow type playfield insert — B. A. & S. A.		.48
3A-7176-1	Striker ring	21	.04
3B-7178	Plastic bowling pin only — B. A. & S. A.	109	1.24
3B-7178-2	Plastic bowling pin with bracket only N. S.		1.80
3B-7178-3	Plastic bowling pin with bracket — N. S. & Wire Form B. A. & S. A.		1.92
3A-7185	Nylon guide rail post — long B. A.	109	.26
3A-7186	Nylon guide rail post — short B. A.	109	.24
3A-7187	(Replaces 3A-6040) Sunburst bumper cap, (Specify color & lettering)	17	.60
3A-7189	Playfield disc — clear plastic jet bumper	17	.36
3A-7190	(Replaces 3A-6020) Round bumper cap — (lettered) (plain)	22	.42
3B-7191	Nylatron idler sprocket ball lift B. A.	82, 83, 106	1.04
3B-7191-1	Nylatron sprocket — Artic Gun	80, 81, 82, 83, 85, 86, 106	1.04
3B-7192-2	Nylatron sprocket (with roll pin) 80, 81, 82, 83, 85, 86		1.04
3A-7195	Dummy coin entry plate	45	1.06
3C-7201	Pin hanger B. A. & S. A.	104	.46
3C-7202	Secondary gear B. A. & S. A.	104	.28
3B-7203	Pin release latch B. A. & S. A.	104	.16
3B-7204	Adjustable reset lever — B. A. & S. A.	104	.16
3A-7205	Trip actuator B. A. & S. A.	104	.10
3A-7208	Nylon flipper button (red)	22, 58	.22
3A-7217	Chime bar retainer	32	.10
3A-7218	Plastic Target	41	.20
3A-7219	Drop target	15	.04
3A-7231	Switch actuator (nylon)	47	.14
3A-7233	Coin switch cover	46	.28
3A-7234	Vinyl - Extrusion 90" long S.A.		4.12
3B-7239-4	Large post - red - Beat Time N. S.		.14
3B-7240-4	Small post - red - Beat Time N. S.	55	.12
3A-7243	Back Glass Binder (Give name of game)	31	.50
3B-7245 L & R	Nylon Flipper	24	.24
3B-7246	Alternator disc	79, 102	.40
3B-7246-1	Alternator disc	12, 72	.40
3A-7247-9	New arrow type insert red transl. Altair on B. A. & S. A.		.48
3A-7249	Flipper bushing - new style	94	.30
3A-7252	Arrow Type Plastic Insert		.18
3B-7253	3" Flipper	23, 24, 94	.36
3B-7253-1	3" Flipper Extended Play	24, 26, 27	.86
3A-7257	Bumper	53	.48
3B-7258	Latch Armature		.24
3A-7262	Rollover 5/16" Dia.	42, 73, 75	.32

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
3A-7263	Rollover $\frac{3}{4}$ " Dia.	42	.20
3A-7264	Target Swinging Type16, 42		.14
3A-7265	Target Drop Type 15		.14
3B-7271	Switch Actuator5, 6, 7		.08
3C-7272	Ratchet and Cam5, 6, 7, 9, 10, 11, 12, 30, 72, 79, 99		.12
3A-7276	Nylomatic Gear85, 86		.48
3A-7277	Nylomatic Gear85, 86		.16
3A-7279	Plastic Bumper 54		1.80
3A-7291	Styrene Coin Tray Large 48		1.34
3C-7292	Styrene Coin Tray Medium 48		1.24
3C-7293	Styrene Coin Tray Small 48		1.20
3B-7296	Drive pawl11, 101		.12
3B-7297	Switch Actuator9, 10, 11, 99, 100, 101		.12
3B-7298	Ratchet Stop pawl9, 10, 11, 99, 100, 101		.10
3B-7299	Bracket Drive Pawl9, 10, 11, 99, 100, 101		.16
3B-7301	Insulator 54		.10
3B-7302	Thrust Screw 54		.10
3B-7303	Nylon Switch Actuator 54		.22
3A-7305	Post Bumper - Arm124, 125		.48
3B-7306	Aluminum Frame - Right Hand 8.12		
3B-7307	Aluminum Frame - Left Hand 8.12		
3A-7309-5	N. S. Rollover Button - White 55		.38
3A-7310	Bowling Pin Base 128		.20
3B-7313	Acrylic Sign Cover 8.26		
3A-7315	Cover - Rollover Button 55		.14
5A-6317	Toggle Switch 1.98		
5A-6202	Rheostat 66		10.00
5A-6217	2700 OHM 2 Watt Resistor B. A. & S. A. for Kickapoo		.56
5A-6228	Normally closed for ball return P. B. Switch — B. A. & S. A.		1.32
5A-6238	6 Amp Fuse24		
5A-6239	3½ OHMS 10 Watt — Power Resistor82		
5A-6242	8 OHM 50 Watt — Rheostat 10.24		
5A-6248	Silicon Rectifier 2.48		
5A-6249	Transistor 4.72		
5A-6250	1000 MFD 50V. Capacitor 4.56		
5A-6251	5000 OHM Variable Resistor 119		9.02
5A-6252	3150 OHM ½ WATT Resistor04		
5A-6253	3 OHM 20 Watt Resistor 2.36		
5A-6254	10 OHM - 25 Watt Resistor 118		4.90
5A-6255	15 OHM 25 Watt Resistor 2.54		
5A-6256	Cooling Unit 6.18		
5A-6257	Silicon Rectifier 1.82		
5A-6258	Zener Diode 5.74		
5A-6259	V. J. T. Transistor 3.02		
5A-6260	Thyristor 6.06		
5A-6261	500 MFD 25 V. Condenser 4.06		
5A-6262	100 MFD 25 V. Condenser 1.82		
5A-6263	1 MFD 100 V. Condenser66		
5A-6264	27 OHM ½ Watt Resistor16		
5A-6265	470 OHM ½ Watt Resistor24		

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
5A-6266	1000 OHM 1/2 Watt Resistor		.16
5A-6267	220 K-OHM 1/2 Watt Resistor		.16
5A-6268	1 Meg. Variable Control	121	6.78
5A-6269	3,900 OHM 1/2 Watt Resistor		.16
5A-6270	3,900 OHM 1/2 Watt Resistor		.16
5A-6273	V. J. T. Transistor		5.22
5A-6274	Transistor		.82
5A-6275	Transistor		1.22
5A-6276	Transistor		2.48
5A-6277	Diode (Rectifier)		.72
5A-6278	100 UF 50 V. Capacitor		.52
5A-6279	15 UF 200 V. Capacitor		.72
5A-6280	.05 UF 200 V. Capacitor		.60
5A-6281	.047 UF 200 V. Capacitor		.60
5A-6282	.00015 UF Disc D. D. 150 Capacitor		.34
5A-6303	Capacitor 1000 UF 35 V.		2.14
5A-6309	Condenser 100 MFD 50 V.		.58
5A-6310	150 OHM 1/2 Watt Resistor		.06
5A-6313	50 V. 10 AMP Rectifier		15.12
5A-6314	4 AMP Slow Blo Fuse		.88
5A-6315	6 Pt. Terminal Strip with 2 Mtg. Legs	87	.24
5A-6315-1	3 Pt. Terminal Strip with 1 Mtg. Leg		.14
5A-6316	10 OHM 1/2 Watt Resistor		.22
5A-6507	5 Amp fuse		.12
5A-6508	10 Amp fuse		.10
5A-6509	20 Amp fuse		.30
5A-6522-1	Solder lug	111	.04
5A-6524	#10 Solder lug	78	.04
5A-6541-A	Contact point		.04
5A-6541-B	Contact point		.06
5A-6567	15 Amp fuse		.10
5A-6569	1 Amp slo blo fuse		.62
5A-7518	2 Amp slo blo fuse		.60
5A-7603	Contact point		.06
5A-8591	Special solder lug		.02
5A-8633	3 Amp slo blo fuse		.46
5A-8665	2 Amp slo blo fuse		.60
5A-8712-1	Wire nut		.04
5A-8713	.75 Amp slo blo fuse		.58
5A-8714	1.6 Amp slo blo fuse		.60
5A-8717	Silicon Rectifier (Diode)		.66
5A-8718	"L" Pad Potentiometer		10.02
5A-8719	Diode (Rectifier)		3.02
5A-8720	Condenser 250 MFD 50 V. D. C.		2.54
5A-8721	Condenser 1500 MFD 50 V. D. C.		7.76
5A-8722	2 Conductor Shielded Cable		.40 Ft.
5A-8723	2 OHM 25 Watt Rheostat		12.66
5A-8724	5 Amp Slo Blo Fuse		.82
6A-1-14	Short switch blade (standard)	36	.04
6A-2A-10	Long switch blade (standard)	36	.04

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
6A-8L	Pin reset switch blade - Mini-Bowl	38	.14
6A-14	Fishpaper blade	37	.02
6A-14B	Fishpaper blade	37	.10
6A-15-10	Short switch blade (J Relay)	36	.02
6A-16-8	Long switch blade (J Relay)	36	.02
6A-25-8	Long switch blade with side lug (J Relay)	36	.02
6A-57	Insulator switch blade		.02
7A-6688-3	Brass rivets for armature flap		.02
7A-6688-4	Brass rivets for segments on disc		.02
7A-6688-12	Brass rivets for wiper assembly		.02
7A-6688-35	Brass rivets for score motor disc		.02
7A-6689-7	Brass rivets for contact disc - outer row		.02
7A-6689-8	Brass rivets for contact disc - inner row		.02
7A-6692	Steel rivets $\frac{1}{8}$ x $\frac{1}{2}$ ball carrier	107	.02
7A-6693	Steel rivets $\frac{1}{8}$ x $\frac{5}{16}$ ball carrier	107	.04
8A-7025-A	Leg leveler		.30
8A-7025-B	Leg leveler nut		.06
8A-7028	Playfield glass — 3/16 x 21 x 43		14.86
#8 Series S.A.	Score Plexiglass		
	(Give name of game & screened number)		67.82
#8 Series S.A.	Hood Plexiglass		
	(Give name of game & screened number)		28.82
#8 Series B.A.	Score Plexiglass		
	(Give name of game & screened number)		86.52
#8 Series B.A.	Hood Plexiglass		
	(Give name of game & screened number)		38.34
9C-8801	Domestic 5¢ single coin rejector	49	14.02
9C-8802	Domestic 10¢ slug rejector	49	14.02
9C-8803	Domestic 25¢ single coin rejector	49	14.02
	Single foreign coin acceptors	49	14.02
10A-5	Cam return spring	65	.16
10A-7	Bumper spring	22	.02
10A-9	Spring Swinging Target	16	.10
10A-10	Relay bank reset spring		.16
10A-14	Relay flap spring (heavy)	65	.12
10A-38	Spring Pivot Arm		.04
10A-53	Spring Manikin	126	.14
10A-55A	Spring - Man running unit	65	.16
10A-63	Long blue steel spring under ball flap	66	.22
10A-63A	Short blue steel spring under ball flap	66	.20
10A-66	Relay bank reset spring	13	.12
10A-93	Chain connecting link spring	97	.12
10A-94	Friction drive spring		.10
10A-96	Relay armature spring.....18, 19, 20, 29, 67		.04
10A-96A	Spring	26, 53, 94	.08
10A-101-1A	Drive Spring	61, 62	.22
10A-101-2B	Torsion Spring	1, 3	.16
10A-101-2C	Torsion Spring - Red	1	.18
10A-101-4	Reset armature spring	21, 26, 96	.04
10A-120	Relay armature spring (red)	19, 20	.06
10A-121-1	Spring		.20

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
10A-123-E	Spring - Ball lift	127	.20
10A-128	Kicker spring	28, 93	.04
10A-135	Jet bumper spring	23, 25, 26, 27, 94, 122	.04
10A-148-1	Ball shooter spring	21	.08
10A-149	Shooter rod spring - short	21	.06
10A-155	Stylus spring	78	.12
10A-163	Spring - Pin Reset	129	.14
10A-183	Extension spring	2	.12
10A-194	Ballgate spring	29	.26
10A-199	Drop target spring	25	.08
10A-203	Index pawl spring	5, 6, 12, 31, 70, 72, 79, 102	.06
10A-204	Return spring	15, 84	.08
10A-206	Drive pawl spring		10
10A-210	Motor cam spring	14	.06
10A-224	Spring extension - red	1, 2, 13	.10
10A-225-1	Spring - Index pawl	30	.08
10A-227	Spring arm drive	1, 2, 3, 80, 81	.12
10A-228	Spring arm drive	1, 2, 3, 70	.10
1A-230	Spring extension	1	.12
10A-232-1	Push button spring B. A. & S. A.	113	.08
10A-233	Armature spring B. A. & S. A.	13	.04
10A-234	Flap spring - switch actuator	13	.04
10A-238	Shock mount spring (AC relay strip)		.08
10A-239-1	Clutch spring - Kickapoo - S. A. & B. A.	74, 111	.14
10A-242	Flap spring drive - red	1, 2	.14
10A-244	Spring escapement pawl	1, 3, 46	.08
10A-255	Secondary lever spring - new pin hanger B. A. & S. A.	104, 119, 122	.08
10A-256	Trip lever spring - new pin hanger, B. A. & S. A.	104	.10
10A-257	Flipper button spring	22	.04
10A-258	4" Drum unit drive spring	5, 6, 12, 30, 72, 79, 102	.06
10A-263	Extension spring B. A. & S. A.	111	.10
10A-265	Wiper blade springs (N. S. - light)	4, 31	.06
10A-266	Compression spring (target shaft)		.04
10A-289	Coin trip wire	47	.10
10A-290	Coin trip wire (used with flip-over)	47	.16
10A-291	Tension spring - Baseball	63, 64	.16
10A-295	Pin hanger main spring - long - replaces 10A-254	104	.30
10A-296	Pin hanger main spring - short - replaces 10A-264	104	.34
10A-297	Coin trip wire	47	.26
10A-298	Plunger return spring	74, 84	.12
10A-300	Compression spring (jet bumper)	17	.04
10A-301	Drive pawl spring		.14
10A-302	Extension spring (eject cam)		.20
10A-303	Spring closing flipper	58, 91, 94, 123	.16
10A-304	Spring friction drive	96	.08
10A-306	Spring - Shaft	53	.10
10A-308	Spring	120	.24
10A-310	Spring - Handle (torsion)	119	.22
10A-311	Spring - Lever	85	.14
10A-313	Spring - Stop Pawl	9, 10, 99, 100	.22

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
10A-314	Spring - Drive Pawl	9, 10, 99, 100	.20
10A-317	Spring - Reverberator	87	.56
11B-113-1	Horse track top panel (only)	95	45.40
11R-195	Screened playfield less hardware (specify name of game) ..		60.00
11D-220	Puck rebound block only S.A.		19.00
11R-266	Cabinet only single player		92.00
11R-267-1	Light box only single player		47.00
11R-271	Derby Day cabinet only		105.00
11D-272	Target panel		7.50
11D-272-1	Target panel - Hayburner	98	8.30
11D-272-2	Wood target panel - 4 Aces	57	7.80
11D-273	Front moulding (less hardware) 4 Aces	91	42.00
11B-279	Bear target wood panel - Bonanza Gun	80, 81, 82, 83	11.30
11D-284	Rifle stock wood	77	37.00
11B-294	Wood side door		12.00
11R-304	Cabinet only - Aqua Gun		256.00
11C-318	Gun mounting lid only		67.50
11R-326	New light box only beginning with Post Time & Paddock		48.00
11R-327	New light box only beginning with Cabaret		48.00
11R-329	Cabinet - Space Pilot		211.00
11B-330	Mounting block - Lever control		6.50
11R-331	Cabinet only - Hayburner		105.00
11R-334	Screened Playboard - Space Pilot		46.00
11D-342	Insert "Spooks Gun"		42.00
11R-356	Target Panel - Fast Ball	68	7.50
11R-360	Front Moulding Only - Fast Ball	58	46.00
11B-367	Target Panel "Spooks Gun"		42.00
11D-368	Insert "Spooks Gun"		42.00
11R-369	Front Moulding Only - Mini-Bowl	123	45.00
11R-370	Playfield W/11B-300 Formica - Mini-Bowl		47.00
11R-371	Cabinet Only - Mini-Bowl		263.00
11R-372	Pin Mechanism Panel - Mini-Bowl	129	50.00
11R-378	Front Moulding Only - Gridiron	59	46.00
11R-379	Target Panel - Gridiron		8.30
11R-382-12	Masonite Bottom Tray Large - Hit & Run	76	12.50
11C-388	Pin Panel - Mini-Bowl	129	19.00
11R-396	Front Moulding Only - Hit & Run	59	32.40
11D-399	Cabinet Only - Ringer		130.00
11R-401-1	Cabinet - Bonanza Gun		307.50
11R-401-5	Wood Frame Lower Target - Bonanza	84	14.60
11D-401-8	Target Frame Insert - Bonanza Gun	84	10.50
12A-6215-B	Home Run Hole Wire	43	.16
12A-6223	Hairpin Clip 5/16"		.04
12A-6225	Hairpin Clip 1/4"	113	.02
12A-6226	Hairpin Clip 3/32"		.02
12A-6227	Hairpin Clip 3/16" for Drum Units	15, 16, 28, 74	.02
12A-6230	Key Hook	46	.10
12A-6231	Tilt Bobwire	22	.06
12A-6240	Wire Form	43	.20
12A-6243	Wire Form	43	.12
12A-6243-A	Wire Form	43	.12

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
12A-6244	R.O. Button fasteners	28	.04
12A-6245	1/8" hairpin clip		.04
12A-6303	Wire form	43	.34
12A-6319	Ball gate wire	29	.24
12A-6324	Wire form	43	.20
12A-6325	Wire form	43	.02
12A-6335	1/16" Hairpin clip B.A. & S.A.		.02
12A-6336	3/16" Hairpin clip B.A. & S.A.		.04
12A-6337	Free ball gate wire	29	.18
12A-6338	Wire form	43	.48
12A-6341	Ball Trough Wire		.20
12A-6345	Hood door lift ring B.A. & S.A.		.26
12A-6351	Pin panel spring clip B.A. & S.A.	67, 104, 122	.08
12A-6353	Upper ball guide wire form B.A.	106	.36
12A-6354	Lower ball guide wire form B.A.	108	.42
12A-6357	Reinforcing clip for plastic pins	104	.02
12A-6365	Ball gate wire forms	29	.80
12A-6367	Target wire form baseball	43, 68, 69	.38
12A-6368	Link wire form No. 1 - (free ball gate)	29	.22
12A-6369	Gate wire form No. 2 - (free ball gate)	29	.66
12A-6370	Ball return wire form No. 3 - (free ball gate)	29	.46
12A-6371	Pin guide wire B.A. & S.A.	104	.12
12A-6390	Wire form - bowler (new pin hanger) 6-1/16" long	105	.20
12A-6391	Wire form - bowler (new pin hanger) 7 1/8" long	105	.22
12A-6393	Wire form - shuffle (new pin hanger) 5-11/16" long	105	.20
12A-6392	Wire form - bowler (new pin hanger) 13-11/16" long	105	.18
12B-6394	Wire form - shuffle (new pin hanger) 11 1/8" long	105	.20
12A-6398	Coin lockout wire form new coin switch	46	.30
12A-6400	Flip-over adjustment wire form 1966 door	48	.10
12A-6403	Target - support wire	80, 81	.14
12A-6404	Relay bank reset bar - guide wire		.37
12A-6405	Wire form		.12
12A-6406	Wire form	43	.26
12A-6406-1	Rollover wire form		.34
12A-6407	Eject hole wire form	25	.10
12A-6410	Wire form shuffle alley 16-3/16" long	105	.20
12A-6415	Landing Leg - Front	114, 116	.52
12A-6416	Landing Leg - Rear	114, 116	.78
12A-6417	Target Wire - Bottom	117	.34
12A-6418	Target wire	117	.28
12A-6419	Stabilizer wire	114	.10
12A-6425	Wire form		.28
12A-6426	Pivot Pin	67	.06
12A-6427	Retainer Wire	56	.20
12A-6430	Latch Wire Form	9, 10, 99, 100	.08
12A-6431	5 1/2" Switch Actuator Wire - Catcher	73, 75	.66
12A-6431-1	4 1/2" Switch Actuator Wire - 1st Base	73, 75	.54
12A-6432	Wire Form Horse Target		.22
12A-6435	Wire - Pull In Bar	122	.26
12A-6436	Axle - Flywheel	122	.18
12A-6437	Spring - Coupling	122	.30

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
14A-7745	Motor Swinging Target Gay 90's 50 & 60 cycle	16	12.50
14A-7765	Score Motor 60 cycle		13.50
14A-7766	Flash Motor 60 cycle Shuffle Games - Spooks Gun		13.00
14A-7767	Flash Motor 60 cycle Bowler Games		13.00
14A-7771	Ball Lift Motor 60 cycle Bowler Games	106	39.00
14A-7773	Flash Motor 50 cycle		13.00
14A-7755	Flash Motor 50 cycle Spooks Gun		12.50
14A-7776	Score Motor 50 cycle Bowler & S.A. Matador & Mambo		13.50
14A-7777	Pin Reset Motor 50 cycle Shuffle		15.00
14A-7789	Ball Lift Motor 50 cycle Bowler	106	39.00
14A-7805	Score Motor 60 cycle Flipper Games Base Hit	14	12.50
14A-7806	Score Motor 50 cycle Flipper Games	14	12.50
14A-7820	Pin Reset Motor replaces 14A-7770 60 cycle (Bowler & S.A.)		15.00
14A-7821	Pitcher Unit Motor 60 cycle Pitch & Bat, Fast Ball, Gridiron, Hit & Run	63, 64	15.00
14A-7823	Pitcher Unit Motor 50 cycle Pitch & Bat, Fast Ball, Gridiron, Hit & Run	63, 64	15.00
14A-7824	Front row Target Motor 60 cycle Bonanza Gun	84	13.00
14A-7825	Bear Run Motor 60 cycle Phantom Gun, Spooks Gun	80, 81	27.00
14A-7828	Spinner Motor		7.00
14A-7829	Control Motor 50 volt 60 cycle		12.50
14A-7830	Bottom Target Motor 50 cycle Bonanza Gun	84	12.50
14A-7831	Phantom Motor 50 cycle Guns	80, 81	28.00
14A-7835	Control Motor 50 cycle Bonanza Gun Phantom		12.50
14A-7836	Ball Shooter Motor 60 cycle Hayburner	93	13.00
14A-7837	Horse Unit Motor 60 cycle Hayburner	95	24.50
14A-7838	Ball Shooter Motor 50 cycle Hayburner	93	13.50
14A-7839	Horse Unit Motor 50 cycle Hayburner	95	24.50
14A-7844	Propeller Motor Space Pilot	116	7.00
14A-7846	Spinner Motor Expo, Rock N Roll 50 & 60 cycle	56	15.00
14A-7847	Car Motor 500 Auto Race 60 cycle		9.50
14A-7848	Horizontal Motor Guns 60 cycle Spooks Gun Phantom Gun	85, 86	27.00
14A-7849	Man Run Motor Fastball 60 cycle	65	13.50
14A-7850	Man Run Motor Fastball 50 cycle	65	13.00
14A-7851	Vertical Motor Guns 60 cycle Spooks Gun Phantom Gun	85, 86	12.50
14A-7852	Skull Vertical Motor Guns 60 cycle	85	13.50
14A-7853	Motor Spin Unit 50 cycle Smart Set		13.00
14A-7854	Horizontal Motor Guns 50 cycle Spooks Gun Phantom Guns	85, 86	28.00
14A-7855	Vertical Motor Guns 50 cycle Spooks, Phantom Guns	85, 86	13.00
14A-7856	Skull Vertical Motor Guns 50 cycle	85	13.50
14A-7857	Ball Lift Motor Mini-Bowl 60 cycle	127	13.50
14A-7858	Pin Reset Motor Mini-Bowl 50 cycle	129	15.00
14A-7859	Base Run Motor Hit & Run 60 cycle	74	32.00
14A-7860	Base Run Motor Hit & Run 50 cycle	74	32.00
14A-7861	Middle Target Motor Bonanza 60 cycle	82	18.50
14A-7862	Top Target Motor Bonanza 60 cycle	83	18.50
14A-7863	Middle Target Motor Bonanza 50 cycle	82	18.50

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
14A-7864	Top Target Motor Bonanza 50 cycle	83	18.50
14A-7865	Ball Lift Motor Mini-Bowl 50 cycle	127	13.50
14A-7866	Pin Reset Motor Mini-Bowl 50 cycle		15.00
14A-7867	Score Motor Mini-Bowl 60 cycle		13.50
14A-7868	Score Motor Mini-Bowl 50 cycle		13.50
15A-6771	Transformer 24 volts 60 cycle 5 Balls & Baseball		38.80
15A-6771-1	Transformer 24 volts 60 cycle Flippers & Baseball		44.04
15A-6773	Transformer 24 volts 50 cycle Hayburner II		45.28
15A-6775	Transformer 50 volts 60 cycle B.A. & S.A.		38.40
15A-6776	Transformer 50 volts 60 cycle B.A. & S.A.		45.84
15A-6779	Transformer 28 volts 60 cycle Space Pilot		44.84
15A-6780	Transformer 28 volts 50 cycle Space Pilot		49.70
15A-6782-1	Transformer 24 volts 50 cycle Flippers		59.88
15A-6783	Transformer 50 volts 60 cycle Bonanza Gun		46.38
15A-6784	Transformer 50 volts 50 cycle Bonanza Gun		60.68
16C-8616	Game Information Card - credit type S.A.	110	.88
16C-8617	Game Information Card (Specify name of game)	110	.88
16C-8623-8	Info. Card (press if balls do not return)		.18
16C-8636	Dummy Coin entry cover	45	.74
16C-8640	Single Coin Identification Plate for Single Coin Rejector (specify coin and plays also dash nos.)	45, 49, 50	.86
16A-8655	Press to Pitch Fast Curve Knuckler Fast Ball	50	.68
16B-8659	Tower Decal Space Pilot		2.78
16A-8661	Space Craft Decal (1 set) Space Pilot		1.26
16A-8665	instruction Label Forward & Reverse	118	.72
16A-8666	Instruction Label Up & Down	118	.72
16A-8667	Press to Catch Outfield and Infield Fast Ball	58	.68
16A-8681	Press to Pass or Run Gridiron	59	.98
16A-8682	Press to Snap Ball Gridiron	59	.98
16A-8685	Williams Emblem (Manikin)	124	.60
20A-6179	Cord Retainer Mini-Bowl	128	.16
20A-6500	1-1/16" Steel Balls		.78
20A-6502-A	Carbon Tilt Bob	22	.86
20A-6514	Speed nut Grand Slam Baseball		.04
20A-6516	Timmerman speed nut		.02
20A-6518	3/8" Steel Ball Pitch & Bat Big League	55	.58
20A-6519	15/16" Steel Ball Roll Tilt	22	.76
20A-6520	3/4" Steel Ball Base Hit & Scoreboard		.34
20A-6529-1	Horse Unit Motor Chain 1 1/2 ft. each	97	1.12
20A-6529-2	Horse Carriage Chain 4 ft. each	95, 97	2.98
20A-6529-3	Flying Fish Motor Chain		2.12
20A-6530-A	1/16 x 1/2 Cotterpin		.02
20A-6530-E	1/16 x 1 Cotterpin		.02
20A-6531	1 1/4" Playfield Pin		.02
20A-6542-T-B	Front Door Lock	45	3.30
20A-6559	Thrust Bearing Man Running Unit Baseball		1.32
20A-7550	Felt Washer		.06
20A-7551	Leather Washer	96	.74
20A-8597-4	Rear Sight	77	1.38
20A-8597-5	Butt Plate	77	2.50
20A-8598	Eye Bolt	119	.26

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
20A-8640	Miter Gear		10.40
20A-8646	1 1/4" Steel Ball		1.82
20A-8664	15 OHM 25 watt rheostat replaces 5A-6202 Baseball		10.70
20A-8702	Magnet Coil 110 volt Baseball	55, 66	6.88
20A-8712-6	"E" Retaining Ring	122	.04
20A-8712-12	"E" Retaining Ring	9, 10, 99, 100	.02
20A-8712-15	"E" Retaining Ring	55	.02
20A-8712-18	"E" Retaining Ring for 3/16" shaft Baseball	1, 3, 30, 31	.02
20A-8712-21	"E" Retaining Ring slide Drawer S.A. & B.A.		.04
20A-8712-25	"E" Retaining Ring for 1/4" shaft Baseball	1, 3, 9, 10, 30	.02
20A-8712-31	"E" Retaining Ring Double Play	84, 124, 125	.02
20A-8712-37	"E" Retaining Ring for 3/8" shaft	1, 3, 14, 80, 81, 82, 83	.02
20A-8712-50	"E" Retaining Ring for 1/2" shaft	115, 122	.06
20A-8713-25	"C" Retaining Ring	29	.04
20A-8713-31	"C" Retaining Ring	22	.06
20A-8715-2	Brass Washer	42, 75	.02
20A-8715-5	1/4" Split Lockwasher Baseball		.02
20A-8715-27	Washer		.02
20A-8715-30	Washer	74	.02
20A-8715-33	Steel Washer	58, 91, 123	.02
20A-8715-38	Steel Washer	30	.02
20A-8715-43	Steel Washer	22	.02
20A-8715-44	Steel Washer	22	.02
20A-8715-56	Steel Washer	115, 122	.02
20A-8715-57	Steel Washer	125	.04
20A-8715-59	Washer	125	.06
20A-8715-72	Steel Washer Spinner		.02
20A-8715-79	Washer	15	.02
20A-8715-88	Washer	128	.06
20A-8715-91	Steel Washer		.02
20A-8716-1	Roll Pin 3/32 x 1/2		.02
20A-8716-2	Roll Pin 3/32 x 5/8	29	.04
20A-8716-5	Roll Pin 1/8 x 7/16	21, 23, 27, 94, 120, 122	.02
20A-8716-6	Roll Pin 1/8 x 1/2	28	.04
20A-8716-7	Roll Pin 1/8 x 5/8	84, 124	.04
20A-8716-9	Roll Pin 1/8 x 1	94, 124	.06
20A-8716-10	Roll Pin 3/16 x 1/2		.06
20A-8716-13	Roll Pin 3/16 x 1	126	.08
20A-8716-14	Roll Pin 3/16 x 1 3/4		.10
20A-8716-17	Roll Pin 1/8 x 3/4	106, 124, 125	.04
20A-8716-18	Roll Pin 3/32 x 3/8		.04
20A-8716-20	Roll Pin 1/8 x 3/8	7, 11, 12, 72, 79, 101, 102	.02
20A-8716-22	Roll Pin 1/16 x 1/2		.04
20A-8716-25	Roll Pin 1/8 x 5/16		.04
20A-8716-26	Roll Pin 3/32 x 1		.04
20A-8716-27	Roll Pin 3/32 x 15/16		.04
20A-8716-28	Roll Pin 3/32 x 1/8		.04
20A-8716-29	Roll Pin 1/8 x 3/8		.06
20A-8717-3	#8 Split Lock Washer		.02
20A-8717-5	1/4" Split Lock Washer		.02
20A-8717-17	3/8" Split Lock Washer		.02

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
20A-8717-18	3/8" Int. Lock Washer	125	.04
20A-8717-19	1/2" Internal Lock Washer	113	.04
20A-8717-22	#6 Ext. & Int. Lock Washer		.02
20A-8718-1	Retaining Ring	21	.04
20A-8718-3	C Retaining Ring Baseball		.04
20A-8746	Fluorescent Lamp Holder B.A. & S.A. & Baseball		1.18
20A-8747	Fluorescent Starter Socket B.A. & S.A. & Baseball		1.10
20A-8748-1	15 watt Starter B.A. & S.A. & Baseball		.96
20A-8748-2	25 watt Starter B.A. & S.A. & Kickapoo		1.74
20A-8749-1	60 cycle 20 watt ballast B.A. & S.A.		2.64
20A-8749-2	60 cycle 25 watt ballast B.A. & S.A.		3.30
20A-8749-3	60 cycle 15 watt ballast B.A. & S.A., Baseball & Kickapoo		2.64
20A-8749-6	50 cycle 15 watt ballast B.A. & S.A.		3.58
20A-8790	Nylon Bearing Baseball, Cabaret	14, 53	.08
20A-8790-2	Nylon Bearing - Double Play		.62
20A-8790-3	Nylon Bearing - Double Play		.68
20A-8790-4	Nylon Bearing - Double Play		.42
20A-8790-5	Nylon Bearing B.A. & S.A.		.88
20A-8790-6	Nylon Bearing B.A. & S.A.	105	.22
20A-8790-7	Nylon Bearing Relay Bank	13, 85, 105	.04
20A-8790-8	Nylon Bearing	115	.18
20A-8790-9	Nylon Bearing	67	.06
20A-8794	#4 x 1/4 Thread Forming Screw		.02
20A-8798	1/4 - 28 Hex Nut Sems Bat Unit Baseball		.10
20A-8810	5/8" Steel Ball		.26
20A-8814	#4 x 1/4 Thread Forming Screw	7, 11, 30	.02
20A-8815	#4 x 3/8" Phillips Head Self Tap Screw	9	.02
20A-8820	Oilite Bearing	1, 2, 3	.52
20A-8824	Cork Washer 1/8 x 3/16 x 1 1/4 Flash Motor, B. A. & S. A.	74, 111	.10
20A-8829	Ball Bearing Caster B. A.		2.54
20A-8832	King Size Puck with aluminum insert S. A.	107	10.18
20A-8833	Back Door Lock with #214 Key S. A. & B. A.		3.08
20A-8835	Roler Chain Ball Lift B. A. & S. A.	106	2.64
20A-8838	50 cycle 20 watt ballast B. A. & S. A.		4.84
20A-8841	50 cycle 25 watt ballast B. A. & S. A.		10.18
20A-8846	Palnut 1/2"	29, 54	.02
20A-8846-1	Palnut 1/4"		.04
20A-8855	3/8 x 16 x 19" Long Hook Up Bolts B. A.		1.42
20A-8858	Turn Button B. A. & S. A. Baseball		.20
20A-8862	13/16" steel ball		.42
20A-8863	Shuffle Alley Wax - #1 can S. A.		1.94
20A-8867	T Nut for Wood Leg adj. plate 3/8 x 16 thd. B. A. & S. A.		.44
20A-8882	Gem Lock & Key		8.80
20A-8884	3/32 x 3/8" I.D. x 3/4" O.D. Felt Washer	32	.04
20A-8886	M-B-I Instrument Grease all games		.90
20A-8898	Plastic Guide Tack		.02
20B-8913-L	Cabinet Trim S.A.		4.10
20B-8913-R	Cabinet Trim S.A.		4.10
20A-8920	Mirror 3/16 x 15-5/16 x 22 5/8		14.08
20A-8923	#8 Sash Chain 9" Long 16 Links	77	.32

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
20A-8925	Target Chain Assembly	80, 81, 82, 83	9.82
20A-8928-1	Allen Head Wrench (1/4 x 20 Cap Screw)		.34
20A-8929-1	1/4-20 x 1" Allen Head Cap Screw	77	.22
20A-8929-2	1/4-20 x 1-1/2 Allen Head Cap Screw	77	.24
20A-8930	"U" Bolt 1/4-20 x 1 x 2"	77	.42
20A-8933	8-32 x 1" Nylon Screw	84	.08
20A-8933-1	8-32 x 3/4 Nylon Screw		.08
20A-8935	1" Steel Balls		1.00
20A-8936	1/4-20 x 4" Carriage Bolt	58, 59, 91	.24
20A-8937	1/4-20" Wing Nut	58, 59, 91, 123	.08
20A-8942	Set Screw	70	.08
20B-8944	Speaker Only - Aqua Gun		8.08
20B-8945	Volume Control Unit Aqua Gun		1.78
20B-8946	Sound Device Control Board Spooks Gun		65.34
20A-8947	1/4-20" Hex Nut		.02
20A-8948	10-32" Elastic Stop Nut	61, 62	.12
20A-8951	Burnishing Tool	110	.30
20A-8952	Contact Adjuster	110	.30
20A-8957	Plastic Sleeving	23	.28
20A-8958	Nice Bearing	115	3.26
20A-8962	Shakeproof Washer	115	.08
20A-8963-12	Pushon Retaining Ring	42, 75	.02
20A-8963-15	Pushon Retaining Ring	75	.04
20A-8965	Skull Target Chain	86	10.54
20A-8970	1/4-28 Elastic Stop Nut		.20
20A-8989	15 Tooth Nylon Gear		.84
20A-8990	60 Tooth Nylon Gear		1.44
20A-8991	Magnet Coil (#22-675)		7.16
20A-8992	Pin Magnet		.34
20A-8993	Ball Magnet	126	22.50
20A-8995	Back Door Lock w/ #288 Keys		3.20
20A-8998	Bowling Pin Cord	128, 129	2.66
20A-8999	Tape Player		80.00
20A-9000	Tape Player Cartridge		9.62
20A-9004	Back Door Lock w/ #618 Keys (Used on Ringer Back Door		3.52
21A-105	Trigger Casting	77	2.92
21B-6606	New type ash tray from Galleon B.A. onward	109	5.22
21C-6612-1	Coin Insert Casting - Hinged Type	45	3.24
21C-6613	Coin Return Cup Casting	46	1.62
21C-6614	Gun Mount Flange	77	35.58
21C-6615	Trigger Housing	77	33.60
21A-6632	Pulley Wheel	122	28.18
22E-111	Back Box Scenery "Hayburner"	97	14.00
22E-124-1	Scenery - Fast Ball	68	1.50
22E-124-2	Scenery - Fast Ball	68	1.50
22E-125-L	Cabinet Scenery Spooks & Phantom Gun	88, 89	12.56
22E-125-R	Cabinet Scenery Spooks & Phantom Gun	88, 89	12.56
22E-126	Score Explanation Card - Spooks Gun	88	15.90
22D-127	Cover Scenery Spooks Gun	88	3.26
22D-128	Under Scenery Spooks Gun	88	3.26
22C-129-L	Sidewall Scenery Spooks Gun	88	3.26

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
22C-129-R	Sidewall Scenery Spooks Gun	88	3.26
22D-130	Curtain Scenery Spooks Gun	88	4.90
22D-131	Witch Target Back Scenery Spooks Gun	88	4.90
22B-132-L	Witch Side Scenery Spooks Gun	88	4.90
22B-132-R	Witch Side Scenery Spooks Gun	88	4.90
22D-133	Bulls Eye Panel Spooks Gun	88	30.10
22A-134	Witch Target Spooks Gun	80	4.56
22A-135	Witch Target Spooks Gun	80	4.56
22A-136	Skull Target Spooks Gun		4.56
22A-138	Right Insert Scenery Phantom Gun	89	.26
22A-138-1	Left Insert Scenery Phantom Gun	89	.26
22D-139	Upper Scenery Phantom Gun	89	7.00
22D-140	Lower Scenery Phantom Gun	89	7.66
22A-141	Spinner Scenery Phantom Gun	89	3.36
22A-142	Phantom Target Phantom Gun	81	3.36
22A-143	Phantom Target Phantom Gun	81	3.36
22A-144	Spook Target Phantom Gun	86	3.36
22E-145	Score Instruction Card Phantom Gun	89	6.26
23A-96	Anti Cheat Bracket Rubber Dipped	46	.23
23A-6300	5/16" Rubber Ring	55	.06
23A-6301	3/4" Rubber Ring - White		.08
23A-6301-R	3/4" Rubber Ring - Red		.08
23A-6302	1" Rubber Ring		.08
23A-6303	1 1/4" Rubber Ring		.10
23A-6304	1 1/2" Rubber Ring	73	.12
23A-6305	2" Rubber Ring		.14
23A-6306	2-5/16" Rubber Ring		.18
23A-6307	2 1/8" Rubber Ring	122	.20
23A-6308	3 3/8" Rubber Ring		.24
23A-6309	3 7/8" Rubber Ring		.32
23A-6310	5" Rubber Ring		.54
23A-6311	5/16" Jumbo Ring		.08
23A-6312	Rubber Bumper - Baseball	61, 62	.14
23A-6313	Rubber Bumper - Replaces 23A-6313-2		.06
23A-6313-1	Rubber Grommet	15	.04
23A-6314	Rubber Bumper		.04
23A-6316	Shock Mount Rubber for Ball Lift Motor B.A.		
	Large Rebound Rubber	44, 106	.28
23A-6319	Grommet Target Channel		.08
23A-6327	Shooter Tip	21	.06
23A-6409	Rubber Strip 30" Long - Front Moulding	59	.54
23A-6420	Rubber Grommet	32, 33, 87	.02
23A-6425	Rubber Bumper	44	.06
23A-6335	Rubber Grommet Bar Reset Unit - Double Play		.08
23B-6435-2	Ball Deflector 22" Long B.A.	108	7.98
23A-6336-A	Rubber Grommet Bat - B.A.		.12
23B-6436-2	Ball Track Rubber 25 7/8" Long B.A.	108	4.16
23B-6436-3	Ball Track Rubber 29 1/2" Long B.A.	108	4.92
23C-6440	Grey Rubber Curtain 3/16" x 1 1/4" x 23 3/4" B.A.	108	2.70
23C-6441	Grey Rubber Curtain 3/16" x 2 7/8" x 23 3/4" B.A.	108	6.32
23C-6442	Grey Rubber Curtain 3/16" x 4 3/4" x 23 3/4" B.A.	108	9.80

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
23B-6443	Red - V - Rubber 23" Long - B.A.	108	17.82
23B-6444-68	Ball Return Track 68" Long for 13" & 16" B.A.	109	7.44
23B-6444-75	Ball Return Track 75" Long for 13" B.A.	109	8.20
23B-6444-96	Ball Return Track 96" Long for 8' Section B.A.	109	10.50
23B-6444-113	Ball Return Track 113" Long for 16" B.A.	109	12.36
23A-6445	1/4" x 1/2" x 22 1/2" Black Front Rubber Strip S.A.		.62
23B-6446	Green Front Moulding Rubber Guard - 28" Long B. A.	108	6.36
23A-6447	Ball Stop Rubber 1/4" x 3/4" x 3" B.A.	108	.20
23B-6449	Ball Stop Rubber 7/16" x 1 1/8" x 24 1/4" Long, B.A.	108	1.70
23A-6451	Sponge Rubber 7/16" x 4" x 10" B.A.		2.00
23A-6453	Rubber Grommet - Kickapoo	33	.04
23A-6454	Rubber Grommet	32, 33, 72, 79, 93, 102, 111	.04
23A-6456	T Rubber Rebound 21 1/2" Long S.A.	107	5.50
23A-6459	4 1/2" Hard Rubber Ball B.A.	109	14.86
23A-6503	Rubber Tubing for Pivot Tube	77	.64
23A-6505	Rubber Ring	23, 94	.22
23A-6507	Rubber Bumper	53, 54	.16
23B-6512	Reset Frame Cushion	129	3.36
23B-6513	Back Stop Cushion	129	2.14
24A-6404-1	Light Socket		.18
24A-6405	Light Socket	53	.18
24A-6406	Light Socket		.18
24A-6406-A	Light Socket		.18
24A-6416	Bumper Socket	22	.20
24A-6421-1	Light Socket for #81 Lamp		.42
24A-6549	#44 Bayonet Light Bulb	17, 22, 46, 53	.22
24A-6550	#55 Bayonet Light Bulb - Grand Slam	57, 98	.26
24A-6551	#63 Bayonet Type Light Bulb		.30
24A-6552	#40 Bayonet Type Light Bulb		.46
24A-6590	New Style Drum Unit Lite Socket S.A. & B.A.		.18
24A-6595	Light Socket Playfield B.A. & S.A.		.20
24B-6597-6	Fluorescent Lamp S.A. Ball Park		2.40
24A-6597-8	Back Light Fluorescent Bulb F15T8 Blk.		17.50
24A-6603	Display Socket	46	.36
24A-6605	#81 Bayonet Lamp		.60
24A-6607	Light Socket	57, 98	.12
24A-8668	60 W. 120 - Orange Lamp		1.70
30A-335	Yardage Football	31	23.20
30C-339	Plastic Shields (set) Ding Dong - 1968		17.66
30C-340	Plastic Shields (set) Smarty - 1968		17.66
30C-341	Plastic Shields (set) Lady Luck		18.86
30C-342	Plastic Shields (set) Pit Stop		19.76
30C-343	Plastic Shields (set) Jolly Rogers		20.70
30C-349	Playfield Plastics for Daffie - Set		20.56
30C-350	Playfield Plastics - Student Prince		15.00
30C-359-2	Plastic Selector Disc		2.06
30C-366-10	Dial Random Spinner Unit	56	11.00
30E-370	Screened Targets (set) Fast Ball	68	13.10
30C-375	Shots Fired Plastic	89	2.90
30A-375-1	Lower Right 300 Plastic	89	2.90
30A-375-2	Lower Left 300 Plastic	89	2.90

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
30A-375-3	Upper Center 1000 Plastic	89	2.90
30A-375-4	Upper L. S. Shoot Plastic	89	2.90
30A-375-5	Upper R. S. Shoot Plastic	89	2.90
30C-376-1-7	Targets Only (set) Gridiron	69	8.10
30C-376-8	Football Cover Plastic Gridiron	62	1.96
30C-376-9	Screened Display Plastic Gridiron	69	19.56
30C-376-10	Timer - Cardboard Disc - Gridiron	70	2.26
30D-382-1	Playfield Plastic Hit & Run	73	14.36
30D-382-2	Playfield Plastic Hit & Run	73	14.36
30D-382-3	Playfield Plastic Hit & Run	73	.86
30D-382-4	Playfield Plastic Hit & Run	73	.86
30D-382-5	Playfield Plastic Hit & Run	73	.86
30C-384-1	Targets (set) Bonanza Gun	84	.96
30C-384-12	1st Level Front Scenery Bonanza Gun	90	5.80
30C-384-13	1st Level Back Scenery Bonanza Gun	90	7.36
30C-384-14	3rd Level Scenery Bonanza Gun	90	8.20
30C-384-15	Mine Shaft Scenery Bonanza Gun	90	.50
30C-384-16	4th Level Scenery Bonanza Gun	90	8.20
30C-384-17	Target Panel Scenery Bonanza Gun	90	7.36
30C-384-18	#500 Target Scenery Bonanza Gun	90	.50
30C-384-19	R. S. Cabinet Scenery Bonanza Gun	90	14.80
30C-384-20	L. S. Cabinet Scenery Bonanza Gun	90	14.80
30C-384-21	Instruction Card Bonanza Gun	90	18.36
30B-384-22	Shots Fired Screened Plastic Bonanza Gun	90	11.66
30B-389-8	Plastic Selector Disc (Straight Flush)		7.06
30D-3572	Bottom Arch (Specify Game)	44	6.06
30D-3573	Ball Shooter Gauge	44	1.80
30C-3967-1	Standard Type Screened Instruction Plate B.A.	110	6.26
30C-3967-2	Credit Type Screened Instruction Plate from B.A.	110	6.26
30D-4621	Playfield Bottom Arch	91	7.36
30D-4621-1	Bottom Arch	91	7.36
30B-4666	Screened Dummy Reel 4" Type		1.06
30B-4666-1	Screened Dummy Reel 3" Type		1.06
30D-5222	Bowling Shroud Mini-Bowl	129	9.40
30C-7129	4" New Style Drum Reel 0-9	8	.90
30C-7129-1	4" New Style Drum Reel 1-10 Frame B.A. & S.A.	8	.90
30C-7129-2	4" New Style Drum Reel 1-6666 Kickapoo		.75
30C-7129-3	L & R Playing Card Reel - Full House & Top Hand - 1966 ..		1.10
30C-7129-4	Center Playing Card Reel - Full House & Top Hand - 1966 ..		1.10
30C-7129-5	4" New Style Drum Reel 1-9 Thousands Upright B.A. & S.A.	8	.90
30C-7129-6	4" New Style Drum Reel 0-9 Tens & Thousands - Numbers Upside Down B.A. & S.A.	8	.90
30C-7129-7	4" New Style Drum Reel 1-9 Thousands - Numbers Upside Down B.A. & S.A.	8	.90
30C-7129-8	4" New Style Drum Reel 10-50 - Jolly Roger		.90
30B-7295-1	3" Score Drum Reel	8, 101	.80
30B-7295-2	3" Score Drum Reel	8, 101	.80
30B-7295-3	3" Score Drum Reel	8, 101	.80
30D-7314	Instruction Sign - Plastic - Ringer		8.10

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
COILS			
A-21-400	Coil	26	2.10
A-21-500	Coil		2.10
A-21-550	Coil	35	2.10
A-22-550	Drop Target Coil (24 volt)	21, 35, 92	2.10
A-23-600	Solenoid Coil	35	2.10
A-23-650	Man Running Unit Coil - Double Play (Step Up Coil 24 Volts)	35	2.10
A-24-850	Man Loading Coil	65	2.10
A-24-975	Player Up Coil Assembly	35, 122	2.10
A-25-900	Step Up Coil	35	2.10
A-25-1000	Step Up Coil	35	2.10
A-26-1100	Step Up Coil	35	2.10
A-26-1200	Step Up Coil	35	2.10
A-26-1350	Coil	35	2.10
A-29-2800	Coil	122	2.30
A-30-2700	Ball Release Coil		2.30
A1-23-750	Ball Kicker Coil	35	2.10
A1-26-1100	Ball Shooter Coil		2.10
A2-23-750	Knocker Bell Coil (24 Volts)	32, 33, 35	2.10
A2-26-1100	Knocker Coil (50 Volts)	32, 35	2.10
A2-26-1350	Coil	35	2.10
A3-25-950	Target Hole Coil	35	2.10
B-26-800	Coil	5, 6, 10, 30, 35, 72	2.00
B-27-1100	Reset Coil	35	2.00
B-28-1450	Drum Coil	5, 6, 35, 79, 104	2.00
B-29-1600	Reset Coil	35	2.00
B1-26-800	Coil	9, 10, 100	2.00
B1-29-1600	Coil	99	2.00
C-27-1300	Bell Coil	35	2.00
C-30-2400	Bell Coil (50 Volt)	35	2.00
C2-26-800	Chime Coil (24 Volt)	32, 33, 35	2.00
C2-27-1300	Bell Coil (50 Volt)	33	2.00
C2-30-2400	Chime Coil (50 Volt)	32	2.00
D-22-1150	Relay Bank Reset Coil	35	3.80
D-24-1150	Relay Bank Reset Coil	35	3.80
D-24-1400	Relay Bank Reset Coil	35, 78	3.80
D-24-1600	Relay Bank Reset Coil	35	3.80
D1-20-900	Manikin Arm Coil	35, 126	3.80
D1-21-1125	Reset Coil B.A. & S.A.	13	3.80
FL-20-300/ 28/400	Flipper Coil Derby Day	23, 92	2.60
FL-21-28	Flipper Coil (24 Volt)	35	2.60
FL-25-31	Flipper Coil (50 Volt)	35	2.60
FL-26-950/250	Step Up Coil	35	2.60
G-21-400	Ball Shooter Release Coil	93	2.00
G-22-550	Jet Bumper Coil (24 Volt)	17, 35, 120	2.00
G-23-600	Ball Shooter Coil	26, 35	2.00
G-23-650	Kicker Coil (24 Volt)	35	2.00
G-23-750	Kicker Coil (24 Volt)	28, 35, 53	2.00
G-24-750	Kicker Coil	35	2.00

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
G-24-850	Ball Eject Coil (24 Volt)	35	2.00
G-25-1100	Jet Bumper Coil (50 Volt)	17, 35	2.20
G-26-1400	Kicker Coil	28, 35	2.20
G-27-1650	Ball Eject Coil (50 Volt)		2.20
G1-25-1100	Coil	35	2.20
H-23-870	Bat Coil		3.80
H-24-1150	Bat Coil Hit & Run		3.80
M-25-400	M Relay Coil		1.90
M-28-600	M Relay Coil		1.90
M-29-1000	M Relay Coil	53	1.90
M-29-1100	M Relay Coil (24 Volt)		1.90
M-30-1400	M Relay Coil (24 Volt)	29	1.90
M-31-1500	M Relay Coil	46, 87	1.90
M-31-1600	M Relay Coil		1.90
M-32-1800	M Relay Coil		1.90
M-32-2400	M Relay Coil		1.90
M-33-2800	M Relay Coil		1.90
M-34-3000	Coin Lockout Coil		1.90
M-34-3100	M Relay Coil		1.90
M-36-5500	M Relay Coil		1.90
M1-25-400	Closing Flipper Coil		1.90
M1-27-700	Coil	94	1.90
M1-31-1500	Coin Lockout Coil		1.90
M1-31P-1600	Relay Coil		1.90
M1-32-2400	Coil		1.90
M1-34-3000	Lockout Coil	46	1.90
M2-25-400	Coil	26	1.90
M2-29-1000	Horse Release Coil	96	1.90
M3-30-1400	Buzzer Coil Gridiron		1.90
R-37-1800	Reverberator Coil Bonanza Gun	87	4.90
S-25-400	Relay Bank Coil	13	1.24
S-27-500	Relay Bank Coil	13	1.24
S-27-700	Relay Bank Coil	13	1.24
S-27-750	Relay Bank Coil	13	1.24
S-29-950	Relay Bank Coil	13	1.24
X5-29-900	Pin Trip Coil		1.24
X5-32-1500	Pin Trip Coil		1.24
X-25-400	Relay Bank Coil		1.24
X-27-700	Relay Bank Coil		1.24
X-28-800	Relay Bank Coil		1.24
X-30-1000	Relay Bank Coil		1.24
XM-27-675	Counter Meter Coil (24 Volt)	32	2.00
XM-29-1100	Counter Meter Coil	32	2.00
X-29-1100	Counter Meter Coil (50 Volt)		1.24
Z-25-400	Z Relay Coil		2.00
Z-27-1000	Z Relay Coil	29, 129	2.00
Z-28-1150	Z Relay Coil		2.00
Z-28-1200	Z Relay Coil		2.00
Z-29P-1400	Z Relay Coil		2.00
Z-30-1600	Z Relay Coil	111	2.00
Z-30-1800	Z Relay Coil		2.00

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
Z-31-P-2000	Z Relay Coil		2.10
Z-31-2300	Z Relay Coil		2.10
Z-32-P-2700	Z Relay Coil		2.10
Z-35-4200	Z Relay Coil		2.10
Z-35-5500	Z Relay Coil		2.10
SWITCHES			
SW-1A-1	Shake Tilt Switch	41	.94
SW-1A-2	Lane - R.O. Single Switch	40	.58
SW-1A-2-S	Rollover Sw. w/Side Lugs	40	.72
SW-1A-9	Bumper Switch	41	.42
SW-1A-25	Horse Unit Finish Switch	97	1.22
SW-1A-27	Single Make Switch		.68
SW-1A-45-1	Rollover Button Single Make Switch	40	.82
SW-1A-47	Single Make Switch		.68
SW-1A-49	Ball Gate Switch	29	.72
SW-1A-50	Drop Target Make Switch		.72
SW-1A-53	Kicker Count Switch		.68
SW-1A-54	Roll Tilt Switch	22	.44
SW-1A-64	Selector P.B. Switch B.A. & S.A.		.86
SW-1A-70	Flipper Button Switch (right side)	22, 40	.90
SW-1A-72	Switch N. S. S.A. Pin Hanger	104	.70
SW-1A-79	Bulls Eye Switch		1.00
SW-1A-80	Switch, Witch Target	80, 81	.60
SW-1A-81	Trigger Switch	77	1.04
SW-1A-82-1	Ball Shooter Rollover Switch	93	2.14
SW-1A-83-1	Target Panel Switch	57, 98	1.12
SW-1A-85	Rollover Switch	42, 73	.70
SW-1A-85-S	Rollover Switch	42	1.00
SW-1A-86	Switch		.90
SW-1A-87	Target Switch	68, 69	.78
SW-1A-88	Ball Catcher Hole - Switch	67	.68
SW-1CA	Motor Switch 1966-1967 Baseball, Motor Cam Switch	39, 63, 64	1.58
SW-1CA-B	Motor Cam Switch	39	1.08
SW-1CA-B-1	Timer Switch		1.50
SW-1CA-1	Make Switch Small Contacts	39	.68
SW-1CA-2	Motor Switch 1966-1967 Baseball Make Switch Small Contacts	39, 86	.68
SW-1-CSB-2	Man Unit Motor Switch	65	1.48
SW-1-M-1	Make Switch M Relay	19	.52
SW-1M-1A	Make Switch		.62
SW-1-M-3	Make Switch	19	.66
SW-1-M-5	Coin Switch		.58
SW-1-M-7S	O Index Switch	5, 6	.50
SW-1M-8S	Index Switch		.60
SW-1-M-11S	M Switch	29	.52
SW-1-M-13S	Coin Trip Switch	47	.56
SW-1-M-14S	Switch Arm & Coil Assembly	84	.64
SW-1M-15-S	E.O.S. Ball Shooter Switch	93	.42
SW-1M-18S	Switch	9, 10	.50

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
SW-1M-20S	"O" Position Switch (3" Drum)	100	.56
SW-1U-21	Alternator Switch - Flippers	12	.70
SW-1U-35	Switch	26	.52
SW-1-Z	Make Switch	20, 29, 129	.62
SW-1-Z1	Make Switch	20, 129	.68
SW-1Z-1A	Make Switch	29	.84
SW-1Z-1-AS	Switch		.72
SW-1Z-1-S	Switch		.62
SW-1Z-S	Switch	84	.62
SW-1Z-SS	Switch		.58
SW-1Z-2	Switch		.70
SW-2A-5	Horse Unit Zero Position Switch	97	1.08
SW-2A-3	Kick Off Switch		.86
SW-2A-14	Timer Impulse Switch		.76
SW-2A-18	Commutator Switch	121	1.08
SW-2A-19	Up & Down Control Switch	118	.80
SW-2A-21	Outfield Button - Switch	58	1.02
SW-2-CA	Break Switch - Small Contact	39, 86	1.38
SW-2-CAB	Cam Switch	39	1.18
SW-2-CA-1	Break Switch - Small Contact	39, 63	.72
SW-2CA-2	Switch		.76
SW-2M-3S	Switch	9, 10	.60
SW-2-M1	Break Switch	19	.54
SW-2U-1	E.O.S. Switch		.96
SW-2U-9	Switch		.56
SW-2U-12	4" Drum Switch E.O.S.	5, 6, 12, 30, 79	.70
SW-2U-13	E.O.S. Switch		1.02
SW-2U-14	Bat Unit E.O.S. Switch	61, 62	.92
SW-2U-15	"O" Position Break		.74
SW-2U-18	Target Switch	120	.96
SW-2U-22	Switch	126	.80
SW-2Z	Break Switch	20, 129	.64
SW2Z-1	Alternator Switch	72	.62
SW-2ZS	Switch		.56
SW-3A-4	Switch N.S. Pin Hanger	104	.90
SW-3A-6	Commutator Switch	121	1.54
SW-3A-7	Center Switch - Witch Target	80	1.20
SW-3A-10	Switch - Outfield-Infield	58	1.20
SW-3C	Cam Switch 1966 & 67 Baseball		1.68
SW-3C-5	Man Unit Motor Switch		1.34
SW-3-CA-1	Make Break Switch - Small Contact	39	.84
SW-3CA-2	Switch		.98
SW-3-CS	Motor Cam Switch	65	2.00
SW-3-M-1	Make Break Switch M Relay	19	.66
SW-3M-3	Coin Switch		.78
SW-3M-4	Spinner Switch	54	.80
SW-3Z	Make Break Switch	20	.84
SW-3ZS	Switch		.74
SW-10A-2-S	Playfield Standup Switch	40, 41	1.00
SW-10A-8	Flipper Switch		.56
SW-10A-8A	Flipper Switch	92	.98

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
SW-10A-14	Switch	16	.84
SW-10A-16	N. S. Pin Hanger Switch B.A. & S.A.	104	.76
SW-10A-17	Single Make Target Switch	40, 41	.94
SW-10A-17-S	Single Make Target Switch	40, 41	.92
SW-10A-18	Switch to Pitch Curve 1966 & 1967 Baseball	58	.86
SW-10A-19	Anti Cheat Door Switch	46	1.02
SW-10A-21	Ball Shooter - Release Switch	89	.78
SW-10A-22	Batter Button Switch	58, 59, 123	1.42
SW-10A-23	Target Switch	42	.82
SW-10A-25	Stand Up Switch		.76
SW-10A-27	End of Travel Switch Left Skull Target	85, 86	.82
SW-10A-28	End of Travel Switch Right Skull Target	85, 86	1.06
SW-10A-30	Alternator Switch	72	.82
SW-10A-32	Switch Base Run Unit E.O.S.	74	.84
SW-10A-33	Switch - Ball Elevator	127	.90
SW-10A-34	Rollover Switch	55	.88
SW-10C	Curtain Switch	85, 129	1.40
SW-10C-2	Bat Lever Switch 1966 & 67 Baseball		1.54
SW-10C-3U-1	Shark Index Switch		1.40
SW-10-CA	Make Switch Large Contacts	39	1.36
SW-10CA-1	Switch	39, 85	.82
SW-10CA-2	Make Switch 1966 & 1967 Baseball	39, 63, 64, 85	.82
SW-10-CAB	Make Switch - Large Contacts	39	1.22
SW-10M-1	Switch	19	.52
SW-10M-1A	Switch		.54
SW-10U-1	E.O.S. Make Switch		.76
SW-10U-9	Switch	122	1.06
SW-10-Z	Make Switch	20	.78
SW-10Z-AS	Switch		.70
SW-11A-2	Lane Rollover Double Switch	40	1.92
SW-11A-23	Target Switch 1966 & 1967 Baseball		1.50
SW-11A-25	Flipper Push Button Switch Left Side - 4 Point	22, 40	1.72
SW-11MS	0-9 Position Switch		.90
SW-11M-S1	Switch '0' to '9'	5, 6	.92
SW-11M-S2	Switch	9, 10	.84
SW-11M-S3	"0" & 9th Position Switch (3" Drums)	99	.84
SW-11U-7	Switch	102	1.18
SW-12A	Jet Bumper Switch	41	1.04
SW-12A-8	Index Cam Switch	85, 86	1.02
SW-12A-9	Switch M & B		1.54
SW-12-C	Man Unit Motor Switch	65	2.08
SW-12U-6	Drop Target Switch		1.32
SW-12U-8	Bat Unit E.O.S.		1.58
SW-20-A	Rollover Button Break Switch	40	.70
SW-20A-3	Skull Switch	85, 86	1.14
SW-20A-4	Skull Switch	85, 86	.80
SW-20A-5	Skull Switch	85, 86	.84
SW-20C	Cam Switch	127	1.32
SW-20C-2	Curtain Link Switch	85	1.68
SW-20-CA	Break Switch 1966 & 1967 Baseball	39, 63, 64	1.74
SW-20-CA-B	Break Switch	39	1.22

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
SW-20CA-1	Switch	39	.82
SW-20CA-2	Switch		.78
SW-20-M1	Break Switch M Relay	19	.54
SW-202	Break Switch	20	.76
SW-22A-1	Sacrifice Target Switch	68	1.76
SW-22A-2	Switch - Pins	129	1.82
SW-22U	"O" Position Switch Break-Break		1.18
SW-22U-2	E.O.S. Break-Break Switch Break-Break		1.18
SW-22U-3	"O" - "B" Position Switch		1.16
SW-30A-4	"Kunckler" - Pitch Button Switch	58	1.08
SW-30A-6	Forward Control Switch	118	.98
SW-30A-7	Reverse Control Switch	118	1.10
SW-30C	Pitch Unit Motor Switch - Grand Slam	85	2.00
SW-30C-1	Motor Make Break Switch - Grand Slam		1.14
SW-30-CA	Cam Switch	39	1.72
SW-30CA-1	Make Break Switch - Double Play	39	1.06
SW-30-CA-B	Cam Switch	39	1.58
SW-30-CA-2	Make Break Switch	39, 86	.98
SW-30CS	Pulse Switch	74, 127	1.60
SW-30-M-1	Make Break Switch M Relay	19	.84
SW-31A	Switch - N.S. Pin Hanger	104	1.46
SW-33-U-1	Unit Transfer Switch	79, 102	1.88
SW-01-A	Collector Switch Spinner Unit		.58
SW-01-A-1	Wiper Switch "Skull" Target	85, 86	.70
SW-01M	Scoring Switch Spinner Unit		.48
SW-111-A-2	6 pt. Flipper Switch - A-Go-Go		1.66
SW-1010-A-6	Double Make Target Switch	40, 41	1.34
SW-1010-A-7	Playfield Stand Up Switch	40, 41	1.16
SW-1010-A-8	Switch Double Make	42	1.00
ASSEMBLIES			
A-4389	Coil Stop w/Rubber Grommet	65	1.34
B-4470-2	Horse Unit Mounting Frame Front	95	4.62
B-4471-2	Horse Unit Mounting Frame Rear	95	4.08
B-4472	Horse Carriage Brkt. Assembly	97	2.36
A-4488-1	Horse Release Relay Latch	96	.86
A-4608	Cam Follower	38, 39	.60
A-4608-A	Cam Follower w/Roller	38	.82
A-4608-B	Cam Follower	38	.82
A-4673	Disc Man Running Unit	65	3.04
B-4674	Arm Man Running Unit	65	5.74
A-4677	Step Up Arm Man Runner Unit	65	2.36
A-4679	Index Pawl Man Running Unit	65	.78
B-4683-C	Bat Unit Main Frame	61	3.94
B-4683-D	Bat Unit Frame	62	3.78
B-4690	Drive Arm Bat Unit	61, 62	1.70
B-4729-R	Plumb Bob Tilt Assembly	22	2.12
B-4741	Rebound Assembly	44	1.36
A-4744	Bumper Switch Blade	38, 41	.24
A-4744-1	Target Switch Blade Speed Nut Type	38	.28
A-4744-2	R.O. Button Switch Blade	38	.28
A-4744-4	Target Switch Blade Rivet Type		.28

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
A-4754	Jet Bumper Ring Assembly	17	1.68
A-4783	Jet Bumper Switch Assembly	17, 41	2.38
B-4817	Ball Gate Assembly Right Side	44	1.74
B-4817-A	Ball Gate Assembly Left Side	44	1.74
A-4834	Stand Up Switch Assembly	41	1.34
A-4962-L	Flipper Pawl Assembly (Left)	23, 92	1.72
A-4962-R	Flipper Pawl Assembly (Right)	23, 92	1.72
A-5069-N	Flipper Button Assembly (Nylon)	22	1.50
A-5082-A	Coil Brkt. & Stop Bat Unit up to 1967 Baseball	61, 62	1.80
A-5103	Plunger & Link Assembly	25, 28	.78
B-5104-1	Kicker Assembly	28	7.50
C-5161-69	Bat Unit Complete		40.00
C-5161-70	Bat Unit Complete	61	40.00
C-5161-376	Bat Unit Complete Hit & Run	62	40.00
A-5324	Bumper Switch Assembly	41	1.02
A-5325	Tilt Switch Assembly	41	1.72
A-5370-1	Stylus, Bushing & Lug Assembly	78	.60
B-5371-3	Yoke & Channel	78	14.04
B-5371-4	Yoke & Channel	78	13.82
B-5372-1	Yoke	78	8.36
A-5387	Bell Solenoid Plunger	32, 33, 34	.64
E-5420-69	Man Run Unit Complete	65	112.80
D-5421-69	Man Running Unit Main Frame	65	7.42
A-5422-2	Rollover Switch Assembly	21	1.78
A-5422-3	R.O. Wire & Switch Assembly	21	1.80
A-5422-4	R.O. Wire & Switch Assembly	21	2.34
B-5542	End Plate	129	1.64
A-5549	Cam (Pin Reset)	129	2.96
A-5551	Reset Link (Pin Assembly)	129	.66
B-5553	Switch Plate (Pin Reset)	129	3.32
B-5554	Motor Mounting Bracket	129	1.86
B-5566	Reset Bracket - Right (Pin Reset)	129	1.52
B-5567	Reset Bracket Left (Pin Reset)	129	1.34
B-5572	Bushing Strip (Pin Reset)	129	5.22
B-5573	Bushing Plate (Pin Reset)	129	6.66
A-5574	Adjustment Clamp (Pin Assembly)	128, 129	.62
B-5579	Knocker Assembly		8.00
A-5627	Motor Stop Dog Man Running Unit	65	1.50
A-5640-2	Ball Shooter Shock Spring (4 Aces)		.56
A-5652	Kicker Crank Assembly Short Pin	28	1.12
A-5652-A	Kicker Crank Assembly Long Pin	28	1.14
A-5653	Kicker Mounting Bracket Assembly	28, 93	.54
A-5703-64	Ball Flap (Also Replaces A 5703-R)	66, 73	2.42
A-5718	Curve Magnet Coil Bracket	66	1.88
A-5718-1	Curve Magnet Coil Bracket		2.54
A-5725	Plastic Pin Assembly (Complete)	128	9.00
B-5778	Knocker Mounting Assembly	32	.88
B-5779	Knocker Assembly (Complete)	32	7.84
A-5844	Roll Over Wire Assembly	43	.40
A-5844-1	Roll Over Wire Assembly	43	.50
A-5844-2	Roll Over Wire Assembly	43	.50

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
A-5844-3	Roll Over Wire Assembly	43	.44
A-5844-4	Roll Over Wire Assembly	43	.54
A-5844-5	Roll Over Wire Assembly	43	.54
A-5844-6	Roll Over Wire Assembly	43	.76
A-5844-7	Roll Over Wire Assembly	43	.76
A-5844-8	Roll Over Wire Assembly	43	.40
A-5844-9	Roll Over Wire Assembly	43	.50
A-5844-10	Roll Over Wire Assembly	43	.54
A-5844-11	Roll Over Wire Assembly	43	.54
A-5844-13	Roll Over Wire Assembly		.54
A-5844-17	Roll Over Wire Assembly	21	1.10
A-5844-18	Roll Over Wire Assembly	21	1.00
C-5900	Contact Disc. Assembly (Specify Game & Unit)		4.62
B-5909	Ratchet Gear Assembly (48 Step) Specify Game & Unit		3.38
B-5910	Contact Disc. Assembly (48 Step Unit) Specify Game & Unit		4.48
A-5946	Gear & Shaft Assembly (Non-Resetting Type)		3.36
A-5947	Gear & Shaft Assembly (Resetting Type)		4.40
A-5948	Gear & Shaft Assembly (Replay Unit)		5.06
A-5957	Armature & Link Bat Unit	61, 62	.90
A-6038	Crank Hub Assembly (Swinging Target)	16	1.20
A-6039	Target Arm Assembly	16	1.58
A-6040	Target Drive Arm Assembly	16	1.16
A-6041	Mounting Frame (Swinging Target)	16	2.46
B-6045-1	Swinging Target Assembly	16	29.58
A-6058	Front Moulding Lock Lever Assembly	60	2.00
B-6059	Front Moulding Lock Rail Assembly	60	3.76
B-6066	J Type Relay Frame	19	.94
B-6067	J Type Relay Armature	18, 19	.56
B-6068	J Type Relay Assembly (Less Switches)	12, 18	5.26
A-6214-3	L Type Relay Arm Assembly (3 Slot)	18, 20	.62
A-6214-4	L Type Relay Arm Assembly (4 Slot)	18, 20	.62
A-6214-5	L Type Relay Arm Assembly (5 Slot)	18, 20	.62
A-6214-5A	L Type Relay Arm Assembly	29	.62
A-6214-6	L Type Relay Armature Assembly (6 Slot)	18, 20	.62
A-6215	L Type Relay Frame	20	.96
A-6216	L Type Relay Assembly	20, 129	5.40
A-6221-1	Drop Target Armature & Link Assembly	15	.80
A-6222	Interlock Relay Mounting Frame	18	1.34
A-6223	Trip Relay Frame	18, 67	.93
A-6223-1	Coil Mtg. Frame	1, 67	1.30
B-6225	Interlock Relay Assembly (Less Switches)	18	10.86
A-6229	Ball Gate Assembly	29	1.58
A-6229-1	Ball Gate Assembly	29	1.58
B-6271	Moulding Lock Assembly	60	2.10
B-6292-4	Base Plate Alt. Unit Gun	79	3.06
B-6292-6	Base Plate 4" Drums	5, 6	2.06
B-6292-7	Base Plate Roto Unit	72, 102	3.58
B-6292-9	Base Plate Alt. Unit Flippers	12	5.10
B-6292-10	Base Plate Selector Advance Unit	30	6.36
A-6293	Coil Stop Assembly	5, 6, 12, 30	1.20

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
A-6294	Contact Ring Assembly	7, 11, 30	.24
A-6295	Drive Pawl & Armature	5, 6, 7, 12, 30, 72, 79, 102	1.02
A-6304	Miniature Post & Rubber	44	.48
A-6311	Short Blade with Small Contact (J Relay)	36	.14
A-6312	Short Blade with Small Contact (J Relay)	36	.16
A-6313	Long Blade with Small Contact (J Relay)	36	.14
A-6314	Long Blade with Large Contact (J Relay)	36	.16
A-6315	Side Lug Blade with Large Contact (J Relay)	36	.14
A-6316	Side Lug Blade with Large Contact (J Relay)	36	.16
A-6317	Short Blade with Small Contact (Standard)	36	.16
A-6318	Short Blade with Large Contact (Standard)	36	.16
A-6319	Long Blade with Small Contact (Standard)	36	.16
A-6320	Long Blade with Large Contact (Standard)	36	.18
B-6323	Pitch Unit Plate - Grand Slam & 10th Inning	63, 64	2.70
B-6322-69	Pitch Unit Complete	63	63.90
B-6322-70	Pitch Unit Complete	64	63.90
B-6329	Bulls Eye Target & Bracket 1964 Grand Slam Home Run Pocket		3.76
B-6338	Bat Shaft Assembly 1966 & 1967	61, 62	2.96
B-6342	Latch Type - Relay Unit Less Switches	18	11.20
B-6343	Latch Type Relay Frame	18	1.36
B-6367	Cam Follower Assembly	38, 39	.38
A-6378	Solenoid Plast Assy.	21	.84
D-6380	Motor Unit (Nylon - Cams - Less Switches)	14	37.30
A-6383	Coil Stop Assembly R. B.	78	.40
A-6387	Shooter Rod Assembly N. S.	21	2.44
B-6388	Replay Disc Assembly Reel Type	3	2.42
C-6389-1	Relay Bank Frame New Style	13	8.32
C-6389-A-1	Relay Bank Frame (Flippers)	13	8.30
B-6390	Front Moulding Assembly	52	10.58
B-6391	Lever Slide Assembly	52	1.58
C-6392	Latch Guide	52	3.90
B-6394-1-L	Left New Style Rollover Wire & Bracket for Thicker Playfields S. A.	103	.60
B-6394-1-R	Right New Style Rollover Wire & Bracket for Thicker Playfields S. A.	103	.60
B-6396	Counter Assembly (24 Volt)	32	12.00
A-6400	Shaft & Ratchet Assembly (R. P. Unit)	3	2.40
A-6401	Ratchet Assembly (Specify Game & Unit)	2	2.02
A-6402	Ratchet Assembly (Specify Game & Unit)		2.40
A-6403	Ratchet Assembly (Specify Game & Unit)	2	2.02
A-6404	Ratchet Assembly (Specify Game & Unit)		2.40
A-6405	Shaft & Ratchet Assembly (Specify Game & Unit)		2.40
D-6410	Tubular Leg 25½" From Ultra S. A. On		10.20
C-6412	Coin Unit Contact Disc. Specify Game		5.30
C-6413	Flash Motor Contact Disc Specify Game		4.60
C-6414	Printed Circuit Assembly (Specify Game & Unit)	4	4.60
C-6415	Game Selection Contact Disc (Specify Game)		5.80
A-6416	48 Tooth Gear & Shaft (Specify Game)		2.14
C-6417	Biscuit Assembly (Specify Game & Unit)	4, 111	10.58
C-6418	Score Motor Contact Disc. (Specify Game)		36.86

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
A-6420-1	Crank Arm Assembly	13	.76
A-6421-RB	Link-Bank Assembly	13	.72
A-6430	Ratchet & Shaft Assembly		2.06
A-6430-1	Ratchet & Shaft Assembly		1.46
B-6436	Bat Crank Arm Double Play		11.06
B-6439	Ball Carrier B. A.	106, 107	4.18
B-6440	Alignment Plate with Sprocket B. A.	106	2.18
B-6442	Ribbed Rubber & Plastic B. A.		4.08
B-6443	Wiper Arm Assembly (Fantype) Specify Game & Unit	4	2.52
A-6444	Coil Stop Assembly (Rubber) (Strike-Spare Unit Only)	1	.72
A-6446	Switch Actuator	13	.60
B-6448-1	1-Clip Fuse Block		.86
B-6448-4	4-Clip Fuse Block		2.00
B-6448-5	5-Clip Fuse Block		2.40
B-6477	Latch Slide Actuator	60	2.00
B-6477-1	Latch Slide	60	2.00
B-6486	Counter Assembly (50 Volts)	32	12.36
A-6488	Drive Arm Assembly	1, 2, 3	2.16
A-6489	Reset Pawl Assembly	1, 2, 3	.90
A-6490	Escapement Pawl Assembly	1, 3	.74
A-6492	Coil Stop Assembly	1, 2, 3, 15, 21, 23, 26, 70, 120	.82
C-6493	Relay Bank Assembly Complete (Write for Price)	3	
C-6494	50 Step Resetting Unit (Give Name of Game & Unit)	1	52.00
C-6495	Replay Unit Assembly (Give Name of Game & Unit)		46.82
C-6510	Non-Resetting Unit - With Bell	2	46.82
C-6510-A	Non-Resetting Unit - Without Bell	2	48.54
C-6513	Flash Motor Unit (Specify Game)	111	71.00
A-6515	"J" Relay Armature Assembly	29	2.50
B-6517	Free Ball Gate Assembly	29, 111	8.50
B-6518	Mounting Bracket Frame Assembly	29	2.36
C-6519-5	5 Finger Score Motor Wiper B. A. & S. A.		4.52
C-6519-6	6 Finger Score Motor Wiper B. A. & S. A.		4.70
C-6519-7	7 Finger Score Motor Wiper B. A. & S. A.		5.26
C-6520	Wiper Blade Assembly (Specify Game & Unit)	4, 111	3.50
C-6521	Snowshoe Wiper Assembly (Specify Game & Unit)	3	10.50
B-6522-4	Pin Reset Cam (Single) S. A. Give Name of Game		3.44
B-6522-5	Pin Reset Cam (Double) B. A. Give Name of Game		3.54
B-6523	Cam Score Motor	112	2.72
C-6524	1-10 Trip Bar B. A. & S. A.		5.02
A-6532-1	Spinner Shaft Assembly	30	.80
A-6533	Spinner Hub	30	1.10
B-6534-1	Selector Disc Advance Unit Complete	30	29.92
B-6559	Score Motor Bracket	112	2.50
B-6570	Mounting Plate		2.06
B-6571	Back Box Hinge & Pin		1.10
B-6571-1	Back Box Welded Door Hinge (Upper) B. A. & S. A.		2.10
B-6572	Ball Roll Tilt Assembly (new)	22	3.68
B-6573	Small Bell Assembly (4")	33	7.58
A-6574	Bel Armature Assembly	33, 34	.48
A-6587	Pin Mounting Bracket Assembly B. A. & S. A.	104	.72
D-6588	New Hanger Assembly B. A. & S. A.	104	11.70

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
A-6597	Chime Armature Assembly	32, 34	.96
A-6598	Chime Box Assembly	32	10.60
B-6607	Ball Gate Bracket Assembly	29	6.62
B-6613	Ball Shooter Assembly (New Type)	21	5.62
D-6619	Front Door Assembly Complete (less Rejector) Alpine Club..		28.70
A-6630-L	Left Gutter Rollover Wire & Bracket B. A.	103	.92
A-6630-R	Right Gutter Rollover Wire & Bracket B. A.	103	.92
A-6632-2	9 Per B. A. 1 3/8" Rollover Wire & Bracket B. A.	103	.50
A-6632-3	8 Per B. A. 1 1/2" Rollover Wire & Bracket B. A.	103	.50
A-6632-6	7 Per B. A. 1" Rollover Wire & Bracket B. A.	103	.40
A-6632-7	5 Per B. A. 3/4" Rollover Wire & Bracket B. A.	103	.40
A-6632-8	1 Per B. A. 2 1/4" Rollover Wire & Bracket B. A.	103	.50
A-6633-L	1 Per B. A. Rollover Wire & Bracket B. A.	103	.72
A-6633-R	1 Per B. A. Rollover Wire & Bracket B. A.	103	.72
B-6638	Complete Ball Track Box Assembly B. A.	108	56.88
A-6638-1	Ball Track Brake Assembly	103	57.00
B-6639	Complete Lower-V-Rubber Ball Stop B. A.	108	44.00
B-6640	Complete Upper-V-Rubber Ball Stop B.A.	108	54.94
B-6641	Front Rubber Molding & Retainer 16' B. A.	108	6.92
B-6642	Ribbed Rubber & Plastic Deflector B. A.	108	3.74
B-6643	Puck Rebound Rubber Assembly Complete B. A.	107	35.42
A-6644	Ball Lift Motor Fan Assembly B. A.	106	1.96
A-6645	Ball Lift Link For Chain B. A.	106	1.00
B-6646	Ball Lift Chain with 4 ball carriages complete B. A.	106	31.60
A-6738-1	Ball Track Brake	103	1.86
A-6797	Push Button & Switch S. A.	112	2.42
A-6797	S. A. Push Button Assembly (Alum.)	112	2.40
A-6797-1	Push Button & Switch B. A.		3.38
A-6805-1	Pin Reset Motor Mounting Bracket	112	1.64
C-6808-SP	Target Position Unit	120	36.52
B-6809	Target Chassis Assembly	120	3.78
A-6810	Switch Bracket Assembly	120	1.10
A-6811	Drive Arm Assembly	71, 120	1.28
A-6812	Drive Pawl Assembly	71, 120	.64
A-6813	Stop Bracket Assembly	70, 71, 120	.58
A-6816-1	Drive Plate	71	2.58
A-6817	Switch Actuator Assembly	120	.92
A-6818-9	Terminal Strip - 9 Pt.	86	.70
B-6818-10	Terminal Strip 10 Pt.	85	.70
B-6818-18	Terminal Strip 18 Pt.	85, 86	.90
A-6819-7	Terminal Strip Assembly - Spinner Unit A-Go-Go		1.18
A-6821	Bracket & Stud Assembly New Pin Hanger S. A. & B. A.	105	.70
B-6822-1	Jet Bumper Complete Assembly	17	11.08
A-6823	Jet Bumper Coil Mounting Bracket Assembly (New Type)		
		17, 24, 28	1.56
B-6823-1	Coil Mounting Bracket Assembly	93	1.98
A-6827	Armature Assembly Flash Motor B. A. & S. A.	111	.90
B-6833	Shaft & Ratchet Assembly Flash Motor B. A. & S. A.	111	2.28
A-6841	Drive Arm Pitch Unit Base Hit - Scoreboard Pit & Bat ...	63, 64	1.48
A-6842	Pivot Assembly Pitch Unit 1966-67		.90
A-6843	Cam Assembly Pitch Unit 1966-67	63	2.36

PRICE LIST

Arranged in Numerical Order

Page	Price	Description	Part No.
A-6845-69		Pitch Unit Plate	63, 64 3.34
D-6846		Front Door with Hinge, Pin Games	13.42
D-6846-1		Front Door For Hinged Casting Base Hit New Type	45, 46 10.98
A-6847		Scavenger Operating Lever	46 1.14
A-6848		Single Make Switch Targets	41 1.86
A-6848-S		Single Make Switch Targets	41 1.86
A-6849		Double Make Switch	41 2.00
A-6850		Flip-Over Lever	48 .54
A-6851		Coin Trip Body	47 1.58
B-6852		Coin Trip & Sw. Assembly (Flip-Over Type)	47 7.84
B-6853		Coin Trip & Sw. Assembly (Normal Type)	47 6.62
B-6853-L		Coin Trip Switch Assembly	47 7.40
C-6855		Cash Box Only	48 5.12
C-6856		Cash Box Cover	48 2.02
D-6858-1		Front Door (Complete with Hardware - Less Rej.) Pin Games	40.00
D-6858-2		Front Door (Complete with Hardware - Less Rej.) Pin Games	40.00
D-6858-3		Front Door (Complete with Hardware - Less Rej.) Pin Games	40.00
A-6867		Coin Stop	84, 104 1.32
A-6871		Ball Baffle Guide For Horse Shoe Plastic	1.16
E-6872-SA&BA		Coin Box Housing & Door Complete Less Rej. S. A.	86.04
D-6872-SA&BA		Coin Box Housing & Door Charcoal Gray S. A.	30.78
C-6786		Cash Box S. A. & B. A.	112 5.54
D-6877-1		Front Door For Hinged Casting B. A. & S. A.	45, 46 12.56
C-6878		Contact Disc	3.22
C-6889		Contact Disc	3.22
A-6889		Kicker Lever Assembly	25 1.16
B-6890		New Automatic Ball Assembly	21 7.44
A-6891		Coin Lockout Coil & Mounting (Specify Coils) Shuffle & Bowler Games	46 6.18
A-6892		Relay Frame	26, 52, 94, 96 1.24
B-6893		Wiper Carrier	31 5.00
C-6894		Gear & Shaft (Specify Name of Game & Unit)	3.90
C-6895		Contact Disc (Specify Name of Game & Unit)	7.08
C-6896		Contact Disc (Specify Name of Game & Unit)	4.22
A-6897		Flipper Shaft & Base Assembly	24 1.14
B-6898		Rejector Channel Assembly	46 1.64
A-6901		Mtg. Strap For Scan Disc	2.60
C-6903		Alternator Unit	79 16.98
A-6904		Target Reset Arm	84 1.14
A-6905		Target Arm	84 1.14
A-6906		Coil Plunger	34, 84 .60
A-6907		Target Arm Support	1.32
A-6908		Alignment Plate	80, 81, 82, 83 2.22
A-6909		Wiper & Bracket	80, 81 1.70
A-6911-1		Target Cam	84 1.28
A-6911-2		Target Cam	84 1.30
A-6911-3		Target Cam	84 1.28
A-6920		Door Assembly Complete Less Rej. B. A. & S. A.	55.28

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
D-6922-BA	Bowling Alley Housing & Door Only Charcoal Grey		31.14
E-6922BA	Coin Box Housing & Door Complete Less Rej.		86.40
C-6932	Contact Disc (Specify Name of Game & Unit)		6.12
C-6936	Contact Disc (Specify Name of Game & Unit)		6.12
C-6937	Contact Disc (Specify Name of Game & Unit)		6.12
A-6939-1	Flipper Armature & Link Assembly	23	.92
C-6940	Arm & Coil	84	14.94
D-6942-384	Cam & Drive Shaft	84	16.06
C-6943-384	Complete Lower Target	84	166.14
C-6945	Complete Bear Target Unit		132.12
A-6948-L	Ball Eject Cam Assembly Left	25	.96
A-6948-R	Ball Eject Cam Assembly Right	25	.96
A-6949-L	Ball Eject Spring Plate Left	25	.76
A-6949-R	Ball Eject Spring Plate Right	25	.76
A-6950-R	Eject Mounting Bracket	25	.48
B-6954-1	Horse #1 & Wire Assembly	97, 97	2.76
B-6954-2	Horse #2 & Wire Assembly	95, 97	2.76
B-6954-3	Horse #3 & Wire Assembly	95, 97	2.76
B-6954-4	Horse #4 & Wire Assembly	95, 97	2.76
B-6954-5	Horse #5 & Wire Assembly	95, 97	2.76
B-6954-6	Horse #6 & Wire Assembly	95, 97	2.76
A-6956	Football Yardage Tape Assembly	31	4.98
C-6957	Wiper Carrier, Tape & Roller Assembly	31	10.30
A-6958	Switch Mounting Plate	58, 59, 89	1.20
A-6958-1	Switch Mtg. Plate	123	1.20
A-6959	Support Mounting Plate	93	1.20
A-6960	Mounting Plate Assembly	93	.94
A-6961-1	Shooter Release Crank Assembly	93	2.20
A-6962	Release Unit Mounting Plate	93	3.42
A-6964	Mounting Plate Assembly	93	.82
A-6965-1	Linkage Crank Assembly	93	2.86
A-6967	Horse Release Arm. Assy.	96	.70
A-6970-1	Target Assembly	98	1.54
A-6970-2	Target Assembly	98	1.54
A-6970-3	Target Assembly	98	1.54
A-6971	Target Assembly		1.66
C-6972	Front Moulding Complete with Hardware Derby Day	89	60.00
B-6973-1	Target Unit Complete	98	45.40
D-6973-2	Target Panel Assembly 4 Aces	57	50.00
C-6974	Contact Disc. (Specify Name of Game & Unit)		5.90
B-6975	Horse Release Relay Assembly (6 Relays)	95, 96	48.52
C-6977	Ball Guide	28	1.84
C-6978-1	OSC. Ball Shooter Unit	93	60.82
E-6979	Horse Unit Complete	95	409.48
C-6981	Contact Disc. (Specify Name of Game & Unit)		6.78
A-6984	Armature Assembly	26, 94	.58
A-6985-1	Linkage Crank Assembly	94	.86
A-6986-1	Plunger & Link Assembly	94	.84
B-6987	Flipper Base & Shaft Assembly	24, 94	1.08
D-6988-1	Closing Flipper Action Unit	92	51.00
B-6989-L	Eject Cam Coil & Mounting Assembly Left		12.64

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
B-6989-R	Eject Cam Coil & Mounting Assembly Right		12.64
B-6998	#1 Driven Sprocket Assembly	95, 96	7.68
B-6999-1	#2 Sprocket Assembly	95, 96	13.75
B-7001	Reset Bar Complete with Plunger	13	5.54
B-7004	10 Step Unit Bracket 4 Units		3.12
C-7008-384	Complete Target Unit	82	131.64
C-7008-384-1	Complete Target Unit	83	131.64
C-7009-1	Scan Disc		6.88
A-7015	Coin Trip Wire Form & Parts	47	1.00
A-7016	Coin Trip Wire Form & Parts	47	1.00
A-7017	Coin Trip Wire Form & Parts	47	1.30
A-7018-1	Switch & Bracket Assembly		2.38
A-7018-2	E.O.S. Switch & Bracket Assembly		3.12
A-7019-1	Switch & Bracket Assembly		2.46
A-7019-2	E.O.S. Switch & Bracket Assembly		3.34
A-7020-1	Switch & Bracket Assembly		1.30
A-7029	Armature Plate & Ext.	46	1.14
B-7030	Bumper Assembly Less Cap	22	4.02
A-7034	Coil Mtg. Brkt.	33	1.04
B-7039	Timer Unit	121	50.44
A-7047	Time Adj. Control	121	8.54
A-7050	5" Bell Assy.	33	9.36
A-7053	5/16" Rollover Mtg. Plate	42, 75	.60
B-7055	Power Supply Unit	121	54.44
B-7060-L	3" Flippers N. S. Complete	23	3.90
B-7060-R	3" Flippers N. S. Complete	23	3.90
A-7071	Frame Assy.	15	2.00
A-7071-1	Frame Assembly		2.30
A-7072	Target Crank	15	1.82
A-7073	Drop Target Arm	15	2.44
B-7074	Propeller 2 Blade	114, 116	2.40
B-7075	Propeller 3 Blade	114, 116	2.40
B-7076	Capstan & Cone	114, 115	16.04
A-7081	Drive Plate	117, 120	2.70
A-7085	Swinging Target	16	1.20
A-7086	Flipper Shaft & Base	24	1.24
A-7087	Flipper Shaft & Base	23, 24	1.28
A-7088	Mounting Plate	56	1.48
B-7089	Disappearing plastic post	53	18.90
B-7089A	Disappearing rubber post		19.08
C-7090	Drop Target N. S.	15	15.88
C-7094	Tower & Space Craft	114	136.64
B-7095	Target Post & Wires 1st & 3rd Pos.	117	15.86
B-7096	Target Post & Wires 2nd & 4th Pos.	117	15.86
A-7097	Feeler Wire	114, 116	1.68
B-7098	Space Craft Cover	114	15.32
B-7099	Control Twoer	114, 115	16.94
A-7100	Tower Cap	114, 115	3.64
C-7101	Space Craft with Propellers & Motors	116	45.08
B-7102	Capstan Complete	115	33.02
A-7103	Commutator Switch	121	5.36

PRICE LIST

Arranged In Numerical Order

Part No.	Description	Page	Price
B-7104	Printed Circuit Board	56	7.94
A-7106	Arrow Mtg. Hub	56	1.22
A-7107	Flipper Actuator	26, 27	.32
B-7109	Kicker Arm	26, 27	1.32
B-7110	Latch Link & Stud	26, 27	.60
B-7112	Base Plate	26	1.72
B-7114	Flipper Shaft & Base	24, 26, 27	1.24
A-7116	Arm & Hub	119	2.46
A-7117	Resistor Mtg. Plate	119	1.10
B-7118	Control Handle - Up & Down	119	7.20
B-7119	Arm & Hub	119	1.46
B-7120	Control Handle Forward and Reverse	119	9.62
B-7121	Control Casting Only	118	19.52
D-7122	Control Unit Complete	118	83.61
A-7127	Base Runner	65	2.06
A-7132-L	Armature & Actuator	67	.78
A-7132-R	Armature & Actuator	67	.78
A-7136	Target Assemblies #1 to 5 inclusive	68	15.14
A-7140	Lever & Stud	85	1.06
A-7141	Lever & Stud	85	1.30
A-7142	Drive Link	85	1.82
A-7143	Cam	85	2.68
A-7145	Link	85	1.74
A-7146	Cam	85	2.28
B-7147	Shaft & Gear	85	7.54
B-7148	Shaft & Gear	85	6.48
B-7149	Wiper Support		2.40
A-7150	Switch Actuator & Bracket	85, 86	1.50
A-7151	Skull Target & Bracket	85	6.14
B-7152-1	Bulls Eye Ring	85	2.36
B-7152-2	Bulls Eye Ring	85	2.42
B-7152-3	Bulls Eye Ring	85	2.34
B-7153	Bulls Eye Ring	85	1.88
B-7154	Witch Target	80	13.64
B-7165	Sound Device Control Board		73.92
C-7167	Front Mldg. Complete Fastball	58	124.60
E-7168	Complete Target Unit Fastball	68	108.84
A-7169-L	Ball Catcher Coil & Mtg. Brkt.	67	6.34
A-7169-R	Ball Catcher Coil & Mtg. Brkt.	67	6.34
C-7170	Witch Target Unit	80	191.18
B-7172	Wiper Hub	85, 86	7.12
A-7173	Wiper Assembly		2.18
B-7174	Push Button Assembly	58	5.76
B-7174-1	Manikin Push Button Assy.	123	5.76
A-7175	Plate Hub & Wiper	56	3.64
A-7176	Plate & Stud	56, 112	1.16
D-7179	Random Spinner Unit	56	57.52
A-7183	Coil Stop	122	.40
C-7187	Extended Play Kickout Unit	26	29.30
A-7188	Latch Link & Plunger	27	1.28
A-7189	Kickout Link & Plunger	27	.88

PRICE LIST

Arranged in Numerical Order

Part No.	Description	Page	Price
C-7194	Roto Step Up Unit	102	22.52
A-7195	Printed Circuit 4" Drum	5, 7, 30	1.22
C-7196	4" Drum Unit with P.C. & Wiper	5	16.04
C-7196-1	4" Drum Unit without P.C. & Wiper	6	14.82
A-7200	Cam Assembly	86	1.90
A-7201	Lever Assembly	86	1.28
B-7202	Spinner Target Assembly	89	4.20
C-7203	Scenery Assembly - Lower - "Phantom Gun"	89	10.00
C-7204	Complete Phantom Target Unit	81	165.50
B-7205	Shaft & Gear Assy. "Spooks" Motor	86	7.00
A-7208	Phantom Target & Bracket	86	5.00
B-7210-1	Small Flipper Assembly Flippers	24	1.60
B-7210-2	Large Flipper Assembly Flippers	24	1.84
B-7210-3	Small Flipper Assembly Closing Flippers	24	1.60
B-7210-4	Large Flipper Assembly Hayburners	24	1.86
B-7210-5	Large Flipper Assembly Extended Play Unit	24	1.80
A-7221	Target & Switch	42	2.06
A-7222	Target & Switch	42	2.22
A-7223	Gear & Shaft	70, 71	2.92
A-7224	Gear & Shaft	70, 71	1.60
A-7225	Pointer	70, 71	2.04
A-7226	Hub & Wiper	70, 71	2.94
A-7228	Mounting Plate	70	7.74
C-7229	Alternator Unit with 54 Relay Flippers	12	27.78
C-7230	Timer Unit Complete	70	47.36
B-7231	Printed Circuit (1B-2001-61)	70	9.78
B-7233	Screened Display With Strips	69	20.10
A-7236	3/4" Rollover Mtg. Plate	42	.84
B-7238	Alternator Unit Gridiron	72	17.26
B-7239	Phantom Target	81	12.72
A-7240	Rubber Post Assembly	54	1.46
A-7241	Base Assembly	54	3.18
B-7242	Spinner Bumper	54	6.94
B-7243-2 to 7	Target	69	5.70
B-7243-1	Target Assembly	69	4.60
C-7244	Front Moulding Complete Gridiron	59	86.08
A-7245	Switch & Bracket	54	1.70
A-7246	Small White Target	57	2.20
C-7246-1	Small White Center Target	57	2.30
A-7247	Large & Small Target	57	2.22
A-7248	Rotating Bumper Assembly	54	18.32
D-7251	3" Drum Unit w/P.C. & Wiper	9, 10	20.44
D-7251-1	3" Drum Unit without P.C. & Wiper	99, 100	18.22
B-7252	Base Plate	9, 10, 99, 100	3.12
B-7253	Printed Circuit	9, 11	1.42
A-7254	Drive Pawl & Arm	9, 10, 11, 99, 100, 101	1.26
A-7255	Coil Stop	9, 10, 99, 100	1.42
B-7257	Drop Target Switch & Brkt.		4.22
D-7258	Mannikin Complete	124	105.00
A-7259	Drive Arm	123	3.24
A-7260	Cam Ball Lift	127	1.92

PRICE LIST


Arranged In Numerical Order

Part No.	Description	Page	Price
A-7261	Coil Stop (Mannikin)	126	.68
A-7262	Plunger & Link (Mannikin)	126	1.50
A-7263	Bell Crank & Hub	123, 124	3.00
A-7264	Arm Activating Shaft	124, 125	8.42
B-7265	Arm & Gear (Mannikin)	124, 125	10.48
B-7266	Mounting Plate	126	4.94
A-7268	Arm & Bracket (Ball Lift)	127	1.46
A-7269	Mounting Plate (Ball Lift)	127	7.80
B-7271	Handle	73	2.54
A-7272	Cam	64	2.56
C-7273	Mounting Plate	74	4.44
B-7274	Cam & Wiper	74	4.80
B-7275	Cam & Clutch	74	2.96
B-7276	Stop Pawl	74	3.16
C-7277	Base Run Motor Unit Complete	74	97.12
C-7278	Front Moulding Complete Hit & Run	59	65.76
A-7281	Bearing Tube (Mannikin)	124	10.68
A-7282	Relay Bank Armature		.90
C-7284	Doodle Bug Complete	55	35.36
A-7285	Magnet Bracket	55	2.18
B-7286	Handle	123	7.66
B-7287	Escutcheon & Bearing	123	15.16
B-7289	Ball Trough Tray	76	4.04
B-7291	Reverse Ball Trough	76	2.26
B-7292	Ball Run Off R.S.	76	2.50
B-7293	Base Run Contact Disc	74	7.70
C-7295	Front Moulding Assembly Complete	123	95.00
D-7296	Ball Lift Assembly Complete	127	30.44
A-7299	Wire Hook & Magnet	87	3.36
A-7300	Wiper & Guide	82, 83	3.30
A-7301	Reinforcing Bar & Hub		.76
A-7302	Hub & Bearing	122	32.58
A-7303	Reset Coil Stop R.B.	13	1.36
A-7305	Slow Horse Big	82	2.82
A-7305-1	Fast Horse Small	83	2.58
A-7307	Mine Shaft Scenery & Brkt.	82	6.32
A-7308	Yoke Assembly	122	3.26
A-7309	Flywheel & Bearing	122	21.38
D-7310	Relay Bank New Style	13	75.82
A-7311	Support	122	1.20
A-7313	Handwheel & Shaft	122	90.42
C-7314	Reverberator Unit	87	37.28
A-7315	Brake Arm & Bushing	122	2.20
A-7316	Bracket & Pin	122	1.56
D-7322	Spin Mechanism Complete	122	210.86
C-7323	Mannikin Actuator	126	47.32
C-7326	Wiper Finger Assembly - Score Motor	112	6.96
A-7327	Drive Link - Pin Reset	112	1.04
B-7328	Cam Assembly - Pin Reset	112	2.94
A-7406	Coin Return Cup Assembly	46	1.10

NOTES

**COIN
MECHANISMS INC.**

Service Manual

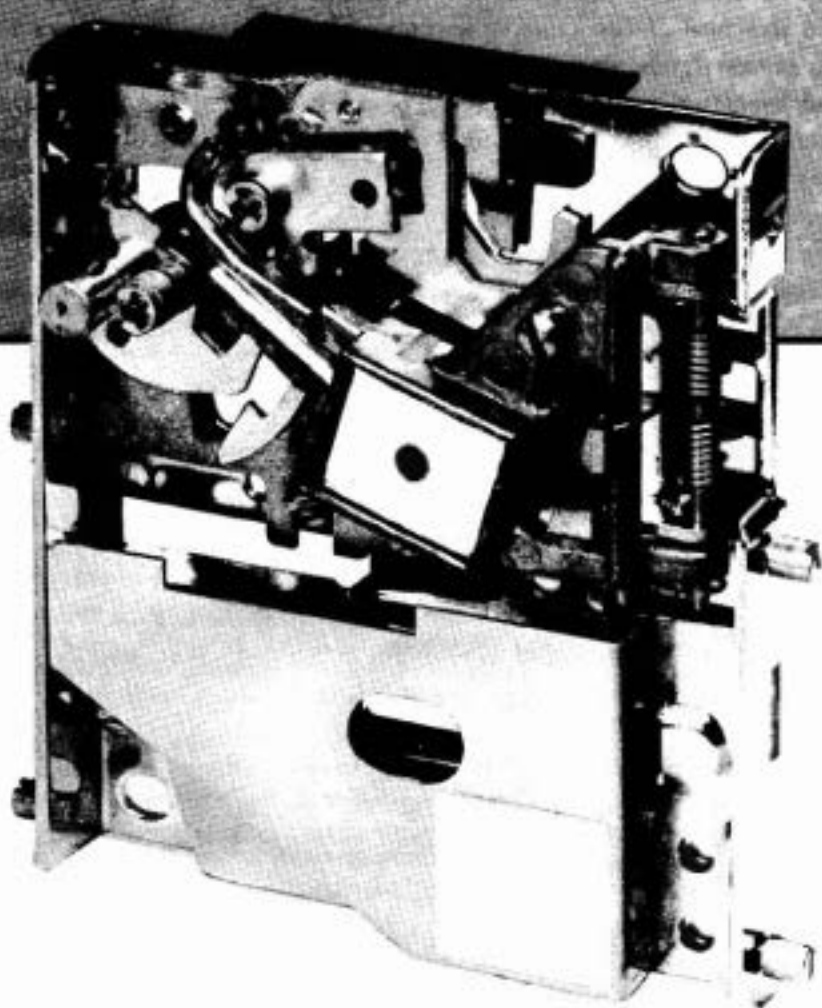

500 SERIES ACCEPTORS

DOMESTIC & FOREIGN COIN MECHS.

8490 W. GRAND AVE.
RIVER GROVE, ILL. 60171
AREA CODE 312-453-8221


OPERATION

The "Series 500" Acceptors are designed to require a minimum of maintenance and field adjustment. Detection and rejection of undesired or counterfeit coins are determined by size (both thickness and diameter), weight, metallic composition, and bounceability.

Transfer cradles are used to test the size of the coin. Undersize diameter coins will pass between the legs of the transfer cradle and will be returned. Oversize diameter coins will fail to pass between the transfer cradle and the wiper and will be returned by actuating the wiper operating lever. In the case of the quarter acceptor, an undersize lever must first be pivoted to unlock the transfer cradle. Undersize diameter "quarters" will fail to unlock the transfer cradle and will be returned by actuating the wiper operating lever. Coins that are oversize in thickness will fail to pass between the magnet gate and the main channel and will have to be dislodged and returned by actuating the wiper operating lever.

Transfer cradles are also used to test the weight of the coin. Underweight coins will fail to overcome the transfer cradle counterweight and will be returned by actuating the wiper operating lever.

A magnet is used to test the metallic composition of the coin. Highly magnetic coins, such as steel or iron, will be retained by the magnet and will be returned by actuating the wiper operating lever. Coins having comparatively high magnetic properties, such as copper, will be slowed down by the magnet and will drop off the end of the rail short of the "accept" entrance and be returned. Coins having little or no magnetic properties, such as brass or zinc, will pass through the magnetic field so fast that they will "overshoot" the "accept" entrance and be returned.

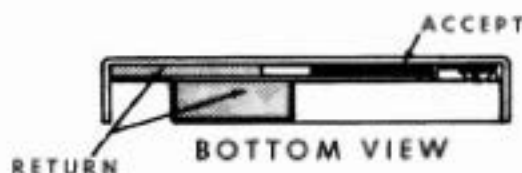

In the case of the Nickel Acceptor, a bounce tester is used to test the bounceability of the coin. Due to its magnetic properties, a genuine nickel passes quickly through the magnetic field and drops off the end of the rail in an arc that causes it to hit the bounce tester which, because of the coin's elasticity, "bounces" it into the "accept" entrance. A counterfeit coin passing through the magnetic field at the same speed as a genuine nickel will not have the same elasticity and so will not have the same "bounce" as a genuine nickel and will miss the "accept" entrance and be returned.


ADJUSTMENTS

All "Series 500" Acceptors leave the factory adjusted for maximum performance. If, however, more critical adjustments are desired, or if the unit has been completely disassembled for service, the following adjustment procedure is suggested:

A. Kicker and Separator—(On Dime and Quarter Acceptors only)

1. Set the Acceptor with the back of the unit facing you in the test position.
2. Loosen the screws holding the kicker and separator and move both as far to the right as they will go. Tighten the screws.
3. Insert several coins (both old and new) and note that some are returned by striking the separator.
4. Loosen the separator screw and move the separator a slight amount to the left. Tighten the screw.

BACKVIEW

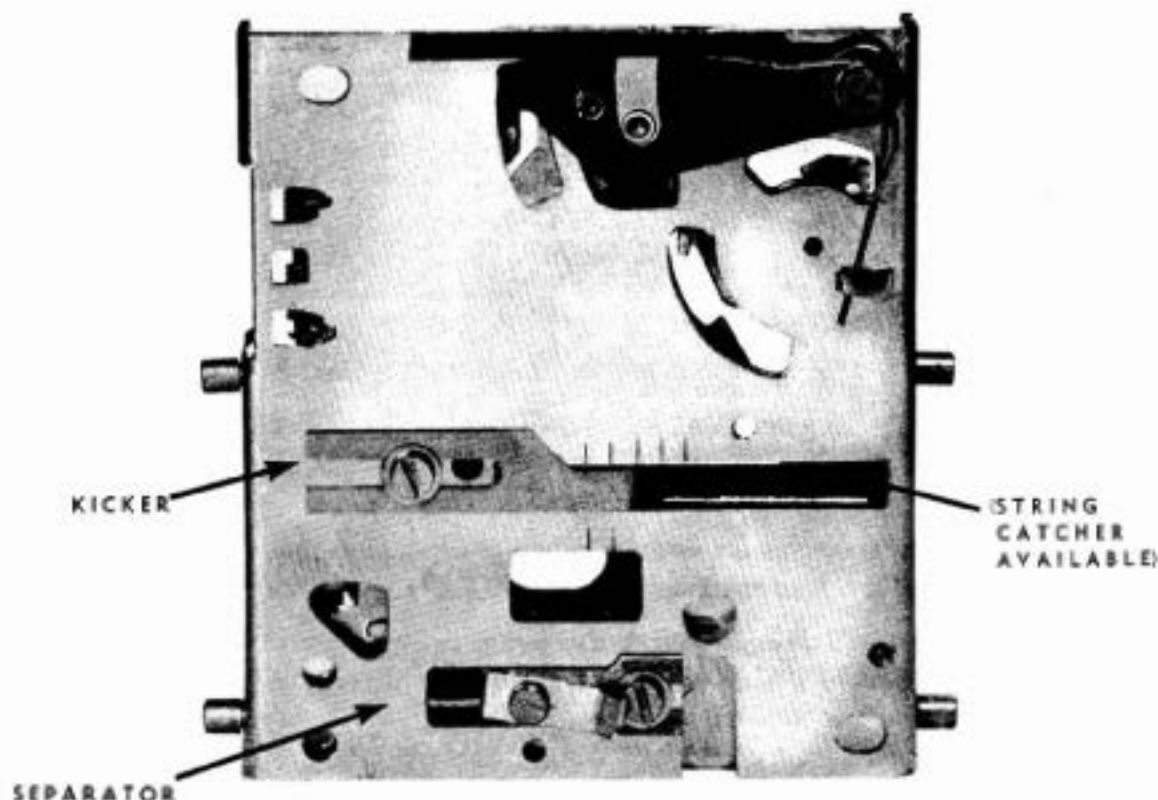

5. Insert the coins again and, if some of them are still returned, repeat Step 4 until all of the coins are accepted.

ADJUSTMENTS — *(Continued)*

6. Loosen the kicker screw and move the kicker as far to the left as it will go. Tighten the screw.
7. Insert several coins and note that some of them are returned.
8. Loosen the kicker screw and move the kicker a slight amount to the right. Tighten the screw.
9. Insert the coins again and, if some of them are still returned, repeat Step 8 until all of the coins are accepted.
10. Be sure the screws are tight after all adjustments are made.

B. String Catcher—(Replaces the kicker in some models)

1. The "V" in the string catcher should be assembled even with the bottom of the kicker opening.
2. On Nickel and Quarter Acceptors, the string catcher is moved as far to the right as it will go.
3. On Dime Acceptors, the string catcher is moved as far to the left as it will go.

MAINTENANCE —

Depending upon the environment in which the Acceptor is used, periodic preventative maintenance should be performed.

The mainplate may be cleaned with any household cleanser. Thorough rinsing and drying are necessary to remove deposits and/or film.


Remove all filings from the magnet by guiding an ice pick, awl, or the point of a screw driver along the edges of the magnet. You will notice the filings will cling to the point of the tool.

Remove the transfer cradles and undersize levers and clean the bushings. A pipe cleaner makes a good bushing cleaner. Also clean the pivot pin. Apply powdered graphite or pencil lead sparingly to the pivot pin and bushing and reassemble.

On Nickel units make certain all foreign matter is removed from the bounce tester. Also make certain the bounce tester fastening screws are tight.

In the event the recommended adjustment and maintenance procedures do not render your "Series 500" Acceptor serviceable, check for worn or damaged parts and replace as necessary.


For service assistance or sales requirements, contact our branch office in your area.

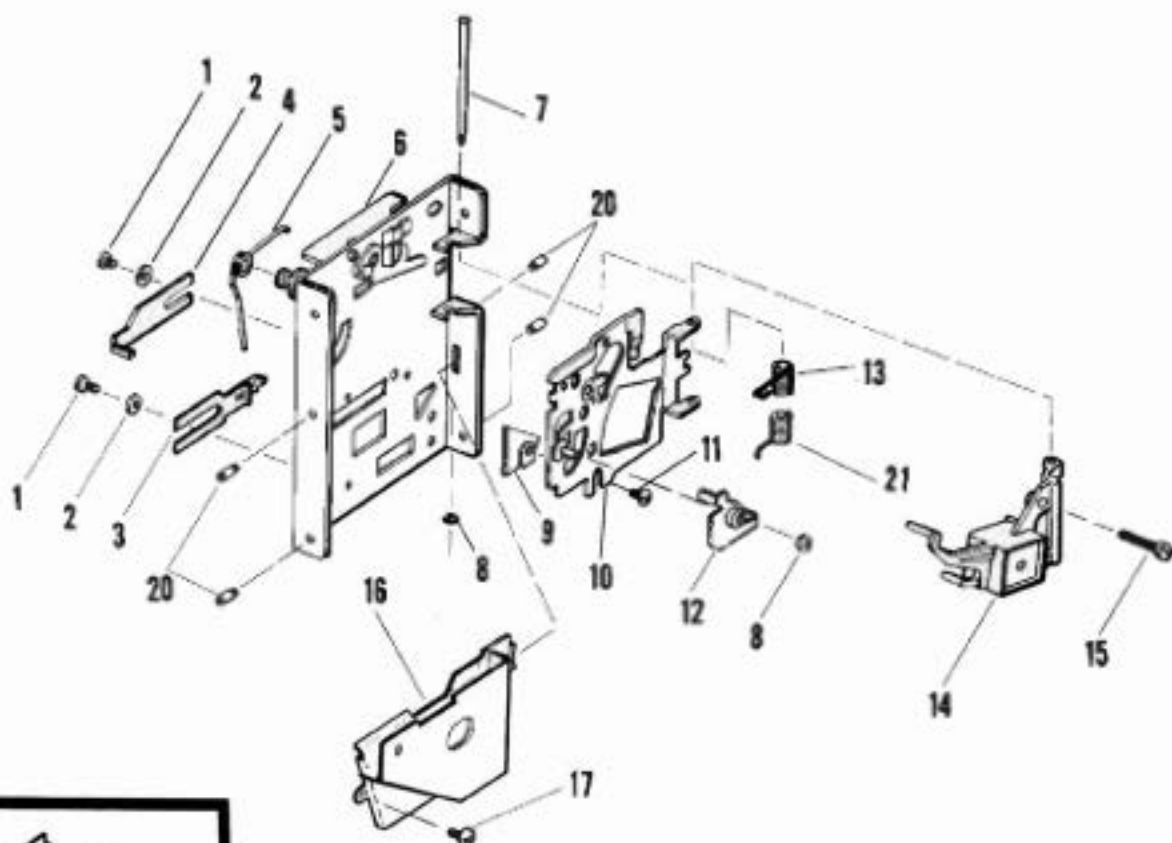

NOTE: When ordering parts be sure to specify the part number, description, quantity, and model number of unit.

INDEX NO.	PART NO.	DESCRIPTION	QUANTITY	INDEX NO.	PART NO.	DESCRIPTION	QUANTITY
1	900926	Kicker Screw	2	11	110-6-2	#6-32x1 1/2 Truss Hd. Screw	1
2	950030	#6-32x1/32 Washer	2	12	405619	10c Cradle Assembly	1
3	405007-1	Separator Assembly	1	13	901153	Upper Gate Pivot Spring	1
4	951051	Kicker	1	14	405588	10c Magnet Gate Assembly	1
5	950069	Gate Lever Spring	1	15	951061	Thickness Screw	1
6	405551-3	Mainplate Assembly	1	16	405552	Coverplate Assembly	1
7	951055	Gate Pivot Pin	1	17	150-6-2	#6-32x1 1/2 Rnd. Hd. Sens Screw	1
8	900448	"C" Washer	1	18	950005	Return Coverplate	1
9	951072	10c Rail	1	19	951066	Coverplate	1
10	405559	10c Gate Assembly	1	20	900818	Mounting Studs	4
				21	901154	Lower Gate Pivot Spring	1


N-610

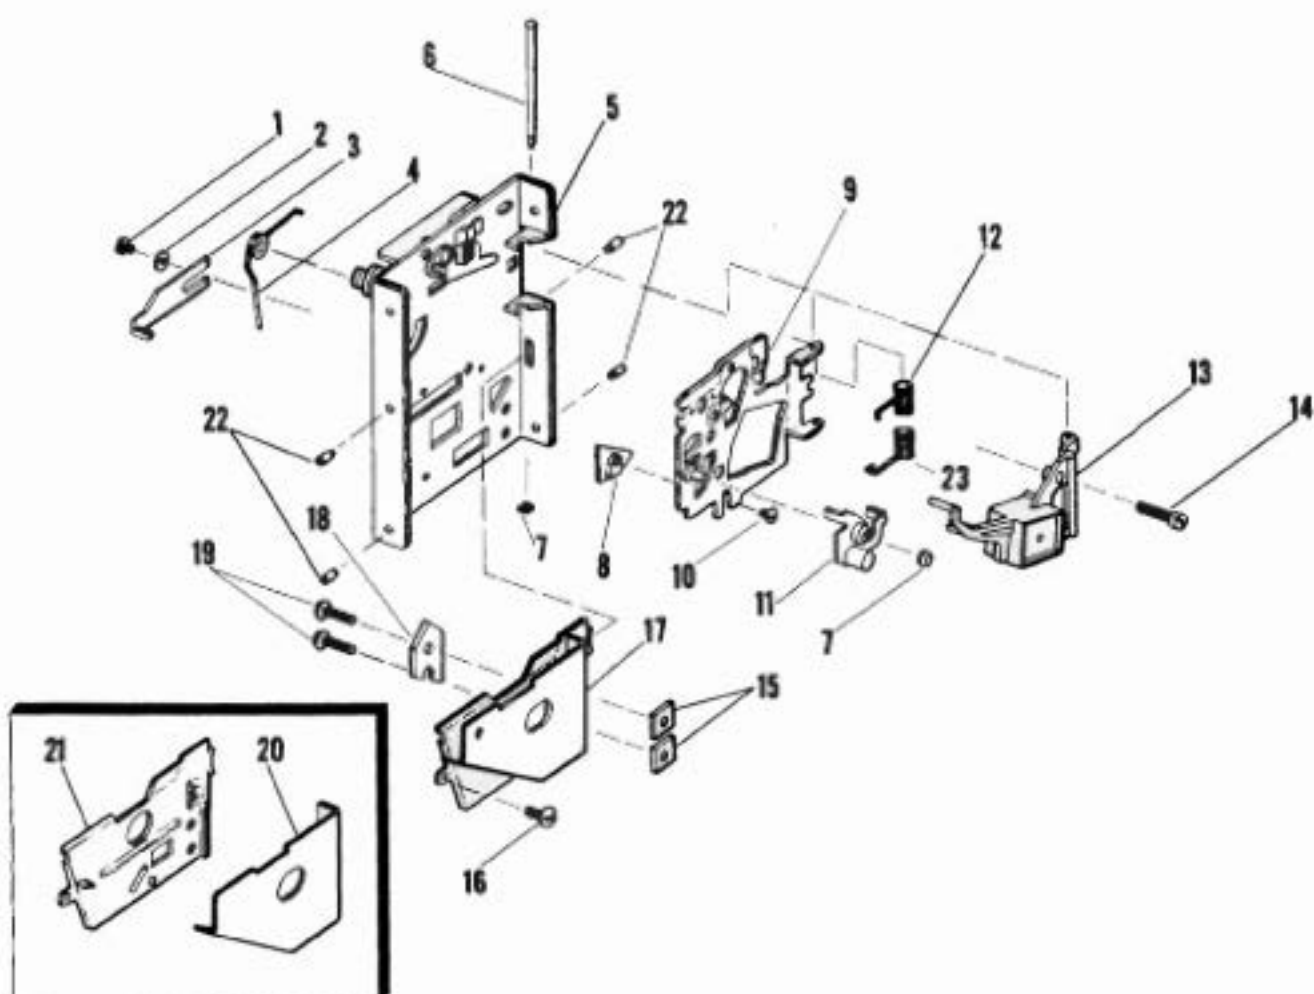

NOTE: When ordering parts be sure to specify the part number, description, quantity, and model number of unit.

INDEX NO.	PART NO.	DESCRIPTION	QUANTITY	INDEX NO.	PART NO.	DESCRIPTION	QUANTITY
1	900926	Kicker Screw	1	13	405586	Sc Magnet Gate Assembly	1
2	950030	#6 5/16x1/32 Washer	1	14	951061	Thickness Screw	1
3	951051	Kicker	1	15	402-8	Keps Nuts—8-32	2
4	950069	Gate Lever Spring	1	16	150-6-2	#6-32x1/4 Rnd. Head Screw	1
5	405551-2	Mainplate Assembly	1		—Sems		1
6	951055	Gate Pivot Pin	1	17	405552-1	Coverplate Assembly	1
7	900448	"C" Washer	2	18	950440	Bounce Tester	1
8	951071	Sc Roll	1	19	110-8-6	8-32x1/4 Rnd Hd. Screw	2
9	405558	Sc Gate Assembly	1	20	950005	Return Coverplate	1
10	110-6-2	#6-32x1/4 Truss Head Screw	1	21	951066-1	Coverplate	1
11	405620	Sc Cradle Assembly	1	22	900818	Mounting Studs	4
12	901153	Upper Gate Pivot Spring	1	23	901154	Lower Gate Pivot Spring	1

Q-530

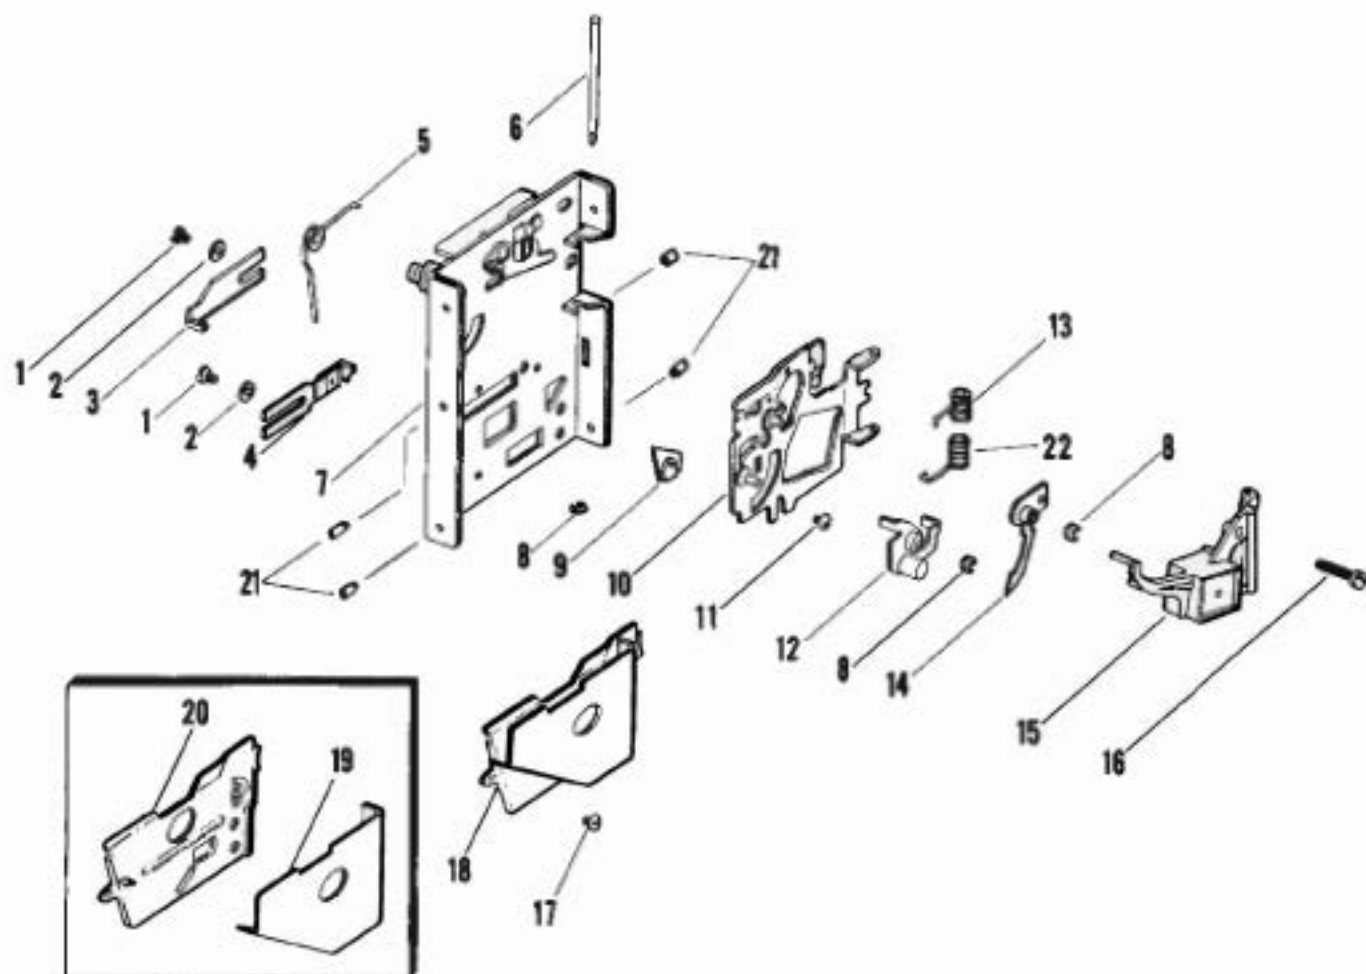


NOTE: When ordering parts be sure to specify the part number, description, quantity, and model number of unit.

INDEX NO.	PART NO.	DESCRIPTION	QUANTITY	INDEX NO.	PART NO.	DESCRIPTION	QUANTITY
1	900926	Kicker Screw	2	12	405556	25c Cradle Assembly	1
2	950030	#6 5/16x1/32 Brass Washer	2	13	901153	Upper Gate Pivot Spring	1
3	951051	Kicker	1	14	405560	Undersize Lever Assembly	1
4	405007-1	Separator Assembly	1	15	405587	25c Magnet Gate Assembly	1
5	950069	Gate Lever Spring	1	16	951061	Thickness Screw	1
6	951055	Gate Pivot Pin	1	17	150-6-2	#6-32x1/4 Rnd. Hd. Sems Screw	1
7	405551-2	Mainplate Assembly	1	18	405552-2	Coverplate Assembly	1
8	900448	"C" Washer	3	19	950005	Return Coverplate	1
9	951073	Rail	1	20	951066-2	Coverplate	1
10	405557	25c Gate Assembly	1	21	900818	Mounting Studs	4
11	110-6-2	#6-32x1/4 Truss Hd. Screw	1	22	901154	Lower Gate Pivot Spring	1



SINGLE COIN MOUNTING
CHANNEL ASSEMBLY

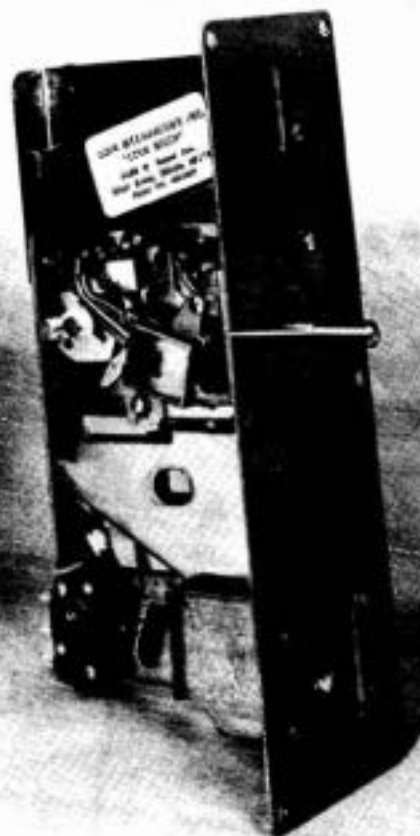

FRONT PLATE
MOUNTING CHANNEL ASSEMBLY

***COIN
MECHANISMS INC.***

8490 W. GRAND AVE.
RIVER GROVE, ILL. 60171
AREA CODE 312-453-8221


DOMESTIC & FOREIGN
COIN MECHS.

**01-35 SERIES
SELECTORS**



NATIONAL REJECTORS IND.

P. O. BOX 1550
HOT SPRINGS, ARKANSAS 71901

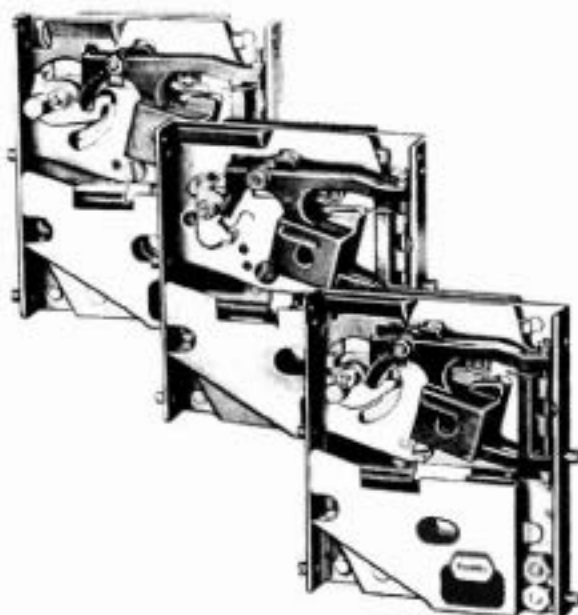

**OPERATION
and SERVICE MANUAL**



FOREWORD

The 01-35 Series Selectors have been designed to give you the performance and reliability you have come to expect of the products of National Rejectors, Inc.

These selectors will give you long and satisfactory service if you will give them the attention described in this manual. Keep the manual in a convenient location and refer to it often when you are servicing these selectors. This will help to assure you of long service and profitable operation from your selector(s).

TABLE OF CONTENTS

Operation and Adjustment.....	2
5¢ Selector.....	2
10¢ Selector.....	3
25¢ Selector.....	3
Cleaning & Maintenance.....	3
Exploded Views and Parts Lists.....	4,5,6
Accessories.....	Inside Back Cover
N.R.I. Sales and Service Offices.....	Back Cover

NOTE

Information in this manual is correct as of the date of publication. NRI reserves the right to make design and material changes at any time without notice, and without obligation to make similar changes on equipment of prior manufacture. NRI also reserves the right to discontinue models at its discretion.

WARRANTY

WARRANTY: National Rejectors, Inc. warrants all equipment sold by it to be free from defective material and factory workmanship. NRI will repair or replace (at its option) any part of the equipment which proves to be defective in material or factory workmanship within eighteen months of the date of manufacture, subject to the conditions below.

CONDITIONS:

1. This Warranty will not apply to any equipment which has been, in NRI's opinion, subject to accident, abuse, misuse, neglect, or improper installation, maintenance, or repair.
2. For this Warranty to apply, send the defective part(s) to National Rejectors, Inc. Transportation charges will be borne by the purchaser.
3. If an assembly is returned under this Warranty for repair or replacement of one or more of its parts, a charge will be made for the labor involved in removing and replacing said part(s).
4. NRI will not be responsible for any expenses incurred by the purchaser incidental to the repair or replacement of equipment covered by this Warranty.
5. No person is authorized or permitted to make any other Warranty on NRI's behalf, or to obligate NRI to any liability not strictly in accordance with this Warranty.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY.

NATIONAL REJECTORS INC.

P. O. BOX 1550
HOT SPRINGS, ARKANSAS 71901

ONE OF THE UMC INDUSTRIES **UMC**

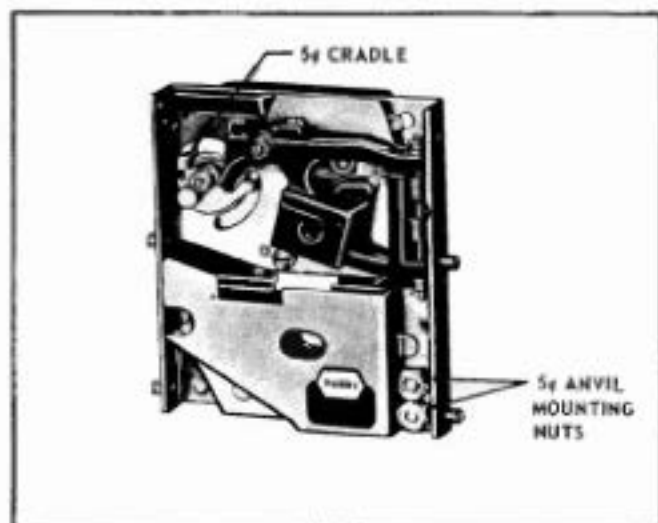


Figure 1. Front View of 01-35 5g Selector.

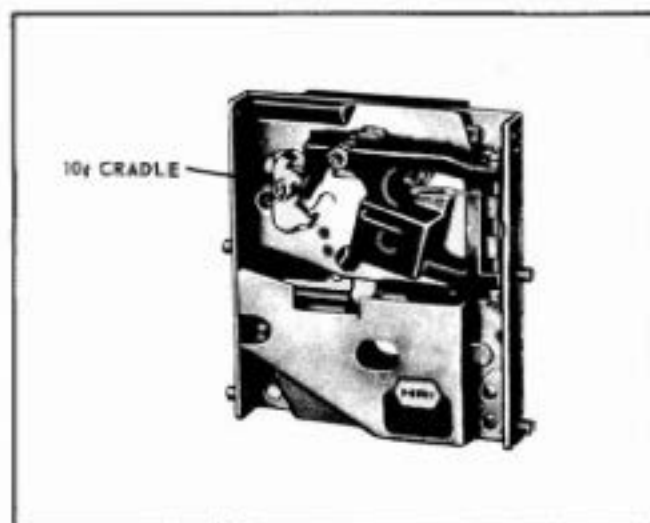


Figure 2. Front View of 01-35 10g Selector.

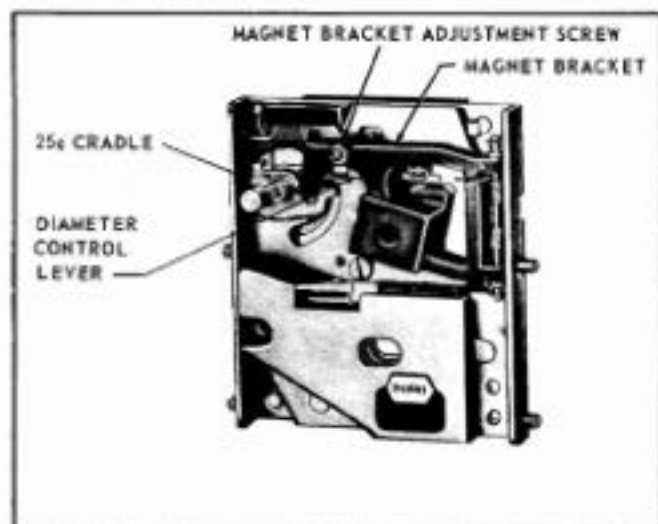


Figure 3. Front View of 01-35 25g Selector.

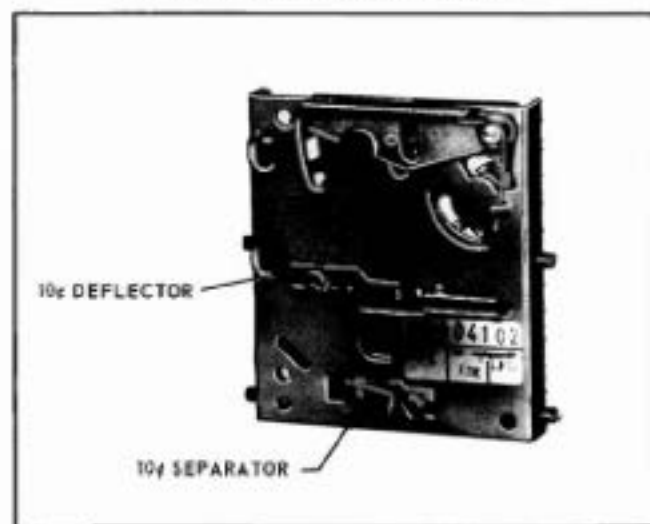


Figure 4. Rear View of 01-35 10g Selector.

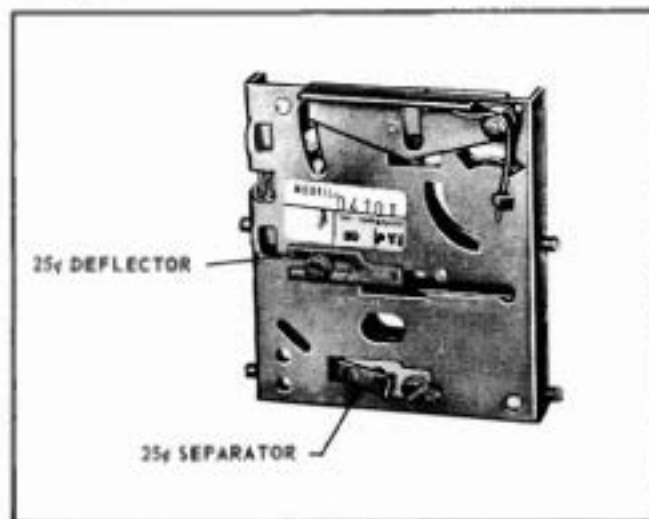


Figure 5. Rear View of 01-35 25g Selector.



OPERATION AND ADJUSTMENTS

A selector should never be oiled.

Every selector has a permanent magnet which tends to pick up steel filings. Spare units should, therefore, be wrapped or bagged.

In case of difficulty, first make certain that you have referred to the instructions for your particular selector and then follow the instructions step by step.

In the event of a malfunction of the selector, proceed as follows:

1. Remove the selector from the vendor.
2. Open the scavenger (it is hinged at the right side) and inspect it for cleanliness. If there is the least doubt as to its cleanliness, follow the cleaning procedure outlined in this manual.
3. Check all screws for tightness.
4. Stand the selector upright on a level surface and insert coins. Observe whether the coins are accepted, rejected, or lodged in the selector. The accept and reject chutes are shown below:

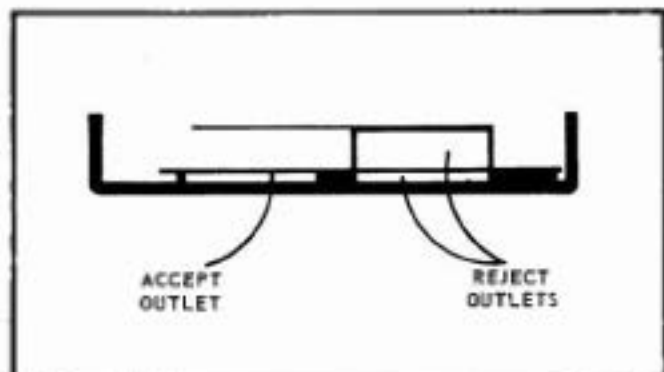


Figure 6. Bottom View of "Accept" and "Reject" Outlets.

5. If coins are accepted during the above test, follow this procedure:
 - A. Push the operating lever down and release it slowly and retest the selector; if coins are now rejected, follow the instructions for your particular selector.
 - B. If coins are accepted, replace the selector in the vendor. Check for mechanical binds or interference from some part of the vendor's coin return mechanism. An improperly leveled machine can cause the rejection of genuine coins.

For those of you, who are new to the maintenance of selectors, we suggest that the following points be observed:

A selector should never be oiled.

Every selector has one or more permanent magnets which tend to pick up steel filings. A spare unit should, therefore, be wrapped or bagged.

In case of difficulty, first make certain that you have the proper instructions for your particular selector and then follow the instructions step by step.

In the event of a malfunction of the selector, proceed as follows:

1. Remove the selector from your coin operated machine.
2. Open the scavenger (it hinges to the right) and inspect for cleanliness. If there is the least doubt as to its being clean, follow the cleaning procedure on the enclosed single sheet.
3. Check all screws for tightness.
4. Stand selector upright on a level surface and insert coins. Observe whether the coins are accepted, rejected, or lodged in the selector. The accept and reject chutes are as shown below:
5. If coins are accepted during the above test, follow this procedure:
 - A. Push the operating lever down and release slowly. Retest. If coins are now rejected, follow instructions for your particular selector.
 - B. If coins are accepted, replace selector in machine. Check for mechanical binds or interference from some part of the machine. An improperly leveled machine can cause rejection of genuine coins.

5c SELECTOR ADJUSTMENT PROCEDURE

1. Push the operating lever down and release it slowly. If the lever does not return to its normal position, nickels will be rejected. In this event, check for mechanical binds or a weak operating lever spring.
2. Check the magnet for steel filings. The magnet bracket is hinged at the right side.
3. Check the face of the anvil through the anvil access hole. Dirt or lint will cause rejection.
4. Check the anvil screws for tightness (use plenty of pressure).
5. If nickels lodge in the cradle, clean the cradle pin and bushing; if they still lodge, install a new cradle.
6. If nickels lodge under the magnet, check for steel filings on the magnet and check the magnet for clearance. A new nickel should pass freely between the magnet and the mainplate. If it does not, provide more clearance by turning the adjustment screw clockwise, refer to Figure 7.

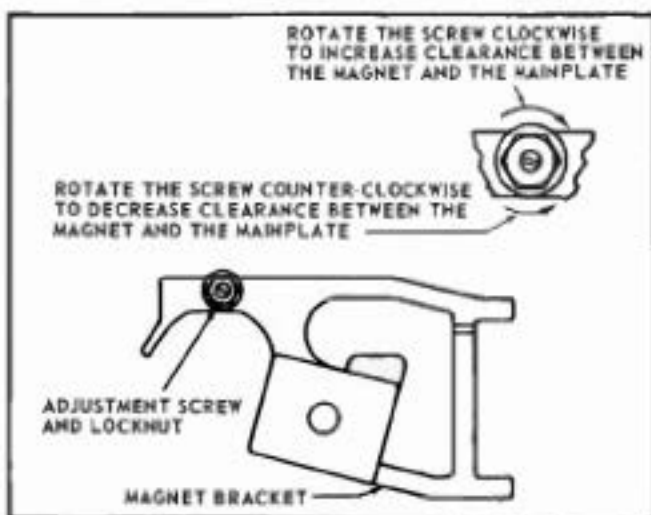


Figure 7. Adjustment of the Magnet Bracket Using The Adjustment Screw.



7. If nickels lodge any other place in the selector, it will be necessary to observe closely to see just what is holding the coin. It will probably be a protruding screw, a bent cover-plate, a bent coin, or some foreign material.

10¢ SELECTOR ADJUSTMENT PROCEDURE

1. Push the operating lever down and release it slowly. If the lever does not return to normal, dimes will be rejected. In this event, check for binds or for a weak operating lever spring.
2. Check the magnet for steel filings. The magnet is hinged at the right side.
3. Each 01-35 series 10¢ selector incorporates adjustments for the rejection of slugs or spurious coins. Improper adjustment of the deflector or separator can result in rejection of genuine dimes. Follow the procedure below for proper adjustment of your selector:
 - A. Place the selector on a level table with the rear of the unit facing you.
 - B. Using a screw driver, loosen the deflector and separator adjustment screws and move both parts to the right.
 - C. Insert a number of dimes (use both old and new coins) and observe that some will be rejected by the separator.
 - D. Loosen the separator adjustment screw and move the separator slightly to the left. Insert dimes and observe if they are accepted or rejected. Repeat the above procedure until all genuine dimes are accepted.
 - E. Move the deflector to the left and insert dimes. You will notice that coins are rejected.
 - F. Gradually move the deflector to the right until all genuine dimes are accepted.
 - G. After completing adjustments, be sure to tighten adjustment screws.
4. If dimes lodge in the cradle, remove the cradle and clean the cradle pin and bushing. If they still lodge, install a new cradle.
5. If dimes lodge under the magnet, check for steel filings. Also check the magnet for clearance. A new dime should pass freely between the magnet and the mainplate. If it does not, loosen the lock nut and turn the adjustment screw clockwise, refer to Figure 7.
6. If dimes lodge any other place in the selector, it will be necessary to observe closely to see just what is holding the coin. It will probably be a protruding screw, a bent cover-plate, a bent coin, or some foreign material.

25¢ SELECTOR ADJUSTMENT PROCEDURE

1. Push the operating lever down and release it slowly. If the lever does not return to normal, quarters will be rejected. In this event, check for binds or for a weak operating lever spring.

2. Check the magnet for steel filings. The magnet bracket is hinged at right side.
3. Each 01-35 series 25¢ selector incorporates adjustments for the rejection of slugs or spurious coins. Improper adjustment of the deflector or separator can result in rejection of genuine quarters. Follow the procedure below for proper adjustment of your selector:
 - A. Place the selector on a level table with the rear of the unit facing you.
 - B. Using a screw driver, loosen the deflector and separator adjustment screws and move both parts to the right.
 - C. Insert a number of quarters (use both old and new coins) and observe that some will be rejected by the separator.
 - D. Now loosen the separator adjustment screw and move the separator slightly to the left. Insert quarters and observe if they are accepted or rejected. Repeat the above procedure until all genuine quarters are accepted.
 - E. Move the deflector to the left and insert quarters. You will notice that the coins are rejected.
 - F. Gradually move the deflector to the right until all genuine quarters are accepted.
 - G. After completing the adjustments, be sure to tighten the adjustment screws.
4. If quarters lodge in the cradle, remove the cradle and clean the cradle pin and bushing. If they still lodge, install a new cradle.
5. If quarters lodge under the magnet, check for steel filings. Also, check the magnet for clearance. A new quarter should pass freely between the magnet and the mainplate. If it does not, loosen the lock nut and turn the adjustment screw clockwise, refer to Figure 7.
6. If quarters lodge any other place in the selector, it will be necessary to observe closely to see just what is holding the coin. It will probably be a protruding screw, a bent cover-plate, a bent coin or some foreign material.

In the event that the foregoing does not solve your difficulty, we suggest that the selector be sent to the nearest National Rejectors District Office for repair. Parts or spare selectors can also be obtained from this source.

CLEANING AND MAINTENANCE

The following procedure should be observed whenever it becomes necessary to clean a selector.

1. Immerse the selector in boiling water for approximately 10 minutes.
2. Use a stiff brush and kitchen cleanser to remove all dirt and foreign material adhering to the selector.
3. Thoroughly rinse the selector, again using boiling water.
4. Dry the selector completely, using a draft of hot air or a stream of clean high pressure air.
5. Remove all cradles, clean the cradle bushing and pivot pins (pipe cleaners are excellent for the job) and sparingly apply NRI's silicone solution.

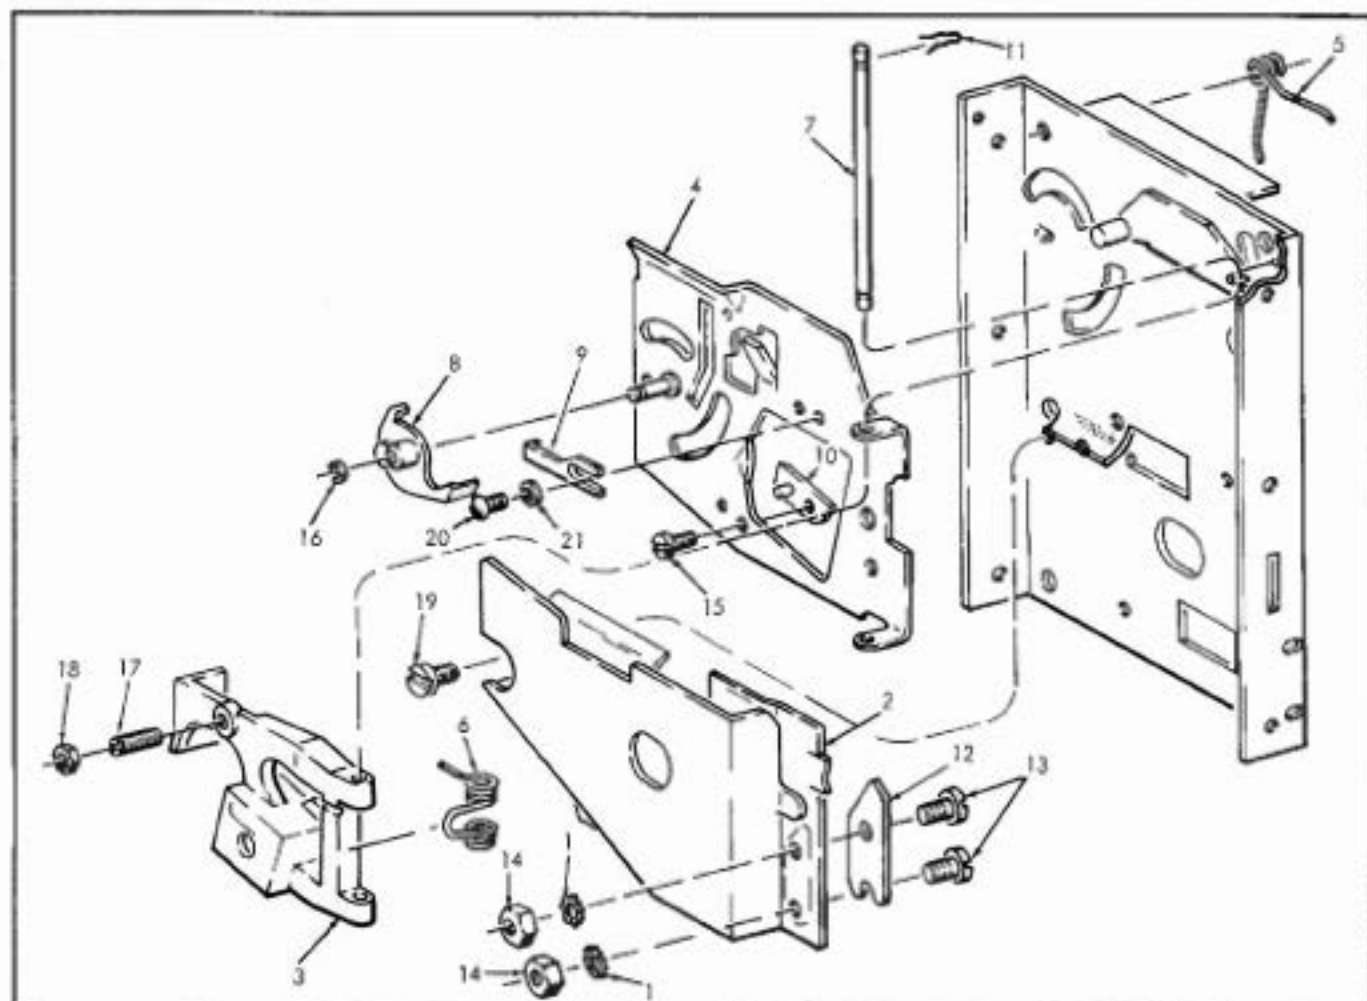


Figure 8. Exploded View and Parts List 5¢ Selector.

Index No.	P/N	Description	Quantity
1	60-955	Washer	2
2	61-269	Coverplate	1
3	61-209	Magnet Bracket	1
4	61-253	Scavenger Bracket	1
5	61-276	Operating Spring	1
6	65-456	Scavenger Spring	1
7	61-217	Scavenger Pivot Rod	1
8	61-261	Cradle Assy	1
9	61-206-2	Diameter Control Lever	1
10	61-215	5¢ Rail	1
11	60-122	Cotter Pin	1
12	60-611	5¢ Anvil	1
13	61-272	Screw 8-32	2
14	61-273	Nut 8-32	2
15	61-237	Screw 6-32	1
16	60-122	Retaining Ring	1
17	61-218	Screw 6-32	1
18	61-274	Nut 6-32	1
19	61-239	Screw 6-32	1
20	60-523	Screw	1
21	60-947	Washer	1
22	*61-592	Coin Insert (Front)	1
23	*62-725	Coin Insert (Rear)	1

*Optional Accessories

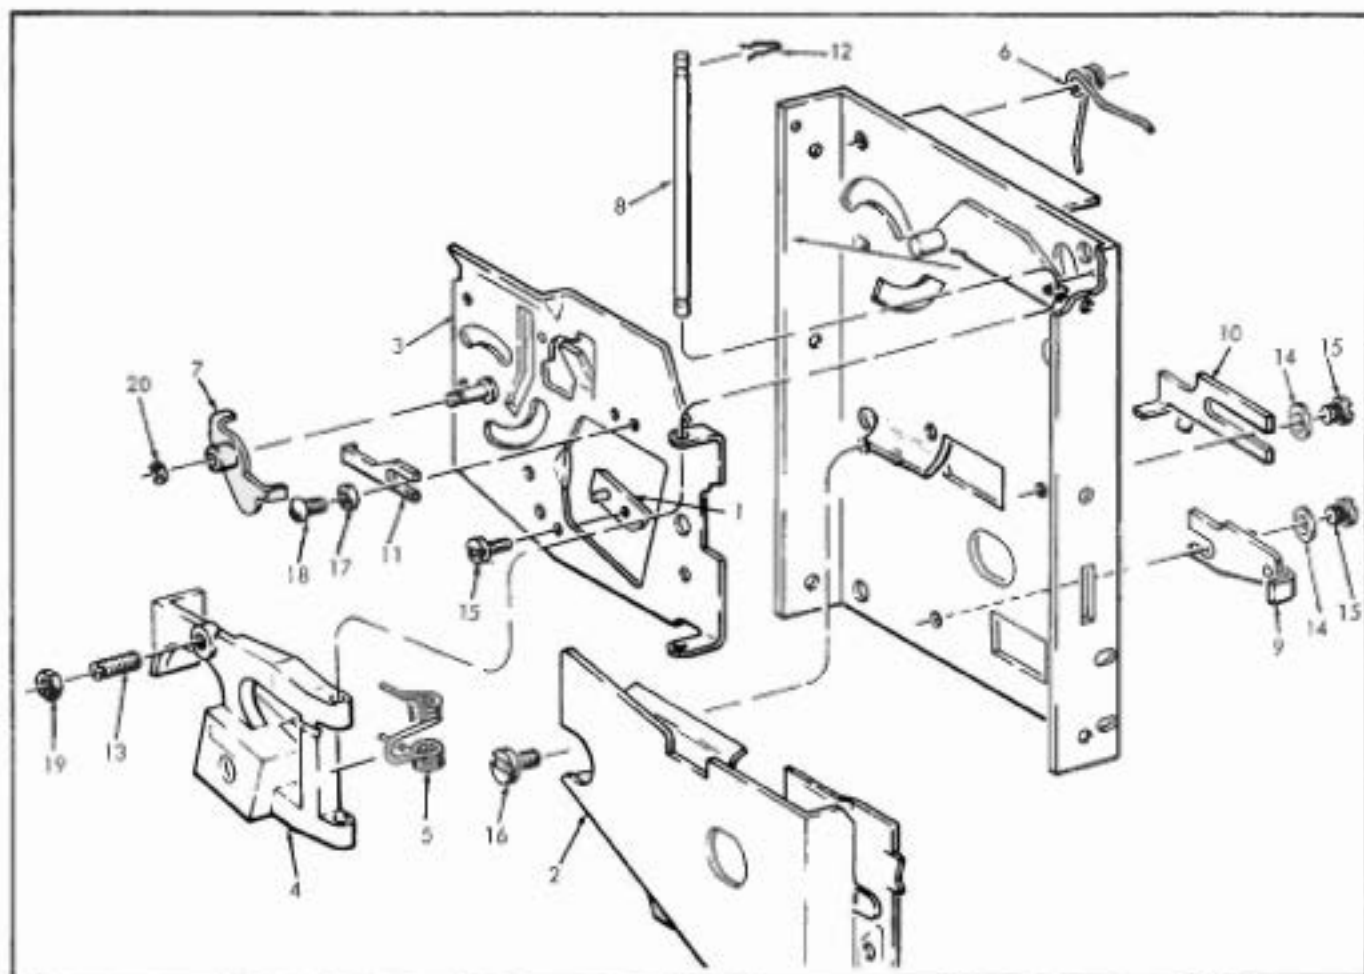


Figure 9. Exploded View and Parts List 10g Selector.

Index No.	P/N	Description	Quantity
1	65-457	10g Rail	1
2	61-288	Coverplate Assy	1
3	61-250	Scavenger Assy	1
4	61-208	Magnet Bracket	1
5	65-456	Scavenger Spring	1
6	61-276	Operating Spring	1
7	61-260	10g Cradle	1
8	61-217	Scavenger Pivot Rod	1
9	60-034	10g Separator	1
10	61-205	10g Deflector	1
11	61-206-1	Diameter Control Lever	1
12	60-122	Cotter Pin	1
13	61-218	Screw 6-32	1
14	60-593	Washer	1
15	61-237	Screw 6-32	3
16	61-239	Screw 6-32	1
17	60-947	Washer	1
18	60-523	Screw	1
19	61-274	Nut 6-32	1
20	60-122	Retaining Ring	1
21	*61-592	Coin Insert (Front)	1
22	*62-725	Coin Insert (Rear)	1

*Optional Accessories

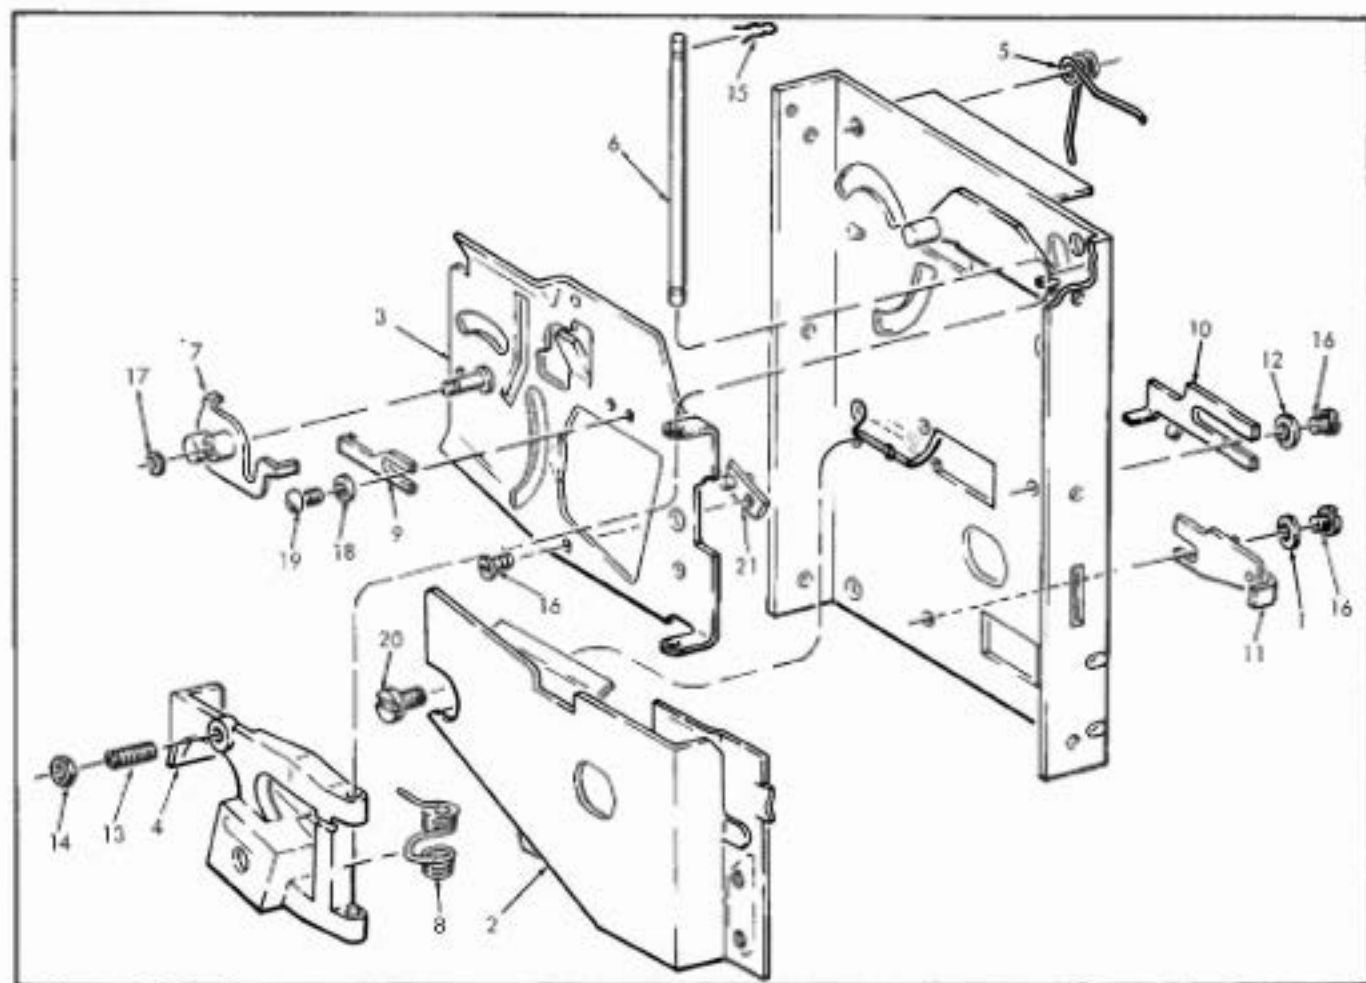


Figure 10. Exploded View and Parts List 25¢ Selector.

Index No.	P/N	Description	Quantity
1	60-539	Washer	1
2	61-268	Coverplate	1
3	62-738	Scavenger Assy	1
4	61-208	Magnet Bracket	1
5	61-276	Operating Spring	1
6	61-217	Scavenger Pivot Rod	1
7	62-744	25¢ Cradle	1
8	65-456	Scavenger Spring	1
9	61-206-9	Diameter Control Lever	1
10	61-205	Deflector	1
11	60-034	Separator	1
12	60-593	Washer	1
13	61-218	Screw 6-32	1
14	61-274	Nut 6-32	1
15	60-122	Cotter Pin	1
16	61-237	Screw 6-32	3
17	60-122	Retaining Ring	1
18	60-947	Washer	1
19	9453-8	Screw	1
20	61-239	Screw 6-32	1
21	61-215	25¢ Rail	1
22	*61-592	Coin Insert (Front)	1
23	*62-725	Coin Insert (Rear)	1

* Optional Accessories



NOTES



NOTES




SERVICE SUPPLIES

LUBRICANTS AND SOLVENTS



Oil

Special lightweight oil designed to retain its lubricating properties under extreme temperature conditions. 3 oz. can, part no. 4959.

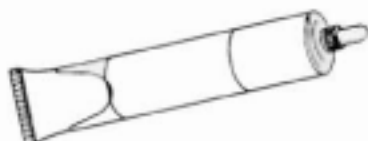

Lubriplate

AA130 - Well-known lubricant for multiple uses in changers and venders. Large tube, part no. 2660.



Silicone, Liquid

Best all-around lubricant for selector cradles and other small parts that must operate with a minimum of friction. 1 oz. bottle with applicator, part no. 2661.




Silicone, Spray

16 oz. can of specially prepared silicone for aerosol use. Excellent for the lubrication of changers, cup drop chutes, and many other items, part no. 12643.

Solvent, Spray

A companion product to the silicone spray. This aerosol solvent removes most sticky residue from selectors, changers, and vending machine components, part no. 12644 - 16 oz. can.

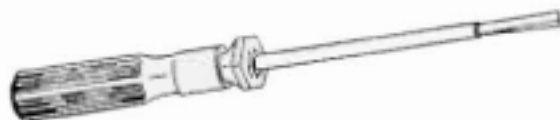

Holding Screwdriver

This is the familiar "green" handle screwdriver that holds small screws firmly in place until you can get them started, part no. 2659.



NATIONAL REJECTORS INTERNATIONAL SALES AND SERVICE CENTERS

ATLANTA

National Rejectors Industries
4927 Northeast Expressway
Atlanta, Georgia 30340
(404) 939-4950

BOSTON

National Rejectors Industries
165 Bedford Street
Burlington, Massachusetts 01803
(617) 272-1516

CHICAGO

National Rejectors Industries
9650 Allen Avenue
Rosemont, Illinois 60018
(312) 622-3614

COLUMBUS

National Rejectors Industries
1975 Riverside Drive
Columbus, Ohio 43221
(614) 488-4130

DALLAS

National Rejectors Industries
4633 Insurance Lane
Dallas, Texas 75205
(214) 526-7983

DAYTONA

National Rejectors Industries
930 Orange Avenue
Daytona Beach, Florida 32019
(904) 253-5050

HOT SPRINGS

National Rejectors Industries
P.O. Box 1550
Hot Springs, Arkansas 71901
(501) 767-2313

LOS ANGELES

National Rejectors Industries
6940 Knott Ave., Suite A
Buena Park, California 90620
(714) 523-7770 (7771)

MINNEAPOLIS

National Rejectors Industries
1624 Chicago Avenue
Minneapolis, Minnesota 55404
(612) 336-7782

MONTREAL

Navead Industries Limited
875 Montee de L'Esse
St. Laurent
Montreal, Quebec
(514) 341-3238

NEW YORK

National Rejectors Industries
42-71 85th Place
Woodside, L.I.
New York 11377
(212) 672-3200

ST LOUIS

National Rejectors Industries
9515 Lackland Ave.
Overland, Mo.
(314) 429-6076

TORONTO

Navead Industries Limited
2 Baring Drive
Toronto 17, Ontario
(416) 421-0541

VANCOUVER

Navead Industries Limited
8559 Main Street
Vancouver, B.C.
(604) 324-3214

MANUFACTURING FACILITIES

UNITED STATES

National Rejectors Industries
Highway 88, P.O. Box 1550
Hot Springs, Arkansas, USA 71901
Phone: (501) 767-2313

UNITED KINGDOM

National Rejectors, Ltd.
Beaumont Road
Banbury, Oxfordshire, England
Phone: 50171

WEST GERMANY

National Rejectors, Inc. GMBH
2150 Buxtehude
Zum Fruchtlof 6
West Germany
Phone: 04161-3051

ITALY

ISMEA
20090 Trezzano S/N
Pietro Verr
Milano, Italy
Phone: 445344-1/2/3