
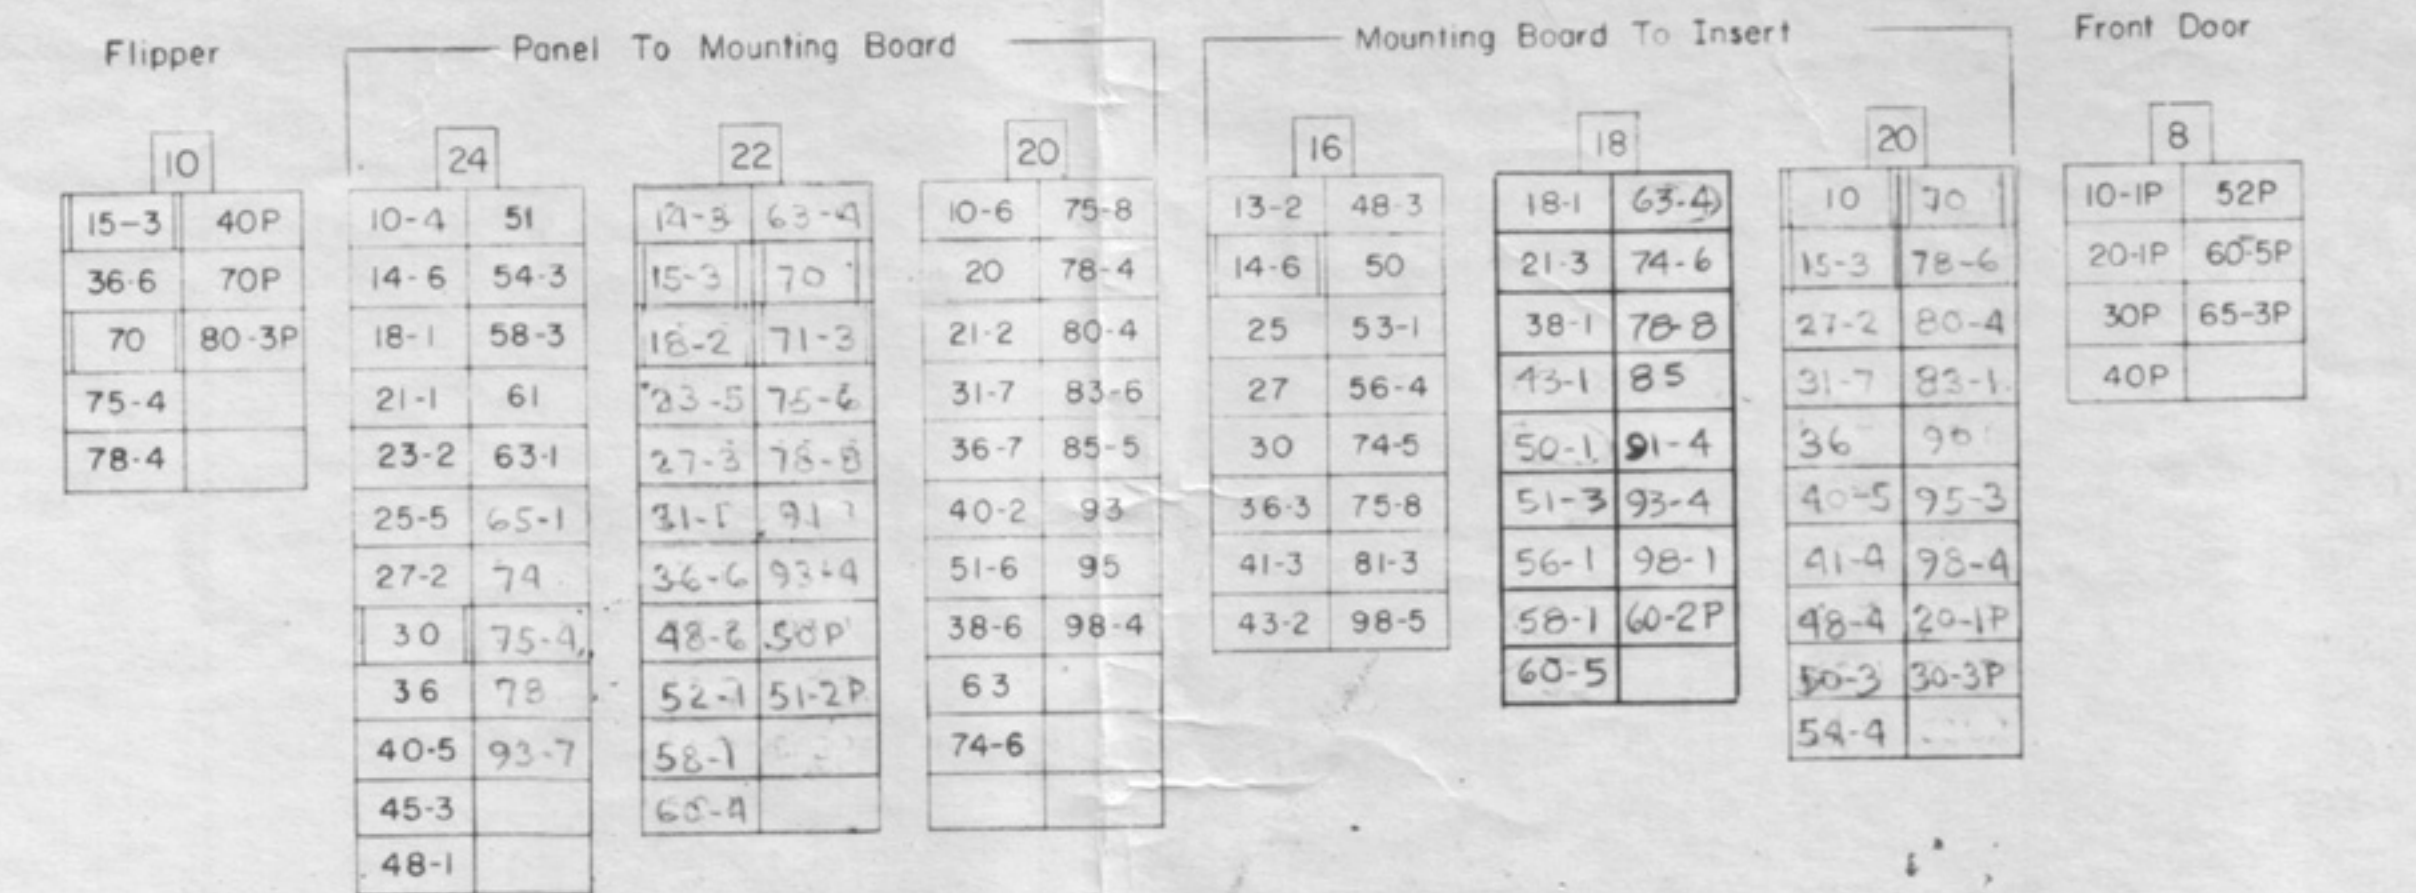


792 W-1042-25
PLAYER 3 or 5 BALL

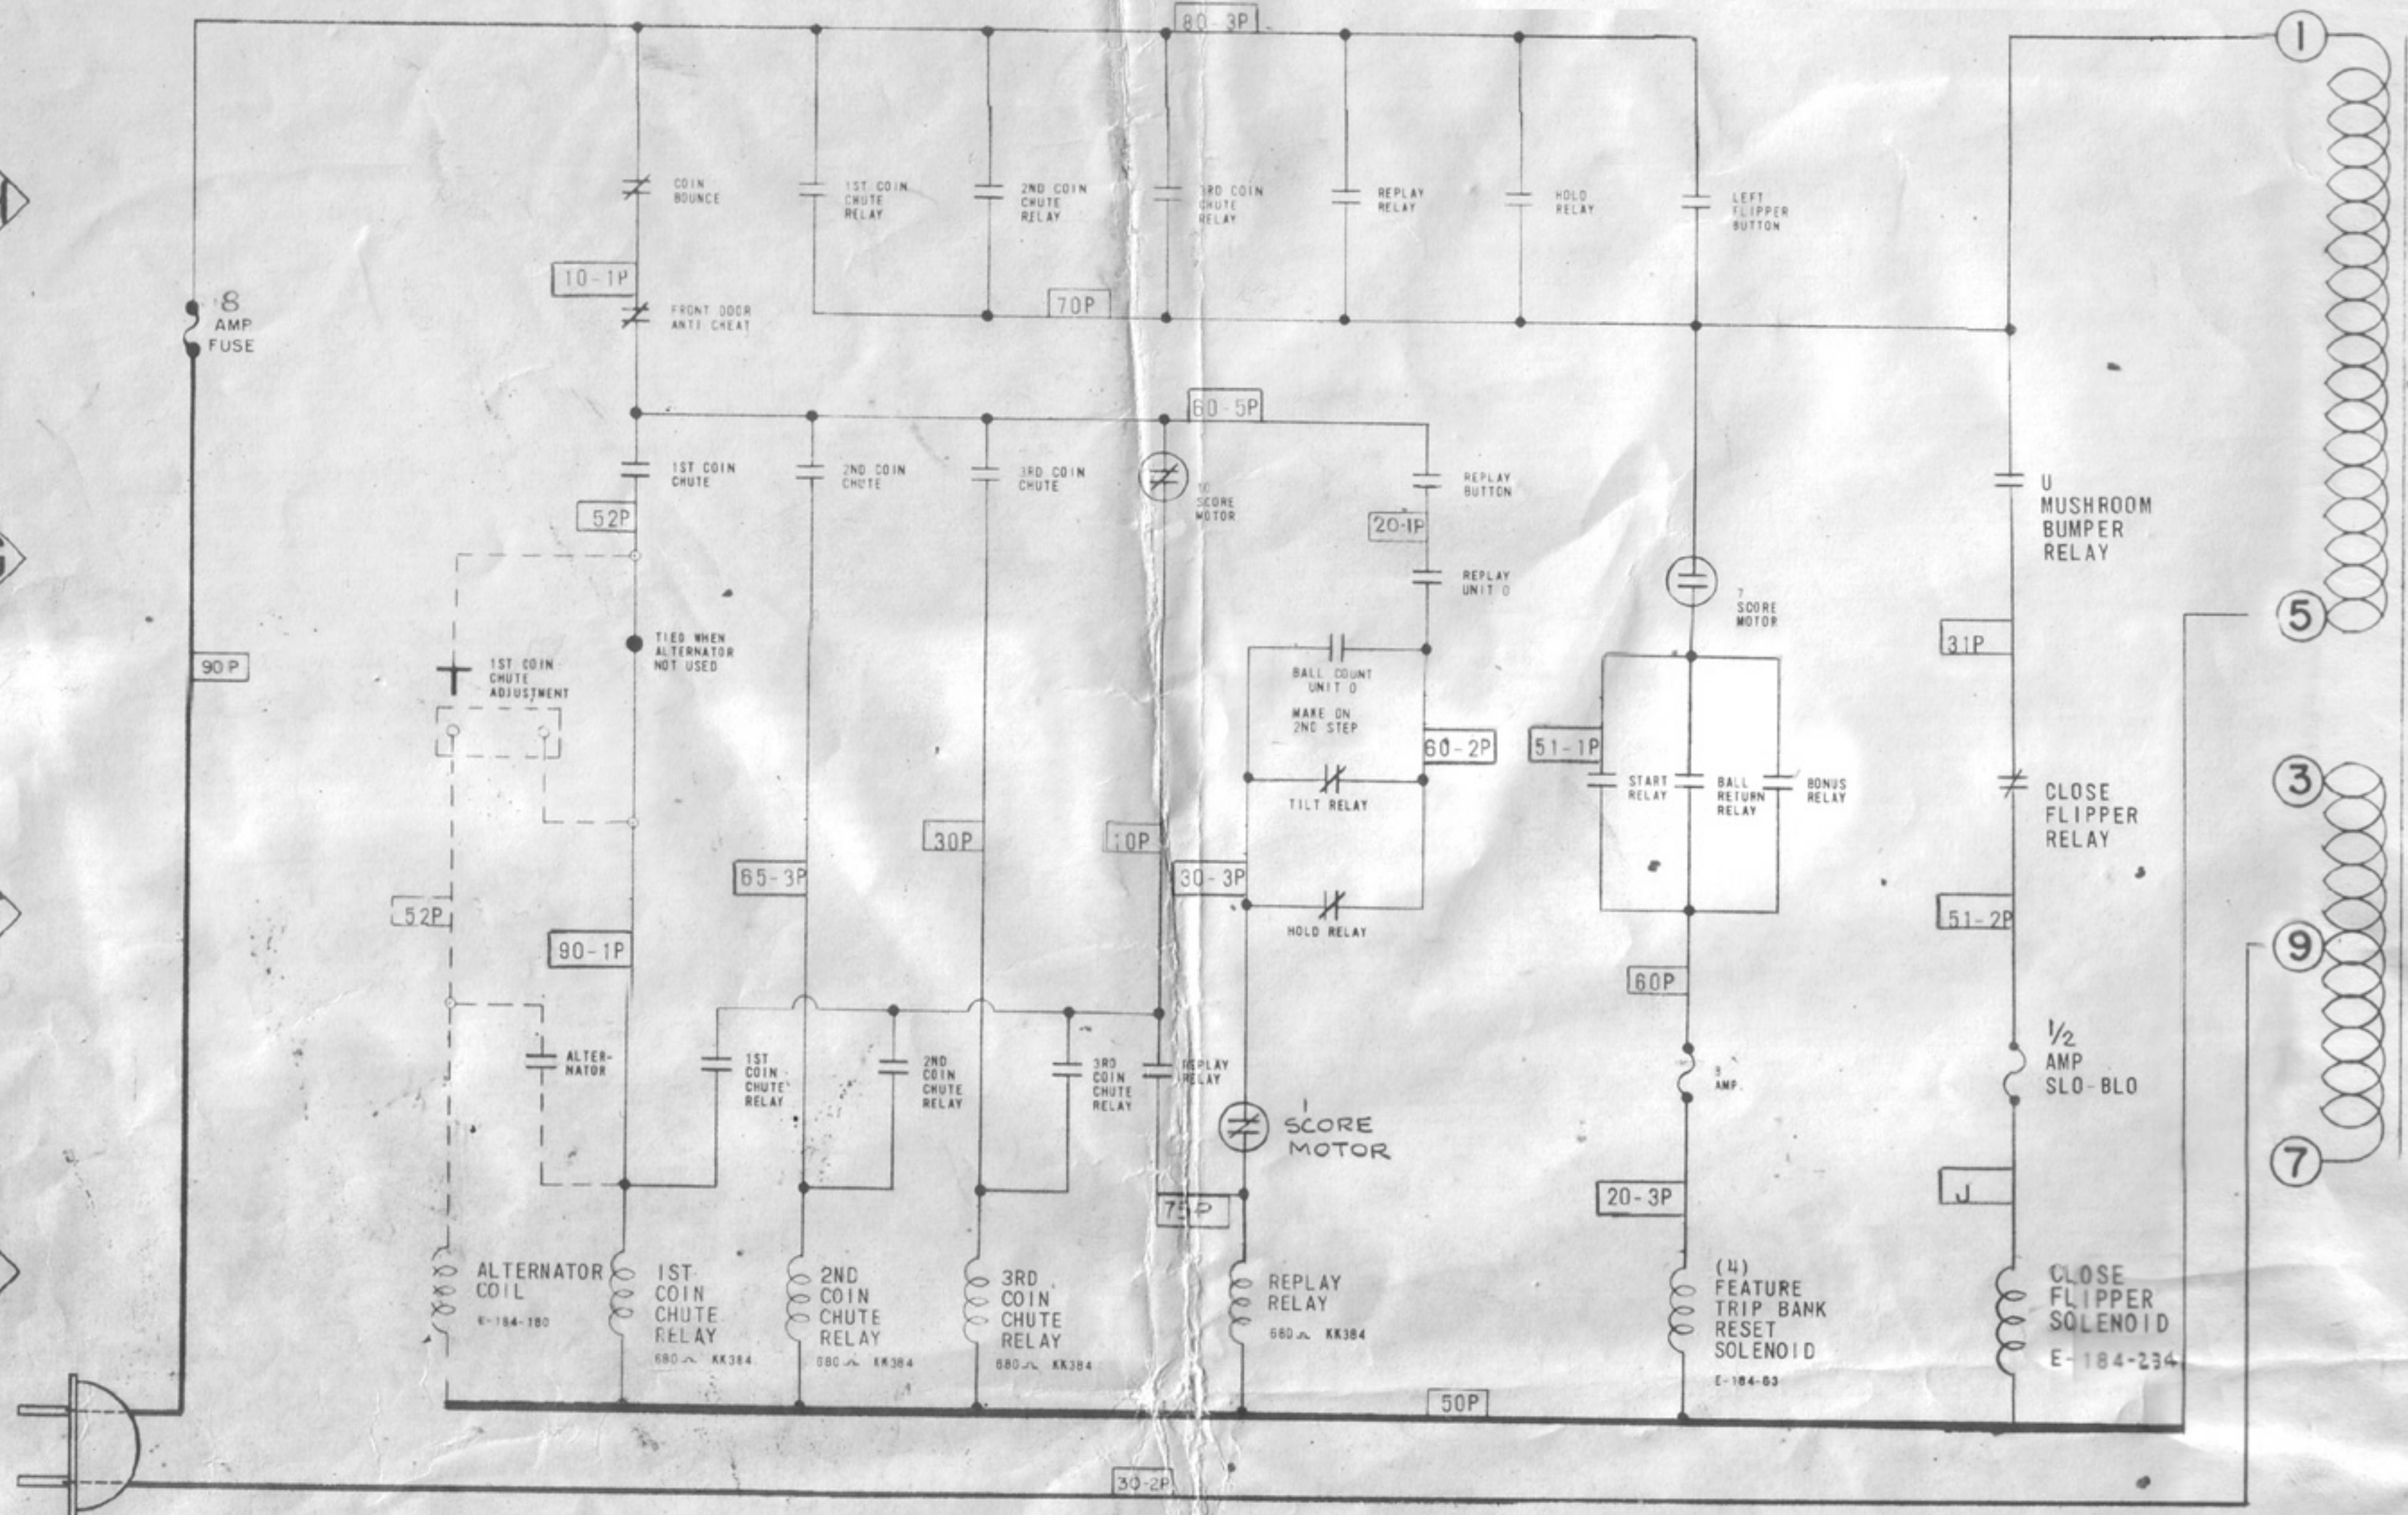

COIL LOCATIONS ON DIAGRAM			
NAME OF COIL	LOCATION	NAME OF COIL	LOCATION
ALTERNATOR COIL	E-1	MUSHROOM BUMPER RELAY *K	C-30
BALL COUNT UNIT RESET SOLENOID	E-1H	REPLY RELAY	E-4
BALL COUNT UNIT STEP-UP SOLENOID	E-1B	REPLAY UNIT RESET SOLENOID	E-13
BALL RETURN KICKER RESET SOLENOID	E-1C	REPLAY UNIT STEP-UP SOLENOID	E-11
BALL RETURN RELAY	E-15	RESET RELAY	E-11
BALL SOLENOID	E-13	SCORE DRIVE UNITS	E-30 to 36
BUNG MUSHROOM BUMPER RELAY	E-31	SCORE MOTOR	E-10
BONUS RELAY	E-32	SINGLE-SHIFT SOLENOIDS	E-20H
BLUE UNIT RESET SOLENOID	E-31	SOUNDER SOLENOID	E-18
BONUS UNIT STEP-UP SOLENOID	E-32	SPECIAL RELAY	E-30
CENTER TOLL-ROLL-OVER RELAY	E-33	START RELAY	E-17 to 21
CLOSE FLIPPER LOCK COIL	C-29	THUMPER BUMPER RELAYS	C-22 & 23
CLOSE FLIPPER RELAY	C-29	THUMPER BUMPER SOLENOIDS	C-22 & 23
COIN CHUTE RELAYS - 1ST, 2ND & 3RD	E-2 & 3	TOLL REBOUND RELAY	C-15
CUT-OUT TAP BANK RESET SOLENOID	E-4	TOTAL PLAY METERS	E-4
FLIPPER SOLENOIDS	C-16 & 17	TRIP RELAY - "L"	C-25
FREE BALL GATE RELAY	C-12	TRIP RELAY - "H"	C-13
FREE BALL ROLL-OVER RELAY	C-12	TRIP RELAY - "C"	C-26
GAME OVER RELAY	E-10	TRIP RELAY - "K"	C-17
HATCH RELAY	E-10	O-D MATCH UNIT STEP-UP SOLENOID	C-26
MUSHROOM BUMPER RELAY - "L"	C-27	I POINT RELAY	E-16
MUSHROOM BUMPER RELAY - "V"	C-27	10 POINT RELAY	E-25
MUSHROOM BUMPER RELAY - "C"	C-29	50 POINT RELAY	E-26
		100 POINT RELAY	E-29

SWITCH SYMBOLS		WIRE COLOR CODE		SEQUENCE OF OPERATION OF SCORE MOTOR SWITCHES	
	Normally Open Switch (Close When Energized)		Red	Positions	
	Normally Closed Switch (Open When Energized)		Blue	0 1 2 3 4 5 6 7 0 1 2 3 4 5 6 7	
	Make and Break Switch		White	2	
	Score Motor Operated Switch		Black	2	
			Yellow	4	
			Green	5	
			Purple	6	
			Brown	7	
			Orange	8	
			Pink	9	
			Grey	10	

Bally MANUFACTURING COMPANY
2640 - BELMONT AVENUE
CHICAGO, ILLINOIS, 60618