


EXPRESSWAY Playfield Chart

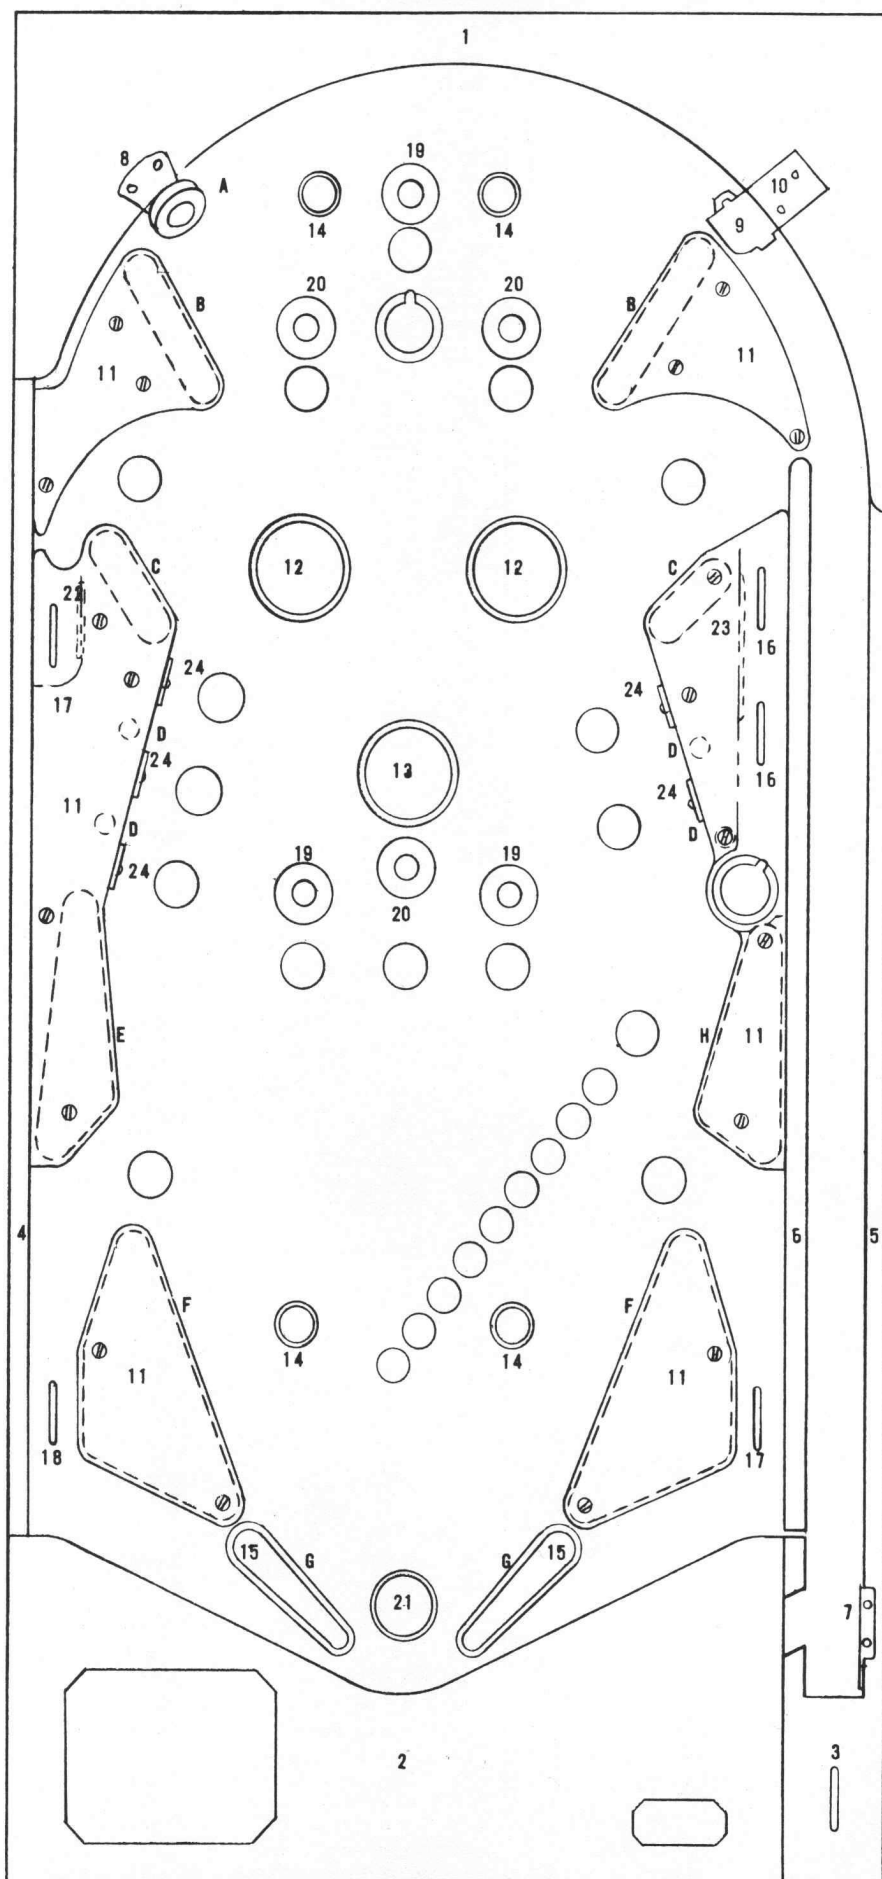

RUBBER RINGS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

- A R-115-4, Rebound
- B R-521-3, 2 in. (2)
- C R-521-1, 1 in. (2)
- D R-243, 5/16 in. (4)
- E R-521-5, 3 in.
- F R-521-6, 3 1/2 in. (2)
- G R-406-3, Flipper (2)
- H R-521-4, 2 1/2 in.

PARTS

- 1 Top Arch P-5839-59
- 2 Bottom Arch P-5871-38
- 3 Shooter Gauge P-6359-10
- 4 Side Rail, left CA-1208-13
- 5 Side Rail, right CA-1208-1
- 6 Inner Rail CA-1208-14
- 7 Protective Angle P-7639
- 8 Ball Rebound AS-493-3
- Detailed, item 6, page 185
- 9 Ball Gate A-1475-1
- 10 Ball Gate Cover P-2996-5
- 11 Light Shield (set) A-2890-71
- 12 Bumper Cap, green C-719-13
- 13 Bumper Cap, yellow C-719-17
- 14 Rollover Button C-387-5

PARTS RELATED TO ROLLOVER BUTTON

- Bushing S-1559-1
- Push-on Fastener M-298-9
- Switch ASW-A1-4
- Switch Stop Bracket P-126-562
- Washer P-801-125
- 15 Flipper, white C-611-5

FLIPPER UNIT: pages 245, 246

- 16 Rollover Wire M-1336-10
- 17 Rollover Wire M-1336-2
- 18 Rollover Wire M-1336-3

BRACKETS FOR 16, 17, 18:

See page 275

SWITCHES FOR 16, 17, 18:

See page 36, etc.

- 19 Mushroom Bumper, AS-2291
- yellow

Detailed, item 22, page 200

- 20 Mushroom Bumper, AS-2291-5
- orange
- Same as AS-2291, above, excepting
- Cap, orange C-616-7

- 21 Bumper (Play-More Post) C-810

PLAY-MORE POST: page 254

- 22 Ball Guide Wire M-121-30
- 23 Ball Guide Wire M-121-33
- 24 Target Assy AS-982-723
- Detailed, item 12, page 188