


ON BEAM Playfield Chart

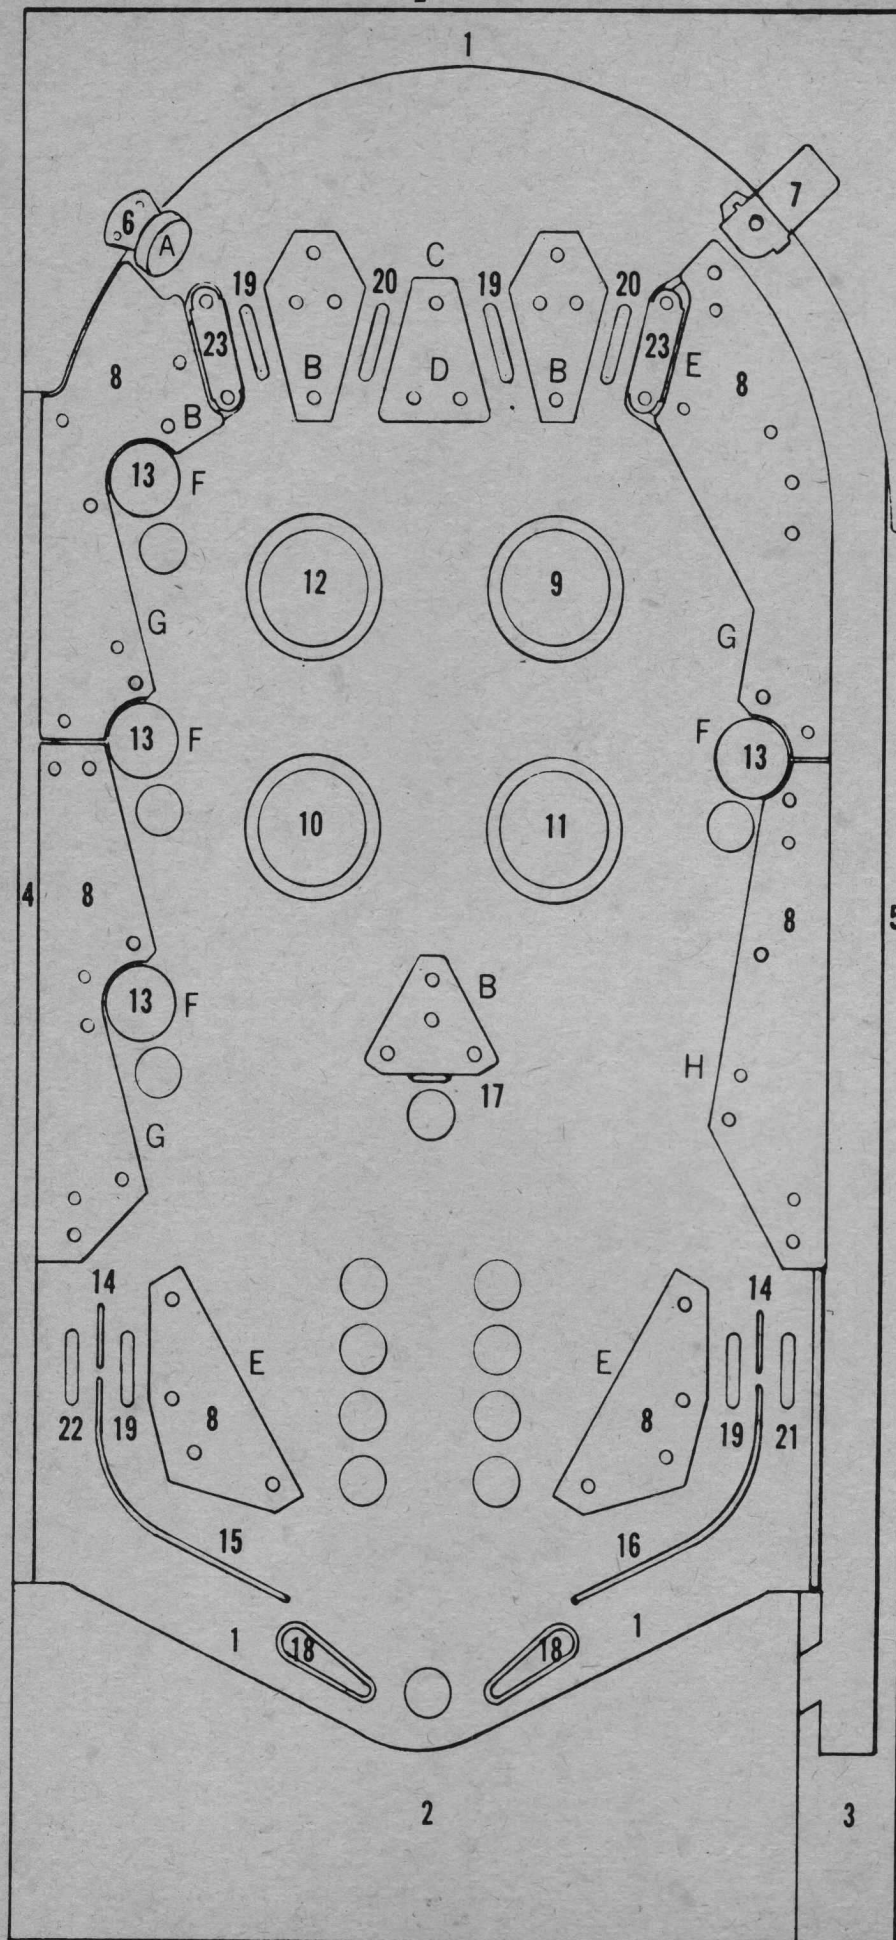

RUBBER RINGS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

- A R-115-4 (Rebound)
- B R-521-3, 2 in. (4)
- C R-243-2, 5/16 in.
- D R-137, 3/4 in.
- E R-521-5, 3 in. (3)
- F R-392, 15/32 in. (4)
- G R-521-4, 2 1/2 in. (4)
- H R-521-9, 5 in.
- I R-137-2, 3/4 in. (4)

PARTS

- 1 Top Arch P-5839-49
- 2 Bottom Arch P-5871-37
- 3 Shooter Gauge P-6359-10
- 4 Side Rail, Left P-6360-33
- 5 Side Rail, Right A-2900-20
- 6 Ball Rebound Assy. AS-493-3
 - Bracket P-318-3
 - Bushing S-231-99
 - Nut N-1024-1111
 - Rubber Ring R-115-4
 - Screw, Hexagon Head .. No. 10-24x3/4 in.
 - Washer P-1901
- 7 Ball Gate & Switch Assy. AS-1315-4
 - Ball Gate Assy. A-1475-1
 - Switch SW-100-400
 - Switch Plate P-137-5
 - Switch Screw (2 used) .. MS-540-10-110
- COVER FOR ABOVE P-2996-1
- 8 Light Shield & Bushings .. A-2890-50
- 9 Bumper Cap, A C-719-6
- 10 Bumper Cap, B C-719-7
- 11 Bumper Cap, C C-719-8
- 12 Bumper Cap, D C-719-9
- 13 Mushroom Bumper, White AS-2291-2
 - Cap & Plunger, White .. C-616-5
 - Eyelet M-122-13
 - Post C-617-8
 - Retaining Ring P-2891-4
 - Rubber Ring R-392
 - Spring, Compression ... SP-200-162
- 14 Ball Guide Wire M-121-11
- 15 Ball Guide, Wire, Left ... M-121-13
- 16 Ball Guide, Wire, Right ... M-121-12
- 17 Target Assy., Red AS-982-699
 - Bracket P-126-471
 - Plate P-126-155
 - Switch Screw (2 used) .. MS-540-10-110
 - Switch Plate (Spring) ... P-137-5
 - Target Switch Assy. A-3359
- 18 Flipper & Pin Assy. AS-2214-17
 - Flipper, Orange C-610-11
 - Flipper Arm Assy. A-2747-1
 - Screw, Shakeproof, Type 25, Self-Tapping, Cadmium Plated No. 6 x 1/2 in.
- 19 Rollover Wire M-1336-9
- 20 Rollover Wire M-1336-10
- 21 Rollover Wire M-1336-2
- 22 Rollover Wire M-1336-3
- 23 Ball Guide C-702-5